

CONTENT

- Chapter 1 Specification 8**
 - 1-1 Mainboard Specifications 9
 - 1-1.1 CPU Socket 9
 - 1-1.2 System Chipset Architecture 9
 - 1-1.3 Memory 9
 - 1-1.4 AMI BIOS V6.0 9
 - 1-1.5 Hardware Monitoring 9
 - 1-1.6 Multi-I/O Function 10
 - 1-1.7 Expansion Slots 10
 - 1-1.8 Accelerated Graphics port (AGP) Interface 10
 - 1-1.9 FORM FACTOR 10
 - 1-1.10 Sound Controller 11
 - 1-1.11 Power Management 11
 - 1-2 Mainboard Layout 12
 - 1-3 Chipset System Block Diagram 13
- Chapter 2 Hardware Setup 15**
 - 2-1 Pentium 4 CPU Installation with Socket 478 16
 - 2-2 Pentium 4 CPU Fan Installation 17
 - 2-3 Memory Installation 18
 - 2-3.1 To Install DIMM Module 18
 - 2-3.2 To Remove a DIMM: 18
 - 2-4 AGP 4X (Accelerated Graphics Port) Installation 19
 - 2-5 HDD/FDD Installation 20
 - 2-6 Jumper and Switch Settings 22
 - 2-6.1 Switch 1 CPU Clock Select 23
 - 2-6.2 JP5 AGP 4X Safeguard 24

2-6.3 JP17 Memory Stick/Secure Digital Memory Card Reader Select	24
2-6.4 JBAT1 Clear CMOS	25
2-7 Other Connectors Configuration	26
2-7.1 On Board FAN Connectors (FAN1,FAN2, FAN3).....	26
2-7.2 WOL1 Wake On LAN	27
2-7.3 CD-ROM Audio Connector (CD1/CD2).....	28
2-7.4 Thermal Sensor Connector JP16 (Optional)	28
2-7.5 Complex Header NJ1	29
2-7.6 ATX Power Supply Version 2.03 Installation	31
2-7.7 CMEM1 Memory Stick/Secure Digital Memory Card Reader Connector	32
2-7.8 Smart Card Reader Connector (SCR1)	33
2-7.9 USB Header (Header USB1)	34
2-7.10 PS/2 Mouse And PS/2 Keyboard	35
2-7.11 Chassis Panel Connector	35
2-8 IRQ Description	36
Chapter 3 Software Setup	38
3-1 Open up the Support CD	39
3-2 Install “Intel Chipset Software Installation Utility”	40
3-3 Install “Intel Application Accelerator”	41
3-4 AC’97 Audio Driver Installation	43
3-5 Install Hardware Monitor Utility	44
3-5.1 Installation	44
3-5.2 Verification	45
Chapter 4 BIOS Setup	47
4-1 About BIOS Setup	48
4-2 To run BIOS Setup	48

- 4-3 About CMOS 48
- 4-4 The POST (Power On Self Test) 48
- 4-5 To upgrade BIOS 49
 - 4-5.1 Before Upgrading BIOS 49
 - 4-5.2 Upgrade Process 49
- 4-6 BIOS Setup --- CMOS Setup Utility 51
 - 4-6.1 CMOS Setup Utility 51
 - 4-6.2 Standard CMOS Setup 52
 - 4-6.3 Advanced BIOS Features 55
 - 4-6.4 Advanced Chipset Features 58
 - 4-6.5 Power Management Setup 61
 - 4-6.6 PNP / PCI Configuration 65
 - 4-6.7 Integrated Peripherals 67
 - 4-6.8 Hardware Monitor Status Features 71
 - 4-6.9 Frequency/Voltage Control 73
 - 4-6.10 Set Supervisor / User Password 75
 - 4-6.11 Load Optimized Defaults 76
 - 4-6.12 Save & Exit Setup 77
 - 4-6.13 Exit Without Saving 77

Chapter 1 Specification

Introduction

- This chapter introduces the characteristics of this series of mainboards. It includes the information on the chipset, CPU types, built-in functions and layout. Users will have more ideas about this powerful series after reading this chapter.

The topics contained in this chapter are:

1-1 Mainboard Specifications

1-2 Mainboard Layout

1-3 Chipset Diagram

1-1 Mainboard Specifications

1-1.1 CPU Socket

- CPU Socket 478B on board, supporting Intel® Pentium 4 and Northwood processors in the 478-pin package for 400MHz System Bus.

1-1.2 System Chipset Architecture

- INTEL 845-D Chipset Memory Control Hub (MCH):
To work with Intel Pentium 4 Processor for managing and arbitrating between 4 interfaces:
 - the System Bus (Host Interface);
 - the memory Interface;
 - the AGP Port and the Hub Interface;
- MCH Clockings:
 - Asynchronous;
 - System Bus target speed at 400MHz;
 - AGP and Hub Interface constantly at 66MHz base;
- Intel ICH2 Chipset (Second generation I/O Controller Hub):
Communicating with Intel 845-D by the Hub interface at 66MHz/266MB/s;
 - Transmitting Interrupt related messages;
 - Transmitting Power management events;
 - Transmitting SMI, SCI, SERR indication messages;

1-1.3 Memory

2pcs of DIMM on board for single / double sided DIMMs, supported by 2.5V default voltage:

- Intel 845-D MCH directly supporting one channel of DDR SDRAM up to 2GB capacity.

1-1.4 AMI BIOS V6.0

- Supporting Plug & Play V1.0.
- FLASH MEMORY for easy upgrade.
- Supporting BIOS writing protection.
- Year 2000 compliant.

1-1.5 Hardware Monitoring

- Programmable control, status, to provide monitoring and alarm for flexible desktop management of hardware temperatures. Utility Software is enclosed in Support CD to help display monitoring statuses of:
 - 6 positive voltages, 3 types of hardware temperatures, 3 Fan speeds;

1-1.6 Multi-I/O Function

- Integrated IDE Controller, supporting:
 - 2x Ultra ATA100 / 66 / 33 Connectors
 - Two UARTs for Complete Serial Ports (2x COM).
- Dedicated IR Connector:
 - Third serial port dedicated to IR function either through the two complete serial ports or the third dedicated port Infrared-IrDA (HPSIR) and ASK (Amplitude Shift Keyed) IR.
- Multi-mode parallel connector:
 - Standard mode, ECP and EPP support.
- Floppy Disk connector:
 - One FDD connector with drive swap support.
- Universal Serial Bus connector:
 - USB V1.1 compliant.
 - 2 built-in USB connectors and one USB Header (USB1) which requires an optional USB cable to provide 2 more optional USB ports.
- PS/2 Keyboard connector.
- PS/2 Mouse connector.

1-1.7 Expansion Slots

- Three PCI bus Master slots.
- One AGP 4x mode slot.
- One SCR1 slot (optional).
- Two DIMM slots.
- One CMEM1 slot (optional).
(Smart / Memory Stick / Secure Digital card reader function by SCR1 slot and CMEM1 slot is optional.)

1-1.8 Accelerated Graphics port (AGP) Interface

- One AGP slot on board is supported by the Intel 845-D Chipset MCH AGP Interface in 1.5V mode (with AGP voltage selectable in BIOS Setup):
 - AGP v2.0 compliant.

1-1.9 FORM FACTOR

- ATX form factor.
- This mainboard is compatible with both ATX Power Supply Version 2.03 (with +12V Power Connector) and the older ATX Power Supply (with Peripheral Power Connector).
- Mainboard size: 22.0cm x 24.5cm.


1-1.10 Sound Controller

- SoundBlaster Pro Hardware and Direct Sound Ready AC97 Digital Audio Controller with Codec onboard.


1-1.11 Power Management

- ACPI 1.0B compliant (Advanced Configuration and Power Interface).
- APM V1.2 compliant (Legacy power management).
- Supporting ACPI suspend POS mode (Power On Suspend).
- System event monitoring with two event classes.
- Supporting Wake On LAN (WOL) & Wake On Ring.
- Supporting real time clock (RTC) with date alarm, month alarm, and century field.

1-2 Mainboard Layout

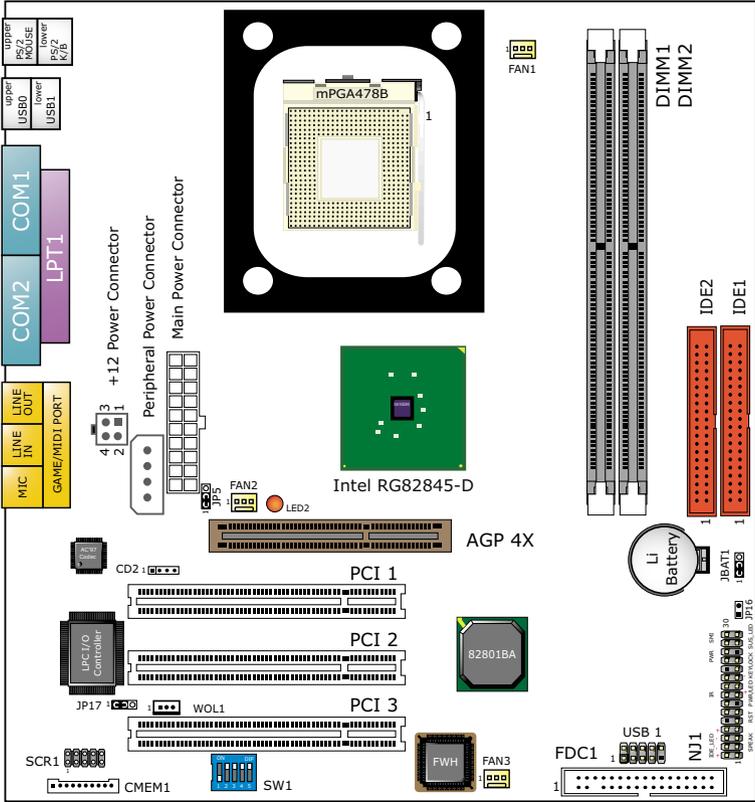

1-3 Chipset System Block Diagram

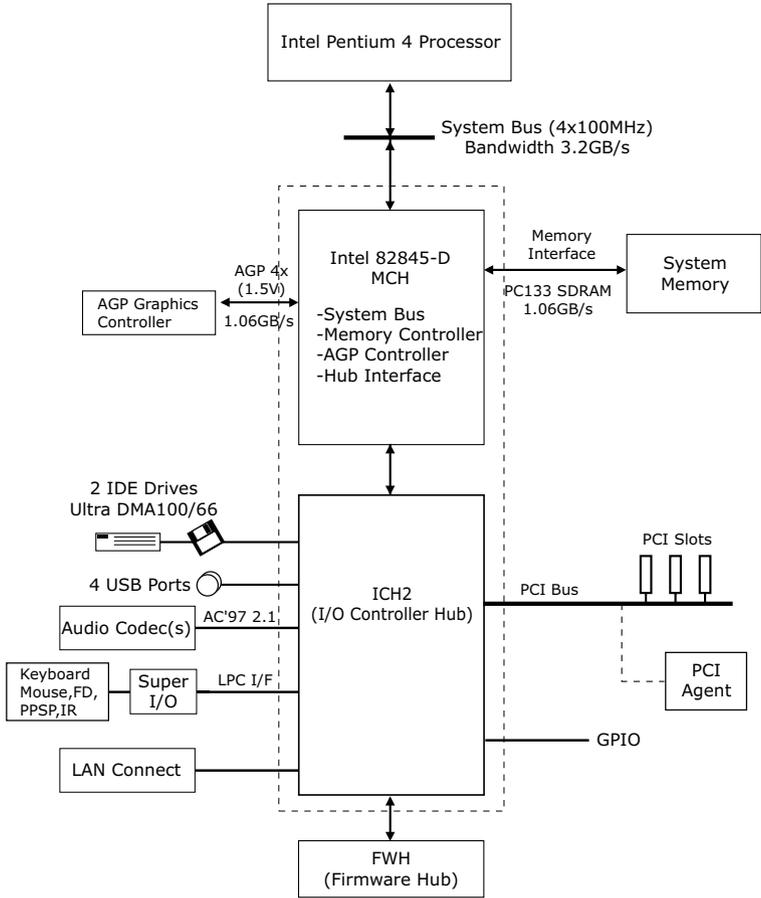

Intel 82845-DMCH + ICH2 Chipset Diagram

Chapter 2 Hardware Setup

To Get things ready for Hardware setup !!!

1. We recommend to install your CPU before any other components. For detailed installation instructions of processor, you can also refer to the pamphlet enclosed in your CPU package.
2. Installing a cooling fan with a good heatsink is a must for proper heat dissipation for your CPU. Get ready an appropriate fan with heatsink for proper installation. Improper fan and installation will damage your CPU.
3. In case CPU Vcore, CPU clock or Frequency Ratio is adjustable onboard, please follow the instructions described in the User manual for proper setup. Incorrect setting will cause damage to your CPU.

The following topics are included in this chapter:

2-1 Pentium 4 CPU Installation

2-2 Pentium 4 CPU Fan Installation

2-3 Memory Installation

2-4 AGP 4X (Accelerated Graphics Port) Installation

2-5 HDD/FDD Installation

2-6 Jumper and Switch Settings

2-7 Other Connectors Configuration


2-8 IRQ Description

2-1 Pentium 4 CPU Installation with Socket 478


This series of mainboards are built with CPU Socket 478 (with 478 pins) supporting the Intel Pentium 4 CPU:

- Follow the steps described in this section to install the 478-pin Pentium 4 CPU into the on board Socket 478.
- After installation of Pentium 4 CPU, you must also install the specific Pentium 4 CPU fan designed in tandem with this CPU. This CPU Fan installation is described in next section.


1. First pull sideways the lever of Socket 478, and then turn it up 90-degree so as to raise the upper layer of the socket from the lower platform.

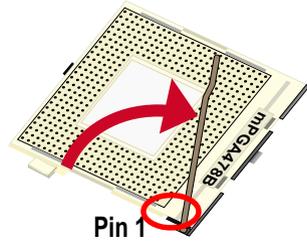

2. Configure Pin 1 of CPU to Pin 1 of the Socket, just as the way shown in the diagram on the left. Adjust the position of CPU until you can feel all CPU pins can get into the socket with ease.

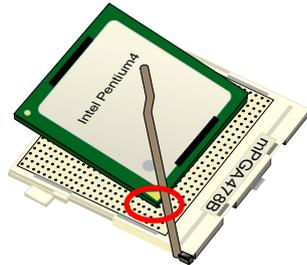


3. Make sure that all CPU pins have completely entered the socket and then lower down the lever to lock up CPU to socket.

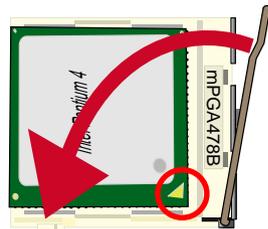


2-2 Pentium 4 CPU Fan Installation

Pentium 4 Fan Socket

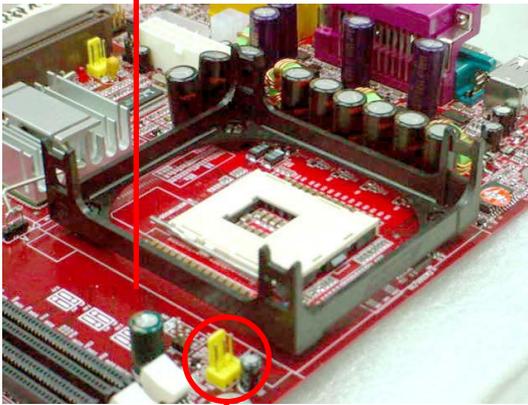

Fan Connector

Press down 4 latches to lock fan to fan socket

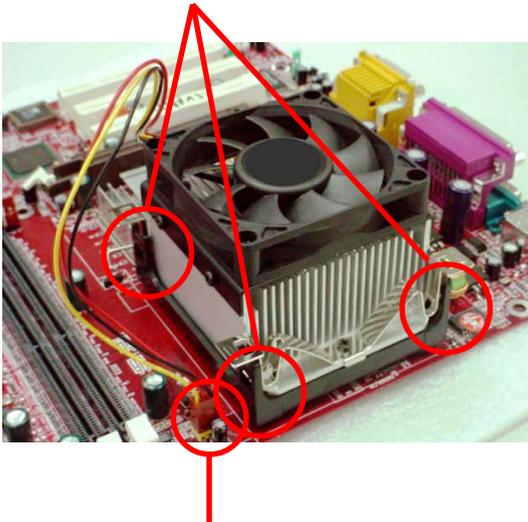

Connect to CPU FAN connector

2-3 Memory Installation


How to tackle with the memory Modules:

- Make sure to unplug your power supply before adding or removing memory module. Failure to do so may cause severe damage to both your mainboard and the memory module.
- Pay attention to the orientation of the DIMM slots. Forcing a DIMM in a socket improperly will damage the memory module and socket.
- Make sure you have the right type of memory module for your mainboard.

2-3.1 To Install DIMM Module

- This series of mainboards only supports up to 2GB unbuffered DDR SDRAM, with 2 DDR DIMM sockets on board. Do not insert other type of modules into these sockets.
- DDR DIMM socket has 184-pins and one notch. Insert a DDR SDRAM vertically into the 184-pin socket with the notch matching the one in the socket. Press the Module down in a gradual way until it surely reaches the bottom and clicks straight up the two latches on the left and right of the socket.

Key Point: Press the module down gradually until it has totally reached the socket bottom and clicked up both two socket latches completely. If any one of the latches has not turned up completely, you should unplug the module and press it down the socket a bit more firmly.

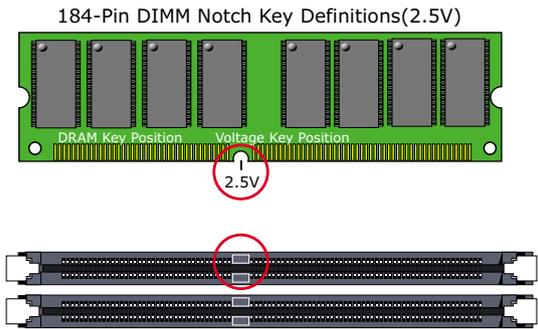



2-3.2 To Remove a DIMM:

- Press down the holding latches on both sides of socket and the module will be released from the DIMM socket.

2-4 AGP 4X (Accelerated Graphics Port) Installation

Warning:


- The AGP 4X slot on board supports solely 4X AGP card configuration. User should not insert 1X / 2X AGP card to this mainboard.
- LED1 AGP Protection Indicator is on board this series. In case inappropriate AGP card (such as AGP 2X) is inserted into this AGP 4X Slot, LED1 will light up to warn that AGP installation is improper. The wrong AGP card should be replaced; otherwise system cannot be booted.

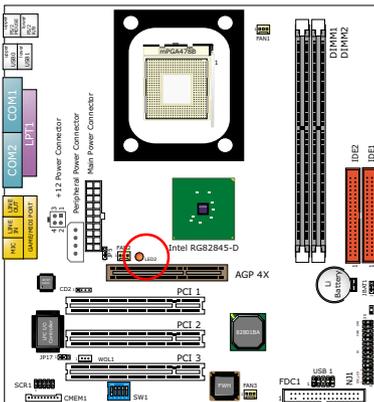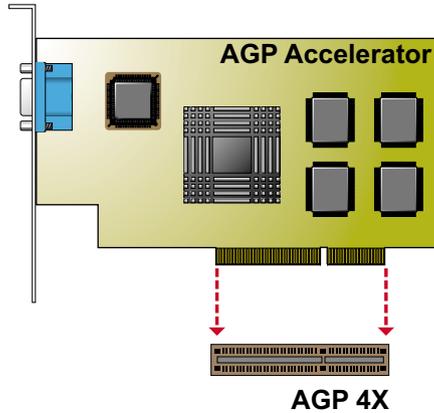


LED1
AGP Protection Indicator

2-5 HDD/FDD Installation

- To install HDD (Hard Disk Drive), you may connect the connector of IDE cable to the primary (IDE1) or secondary (IDE2) connector on board, and then connect the gray connector to your slave device and the black connector to your master device. If you install two hard disks, you must configure the second drive to Slave mode by setting its jumpers correctly. Please refer to your hard disk documentation for the jumper settings.

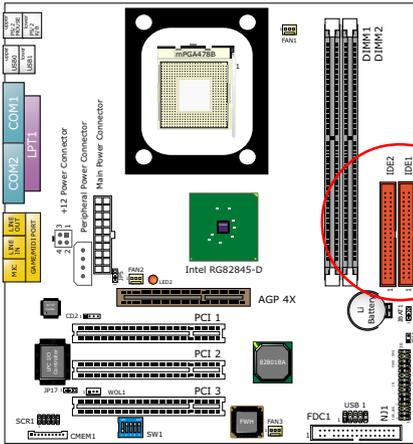


Hard Disk Drive Connector:
Orient the red line on the IDE
ribbon cable to Pin1.

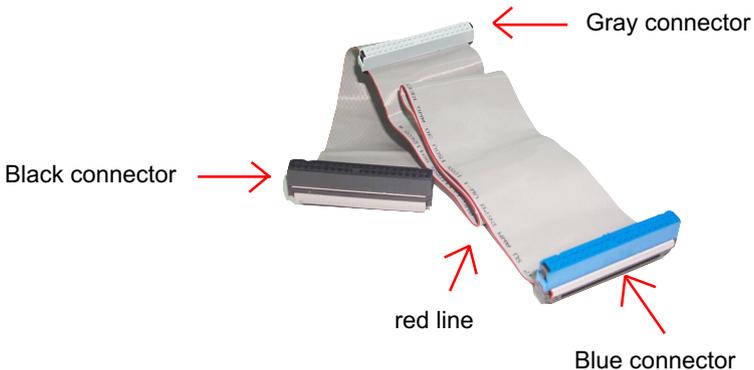


IDE Cable

- To install FDD (Floppy Disk Drive), you should connect the end of cable with single connector to the board, and connect the other end with two plugs to the floppy drives.

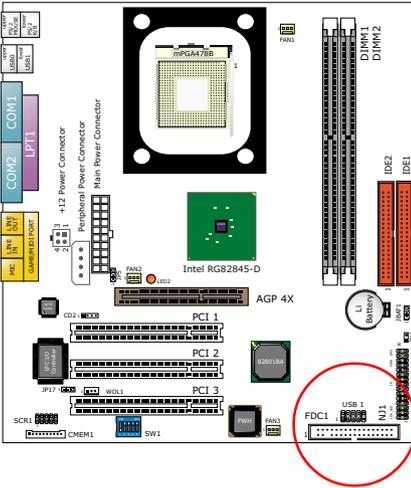


Floppy Disk Drive Connector:
Orient the red line on the floppy ribbon cable to Pin 1.

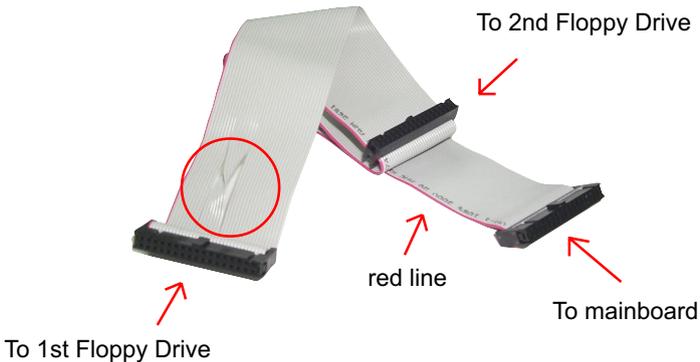

FDD Cable

2-6 Jumper and Switch Settings

- The following diagrams show the locations and settings of jumper blocks on the mainboard.

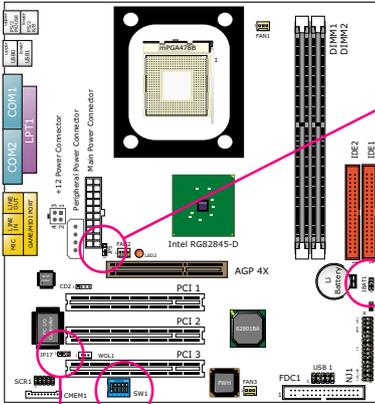

JP5: AGP 4X Safeguard	
1-2 closed for 1.5V AGP 4X only; (Warning: 3.3V AGP 2X card will not boot system.)	JP5 (Default)
2-3 closed Safeguard disabled (Warning: AGP 2X card will cause 1.5V circuit burn.)	JP5

JBAT1: Clear CMOS Data	
Clear CMOS Data	JBAT1
Retain Data (Default)	JBAT1

JP17: Memory Stick/Secure Digital Memory Card Reader Select	
Memory Stick Reader (Default)	JP17
Secure Digital Memory Card Reader	JP17

SW1 On CPU Clock Select						
Off		1 2 3 4 5				
* Off On On On On (Default)						
CPU clock (MHz)	S1	S2	S3	S4	S5	
100 (Default)	off	on	on	on	on	
103	on	off	on	on	on	
105	off	off	on	on	on	
111	on	off	off	on	on	
130	off	off	on	off	on	
133	on	on	on	on	off	

How to tackle with Jumpers:

- Do not remove the jumper when power is on. Always make sure the power is off before changing any jumper settings. Otherwise, mainboard could be damaged.
- In the Jumper setting diagram, all jumper pins covered with black marks stand for closed pins by jumper caps.

2-6.1 Switch 1 CPU Clock Select

- This Series of mainboards are shipped to users with a 5-DIP Switch 1, by which user can select a CPU clock to match with the Pentium 4 processor selected on board. So users are not recommended to take Switch 1 as a tool for overclocking. It is safer and more advisable for users to select the CPU clock as close as possible to the one marked on the selected CPU.

<p>SW1 On  CPU Clock Select</p> <p>Off</p> <p>1 2 3 4 5</p> <p>* Off On On On On (Default)</p>					
CPU clock (MHz)	S1	S2	S3	S4	S5
100 (Default)	off	on	on	on	on
103	on	off	on	on	on
105	off	off	on	on	on
111	on	off	off	on	on
130	off	off	on	off	on
133	on	on	on	on	off

• Advice from our Engineering Team:

If you insert a Pentium 4 processor of 100MHz to the CPU socket and select 103MHz or any higher Switch setting, you are taking the risk of breaking the stability of your CPU as well as the mainboard. Overclocking should always take all other components on board into account.

2-6.2 JP5 AGP 4X Safeguard


This jumper is designed on board to assure booting system with 1.5V AGP 4X card. To enable this function, please set this jumper 1-2 closed; if the safeguard function is disabled (2-3 closed), a mistakenly inserted AGP 2X card will burn out the 1.5V circuit.

JP5: AGP 4X Safeguard	
1-2 closed for 1.5V AGP 4X only; (Warning: 3.3V AGP 2X card will not boot system.)	 JP5 (Default)
2-3 closed Safeguard disabled (Warning: AGP 2X card will cause 1.5V circuit burn.)	 JP5

2-6.3 JP17 Memory Stick/Secure Digital Memory Card Reader Select

This jumper is designed on board for Memory Stick/Secure Digital Memory Card Reader select for CMEM1 connector.

JP17: Memory Stick/Secure Digital Memory Card Reader Select	
Memory Stick Reader (Default)	 JP17
Secure Digital Memory Card Reader	 JP17

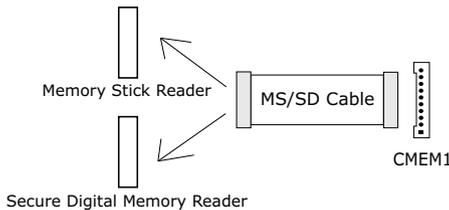

Connection between CMEM1 connector and MS/SD Card Reader

2-6.4 JBAT1 Clear CMOS



- When you have problem with rebooting your system, you can clear CMOS data and restore it to default value. To clear CMOS with Jumper JBAT1, please follow the steps below:
 - (1) Power off system;
 - (2) Set JBAT1 to Pin 2-3 closed.
 - (3) After 2 or 3 seconds, return the JBAT1 setting to Pin1-2 closed.
 - (4) CMOS data are restored to default. Remember never clear CMOS when system power is on.

JBAT1 : Clear CMOS Data	
Clear CMOS Data	 3 1 JBAT1
Retain Data (Default)	 3 1 JBAT1

2-7 Other Connectors Configuration

- This section lists out all connectors configurations for users' reference.

 2-7.1 On Board FAN Connectors (FAN1,FAN2, FAN3)

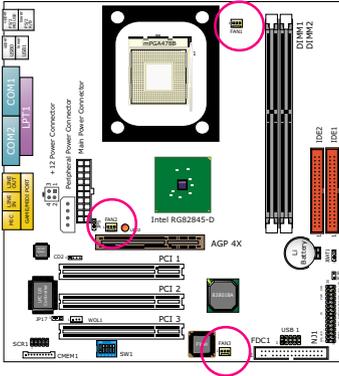



FAN1, FAN2, FAN3: On-Board FAN Connectors		
CPU FAN		FAN1
SYSTEM FAN		FAN2
CHASSIS FAN		FAN3

These fan connectors support CPU/System/chassis cooling fan with +12V. When connecting wire to FAN connectors, users should pay attention that the red wire is for the positive current and should be connected to pin +12V, and the black wire is Ground and should be connected to pin GND. If your mainboard has Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of this function.

For fans with speed sensors, each rotation of the fan blades will send out 2 electric pulses, by which System Hardware Monitor will work out the fan rotation speed by counting the pulses.

NOTE : We use 3 “Yellow” fan connectors to mark that they support fan speed sensor function.

2-7.2 WOL1 Wake On LAN

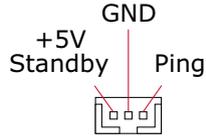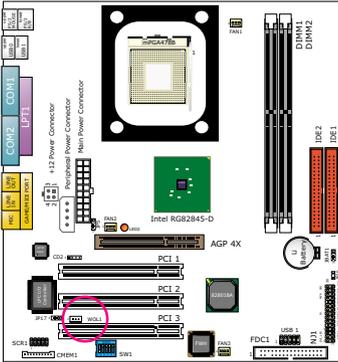


Wake On LAN

Connect the Wake On LAN signal from LAN card to WOL1



- (1) This connector connects to a LAN card with a Wake On Ring output. The connector powers up the system when it receives a wake-up packet or signal through the LAN card.
- (2) This feature requires that Ring Power Up Control feature is enabled in the BIOS setting “Power Management Setup” and that your system must be on ATX power supply with at least 720mA / +5V standby power.



2-7.3 CD-ROM Audio Connector (CD1/CD2)

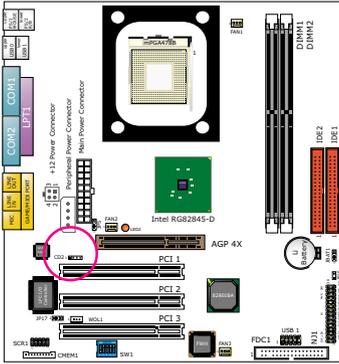

1  4 CD2

CD ROM Audio Connector	
PIN NO.	CD2
PIN 1	GND
PIN 2	Left Channel
PIN 3	GND
PIN 4	Right Channel



2-7.4 Thermal Sensor Connector JP16 (Optional)

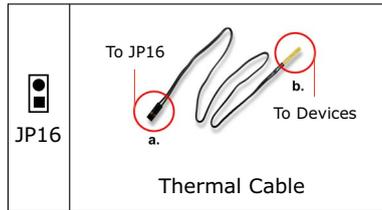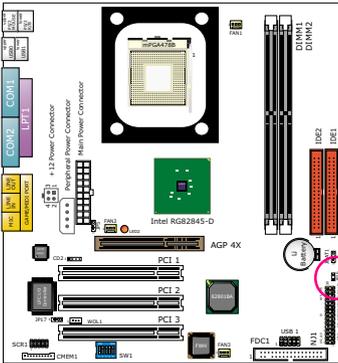

Connector JP16: A thermal cable is needed to connect JP16 to on-board devices such as HDD, Graphics card etc., so as to detect the temperature generated therein. Please connect the end (a) of the thermal cable on to the device which you want to monitor. After you have finished the thermal cable installation, you will **see the detected temperature in BIOS setup or Hardware monitor utility.**

2-7.5 Complex Header NJ1

- This complex Header consists of 10 connectors providing various supports:

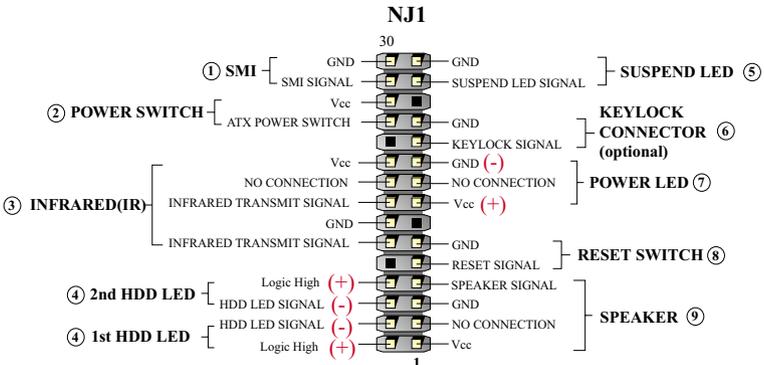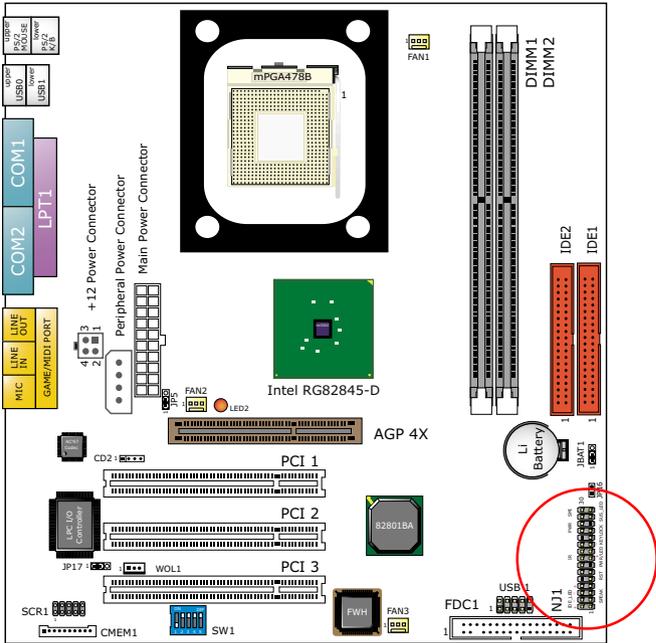

1. SMI Connector (System Management Interrupt):

Connection: This 2-pin connector is connected to the case-mounted Suspend Switch.

Function : Manually placing the system into a Suspend mode or “Green” mode.

2. Power Switch Connector:

Connection: Connected to a momentary button or switch.

Function : Manually switching the system between “On” and “Soft Off”. Pressing the momentary button for more than 4 seconds will also turn the system off.

3. IR Connector (Infrared Connector):

Connection: Connected to Connector IR on board.

Function : Supporting wireless transmitting and receiving module on board.

4. 1st HDD LED Connector / 2nd HDD LED Connector:

Connection: Connected to HDD LED.

Function : To supply power to HDD LED.

5. Suspend LED Connector:

Connection: Connected to Suspend indicator.

Function : To supply power to “Suspend indicator”.

6. Keylock Connector (optional):

Connection: Connected to keylock switch.

Function : To lock keyboard for security purpose.

7. Power LED Connector:

Connection: Connected to System Power LED.

Function : To supply power to “System Power LED”.

8. Reset Switch Connector:

Connection: Connected to the case-mounted “Reset Switch”.

Function : To supply power to “Reset Switch” and support system reboot function.

9. Speaker Connector:

Connection: Connected to the case-mounted Speaker.



Function : To supply power to the case-mounted Speaker.

2-7.6 ATX Power Supply Version 2.03 Installation


- This mainboard is compatible with both ATX Power Supply Version 2.03 (with +12V Power Connector) and the older ATX Power Supply (with Peripheral Power Connector):

Important:

- If users use an older ATX Power Supply with Peripheral Power Connector, please connect both the Main Power Connector and the Peripheral Power Connector to mainboard.
- If users use the ATX Power Supply Version 2.03 (with a +12V Power Connector), please connect either the +12V Power Connector or Peripheral Power Connector in addition to the Main Power Connector.

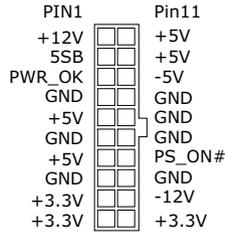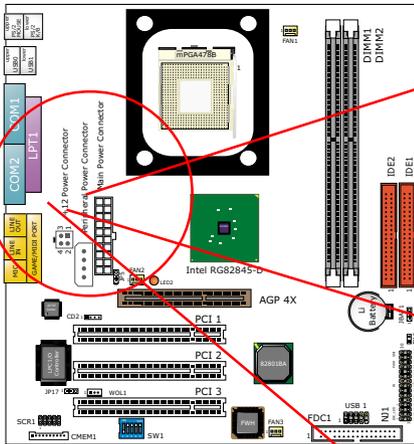

Main Power Connector

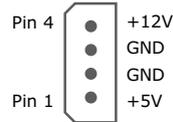



Peripheral Power Connector




+12V Power Connector

2-7.7 CMEM1 Memory Stick™/Secure Digital Memory Card Reader Connector

- This connector can be connected to a Memory Stick Reader or Secure Digital memory card reader with a Memory Stick/Secure Digital memory card cable connector.
- JP13 is designed on board for Memory Stick/Secure Digital memory card select for this connector. Before you set up connection from CMEM1 to a Memory Stick Reader or a secure Digital Memory Card Reader, you should choose the right setting of Jp13. Please see Jumper setting of Jp13 for more detailed instruction.
- Besides JP13 setting, user should also adjust an option “MS/SD Port Mode” in “Integrated Peripheral” of BIOS setup to select “MS socket” or “SD socket”. (see “Integrated Peripheral” in BIOS setup.)
- Meeting SONY Memory Stick™ specification Version 1.03.

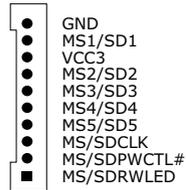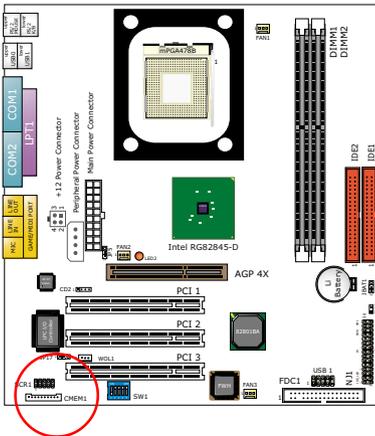



CMEM1 pin assignment

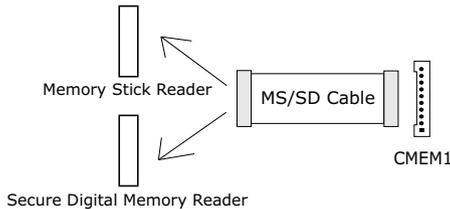

Connection between CMEM1 connector and MS/SD Card Reader

2-7.8 Smart Card Reader Connector (SCR1)


- The connector “SCR1” allows you to use Smart Card Reader. It is compliant with Personal Computer Smart Card (PC/SC) working group standard and smart card (ISO 7816) protocols.

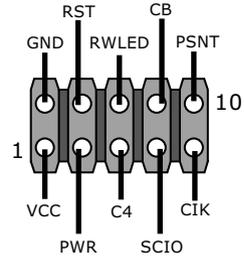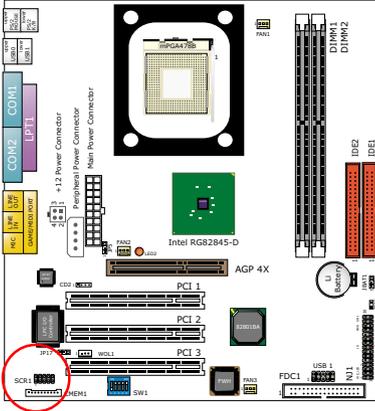



SCR1 pin assignment

2-7.9 USB Header (Header USB1)

- This header is for providing you two additional USB ports by using an additional USB Cable. User can order the additional USB cable from your mainboard dealers and vendors.

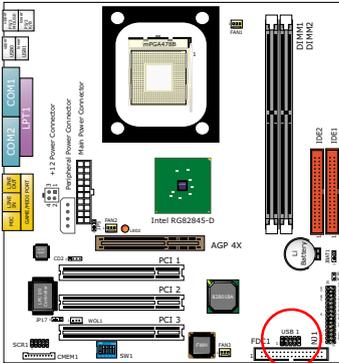

Additional USB Cable (Optional)

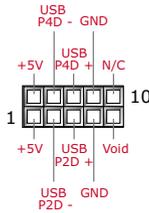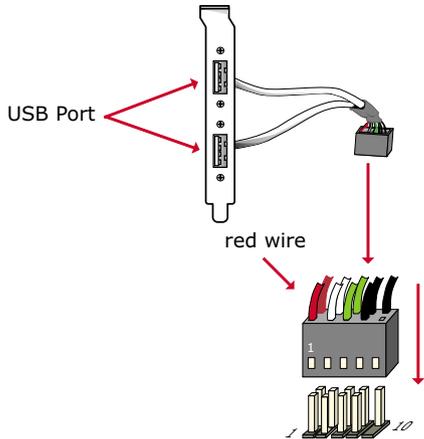


USB1 Header Pin Assignment


Header USB1

- When plugging the USB cable into Header USB1, users must make sure the red wire is connected to the first pin.

2-7.10 PS/2 Mouse And PS/2 Keyboard

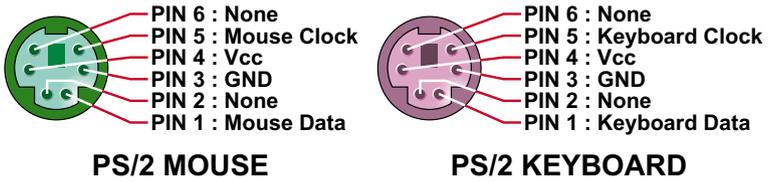

2-7.11 Chassis Panel Connector

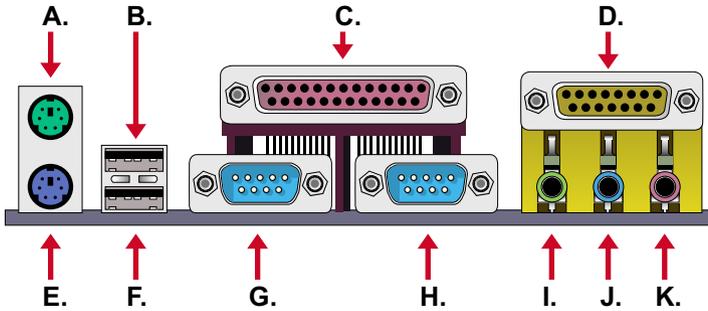

- A :** PS/2 MOUSE PORT
- B :** USB 0 PORT
- C :** LPT1 PORT
- D :** GAME/MIDI PORT
- E :** PS/2 KEYBOARD PORT
- F :** USB 1 PORT
- G :** COM1 PORT
- H :** COM2 PORT
- I :** LINE/SPEAKER OUT
- J :** LINE IN
- K :** MICROPHONE INPUT

2-8 IRQ Description

IRQ	Function Description	Priority
IRQ 0	System Timer	1
IRQ 1	Keyboard Controller	2
IRQ 2	Programmable Interrupt	N/A
IRQ 3	Serial Port (COM 2)	11
IRQ 4	Serial Port (COM 1)	12
IRQ 5		13
IRQ 6	Floppy Disk Controller	14
IRQ 7	Parallel Port (LPT1)	15
IRQ 8	Real Time Clock (RTC)	3
IRQ 9		4
IRQ 10		5
IRQ 11		6
IRQ 12	PS/2 Mouse Port	7
IRQ 13	Coprocessor	8
IRQ 14	Primary IDE Channel	9
IRQ 15	Secondary IDE Channel	10

- Both ISA and PCI expansion cards may require IRQs. System IRQs are available to cards installed in the ISA expansion bus first, then any remaining IRQs are available to PCI cards. Currently, there are two types of ISA cards.
- The original ISA expansion card design, now referred to as “Legacy” ISA card, requires you to configure the card’s jumpers manually and then install it in any available slot on the ISA bus. To see a map of your used and free IRQs in Windows 98, the **Control Panel** in *My Computer*, contains a **System** icon, which gives you a **Device Manager** tab. Double-Clicking on a specific hardware device gives you a **Resources** tab which shows the Interrupt number and address. Double-Clicking **Computers** to see all the interrupts and addresses for your system. Make sure that each ISA device should be assigned to one IRQ respectively. If ISA device share IRQ with any other device, your computer will easily get into trouble.

Chapter 3 Software Setup

Drivers, Utilities and Software Installation

- Support CD:
This series of mainboards will always be shipped with a Support CD which contains those necessary driver files, Application Softwares and some helpful utilities. It is a user-friendly, auto-run CD which will open itself up in a CD-ROM automatically.
- Contents of Support CD:
For 85DIR, user should be able to find in the Supported CD the following drivers and utilities supported by Intel 845 Chipset:
 1. INF Utility (Intel Chipset Software Installation Utility);
 2. Intel Application Accelerator (IAA);
 3. AC'97 Drivers;
 4. Hardware Monitor Utility.

This chapter is devoted to describing the installations of all these essential drivers and utilities on Windows 9X, Windows ME, Windows 2000 and Windows XP. The installation procedures for all these operating systems are all programed into an auto-run mode. What users have to do is to read and follow the pop-up instructions to carry out the installation. We therefore take the installation on Windows 98 as the general illustration hereby.

The priority of drivers to be installed should also be noted. Users are recommended to take the following installation orders :

This chapter contains the following topics :

3-1 Open up the Suport CD

3-2 Intel Chipset Software Installation Utility (INF Utility)

3-3 Intel Application Accelerator (IAA)

3-4 AC'97 Audio Drivers Installation

3-5 Hardware Monitor Utility

3-1 Open up the Support CD

- 1 Please put the Support CD enclosed in your mainboard package into the CD-ROM drive. In a few seconds, the Main Menu will automatically appear, displaying the contents to be installed for this series:

Intel Chipset Software Installation Utility (INF Utility)

Intel Application Accelerator (IAA)

AC'97 Drivers Installation

Hardware Monitor Utility

Install Acrobat Reader

Browse CD-ROM

Exit

- 2 In case your system does not open the Support CD automatically, please click to the following path to enter the Main Installation Menu:

D:\Autorun.exe (assuming that your CD-ROM Drive is Drive D)

- 3 Users are recommended to install all the drivers and utilities at a time, though they can be installed separately. Also, we should take "Intel Chipset Software installation Utility" as first installation priority to optimize the Intel system. From next section, we provide detailed descriptions of all these installations with graphical illustrations.

3-2 Install “Intel Chipset Software Installation Utility”

1 Following the procedures of opening the Support CD, click to “Install Intel Chipset software installation Utility” to proceed.

2 The Intel Service Pack InstallShield Wizard will pop up to guide you to the Intel Service pack installation. Press “**Next**” button to continue.



3 “Intel Software License Agreement” screen will appear, please click the “**Yes**” button to agree with the Licence Agreement and continue.



4 After all the setup process is finished, please restart your computer by clicking on “**Finish**” so as to take the Utility into effect.



3-3 Install “Intel Application Accelerator”


IAA supports all Windows 98/98se/Mellennium/NT4/2000/XP with Pentium III / 4 processor. Installations of this software for these operating systems are similarly programed to an auto-run mode, and it is typically designed to improve performance of the storage sub-system and overall system performance. Below is a model installation on Windows 98. Users of Windows Me/NT4/2000/XP can also follow this example for IAA installation.

1 Following the procedures of opening the Support CD, click to “Intel Application Accelerator” to proceed.

2 On the “InstallShield Wizard” screen, Click on “Next” to continue.



3 On the “Licence Agreement” screen, click on “Yes” to continue.

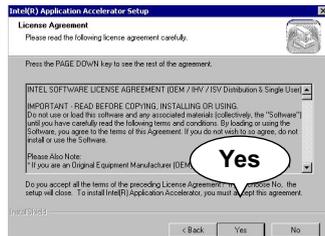

4 On "Choose Destination Location" screen, press "Yes" to continue.



5 On "InstallShield Wizard Complete" screen, choose "Yes, I want to restart my computer now" and press "finish" to restart. Remember you must restart computer to put setup into effect.



3-4 AC'97 Audio Driver Installation


You can install “AC'97 Audio Driver” on these two members of the series.

1 Following the procedures of opening the Support CD, click to “AC'97 Audio Driver” to proceed.

2 When the “SoundMAX Install” screen appears, press “Next” to continue.



3 After all the setup process is finished, please check the “Yes, I want to restart my computer now.” and click “OK” to restart your system.

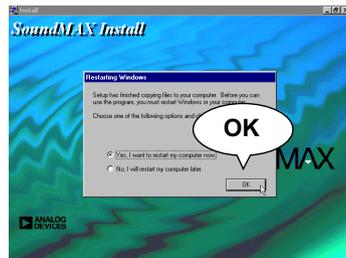

3-5 Install Hardware Monitor Utility

3-5.1 Installation

Hardware Monitor is built on this mainboard. Its installation is programmed to a fully automated mode on Windows 9X/Me/NT4/2000/XP. User can follow the model installation below for its installation on various Windows System.

1 Following the procedures of opening the Support CD, click to “Hardware Monitor Utility” to proceed.

2 With the help of InstallShield Wizard, installation program automatically opens the “Choose Destination Location” screen. Click “Next” to continue.



3 Select the Program folder and click “Next” to continue.




4 On the “Setup complete” screen, click “Finish” to restart your computer so that the Utility can be put into effect.




3-5.2 Verification


1 After restarting your computer, click “Start” and choose the path Programs \Winbond\Hwdoctor to open the main window of the Hardware Doctor.

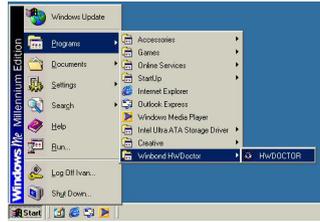


2 The “Voltage/CaseOpen” window is for CPU voltage and temperature information.

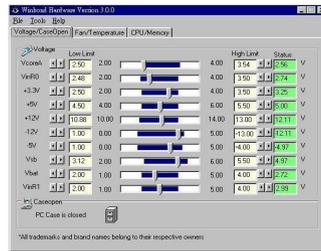

3 The “Fan/Temperature” window is for Fan speed and temperature information.

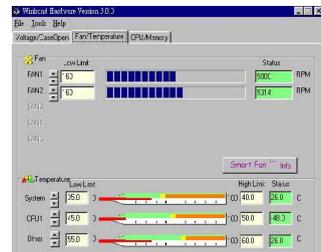

4 The “CPU/Memory” window is for Processor and memory information.

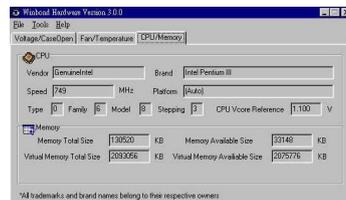

Chapter 4 BIOS Setup

THE BIOS

- BIOS stands for Basic Input and Output System. It was once called ROM BIOS when it was stored in a Read-Only Memory(ROM) chip Now manufacturers would like to store BIOS in EEPROM which means Electrically Erasable Programmable Memory. BIOS used in this series of mainboard is stored in EEPROM, and is the first program to run when you turn on your computer.
- BIOS performs the following functions:
 1. Initializing and testing hardware in your computer (a process called “POST”, for Power On Self Test).
 2. Loading and running your operating system.
 3. Helping your operating system and application programs manage your PC hardware by means of a set of routines called BIOS Run-Time Service.

The following topics are included in this chapter:

- 4-1 About BIOS Setup**
- 4-2 To run BIOS Setup**
- 4-3 About CMOS**
- 4-4 The POST (Power On Self Test)**
- 4-5 To upgrade BIOS**
- 4-6 BIOS Setup**

4-1 About BIOS Setup

- BIOS setup is an interactive BIOS program that you need to run when:
 1. Changing the hardware of your system. (For example: installing a new Hard Disk etc.)
 2. Modifying the behavior of your computer. (For example: changing the system time or date, or turning special features on or off etc.)
 3. Enhancing your computer's behavior. (For example: speeding up performance by turning on shadowing or cache)

4-2 To run BIOS Setup

- First access BIOS setup menu by pressing < DEL > key after "POST" is complete (before OS is loaded). BIOS will then display the following message:

DEL : SETUP

4-3 About CMOS

- CMOS is the memory maintained by a battery. CMOS is used to store the BIOS settings you have selected in BIOS Setup. CMOS also maintains the internal clock. Every time you turn on your computer, the BIOS Looks into CMOS for the settings you have selected and configures your computer accordingly. If the battery runs out of power, the CMOS data will be lost and POST will issue a "CMOS invalid" or "CMOS checksum invalid" message. If this happens, you have to replace the battery and do some proper settings in BIOS Setup.

4-4 The POST (Power On Self Test)

- POST is an acronym for Power On Self Test. This program will test all things the BIOS does before the operating system is started. Each of POST routines is assigned a POST code, a unique number which is sent to I/O port 080h before the routine is executed.

4-5 To upgrade BIOS

- System BIOS is incorporated into a Flash memory component. Flash BIOS allows user to upgrade BIOS without the need to replace an EPROM component.
- The Upgrade Utility can be loaded on a floppy diskette to execute saving, verifying, and updating the system BIOS. The Upgrade Utility can also be run from a hard disk drive or a network drive.

4-5.1 Before Upgrading BIOS

- It is highly recommended that you save a copy of the original mainboard BIOS along with a Flash EPROM Programming utility (AMIFLASH.EXE) to a bootable floppy disk so that you can reinstall the BIOS when needed.

4-5.2 Upgrade Process

- Normally, to upgrade BIOS is unnecessary if the system is working fine. Users should only upgrade the BIOS when you experience incompatible problems or need to create new features.
- “AMIFLASH.EXE” is a Flash EPROM Programming utility that updates the BIOS by uploading a new BIOS file to the programmable flash ROM on the mainboard. This program only works in **DOS environment, the utility can not be executed in win95/98, ME, NT WINDOWS 2000 or Windows XP environment.**
- Please follow the steps below for upgrading the system BIOS:

Step 1. Please visit the board maker’s website, download latest BIOS file and AMI flash utility “AMIFLASH.EXE”. The BIOS file format will be *.ROM, of which “*” stands for the specific BIOS file name.

Step 2. Create a bootable diskette. Then copy the BIOS file and AMI flash utility “AMIFLASH.EXE” into the diskette.

Step 3. Insert the diskette into drive A, reboot your system and boot from the diskette.

- Step 4. Type **AMIFLASH *.ROM** and then press <Enter> to run BIOS upgrade program. (*.ROM depends on your mainboard model and version code. Instead of typing "*", you should type specific file name for your specific mainboard).
- Step 5. When the message "Flash ROM Update Completed - Pass." appears, please restart your system.
- Step 6. You will see a message "CMOS Memory Size Wrong" during booting the system. Press or <F1> to run CMOS setup utility, then reload "LOAD SETUP DEFAULTS" or "**Load Optimal Defaults**" and save this change.

4-6 BIOS Setup --- CMOS Setup Utility

4-6.1 CMOS Setup Utility

- This mainboard comes with the AMI BIOS from American Megatrends Inc. Enter the CMOS Setup Utility Main Menu by:

1. Turn on or reboot your system. After a series of diagnostic checks, the following message will appear:

PRESS TO ENTER SETUP

2. Press the key and the main program screen will appear as follows.

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A	
<ul style="list-style-type: none"> ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Power Management Setup ▶ PNP/PCI Configurations ▶ Integrated Peripherals ▶ Hardware Monitor Status ▶ Frequency/Voltage Control 	<ul style="list-style-type: none"> Set Supervisor Password Set User Password Load Optimized Defaults Load BIOS Setup Defaults Save & Exit Setup Exit Without Saving
F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults Esc: Exit →← : Select Menu Enter: Select ▶Sub - Menu F10: Save & Exit	
Set Time, Date, Hard Disk Type...	

3. Use the arrow keys on your keyboard to select an option, and press <Enter>. Modify the system parameters to reflect the options installed in your system.
4. You may return to the Main Menu anytime by pressing <ESC>.
5. In the Main Menu, "Save & Exit Setup" saves your changes and reboots the system, and "Exit Without Saving" ignores your changes and exits the program.

4-6.2 Standard CMOS Setup

- Standard CMOS Setup records some basic system hardware configuration and sets the system clock and error handling. You only need to modify the configuration values of this option if you want to change your system hardware configuration or when the data stored in the CMOS memory gets lost or damaged.

Run the Standard CMOS Setup as follows:

1. Choose “Standard CMOS Setup” from the Main Menu and a screen with a list of options will appear:

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

Standard CMOS Features		[Setup Help]
System Time	00 19 29	Time is 24 hour format
System Date	Dec 05 2001 Wed	
Floppy Drive A	1.44M, 3.5 in.	Hour : 00-23
Floppy Drive B	Not Installed	Minute: 00-59
▶ Primary IDE Master	Not Installed	Second: 00-59
▶ Primary IDE Slave	Not Installed	(1:30 AM=01:30:00, 1:30 PM=13:30:00)
▶ Secondary IDE Master	Not Installed	
▶ Secondary IDE Slave	Not Installed	
▶ Secondary IDE Slave	Not Installed	

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys.
3. Press <ESC> to return to the Main Menu when you finish setting up all items. The following item descriptions are provided as a quick guide to your setup.

System Time The BIOS shows the time of the day in the format: hh:mm:ss. Choose the field with the Arrow keys and change the time with the Page Up/Page Down keys.

System Date The BIOS shows the date of the day in the format: mm:dd:yy :day of the Week. Choose the field with the Arrow keys and change the value with the Page Up/Page Down keys.

Floppy Drive A / Floppy Drive B Select this field to the type(s) of floppy disk drive(s) installed in your system. The choices are:
 360KB, 5.25 in.
 1.2MB, 5.25 in.
 720KB, 3.5 in.
 1.44MB, 3.5 in.
 2.88MB, 3.5 in.
 Not Installed

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

Primary IDE Master:Not Installed		[Setup Help]
Type	Auto	1-50 : Predefined types
Cylinders		USER: Set Parameters by User
Heads		AUTO: Set parameters automatically
Write Precompensation		CD-ROM: Use for ATAPI CD-ROM drivers
Sectors		or
Maxium Capacity		Double click [AUTO] to set all HDD parameters automatically
LBA Mode	Off	
Black Mode	Off	
Fast Programmed I/O Modes	0	
32 Bit Transfer Mode	On	

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

Type This option shows the types of configuration for the IDE devices:

1-50: Predefined types

USER: set Parameters by User

Auto: Set parameters automatically

CD-ROM: Use for ATAPI CD-ROM drives

Double click [Auto] to set all HDD parameters automatically, including “Cylinders, Heads, Write Precompensation, Sectors, Maximum Capacity and 32 Bit Transfer Mode.

4-6.3 Advanced BIOS Features

- Advanced BIOS Features improves your system performance or sets up system features according to your preference.

Run the Advanced BIOS Features as follows:

1. Choose “Advanced BIOS Features” from the Main Menu and a screen with a list of options will appear:

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

Advanced BIOS Features		[Setup Help]
Quit Boot	Enabled	
1st Boot Device	Floppy: 1.44MB 3.5	
2nd Boot Device	Disabled	
3rd Boot Device	IDE-0: Maxtor 20560 A4-	
Try Other Boot Devices	Yes	
S.M.A.R.T for Hard Disks	Disabled	
Bootup Num-lock	On	
Floppy Drive Swap	Disabled	
Floppy Drive Seek	Disabled	
PS2 Mouse Support	Enabled	
Primary Display	VGA/EGA	
Password Check	Setup	
Boot To OS2	No	
L1 Cache	Enabled	
L2 Cache	Enabled	
System BIOS Cacheable	Enabled	
C000,32K Shadow	Cache	
C800,16K Shadow	Disabled	
CC00,16K Shadow	Disabled	
D000,16K Shadow	Disabled	
D400,16K Shadow	Disabled	
D800,16K Shadow	Disabled	
DC00,16K Shadow	Disabled	

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: "Help" gives options available for each item.

<F9>: Setup BIOS default values.

<F10>: Save and Exit Setup.

3. Press <ESC> to return to the Main Menu when you finish setting up all items. The following item descriptions are provided as a quick guide to your setup.

Quick Boot Allows you to Enable / disable quick boot of your system.

1st/2nd/3rd Boot Device Allows you to set floppy or IDE devices already installed to be the 1st/2nd/3rd boot device.

Try Other Boot Devices Allows you to enable/disable system to try to boot with other boot devices.
Choices: Yes; No

S.M.A.R.T. for Hard Disks Allows you to Enable / disable the Self Monitoring Analysis and Reporting Technology for the hard Disk.
Choices: Enabled; Disabled

BootUp Num-Lock Allows you to Toggle between On or Off to control the state of the NumLock key when the system boots. If On, the numeric keypad is in numeric mode. If off, the numeric keypad is in cursor control mode.

Floppy Drive Swap When enabled, floppy drives A and B will be exchanging without any physical connection and modification on the cables.

- Boot Up Floppy Seek** When enabled, the BIOS tests (seeks) floppy drives to determine whether they have 40 or 80 tracks. Only 360-KB floppy drives have 40 tracks; drives with 270KB, 1.2MB, and 1.44MB capacity all have 80 tracks. Because very few modern PCs have 40-track floppy drives, we recommend that you set this field to disabled to save time.
- PS2 Mouse Support** If your system has a PS/2 mouse port and you install a serial pointing device, select Enabled.
- Primary Display** Allows you to choose the primary display for the system. Choices: VGA/EGA (default); CGA40x25; CGA80x25; Mono; Absent
- Password Check** Allows you to set BIOS to check up password with a password prompt at BIOS Setup or whenever re-starting system. Choices: Setup; Always
- Boot to OS/2** Allows you to set your system to OS/2 operating system. Choices: Yes; No (default)
- CPU L1 & L2 Cache** Cache memory is additional memory that is much faster than conventional DRAM (system memory). CPUs from 486-type up contain internal cache memory (L1), and most, but not all, modern PCs have additional (external) cache memory (L2). When the CPU requests data, the system transfers the requested data from the main DRAM into cache memory, for faster access by the CPU.
- System BIOS Cacheable** Allows you to Enable / disable the System BIOS Cacheable function.
- C000, 32K Shadow** Allows you to set these addresses cached, Enabled or Disabled. Default: Cached
- C800,CC00,D000,D400, D800,DC00 16K Shadow** Allows you to set these addresses cached, Enabled or Disabled. Default: Disabled

4-6.4 Advanced Chipset Features

- Advanced Chipset Features is used to modify the values of chipset buffers. These buffers control the system options.

Run the Advanced Chipset Features as follows:

1. Choose “Advanced Chipset Features” from the Main Menu and a list of option will appear:

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

Advanced Chipset Features	[Setup Help]
***** DRAM Timing *****	
SDRAM Frequency	Auto
Configure SDRAM Timing by SPD	Enabled
SDRAM CAS# Latency	2.5 Clocks
SDRAM RAS# Precharge	3 Clocks
SDRAM RAS# to CAS# Delay	3 Clocks
SDRAM Precharge Delay	7 Clocks
SDRAM Idle Timer	Infinite
SDRAM Read Thermal Management	Disabled
DRAM Integrity Mode	Disabled
Memory Hole	Disabled
APIC Interrupt Mode	Enabled
AGP Aperture Size	64MB
USB Controller	All USB Port
USB Device Legacy Support	Disabled
Port 64/60 Emulation	Disabled

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: “Help” gives options available for each item.

<F9>: Setup BIOS default values.

<F10>: Save and Exit Setup.

3. Press <ESC> to return to the Main Menu when you finish setting up all items. The following item descriptions are provided as a quick guide to your setup.

SDRAM Frequency The value represents the performance parameters of the installed memory chips (DRAM). Do not change the value from the factory setting unless you install new memory that has a different performance rating.

Configure SDRAM Timing By SPD When this item Enabled, SDRAM Timing is set by SPD.
SPD (Serial Presence Detect) is located on the memory modules, BIOS reads information coded in SPD during system boot up.

SDRAM CAS# Latency When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing. Do not reset this field from the default value specified by the system designer.

SDRAM RAS# Precharge If an insufficient number of cycles is allowed for the RAS to accumulate its charge before DRAM refresh, the refresh may be incomplete and the DRAM may fail to retain data. Fast gives faster performance; and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system.
The Choices: 2; 3

- SDRAM RAS# to CAS# Delay** This field lets you insert a timing delay between the CAS and RAS strobe signals, used when DRAM is written to, read from, or refreshed. Fast gives faster performance and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system.
The Choices: 2; 3
- SDRAM Precharge Delay** This field allows you to select a CAS Precharge delay timing.
Choices are: 7; 6; 5
- SDRAM Idle Timer** Please leave this field at default setting.
- SDRAM Read Thermal Management** Selecting Enabled is to activate the DRAM Read Thermal management function. default: Disabled.
- DRAM Integrity Mode** This item is to choose or not the Error Check and Correction mode.
Choices are: ECC; Non-ECC (default).
- Memory Hole** You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached.
- APIC Interrupt Mode** Allows you to enable / disable the APIC function.
Default: Disabled
- AGP Aperture Size** Choices: 32; 64 MB. Memory mapped and graphics data structures can reside in a Graphics Aperture. This area is like a linear buffer. BIOS will automatically report the starting address of this buffer to the O.S.
- USB Controller** Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.
- USB Device Legacy Support** Set this option to Enabled to support for Legacy USB devices.
- Port 64/60** Please leave this field at default setting.

4-6.5 Power Management Setup

- Power Management Setup allows you to set the system’s power saving functions.

Run the Power Management Setup as follows:

1. Choose “Power Management Setup” from the Main Menu and a list of options will appear:

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

Power Management Features		[Setup Help]
ACPI Standby State	Auto	
USB Device Wakeup From S3	Disabled	
Power Management/APM	Enabled	
Video Power Down Mode	Suspend	
Hard Disk Power Down Mode	Stand By	
Standby Time Out (Minute)	Disabled	
Suspend Time Out (Minute)	Disabled	
Throttle Slow Clock Ratio	50.0%	
FDC/LPT/COM Ports	Monitor	
MIDI Ports	Ignore	
Primary Master IDE	Monitor	
Primary Slave IDE	Ignore	
Second Master IDE	Monitor	
Second Slave IDE	Ignore	
Power Button Function	On/Off	
Restore On AC/Power Loss	Last State	
Resume On Ring	Disabled	
Resume On LAN	Disabled	
Resume On PME#	Disabled	
Resume On RTC Alarm	Disabled	
RTC Alarm Date	15	
RTC Alarm Hour	12	
RTC Alarm Minute	30	
RTC Alarm Second	30	

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: "Help" gives options available for each item.

<F9>: Setup BIOS default values.

<F10>: Save and Exit Setup.

3. Press <ESC> to return to the Main Menu when you finish setting up all items. The following item descriptions are provided as a quick guide to your setup.

ACPI Standby State This item allows you to select the ACPI Suspend type. You can select S3(STR) for suspending to DRAM if your system supports this mode. Or you can select S1 (POS) for Power on Suspend under Windows 98 ACPI mode..

USB Device Wakeup From S3 This item will Enable you to wake-up the system by using keyboard when you shut down the system in S3 mode.

Power Management/AMP This option allows you to select the type (or degree) of power saving for Doze, Standby, and Suspend modes.
This table describes each power management mode. Default: User Define.

Max Saving	Maximum power savings. Only Available for SL CPUs. Inactivity period is 1 minute in each mode.
User Define	Set each mode individually. Select time-out period in the section for each mode stated below.
Min Saving	Minimum power savings. Inactivity period is 1 hour in each mode (except the hard drive).

- Video Power Down Mode** This option specifies the power conserving state that the hard disk enters after the specified period of hard drive inactivity has expired.
- Hard Disk Power Down Mode** When enabled and after the set time of system inactivity, the Hard Disk drive will be powered down while all other devices remain active.
- Standby/Suspend Time Out (Minute)** The option specifies the length of a period of Hard disk drive inactivity. When this length of time expires the system enters power conserving state in the "Hard Disk Power Down Mode".
- Throttle Slow Clock Ratio** Please leave this field at default setting.
- FDC/LPT/COM Ports** When FDC/LPT/COM is Monitor, any activity from one of the listed system peripheral devices or IRQs wakes up the system.
- MIDI Ports** This item allows you to configure MIDI Port.
The Choices: 300H(default); 330H.
- Primary/Second Master/Slave IDE** This option allows you to Disable to Enable on board Primary/Second IDE controller.
- Power Button Function** This option specifies how the power button mounted externally on the computer chassis is used.
- Restore on AC/Power Loss** This function allows you to set whether or not to restart the system after power interruptions.

- Resume On Ring** An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from a soft off state.
- Resume On LAN** This function allows you to turn on the system through a Ethernet Card.
- Resume On PME#** This function allows you to turn on the system through a PME signal.
- Resume On RTC Alarm** When Enabled, you can set the data and time at the which the RTC (Real Time Clock) alarm awakens the system from suspend mode. Default: Disabled.
- RTC Alarm Date** Set a certain date when RTC Alarm Resume option is Enabled to awaken the system. This option is concurrent with Date option.
- RTC Alarm Time (hh:mm:ss)** Set a certain time when RTC Alarm Resume option is Enabled to awaken the system. This option is concurrent with Resume Time option.

4-6.6 PNP / PCI Configuration

- PNP/PCI Configuration allows you to modify the system's power saving functions.

Run the PNP/PCI Configuration as follows:

1. Choose "PNP/PCI Configuration" from the Main Menu and a screen with a list of options will appear:

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

PNP/PCI Configurations		[Setup Help]
Plug and Play Aware O/S	No	
Clear NVRAM	No	
PCI Latency Timer (PCI Clocks)	32	
Primary Graphics Adapter	AGP	
PCI IDE BusMaster	Enabled	
PCI Slot 1 IRQ Priority	Auto	
PCI Slot 2 IRQ Priority	Auto	
PCI Slot 3 IRQ Priority	Auto	
PCI Slot 4 IRQ Priority	Auto	
PCI Slot 5 IRQ Priority	Auto	
PCI Slot 6 IRQ Priority	Auto	

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: "Help" gives options available for each item.

<F9>: Setup BIOS default values.

<F10>: Save and Exit Setup.

3. Press <ESC> to return to the Main Menu when you finish setting up all items. The following item descriptions are provided as a quick guide to your setup.

Plug & Play aware O/S Select Yes for Windows systems supporting Plug and Play function. Select No for systems not supporting PNP.

Clear NVRAM This function allows you to turn on the system through a Ethernet Card.

PCI Latency Timer (PCI Clocks) Please leave this field to the default setting for best performance an stability.

Primary Graphics Adapter This item specifies which VGA Card is your primary graphics adapter.

PCI IDE BusMaster Please leave this field at default setting.

PCI Slot1~6 IRQ Priority Set to Auto, this option allows the BIOS to assign IRQ to PCI slot.
Choices: Auto (default); 3; 4; 5; 6; 7; 8; 9; 10; 11; 12; 14; 15.

4-6.7 Integrated Peripherals

- Integrated Peripherals option allows you to get some information inside your system when it is working.

Run the Integrated Peripherals as follows:

1. Choose "Integrated Peripherals" from the Main Menu and a list of options will appear:

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

Integrated Peripherals	[Setup Help]
▶ Winbond W83697 Super I/O OnBoard IDE Both OnBoard AC'97 Audio Auto OnBoard MC'97 Modem Auto OnBoard FDC Auto OnBoard Serial Port A Auto OnBoard Serial Port B Auto Serial Port B Mode Normal IR Duplex Mode Half Duplex IR Pin Select IRRX/IRTX OnBoard Parallel Port Auto Parallel port Mode ECP EPP Version N/A Parallel Port IRQ Auto Parallel Port DMA Auto OnBoard Midi Port Disabled Midi IRQ Select 5 OnBoard Game Port 200 Keyboard PowerOn Function Disabled Specific key for PowerOn N/A Mouse PowerOn Function Disabled	

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: "Help" gives options available for each item.

<F9>: Setup BIOS default values.

<F10>: Save and Exit Setup.

3. Press <ESC> to return to the Main Menu when you finish setting up all items. The following item descriptions are provided as a quick guide to your setup.

OnBoard IDE The chipset contains a PCI IDE interface with support for two IDE channels. Select Primary to activate the only primary IDE interface, if you install an add-in secondary interface. Select Both to activate both interfaces, or Disabled to deactivate both interfaces, if you install both a primary and a secondary add-in IDE interface.

OnBoard AC'97 Audio This option allows you to decide to enable/disable the 845 chipset to support AC'97 Modem.
The choices: Auto; Disabled (default).

OnBoard MC'97 Modem This option allows you to decide to enable/disable the 845 chipset to support AC'97 Modem.
The choices: Auto; Disabled (default).

OnBoard FDC Allows you to enable /disable Floppy Disk Drive on board.
The choices: Auto; Enabled; Disabled

**OnBoard Serial PortA/
PortB** Allows you to set Serial Port on board. Select a logical COM port name and matching address for the first and second serial ports. Select an address and corresponding interrupt for the first and second serial ports.
The choices: Auto; Disable; 3F8h/COM1;
2F8h/COM2; 3F8h/COM3; 2F8h/COM4

Serial Port B Mode Allows you to set serial Port B Mode.
The choices: Auto; Normal; IrDA; ASKIR

IR Duplex Mode Select the value required by the IR device connected to the IR port. Full-duplex mode permits simultaneous two-direction transmission. Half-duplex mode permits transmission in one direction only at a time. If no infrared port is present in the system, select Disabled.

IR Pin Select This item allows you to enable the TX, RX inverting which depends on different H/W requirement. This field is not recommended to change its default setting for avoiding any error in your system.
The choice: "No, No", "No, Yes"(default), "Yes, No", "Yes, Yes".

OnBoard Parallel Port Allows you to configure parallel port on board.
The choices: Auto; Disabled; 378h; 278h; 3BCh

Parallel Port Mode If Parallel Port is not disabled, this option allows you to configure parallel port mode.
The choices: SPP; EPP; ECP; EPP+ECP

EPP Version Select EPP port type 1.7 or 1.9.

Parallel Port IRQ/DMA If Parallel Port is set 378h, this option allows you to configure parallel port IRQ/DMA.
The choices: 5/7 for IRQ; 0/1/3 for DMA

OnBoard MIDI Port Allows you to configure onboard MIDI port .
The choices: Disabled; 300h; 330h

MIDI IRQ Select This item allows you to select the MIDI Port IRQ.
Choices: 10(default); 5.

OnBoard Game Port This item allows you to select the Game Port Address.
The choices: Disabled; 201(default); 209.

Keyboard PowerOn Function / Specific key for PowerOn This option allows you to use specific keys on the keyboard to turn on the system.

Mouse PowerOn Function This option allows you to use PS/2 Mouse to turn on the system.

4-6.8 Hardware Monitor Status Features

- This section helps you to get more information about your system including CPU temperature, FAN speed and voltage. It is recommended that you contact your mainboard supplier to get proper values about the setting of the CPU temperature.

To enter Hardware Monitor Status Features as follows:

1. Choose “Hardware Monitor Status Features” from the Main Menu and a screen with a list of options will appear:

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

Hardware Monitor		[Setup Help]
CPU Temperature	27°C/80°F	
System Temperature	28°C/82°F	
Other Temperature	208°C/406°F	
CPU Fan Speed	4591 RPM	
Chassis Fan Speed	0 RPM	
Power Fan Speed	0 RPM	
Vcore	3.360V	
+ 5.000V	5.168V	
+12.000V	9.673V	

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: “Help” gives options available for each item.

<F9>: Setup BIOS default values.

<F10>: Save and Exit Setup.

3. Press <ESC> to return to the Main Menu when you finish setting up all items. The following item descriptions are provided as a quick guide to your setup.

Shutdown Temperature This feature prevents your CPU from damage by over heat. If the CPU's temperature is higher than "CPU warning temperature" that you select in this field, the BIOS will shut down your system within 3 seconds.

CPU/System/Other Temperature Shows current CPU / System / Other temperature.

CPU/Chassis Fan Speed These fields display the current speed of the CPU/ Chassis fan.

Vcore Shows CPU core actual voltage value.

+5V/+12V Shows current voltage against the +5.000V/+12.000V power supply.

4-6.9 Frequency/Voltage Control

Run the “Frequency/Voltage Control” as following:

1. Choose “Frequency/Voltage Control” from the Main Menu and a screen with a list of options will appear:

AMIBIOS EASY SETUP UTILITY - VERSION 2.01A

Frequency/Voltage Control	[Setup Help]
RedStorm Overclocking Tech CPU Linear Freq Disabled CPU Clock 100 MHz CPU Ratio Selection Locked	Please press 'Enter' key to run RedStorm

F1 : Help ↑↓ : Select Item +/- : Change Values F9 : Setup defaults
 Esc: Previous Menu Enter: Select ▶Sub - Menu F10: Save & Exit

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp / PgDn / + / - keys. An explanation of the <F> keys follows:

<F1>: “Help” gives options available for each item.

<F9>: Setup BIOS default values.

<F10>: Save and Exit Setup.

3. Press <ESC> to return to the Main Menu when you finish setting up all items. The following item descriptions are provided as a quick guide to your setup.

Redstorm Overclocking Tech Please press <Enter> to start *RED STORM OVERCLOCKING TECH*, this option helps user an easy way to overclocking, it will increase CPU external clock automatically, when CPU external clock increasing to unacceptable value, BIOS will restart your system, then running at acceptable CPU external clock.

CPU Linear Freq. This item allows you to adjust the CPU clock by 1MHz stepping. Default CPU clock is 100MHz. Any overclocking is taking the risk of unstabilizing the CPU and system performance.
Choices: Default; Use linear (1MHz stepping).

CPU Clock If “Use CPU Linear Frequency” is set at “Use linear”, you can adjust the CPU clock by 1MHz stepping up or down.
Choices: 1MHz stepping.

CPU Ratio Selection This item allows you to select the CPU clock ratio so as to change or overclock the CPU frequency. However, if CPU clock Ratio is locked, this function is invalid.

4-6.10 Set Supervisor / User Password

These two options allow you to set your system passwords. Normally, the Supervisor Password should be set up first before you could go to set up the User Password. :

1. Choose “Set Supervisor Password” in the Main Menu and press <Enter>. Then the following message appears:

[Enter new supervisor password]

2. The first time you run this option, enter your password up to 8 characters and press <Enter>. (The screen does not display the entered characters.)
3. After you enter the password, the following message appears prompting you to confirm the password:

[Retype new supervisor Password]

4. Enter the same password “exactly” the same as you have just typed to confirm the password and press <Enter>.
5. The following message appears to confirm the new password setup.

[New supervisor password installed]

6. Then choose “Advanced BIOS Features” of the main menu, and roll your cursor to the item “Password Check”, so that you can set the new password to Always (System) or Setup (BIOS) only.
7. After you have made your choice for the new password, you can now set up the User Password from the Main Menu. Choose “Set User Password” in the Main Menu and press <Enter>.
8. When the following message appears, enter your new user password in the dialog box and then press <Enter>:

[Enter new user password]

9. After pressing <Enter>, the following message appears to prompt you to confirm the new password and press <Enter>:

[Retype new user password]

10. After pressing <Enter>, the following message appears to confirm the new user password.

[New user password installed]

- 11. Move the cursor to Save & Exit Setup to save the password.
- 12. If you need to delete the password entered before, choose the Supervisor Password and press <Enter>. It will delete the password that you have entered before.
- 13. Move the cursor to Save & Exit Setup to save the option you have just configured; otherwise the old password will still be there the next time you turn your system on.
- 14. Press <Enter> to exit to the Main Menu.

NOTE: *If you forget or lose the password, the only way to access the system is to clear the CMOS RAM. All setup informations will be lost and you need to run the BIOS setup program again.*

4-6.11 Load Optimized Defaults

When you press <Enter> on this item, you will get a confirmation dialog box with a message similar to:

[Load Optimal Defaults]
Press [Enter] to continue
or [ESC] to abort

Press <Enter> now to load Optimal values for all the Setup options.

4-6.12 Save & Exit Setup

Save & Exit Setup allows you to save all modifications you have specified into the CMOS memory. Highlight this option on the Main Menu and the following message appears:

[Saving current settings and exit]

Press [Enter] to continue
or [ESC] to abort

Press <Enter> key to save the configuration changes and exit CMOS Setup to restart your system.

4-6.13 Exit Without Saving

Exit Without Saving option allows you to exit the Setup Utility without saving the modifications that you have specified. Highlight this option on the Main Menu and the following message appears:

[Quit Without Saving Changes]

Press [Enter] to continue
or [ESC] to abort

Follow the message and press <Enter> key to exit CMOS Setup and restart system.