

Contents

- Chapter 1 Specification 6**
- 1-1 Mainboard Layout 7
- 1-2 Mainboard Specification Table 8
- 1-3 Mainboard Specifications 9
 - 1-3.1 CPU Socket 9
 - 1-3.2 System Chipsets 9
 - 1-3.3 Memory 9
 - 1-3.4 AMI BIOS 9
 - 1-3.5 Integrated Multiplexed AGP and DVO Interface 10
 - 1-3.6 Multi-I/O Functions 10
 - 1-3.7 Expansion Slots 10
 - 1-3.8 Ethernet on board (865G3-L only) 11
 - 1-3.9 Hardware Monitor on board 11
 - 1-3.10 AC'97 Audio Codec on board 11
 - 1-3.11 Form Factor 11
 - 1-3.12 Optional features 11
- Chapter 2 Hardware Setup 12**
- 2-1 CPU and CPU Fan Installation with Socket 478B 12
 - 2-1.1 CPU Installation with Socket 478B 12
 - 2-1.2 Hyper-threading CPU supported by Win XP 12
- 2-2 Memory Installation 13
 - 2-2.1 To Install DDR SDRAM Module 13
 - 2-2.2 Dual Channel Memory Features 13
- 2-3 VGA / AGP 8X/4X Slot Installation 14
- 2-4 IDE Connectors Installation 15
- 2-5 Floppy Drive Connector Installation 16
- 2-6 Serial ATA Connectors Setup 16
- 2-7 ATX V2.03 Power Supply Installation 17
- 2-8 On Board Fan Connectors 17
- 2-9 Jumper Settings 18
 - 2-9.1 JFSB1 & JFSB2: CPU Frequency Select 19
 - 2-9.2 JBAT1: Clear CMOS 20
 - 2-9.3 JFSB3: Memory Turbo Mode 21
 - 2-9.4 LJP1: LAN Controller Select (865G3-L only) 21
 - 2-9.5 JKB1: Keyboard / Mouse Wake Up 21

2-10 Other connectors setup	22
2-10.1 Back Panel Connectors	22
2-10.2 LAN Connector	22
2-10.3 CD-ROM Audio Connectors	23
2-10.4 External Audio Connector	23
2-10.5 Complex Pin-header (Front Connectors)	24
2-10.6 USB Ports and USB Pin-headers	25
Chapter 3 Software Setup	26
3-1 To Open up the Support CD	27
3-2 Intel Chipset Software Installation Utility	28
3-3 DirectX Installation	28
3-4 Graphics Driver Installation	29
3-5 AC'97 Audio Driver Installation	29
3-5.1 Install AC'97 6-channel Audio Driver	29
3-5.2 Verify 6-channel Audio	30
3-6 To Install Hardware Monitor Utility	32
3-6.1 Installation	32
3-6.2 Verification	33
3-7 To Install LAN Drivers (for 865G3-L only)	34
3-7.1 Installation	34
3-7.2 Verification	34
3-8 To Install USB 2.0 Driver for Windows 2000/XP	35
Chapter 4 AMI BIOS Setup	36
4-1 About BIOS Setup	37
4-2 To Run BIOS Setup	37
4-3 About CMOS	37
4-4 The POST (Power On Self Test)	37
4-5 To Update BIOS	38
4-6 BIOS SETUP by CMOS Setup Utility	39
4-6.1 Main Menu in CMOS Setup Utility	39
4-6.2 Standard BIOS Features	41
4-6.3 Advanced BIOS Features	42
4-6.4 Advanced Chipset Features	56
4-6.5 PCI/PNP Resource Management	59
4-6.6 Boot Configuration Setup	61
4-6.7 Boot Security Features	63
4-6.8 Save Changes and Exit	66
4-6.9 Discard Changes (and Exit)	67
4-6.10 Load Optimal Defaults	67
4-6.11 Discard Changes	67

Chapter 1 Specification

Introduction

This series of mainboards features an integration of the powerful processor Intel Pentium 4 and the single-chip North Bridge Intel 865G. The Intel P4 processor is a rapid execution engine providing 800/533/400MHz system bus, while North Bridge Intel 865G is a high performance integrated chipset providing Dual Channel DDR 400/333/266 SDRAM memory interface, Hub interface and AGP interface as well as an integrated Graphics Port for VGA display.

Integrated with Intel 865G, South Bridge Intel ICH5 supports the LPC I/O, upstream Hub interface, PCI interface, IDE interface, Serial ATA interface, USB 2.0 interface, AC'97 2.2 (6-channel) Audio interface and the interrupt control. This chapter is to introduce to users every advanced function of this high performance integration.

Topics included in this chapter are:


1-1 Mainboard Layout

1-2 Mainboard Specifications Table

1-3 Mainboard Specification**

**** If any difference is found between the mainboard description and the Mainboard you are using, please look up the Errata/Update Slip enclosed inside for the correction or updated information, or else contact the mainboard Dealer or visit our Web Site for the latest manual update.**

1-1 Mainboard Layout

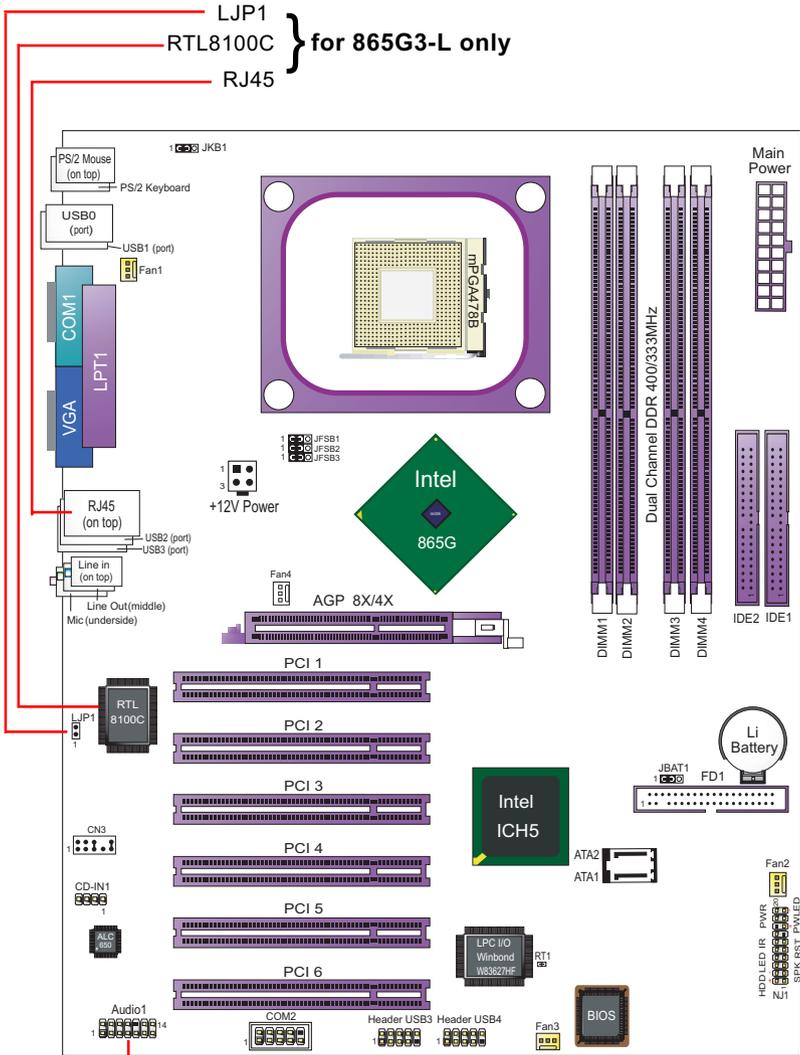

1-2 Mainboard Specification Table

865G3/865G3-L Specifications and Features		
CPU	Socket 478B for P4 CPU (Hyper Threading and Prescott CPUs included)	
North Bridge	Intel 865G, 800/533/400MHz Front Side Bus	
South Bridge	Intel ICH5	
BIOS	AMI BIOS	
Memory	Dual Channel DDR 400/333/266 SDRAM, up to 4GB in 4 DIMM slots	
I/O Chip	W83627HF, with Hardware Monitor	
AGP interface	AGP8X/4X Mode only; 1 AGP Slot on board	
Audio	AC'97 Audio 2.2 compliant, 6 channel audio	
IDE Interface	2 UATA 66/100 IDE ports	
SATA Interface	2 Serial ATA connectors supported by ICH5	
PCI Slots	6 PCI Master slots on board	
I/O Connectors	8 USB V2.0, 1 FDD port, 2 COM ports, 1 LPT, 1 IrDA, 1 PS/2 K/B, 1 PS/2 Mouse	
Networking	LAN Controller RTL8100C and Connector RJ45 (for 865G3-L only)	
VGA Display	1 x VGA connector on board for analog display	
Other common features	Keyboard/Mouse Wake Up	
Optional Features \ Models	865G3	865G3-L
LAN Controller on board	No	Yes

1-3 Mainboard Specifications

1-3.1 CPU Socket

CPU Socket 478B on board, supporting Intel® Pentium 4 processors 3.4GHz(+) (including Intel Hyper-Threading and Prescott CPUs) in 478-pin package for :

- 800/533/400MHz System Bus; 512KB L2 Advanced Transfer Cache
- Hyper-pipelined technology; Advanced dynamic execution;
- Rapid Execution Engine; Streaming SIMD Extensions 2
- 128 Bit Enhanced Floating Point Unit; Execution Trace Cache

1-3.2 System Chipsets

North Bridge Intel 865G:

- A high performance integrated chipset providing processor interface (including Hyper Threading Technology), Dual channel DDR 400/333/266 SDRAM memory interface, Hub interface, AGP interface as well as another integrated VGA interface with one on-board display port.

South Bridge Intel ICH5:

- Supporting the LPC I/O, upstream Hub interface, PCI interface, IDE interface, Serial ATA interface, USB 2.0 interface, AC'97 2.2 (6-channel) Audio interface and the interrupt control.

1-3.3 Memory

4 DDR DIMM 184-pin slots on board :

- Supporting unregistered, non-ECC Dual Channel DDR 400/333/266 SDRAM up to 4 GBs
- DIMMs to be populated in identical pairs for Dual Channel operation
- SPD (Serial Presence Detect) Scheme for DIMM Detection supported

1-3.4 AMI BIOS

Flash Memory for easy upgrade, supporting BIOS Writing Protection, Year 2000 compliant, and supporting various hardware configuration during booting system (See Chapter 4 BIOS Setup):

- Standard BIOS Features(Times, Date, System Information etc.)
- Advanced BIOS Features (CPU,IDE, Floppy, Super IO, Hardware Health, ACPI, USB, and Frequency/Voltage Control)
- Advanced Chipset Features (NorthBridge, SouthBridge Configuration)
- PCI/PNP Resource Management (IRQ Settings, Latency Timers etc.)
- Boot Configuration Setup (Boot Settings, Boot Device Priority etc.)
- BIOS Security Features (Supervisor Password, User Password)

1-3.5 Integrated Multiplexed AGP and DVO Interface

Integrated multiplexed AGP and DVO interface in 865G, supporting AGP performance and analog/Digital display:

- one AGP slot on board, supporting both Digital Video Out card or AGP8x/4x card for analog/digital display (TMDS, LVDS and TV-out) (See AGP Installation in Chapter 2 of this manual)
- One 15-pin VGA connector on board, supporting analog display
- Hardware motion compensation assist for software MPEG/DVD de-code
- Integrated 2D/3D graphics accelerator
- VGA Driver enclosed in Support CD for user's installation

1-3.6 Multi-I/O Functions

- Serial ATA Controller integrated in ICH5, supporting:
 - 2x Serial ATA connectors supporting up to 150MByte/s transfer rate
- PCI EIDE Controller, supporting:
 - 2x UATA100/66/33 IDE connectors supporting up to 4 IDE devices
- Dedicated IR Functions:
 - Third serial port dedicated to IR function either through the two complete serial ports or the third dedicated port Infrared-IrDA (HPSIR) and ASK (Amplitude Shift Keyed) IR
- Multi-mode Parallel Data Transfer:
 - Standard mode, high speed mode ECP and enhanced mode EPP
- Floppy Disk Connector:
 - One FDD connector supporting 2 floppy drives with drive swap support
- Universal Serial Bus Transfer Mode:
 - USB V2.0 compliant; 480Mb/s USB Bus, supporting Windows 2000 or later operating systems (no support for Windows 9X/ME)
 - 4 built-in USB connectors and 2 USB Headers which require 2 additional USB cables to provide 4 more optional USB ports
- PS/2 Keyboard and PS/2 Mouse
- UARTs (Universal Asynchronous Receiver / Transmitter):
 - Two serial ports (COM1 & COM2) on board

1-3.7 Expansion Slots

- 6 PCI Bus Master slots
- 1 AGP slot
- 4 DDR SDRAM DIMM slots

1-3.8 Ethernet on board (865G3-L only)

Ethernet Controller RTL8100C on board:

- Supporting 10/100Mb data transfer
- Supporting Wake On LAN function through the on-board RJ45 LAN Connector
- LAN Driver enclosed in Support CD for user's installation.

1-3.9 Hardware Monitor on board

- Hardware Monitor supported by W83627HF, providing monitoring and alarm for flexible desktop management of hardware voltage, temperatures and fan speeds.
- Utility Software Soltek Hardware Monitor for displaying system status is enclosed in Support CD for user's installation.

1-3.10 AC'97 Audio Codec on board

AC'97 Audio Codec 2.2 compliant on board

- Supporting 6-channel display of PCM audio output
- 6 channel audio consists of Front Left, Front Right, Back Left, Back Right, Center and Subwoofer for complete surround sound effect
- AC'97 Audio Codec Driver enclosed in Support CD for user's installation.

1-3.11 Form Factor

- ATX Form Factor, ATX Power Supply, version 2.03 compliant, supported by one Main Power Connector, one +12V Power Connector.
- Mainboard size: 305mm x 244mm

1-3.12 Optional features


Optional Features \ Models	865G3	865G3-L
LAN Controller on board	No	RTL8110C
LAN connector	No	RJ45 on board
Jumper for LAN controller	No	LJP1 to enable/disable controller

Chapter 2 Hardware Setup


2-1 CPU and CPU Fan Installation with Socket 478B

2-1.1 CPU Installation with Socket 478B

(1) Pentium 4 CPU

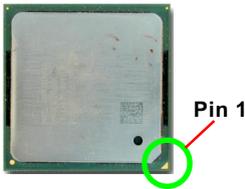


(2) Pull up the lever and insert P4 CPU into socket 478

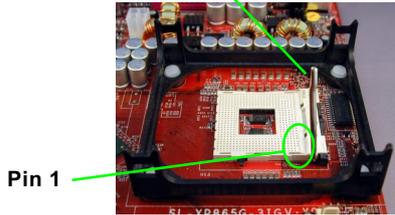

(3) Pull down the lever to fix down CPU



(4) Load down the P4 CPU Fan into Fan base

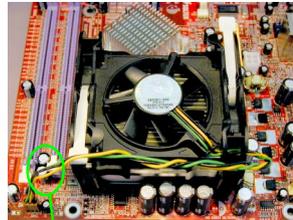


Connect Fan Power cable to onboard FAN connector

2-1.2 Hyper-threading CPU supported by Win XP

This mainboard supports Hyper-threading dual-in-one CPU, the function of which can be enabled by Windows XP. (See illustration on the right.)

(If Hyper-Threading CPU is installed successfully with Windows XP, the O/S will enable the dual-in-one CPU function.)

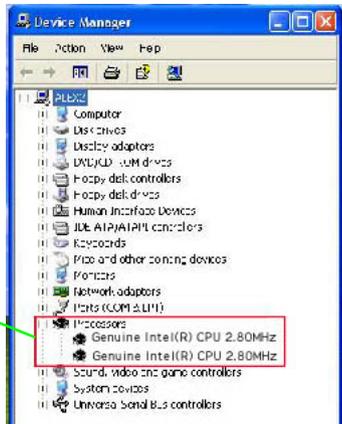

2-2 Memory Installation

How to tackle the memory Modules:

- Make sure to unplug your power supply before adding or removing memory module.
- Pay attention to the orientation of the DIMM slots.


2-2.1 To Install DDR SDRAM Module

- To enable Dual-channel memory function, users should insert totally identical (size and frequency) DDR module pair into the bank-pair. In this series, DIMM1 and DIMM3 is a pair, and DIMM2 and DIMM4 is another.
- DDR DIMM slot has 184 pins and one notch. Insert a DDR SDRAM vertically into the 184-pin slot with the notch-to-rib matching.

2-2.2 Dual Channel Memory Features


The Dual Channel DDR SDRAM installation is quite different from the Single channel installation.

- Dual Channel memory configuration provides higher performance than Single Channel configurations
- Matched DIMMs need to have identical density, DRAM technology, DRAM bus width, and equal number of memory banks.
- This series supports up to 4GB unbuffered Dual-channel DDR 400/333/266 SDRAM, with 4 DDR DIMM slots on board. Do not insert other type of modules into these slots.
- The dual memory controller can double the DDR memory bandwidth up to 6.4GB/s with DDR400, 5.4GB/s with DDR333 and 4.2GB/s with DDR266.

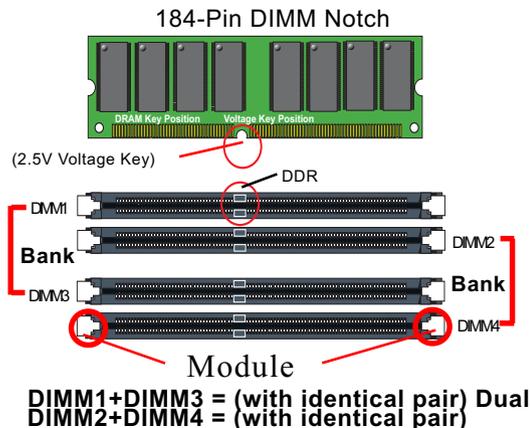

2-3 VGA / AGP 8X/4X Slot Installation



1. To install on-board VGA, please connect your monitor directly to VGA connector on board.
2. To install AGP 8X/4X card / Digital-Video-Out(DVO) / TV Out display, please insert an AGP / DVO /TV Out card into the AGP slot. This AGP slot supports AGP 8X/4X card(analog), DVO card and TV Out card, respectively but not simultaneously.

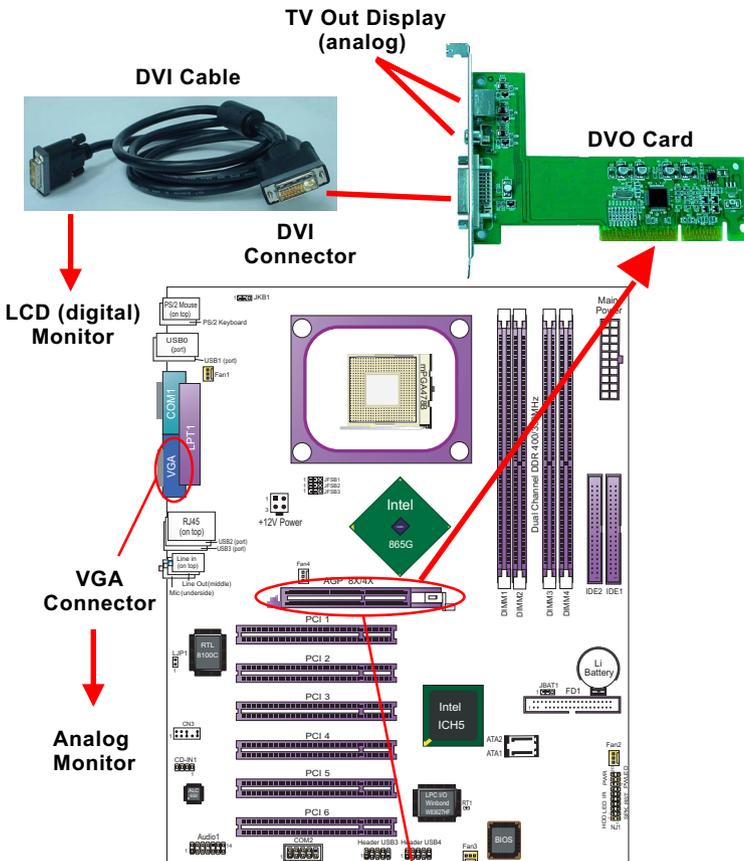

Insert an AGP 8X/4X card / DVO / TV Out card to AGP slot for AGP / DVO / TV Out Display



2-4 IDE Connectors Installation

To install IDE Connector, you may connect the blue connector of IDE cable to the primary (IDE1) or secondary (IDE2) connector on board, and then connect the gray connector to your hard disk. If you install two hard disks, you must configure the second drive to Slave mode by setting its jumpers correctly. Please refer to your hard disk documentation for the jumper settings.

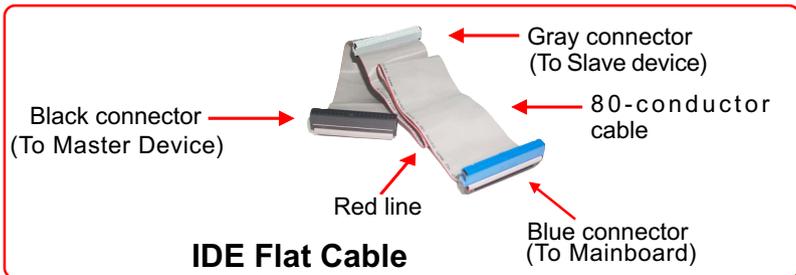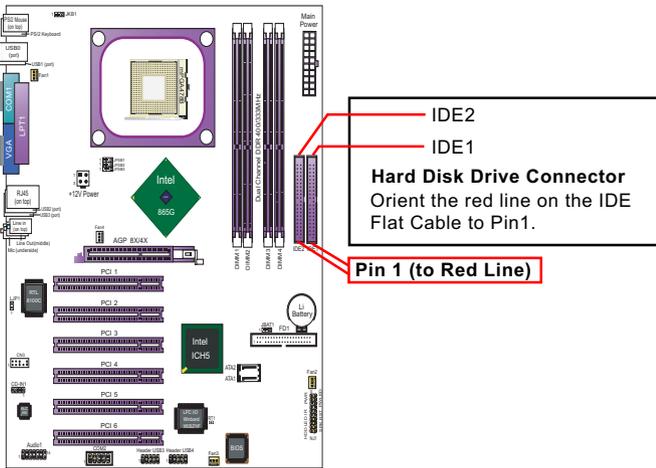

2-5 Floppy Drive Connector Installation

To install FDC, you should connect the end of FDC cable with single connector to the board, and connect the other end with two connectors to the floppy drives.

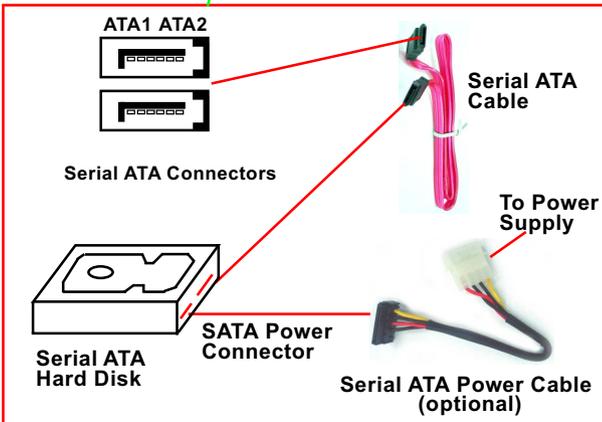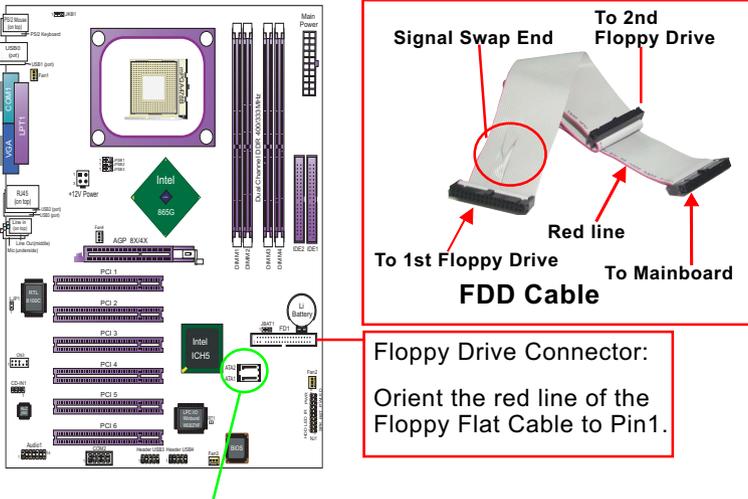


2-6 Serial ATA Connectors Setup

The Serial ATA interface improves the Parallel ATA with the capability of Hot Plug and offers a data bandwidth of 150Mbytes/second. It also reduces voltage and pin count.

2 Serial ATA connectors are built on board, supported by the ICH5 for SATA Hard Disk Drives setup.


2-7 ATX V2.03 Power Supply Installation

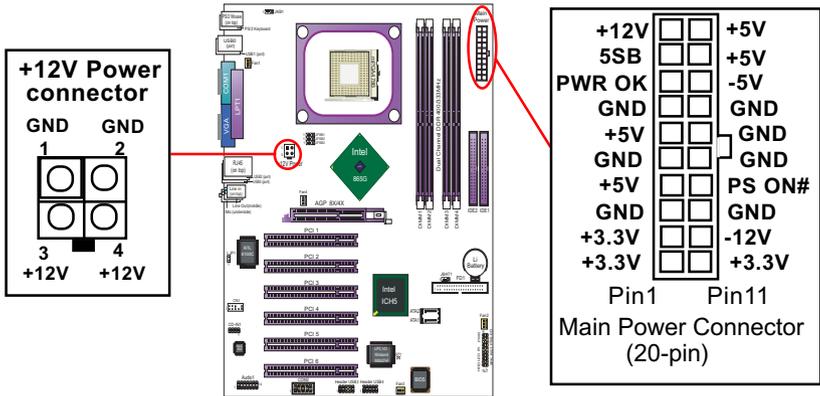

1. ATX V2.03 compliant Power Supply is needed for this mainboard to support both the Main Power Connector and the +12V Power Connector.
2. This ATX Power Supply should be able to provide at least 720mA/ +5V standby power for Wake On Lan function.

Warning: Both the Main Power Connector and the +12V Power Connector should be connected to Power Supply; otherwise, the system may either not start or damaged.

2-8 On Board Fan Connectors

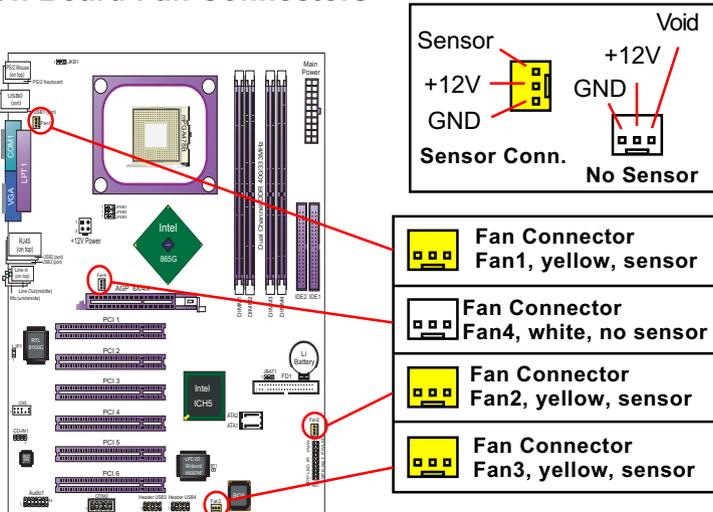


2-9 Jumper Settings

The following diagrams show the locations and settings of jumper blocks on the mainboard.

JKB1: Keyboard / Mouse Wake Up	
	1-2 closed (default) Disabled
	2-3 closed Enabled

JFSB1&JFSB2: CPU Frequency Select			
(default)	100MHz (FSB400)	133MHz (FSB533)	200MHz (FSB800)
CPU Auto-Detection			
JFSB1	JFSB1	JFSB1	JFSB1
1 	1 	1 	1 
JFSB2	JFSB2	JFSB2	JFSB2
1 	1 	1 	1 


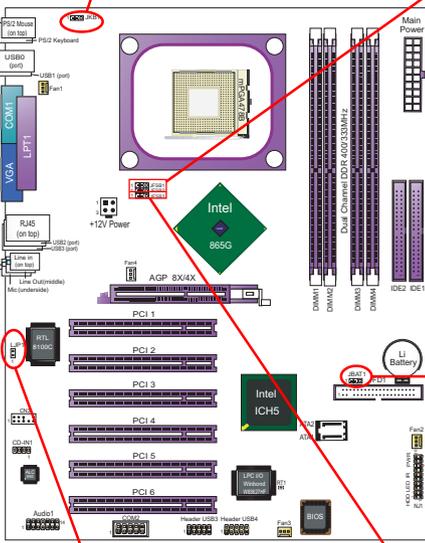


JBAT1 Clear CMOS	
	1-2 closed (default) To hold data
	2-3 closed To clear CMOS

LJP1 LAN Controller Select (865G3-L only)	
	1-2 closed Disabled
	(default) 1-2 open Enabled

JFSB3 Memory Turbo Mode	
	1-2 closed (default) Turbo Mode Disabled
	2-3 closed Turbo Mode Enabled

How to tackle the Jumpers:

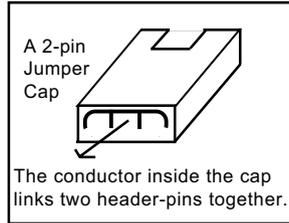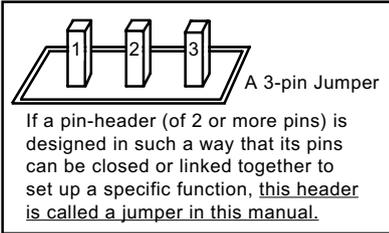

- A Jumper is usually but not necessarily given a “JpX” legend.
- In the Jumper setting diagram, the jumper pins covered with black marks stand for closed pins with jumper cap.



- Do not remove any jumper cap when power is on. Always make sure the power is off before changing any jumper settings. Otherwise, the mainboard will be damaged.

2-9.1 JFSB1 & JFSB2: CPU Frequency Select

JFSB1 and JFSB2 are designed on board for CPU frequency select.

1. Setting JFSB1 1-2 closed and JFSB2 to 1-2 closed will allow CPU on board to Auto Detect its own frequency and apply it to the System Bus.
2. Setting JFSB1 2-3 closed and JFSB2 2-3 closed is for 100 MHz CPU.
3. Setting JFSB1 opened and JFSB2 2-3 closed is for 133 MHz CPU.
4. Setting JFSB1 2-3 closed and JFSB2 opened is to select a CPU clock at 200 MHz for your CPU. If 200MHz is an overclock for your CPU, it may or may not boot your system. If an overlock fails to boot system, you should restore the default setting and then clear CMOS to reboot your system. (See Clear CMOS in next paragraph.)

JFSB1&JFSB2: CPU Frequency Select			
(default)			
CPU Auto-Detection	100MHz (FSB400)	133MHz (FSB533)	200MHz (FSB800)
JFSB1	JFSB1	JFSB1	JFSB1
1 	1 	1 	1 
1 	1 	1 	1 
JFSB2	JFSB2	JFSB2	JFSB2


Further Notes on CPU Overclocking:

1. If you have successfully booted system, with or without CPU overclock, you still can try another CPU overclock in BIOS Setup. Please enter BIOS Setup, choose “Frequency/Voltage Control” of Advanced BIOS Features, and configure the “CPU Clock” item to raise your CPU clock.
2. CPU overclocking should take all components on board into account. If you fail in BIOS overclocking, you will not be able to restart system. In such case, Power off system and clear CMOS by JBAT1 and then restart your system. And remember to reconfigure whatever should be reconfigured.
3. If your system is already fixed in a cabinet or case, you may not like to take the trouble to clear CMOS. Then power on your system with the power button on the PC case and simultaneously press down the “Insert” key on the keyboard until you see the initial bootup screen appear. And remember you should also enter CMOS BIOS Setup instantly and choose “Load Optimized Defaults” to restore default BIOS .

2-9.2 JBAT1: Clear CMOS

When you have problem with rebooting your system, you can clear CMOS data and restore it to default value. To clear CMOS with Jumper JBAT1, please follow the steps below:

1. Power off system.
2. Set JBAT1 to Pin 2-3 closed.
3. After 2 or 3 seconds, restore the JBAT1 setting to Pin1-2 closed.
4. CMOS data are restored to default now. Remember never clear CMOS when system power is on.

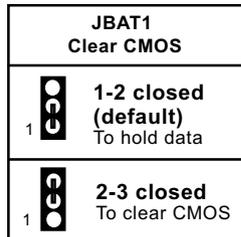

2-9.3 JFSB3: Memory Turbo Mode

JFSB3 is designed on board for improving Memory performance. If you want to obtain better system performance, you can set JFSB3 2-3 closed to enable the Memory Turbo Mode. Otherwise, you can set JFSB3 1-2 closed to disable the Memory Turbo Mode.

JFSB3	
Memory Turbo Mode	
	1-2 closed (default) ¹ Turbo Mode Disabled
	2-3 closed ¹ Turbo Mode Enabled

2-9.4 LJP1: LAN Controller Select (865G3-L only)

LJP1 is a 3-pin jumper for enabling or disabling the on-board LAN Controller. LPT1 for Realtek 8100C is built at a different location from LPT1 for RTL8101L. Yet both two do the same function. User can set LJP1 1-2 closed to enable the on-board LAN Controller so as to set up the LAN driver, or set LJP1 2-3 closed to disable the on-board LAN Controller. Whether LJP1 is enabled or not, it is still free for user to add an add-on PCI LAN card for networking.

LJP1 (on 865G3-L only)	
LAN Controller Select (for Rtl8100C)	
	1-2 closed (default) ¹ LAN controller Enabled
	2-3 closed ¹ LAN controller Disabled


2-9.5 JKB1: Keyboard / Mouse Wake Up

JKB1 is designed on board as a jumper to enable/disable the PS/2 keyboard/mouse Wake Up from suspend mode. USB keyboard/mouse Wake Up function is not supported on this mainboard.

JKB1:	
Keyboard / Mouse Wake Up	
	1-2 closed (default) Disabled ¹
	2-3 closed Enabled ¹

2-10 Other connectors setup

2-10.1 Back Panel Connectors

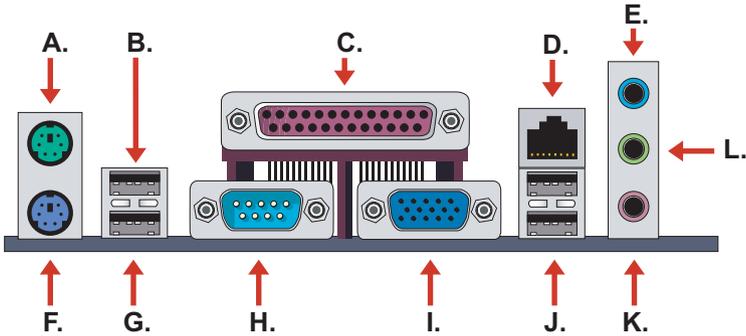


- | | |
|---|---|
| A : PS/2 Mouse | H : COM1 Connector |
| B : USB 0 (top) | I : VGA Connector |
| C : LPT1 Port | J : USB 2 (middle) |
| D : RJ45 (865G3-L only) | USB 3 (underside) |
| E : Line in/
Rear Speaker Out | K : Microphone Input /
Center Subwoofer Out |
| F : PS/2 Keyboard | L : Line Out / |
| G : USB 1 (underside) | Front Speaker Out |


2-10.2 LAN Connector

One RJ45 connector is on board for network connection.

Yellow LED "On" to indicate Network hub is in connection with the system.

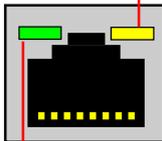

Green LED blinks to indicate that data transmission is undergoing in 10/100 Base T mode.

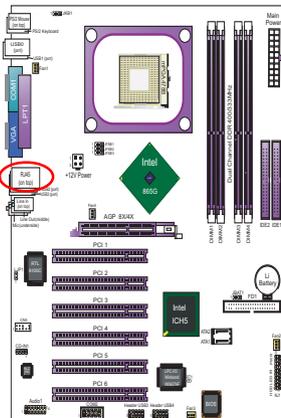


2-10.3 CD-ROM Audio Connectors

CD-IN1 is an audio connector connecting CD-ROM audio to mainboard.

2-10.4 External Audio Connector



This Mainboard is designed with an External Audio connector “JAUD1” which provides connection to your chassis.

1. When JAUD1 is set to 5-6 closed and 9-10 closed, this default setting disables this connector and leaves the Back Panel Audio enabled.
2. To use this Front Panel Audio Connector, please open all pins of JAUD1 and connect it to your chassis.

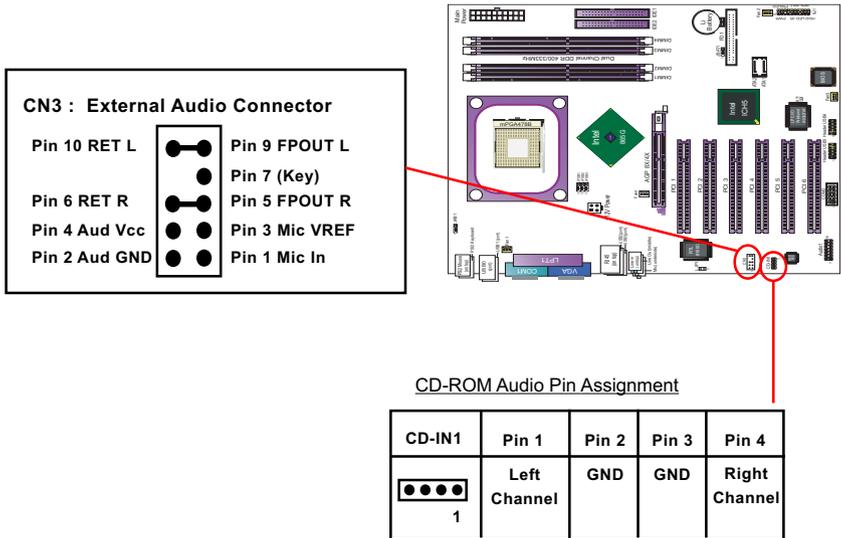

2-10.5 Complex Pin-header (Front Connectors)

This complex Pin-header consists of the following connectors for various supports. When you have fixed the mainboard to the case, join the connectors of this Complex Pin-header to the case Front Panel.

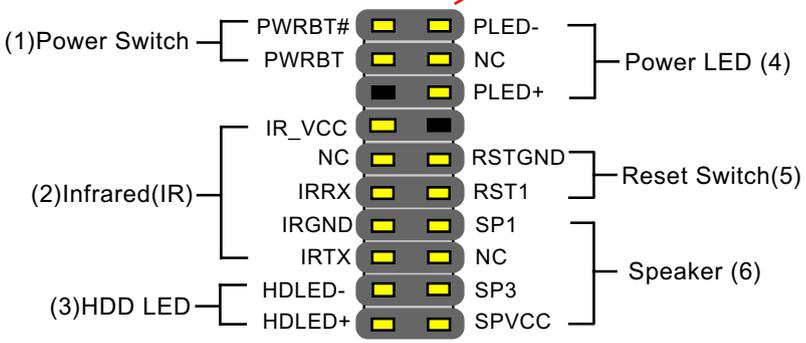
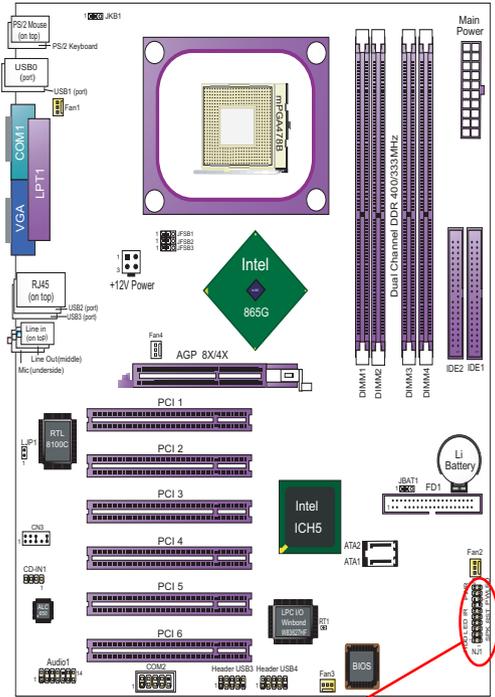


2-10.6 USB Ports and USB Pin-headers

This series provides four USB ports on board supporting various USB devices. In addition, two USB pin-headers are added on board to provide expansion of four more optional USB ports by using two additional USB cables. Users can order the optional USB cables from your main-board dealer or vendor.

When plugging the USB cable to USB Header, users must make sure the red wire is connected to Pin 1.

All 8 USB ports are compliant with 1.1 / 2.0 USB Bus. USB 2.0 supports Windows 2000 and up (no support for Windows 9X/ME). Please see Chapter 3 for USB2.0 Installation.

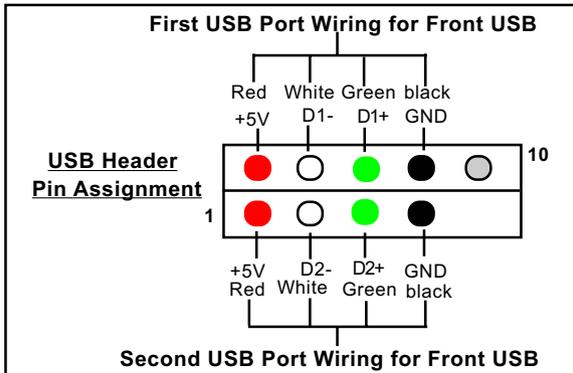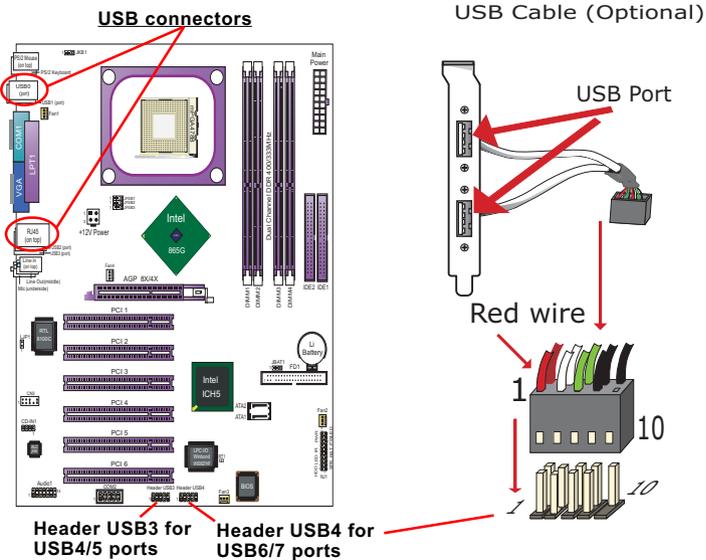

Chapter 3 Software Setup

Drivers, Utilities and Software Installation

- Support CD:

This series of mainboards will be shipped with a Support CD which contains those necessary driver files, Application Softwares and some helpful utilities. It is a user-friendly, auto-run CD which will open itself up in a CD-ROM automatically.

This chapter is devoted to describing the installations of all these essential drivers and utilities on Windows 9X, Windows ME, Windows 2000 and Windows XP. And installation on Windows XP as the general illustration hereby.

The priority of drivers to be installed should also be noted. Users are recommended to take the following installation orders :

3-1 To Open up the Support CD

3-2 To Install Intel Chipset Software Installation Utility

3-3 DirectX Installation

3-4 Graphics Driver Installation

3-5 AC'97 Audio Driver Installation


3-6 To Install Hardware Monitor Utility

3-7 To Install LAN Drivers (for 865G3-L only)

3-8 To Install USB 2.0 Driver for Windows 2000/XP

3-1 To Open up the Support CD

1. Please put the Support CD enclosed in your mainboard package into the CD-ROM drive. In a few seconds, the Main Menu will automatically appear, displaying the contents to be installed for this series:

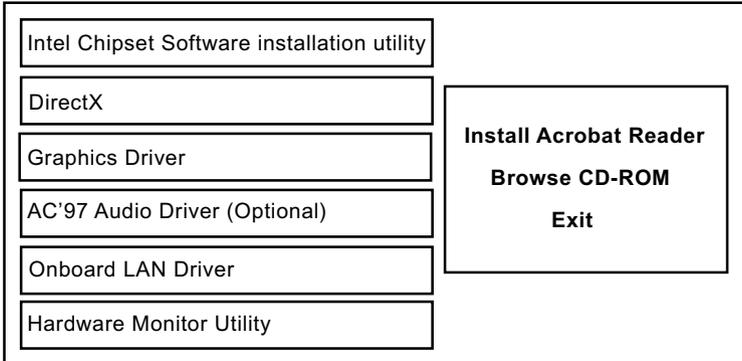

2. In case your system does not open the Support CD automatically, please click to the following path to enter the Main Installation Menu:


D:\Autorun.exe (assuming that your CD-ROM Drive is Drive D)

3. We should take "Intel Chipset Software installation Utility" as first installation priority to optimize the Intel system.
From next section, we provide detailed descriptions of all these installations with graphical illustrations.


3-2 Intel Chipset Software Installation Utility

1. Following the procedures of opening the Support CD, click to “Install Intel Chipset software installation Utility” to proceed.

2. The Intel Service Pack InstallShield Wizard will pop up to guide you to the Intel Service pack installation. Press “Next” button to continue.

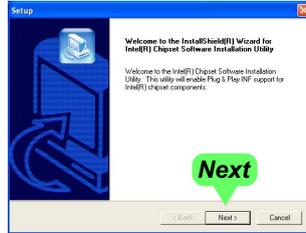

4. In a few seconds, after all the setup process is finished, please restart your computer by clicking on “Finish” so as to take the Utility into effect.

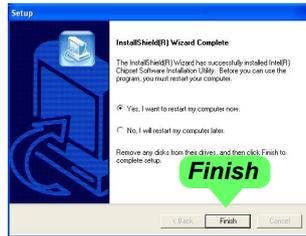

3-3 DirectX Installation

Click to “Install DirectX” on the main menu. This utility will support a better graphic display of the built-in VGA interface. Please note that DirectX installation is for Windows 98SE/ME only.

1. When the screen of “Microsoft DirectX 8.X Setup” appears, please press “Yes” button to continue.




2. In a few seconds, all the setup procedures have completed. Click to “OK” button to exit the Installation program and re-start your system.




3-4 Graphics Driver Installation

1. For installation of on-board VGA driver, you must first connect the monitor to the on-board VGA connector. Then click to “Install Graphics Driver”. The Graphics Driver is specifically for on-board VGA.
2. When the screen of “Intel(R) Extreme Graphics Driver Software Setup” appears, please press “Next” button to continue.

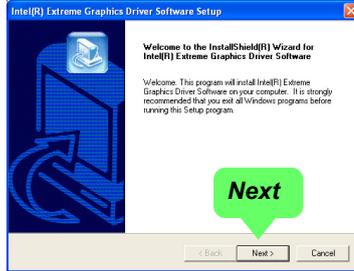

3. In a few seconds, all the setup procedures have completed,. Click to “Finish” button to exit the Installation program and re-start your system.

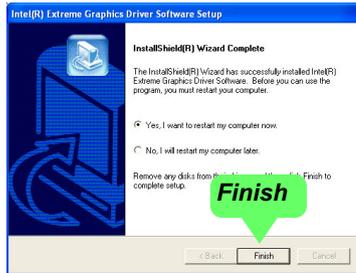


3-5 AC'97 Audio Driver Installation

3-5.1 Install AC'97 6-channel Audio Driver

1. Following the procedures of opening the Support CD, click to “ AC'97 Audio Driver” to proceed.
2. Instantly, the “installShield Wizard” screen appears to guide you through the “Avance AC'97 Audio Setup”.



3. In a few seconds, the setup process is finished. Please check the radial button “Yes, I want to restart my computer now.” And click “Finish” to restart your system.

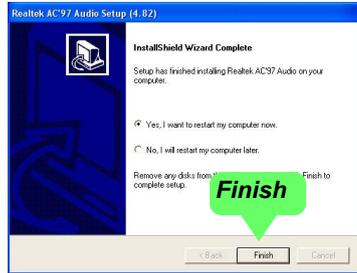

3-5.2 Verify 6-channel Audio

After installation of AC'97 6-channel Codec, you must configure the 5.1 Speaker connection to enable the 6-channel audio.

1. Connect your on-board Audio Connector to your 6-channel speakers as depicted in the figure below:




2. After Connection is done, start your Windows system and double click the Avance Sound Effect manager icon to enter 6-channel configuration:



Sound Effect Manager icon on Windows XP

3. The "AC'97 Audio Configuration" screen will pop out. Click the "Speaker Configuration" bar with your mouse.

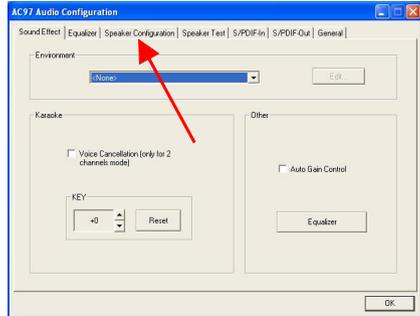

4. Instantly, the "Speaker Configuration" screen will pop out. Pick the items "6-channel mode for 5.1 speakers output" and "Synchronize the phonejack switch with the speakers settings" and then click "OK" to finish configuration.



5. At finishing the Speakers Configuration, you can also click the "Speaker Test" bar on the screen to test the 6-channel performance. The figure below is the "Speaker Test" screen with testing instructions enclosed on it. Follow the instructions to perform the Speakers Test.



3-6 To Install Hardware Monitor Utility

3-6.1 Installation

Hardware Monitor is built on this mainboard. Its installation is programmed to a fully automated mode on Windows 9X/Me/NT4/2000/XP. Users can follow the model installation below for its installation on various Windows System.

1. Following the procedures of opening the Support CD, click to “Hardware Monitor Utility” to proceed.

2. The Soltek Hardware Monitor InstallShield Wizard will pop up to guide you to the Intel Service pack installation. Press “Next” button to continue.



3. The InstallShield Wizard screen will show the current setting, please click the “Install” button to continue.



4. After all the setup process is finished, click “Finish” to exit the wizard.



3-6.2 Verification

1. After installing Soltek Hardware Monitor, double click "SoltekHM" icon on the desktop to open the main window of the Soltek Hardware Doctor.



2. Then the pop-up screen will show all information about CPU Temperature, Fan Speed and various Voltages.

Showing the Fan Speed(s) that is supported by the mainboard.

Showing the temperature(s), the function of which is supported by the mainboard.

Click on "Soltek" button to display the function menu.

Showing the Voltage(s) that is supported by the mainboard.

Status Warning LED


The screenshot shows the Soltek Hardware Monitor software interface. It features a futuristic, metallic-looking design with a central circular gauge labeled 'SOLTEK'. The interface is divided into several sections: 'TEMPERATURE' (CPU Del: 40, ABS II: 47, RT 2: 29), 'FAN TACHOMETER' (Fan 1: not found, Fan 2: 6720, Fan 3: not found), and 'VOLTAGE' (CPU Voltage: 1.722, DRAM Voltage: 2.822, 3.3V: 2.786, 5V: 4.929, 12V: 12.096, -12V: -11.944, DVSB: 4.914, Battery: 7.000). A 'Status Warning LED' is located at the bottom right. A 'Soltek' button is also visible, which is highlighted by a callout box. The text 'SOLTEK COMPUTING INC.' is visible at the bottom of the interface.

*Note: Not all items or functions showing in the above picture will show up. Only those items or functions that are supported by the mainboard will reveal themselves in the above screen.

3-7 To Install LAN Drivers (for 865G3-L only)


3-7.1 Installation

1. Following the procedures of opening the Support CD, click to “Onboard LAN Driver” to proceed.
2. Instantly, “The installation is completed” screen appears, indicating that LAN Driver setup is finished.

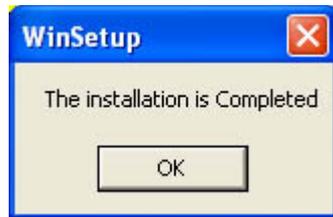

3-7.2 Verification


1. After LAN Driver setup, a new networking icon will appear at the corner of the “Start” screen of your system, indicating that a network channel has been set up.

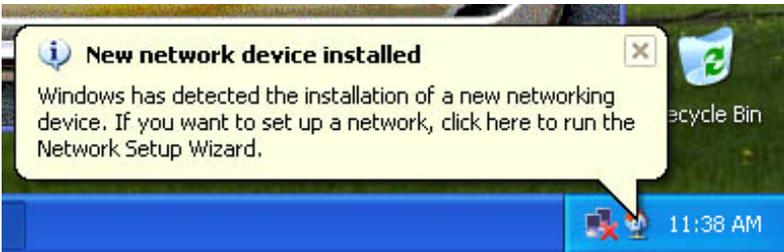

3-8 To Install USB 2.0 Driver for Windows 2000/XP

USB V2.0 with its 480Mb/s transfer rate supports operating system Windows 2000 and Windows XP via the Windows 2000 and Windows XP Service Pack. For achieving Intel USB 2.0 support, users should install the latest Service Pack for Windows 2000 or Windows XP. (Intel USB 2.0 does not support Windows 9X/ME.)

1. After installation of Intel Chipset software installation Utility in Windows 2000 or Windows XP, start to install the latest Service Pack version into the operating system. The installation of the latest Service Pack will support USB2.0 in Windows 2000 or Windows XP now.(The latest Service Pack can be found in Microsoft Web Site.)
2. To verify USB2.0 installation, please enter “Device Manager” of “My Computer”. On the “Device Manager” screen, you should be able to see the item “Standard Enhanced PCI to USB Host Controller”, verifying USB2.0 Driver is installed successfully.

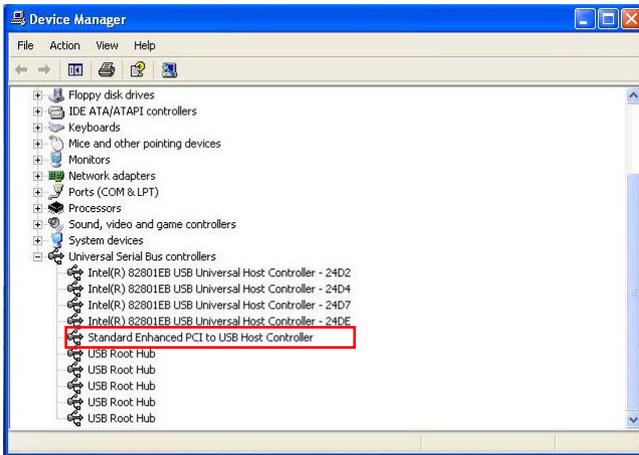

Chapter 4 AMI BIOS Setup

THE BIOS

BIOS stands for Basic Input and Output System. It was once called ROM BIOS when it was stored in a Read-Only Memory (ROM) chip. Now manufacturers would like to store BIOS in EEPROM which means Electrically Erasable Programmable Memory. BIOS used in this series of mainboard is stored in EEPROM, and is the first program to run when you turn on your computer.

BIOS performs the following functions:

1. Initializing and testing hardware in your computer (a process called "POST", for Power On Self Test).
2. Loading and running your operating system.
3. Helping your operating system and application programs manage your PC hardware by means of a set of routines called BIOS Run-Time Service.

This Chapter includes the following topics :

4-1 About BIOS Setup

4-2 To Run BIOS Setup

4-3 About CMOS

4-4 The POST (Power On Self Test)

4-5 To Update BIOS

4-6 BIOS Setup

Attention: The BIOS Setup is subject to constant update without further notice to users. It is necessary for users to update the onboard BIOS by the latest BIOS version provided in our web site: www.soltek.com.tw

4-1 About BIOS Setup

BIOS setup is an interactive BIOS program that you need to run when:

1. Changing the hardware of your system. (For example: installing a new Hard Disk etc.)
2. Modifying the behavior of your computer. (For example: changing the system time or date, or turning special features on or off etc.)
3. Enhancing your computer's behavior. (For example: speeding up performance by turning on shadowing or cache)

4-2 To Run BIOS Setup

First access BIOS setup menu by pressing < DEL > key after "POST" is complete (before OS is loaded). BIOS will then display the following message:

DEL:SETUP

4-3 About CMOS

CMOS is the memory maintained by a battery. CMOS is used to store the BIOS settings you have selected in BIOS Setup. CMOS also maintains the internal clock. Every time you turn on your computer, the BIOS Looks into CMOS for the settings you have selected and configures your computer accordingly. If the battery runs out of power, the CMOS data will be lost and POST will issue a "CMOS invalid" or "CMOS checksum invalid" message. If this happens, you have to replace the battery and check and configure the BIOS Setup for the new start.

4-4 The POST (Power On Self Test)

POST is an acronym for Power On Self Test. This program will test all things the BIOS does before the operating system is started. Each of POST routines is assigned a POST code, a unique number which is sent to I/O port 080h before the routine is executed.

4-5 To Update BIOS

- System BIOS is incorporated into a Flash memory component. Flash BIOS allows user to update BIOS without replacing an EPROM component.
- The Update BIOS Utility “AMIflash.EXE” is a Flash EPROM Programming utility that can be loaded on a floppy diskette or a hard disk drive for updating BIOS.
- Normally, to update BIOS is unnecessary if the system is working fine. Users should only update BIOS when incompatible problems are encountered or new features have to be added to system.
- AMIflash.exe only works in **DOS environment. It can not be executed in Windows 95/98, ME, NT, 2000 or Windows XP environment.**

• Please follow the steps below for updating the system BIOS:

Step 1. Please visit the board maker's website, download the zip files of the latest BIOS and AMI flash utility “**amiflash.exe**” for your mainboard. After unzipping, the BIOS file format will be *.ROM, of which “*” stands for the specific BIOS file name.

Step 2. Create a bootable diskette. Then copy the BIOS file and AMI flash utility “**amiflash.exe**” into the diskette.

Step 3. Insert the diskette into drive A, boot your system from the diskette.

Step 4. Under “A” prompt, type “**amiflash *.ROM**” and then press <Enter> to run BIOS update program. (*.ROM depends on your mainboard model and version code. Instead of typing “*”, you should type the specific file name for your specific mainboard). For example, you may type “amiflash MP005.rom”.

Step 5. When the message “Flash ROM Update Completed - Pass.” appears, please restart your system.

Step 6. You will see a message “CMOS Memory Size Wrong” during booting the system. Press or <F1> to run CMOS setup utility, then reload “Load Failsafe Defaults” or “**Load Optimal Defaults**” and save this change.

4-6 BIOS SETUP by CMOS Setup Utility

4-6.1 Main Menu in CMOS Setup Utility

This mainboard comes with the AMI BIOS from American Megatrends Inc. Enter the CMOS Setup Utility Main Menu by:

1. Turn on or reboot your system. After a series of diagnostic checks, the following message will appear:

PRESS TO RUN SETUP

2. Press the key and the main program screen will appear as follows.

CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.

<ul style="list-style-type: none"> ▶ Standard BIOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ PCI/PNP Resource Management ▶ Boot Configuration Setup ▶ BIOS Security Features Save Changes and Exit 	<ul style="list-style-type: none"> Discard Changes and Exit Load Optimal Defaults Discard Changes
↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimize Defaults	
Configure Time and Date. Display System Information ...	

3. Use the arrow keys on your keyboard to select an option, and press <Enter>. Modify the system parameters to reflect the options installed in your system.
4. You may return to the Main Menu anytime by pressing <Esc>.
5. In the Main Menu, "Save Changes and Exit" saves your changes and reboots the system, and "Discard Changes and Exit" ignores your changes and exits the program.

6. In entering the Main option of the Main Menu, please use the functions in the Function List to configure the setting:

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

Use [Enter], [Tab] or [Shift-Tab] to select a field.

Use [+] or [-] to choose the options.

<F1>: "General Help" provides explanations of the hot-key functions available.

<F7>: "Previous values" allows user to discard previous values or not.

<F8>: "Fail-safe defaults" allows user to load Fail-safe Defaults or not.
Save and Exit Setup.

<F9>: "Optimized Defaults" allows user to load Optimal Defaults or not.

Attention: The BIOS Setup is subject to constant update without further notice to users. It is necessary for users to update the onboard BIOS by the latest BIOS version provided in our web site: www.soltek.com.tw

4-6.3.1 CPU Configuration

Choose “CPU Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

CPU Configuration

Configure advanced CPU settings	Help Item
Manufacturer : Intel Brand String : Intel(R) Pentium (R) 4 CPU 1500MHz Frequency : 1500MHz FSB Speed : 400MHz Cache L1 : 8 KB Cache L2 : 512 KB Cache L3 : 0 KB Ratio Status : Locked Ratio Actual Value : 15 Ratio CMOS Setting : 8 Hyper Threading Technology Enabled	Sets the ratio between CPU core clock and the FSB Frequency. Note: If an invalid ratio is set in CMOS, then actual and setpoint values may differ.

Manufacturer BIOS shows the current manufacturer of on-board CPU.

Brand String BIOS shows the current brand of on-board CPU.

Frequency BIOS shows the current on-board CPU frequency.

Ratio Status BIOS shows the current ratio (multiplier) status of on-board CPU. For P4 CPUs, the ratio is usually locked.

FSB Speed BIOS shows the actual CPU Front Side Bus.

Ratio Actual Value BIOS shows the actual CPU ratio.

Ratio CMOS Setting BIOS shows the CPU Ratio in CMOS. If an invalid ratio is set in CMOS, then actual and setpoint values may differ.

Hyper Threading Technology Allows you to enable/disable Hyper Threading on your CPU.

L3 Cache To enable/disable L3 cache of CPU. Actually only Pentium 4 Extreme Edition contains L3 Cache.

4-6.3.2 IDE Configuration

Choose "IDE Configuration" in "Advanced BIOS Features" and press <Enter>. The following sub-screen will appear for IDE Devices configuration:

IDE Configuration

IDE Configuration	Help Item
IDE Configuration S-ATA Running Enhanced Mode P-ATA Channel Selection S-ATA Ports Definition	P/S-ATA (Auto) Yes Both P0-3rd./P1-4th
<ul style="list-style-type: none"> ▶ Primary IDE Master ▶ Primary IDE Slave ▶ Secondary IDE Master ▶ Secondary IDE Slave ▶ Third IDE Master ▶ Fourth IDE Master 	Hard Disk ATAPI CDROM Not Detected Not Detected Not Detected Not Detected
Hard Disk Write Protect IDE Detect Time Out (Sec) ATA(P1) 80Pin Cable Detection	Disabled 35 Host & Device

4-6.3.2-1 IDE Configuration

<p>IDE Configuration</p>	<p>Allows you to configurare IDE device mode. Choices: P/S-ATA(Auto): Parallel/Serial ATA combined mode; S-ATA Only: For S-ATA running on board only; P/S-ATA(Win98/Me): P/S-ATA on Win98/Me only Disabled: IDE Configuration disabled</p>
<p>IDE Configuration</p> <p>S-ATA Running Enhanced Mode (Combined Mode Option)</p>	<p>—— Choosing “P/S-ATA(Auto)” to configure the following:</p> <p>S-ATA will be running in enhanced Mode, yet supporting Windows 2000/XP only (A warning message in red will appear on the booting screen).</p> <p>Choices:</p> <p><input type="checkbox"/> Yes: Choose from the following option: P-ATA (parallel ATA) Channel Selection: Choices: Primary; Secondary; Both S-ATA Ports Definition: Choices: P0-3rd./P1-4th.; P0-4th./P1-3rd.</p> <p><input type="checkbox"/> No: Choose from the following options: P-ATA (parallel ATA) Channel Selection: Choices: Primary; Secondary; Both</p>
<p>IDE Configuration</p> <p>S-ATA Ports Definition</p>	<p>—— Choosing “S-ATA Only” to configure the following:</p> <p>Allows you to assign the S-ATA port locations. Choices: P0-3rd./P1-4th.; P0-4th./P1-3rd.;</p>
<p>IDE Configuration</p> <p>Combined Mode Option</p> <p>S-ATA Ports Definition</p>	<p>—— Choosing “P/S-ATA(Win98/Me)” to configure the following:</p> <p>Choices: P-ATA 1st Channel; S-ATA 1st Channel;</p> <p>Choices: P0-Master/P1-Slave; P0-Slave/P1-Master;</p>

4-6.3.2-2 Primary/Secondary IDE Master/Slave and Third/Fourth IDE Master

▶ Primary IDE Master	Hard Disk
▶ Primary IDE Slave	ATAPI CDROM
▶ Secondary IDE Master	Not Detected
▶ Secondary IDE Slave	Not Detected
▶ Third IDE Master	Not Detected
▶ Fourth IDE Master	Not Detected

Primary/Secondary IDE Master/Slave Press <Enter> To show the detected information of Primary / Secondary IDE Master/Slave device(s).

Third/Fourth IDE Master Press <Enter> to show the detected information of third/fourth IDE Master device(s).

If any IDE device is detected in any one of the above items press <Enter> to reveal the IDE information:

Primary/(Secondary/Third/Fourth) IDE Master/(Slave)

Primary/(Secondary/Third/Fourth) IDE Master/(Slave)	Help Item
Device : Hard Disk Vendor : WDC WD400BB-00DEA0 Size : 40.0GB LBA Mode : Supported Block Mode : 16Sectors PIO Mode : 4 Async DMA : MultiWord DMA-2 Ultra DMA : Ultra DMA-5 S.M.A.R.T. : Supported	Select the type of device connected to the system.
Type : Auto LBA/Large mode : Auto Block (Multi-Sector Transfer) : Auto PIO Mode : Auto S.M.A.R.T. : Auto 32Bit Data Transfer : Disabled	

Type To select the types of the IDE devices:
 Not Installed; Auto: Setting type automatically
 CD-ROM: ATAPI (Packet Interface) CD-ROM drive
 ARMD: ATAPI Removable Media Device

LBA/Large mode To auto-select (default) or disable LBA/Large mode.

Block (Multi-Sector Transfer) To auto-select (default) or disable Block Mode.

PIO Mode To auto-select (default) or disable PIO Mode.
 Choices: Disabled; 1, 2, 3, 4

S.M.A.R.T Allows you to enable / disable the Self Monitoring Analysis and Reporting Technology for the hard disk.

32Bit Data Transfer To auto-select (default) or disable 32Bit Data Transfer.

4-6.3.2-3 Hard Disk Write Protect

Hard Disk Write Protect Allows you to Enabled / Disable(default) Hard Disk Write Protection

4-6.3.2-4 IDE Detect Time Out

IDE Detect Time Out Allows you to set time out for IDE Detection.
(Sec) Choices: 0 - 35 seconds in 5 seconds stepping

4-6.3.2-5 ATA(PI) 80Pin Cable Detection

ATA(PI) 80Pin Cable Detection Allows you to select ATA(PI) devices for 80Pin Cable Detection. To set Host & Device allows onboard IDE controller and IDE disk drive to detect the type of IDE cable used.
Choices: Host & Device, Host, Device

4-6.3.3 Floppy Configuration

1. Choose "Floppy Configuration" in "Advanced BIOS Features" and press <Enter>. The following sub-screen will appear for configuration:

Floppy Configuration

Floppy Configuration	Help Item
Floppy A Floppy B 1.44 MB 3.5 in Disabled	Select the type of floppy drive connected to the system.

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

Floppy A/B Press Enter on "Floppy A/B" will let you select this field to the type(s) of floppy disk drive(s) installed in your system. The choices are:

360KB 5.25 in.
 1.2MB, 5.25 in.
 720KB, 3.5 in.
 1.44MB, 3.5 in.
 2.88MB, 3.5 in.
 Disabled

4-6.3.4 Super IO Configuration

Choose “SuperIO Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

SuperIO Configuration

Configure Win627 Super IO Chipset	Help Item																
<table border="0"> <tr> <td>OnBoard Floppy Controller</td> <td>Enabled</td> </tr> <tr> <td>Serial Port1 Address</td> <td>3F8/IRQ4</td> </tr> <tr> <td>Serial port2 Address</td> <td>2F8/IRQ3</td> </tr> <tr> <td>Serial port2 Mode</td> <td>Normal</td> </tr> <tr> <td>OnBoard CIR Port</td> <td>Disabled</td> </tr> <tr> <td>Parallel Port Address</td> <td>378</td> </tr> <tr> <td>Parallel Port Mode</td> <td>Normal</td> </tr> <tr> <td>Parallel Port IRQ</td> <td>IRQ7</td> </tr> </table>	OnBoard Floppy Controller	Enabled	Serial Port1 Address	3F8/IRQ4	Serial port2 Address	2F8/IRQ3	Serial port2 Mode	Normal	OnBoard CIR Port	Disabled	Parallel Port Address	378	Parallel Port Mode	Normal	Parallel Port IRQ	IRQ7	<p>Allows BIOS to Enable or Disable Floppy Controller.</p>
OnBoard Floppy Controller	Enabled																
Serial Port1 Address	3F8/IRQ4																
Serial port2 Address	2F8/IRQ3																
Serial port2 Mode	Normal																
OnBoard CIR Port	Disabled																
Parallel Port Address	378																
Parallel Port Mode	Normal																
Parallel Port IRQ	IRQ7																

OnBoard Floppy Controller Allows you to enable / disable the Onboard Floppy Controller.
 Choices: Enabled; Disabled

Serial Port1 Address Allows you to set the Onboard Serial Port1 Address.
 Choices: Disabled; 3F8/IRQ4; 3E8/IRQ4; 2E8/IRQ3;

Serial Port2 Address	Allows you to set the Onboard Serial Port2 Address. Choices: Disabled; 2F8/IRQ3; 3E8/IRQ4; 2E8/IRQ3;
Serial Port 2 Mode	If Serial Port2 Address is not disabled, it allows you to set the Serial Port 2 Mode. Choices: -- Normal; -- IrDA: Providing 2 items for configuration: IR I/O Pin Select: SINB/SOUTB; IRRX/IRTX IR Duplex Mode: Half Duplex; Full Duplex -- ASK IR: Providing 2 items for configuration: IR I/O Pin Select: SINB/SOUTB; IRRX/IRTX IR Duplex Mode: Half Duplex; Full Duplex

OnBoard CIR Port Allows you to set the onboard CIR Port.
Choices: Disabled; 2E0; 3E0

Parallel Port Address Allows you to configure Parallel Port Address.
Choices: Disabled; 378; 278; 3BC;

C.S.A Gigabit Ethernet Allows you to disable C.S.A Gigabit Ethernet
Choices: Auto(default); Disabled

OnBoard CIR Port Allows you to set the onboard CIR Port.
Choices: Disabled; 2E0; 3E0

CIR Port IRQ Allows you to set the onboard CIR Port IRQ for 2E0 or 3E0.
Choices: IRQ3; IRQ4; IRQ9; IRQ10; IRQ11

Parallel Port Address Allows you to configure Parallel Port Address.
Choices: Disabled; 378; 278; 3BC;

- Disabled: To disable this function;
- 378: 2 items to configure for address 378:
 - Parallel Port Mode:
 - Normal;
 - Bi-Directional;
 - EPP:
 - EPP Version: 1.9; 1.7
 - ECP:
 - ECP Mode DMA Channel: DMA0; DMA1; DMA3
- Parallel Port IRQ: IRQ5; IRQ7

4-6.3.5 Hardware Health Configuration

Choose “Hardware Health Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

Hardware Health Configuration		Help Item
System Temperature	: 34°C/93°F	Enables Hardware Health Monitoring Device.
CPU Temperature	: 45°C/113°F	
Fan1 Speed	: 3125 RPM	
Fan2 Speed	: 3169 RPM	
Fan3 Speed	: N/A	
CPU Core	: 1.500 V	
+1.50V	: 1.516 V	
+3.30V	: 3.258 V	
+5.00V	: 5.094 V	
+12.0V	: 12.074 V	
-12.0V	: -12.048 V	
5VSB	: 5.467 V	
Battery	: 3.444 V	

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimize Defaults

System Temperature Shows current system temperature.

CPU Temperature Shows current CPU internal temperature.

Fan1/2/3 Speed Displaying the current speed of CPU/Chassis/Power Fan.

CPU Core Showing CPU core actual voltage value.

1.5V/3.3V/+12V/-12V/+5.00V/5VSB/Battery Showing current voltage against the 1.5V/3.3V/+12V/-12V/+5V/5VSB/Battery power supply.

4-6.3.6 ACPI Configuration

Choose “ACPI Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for ACPI configuration:

ACPI Configuration

ACPI Settings		Help Item
ACPI Aware O/S	Yes	Enables Hardware ACPI support for Operating System. Enable: If OS supports ACPI. Disable: If OS Does not support ACPI.
▶ General ACPI Configuration	Press Enter	
▶ Advanced ACPI Configuration	Press Enter	

ACPI Aware O/S Allows you to enable ACPI Aware O/S function if your O/S supports ACPI. Windows XP, 2000, 98SE all support ACPI. Choices:

Yes: If “Yes” it allows you to configure “General / Advanced ACPI”.

No: If “No”, no “General/Advanced ACPI” to be configured.

▶ **General ACPI Configuration:**

To press< Enter > on General ACPI Configuration will reveal the following item(s).

Suspend mode This item allows you to select the Suspend mode. You can select S3(STR)(Optional) for suspending to DRAM if your system supports this mode. Or you can select S1 (POS) for Power on Suspend under ACPI mode.

(Optional) USB Device Wakeup From S3/S4 This item allows you to enable / disable the USB device Wakeup function from S3/S4 mode.

► **Advanced ACPI Configuration:**

To press < Enter > on Advanced ACPI Configuration will reveal the following item(s).

ACPI 2.0 Support Allows you to enable / disable ACPI (Advanced Configuration and Power Interface) 2.0 Support function.
Choices: Yes; No

ACPI APIC Support Allows you to enable / disable ACPI APIC (Advanced Programmable Interrupt Controller) Support function.

APIC ACPI SCI IRQ If APIC ACPI Support is enabled (Yes), it allows you to enable / disable APIC ACPI SCI IRQ function.

BIOS-->AML ACPI table Allows you to enable / disable BIOS-->AML ACPI table function.

Headless mode Allows you to enable / disable Headless operation mode through ACPI.

4-6.3.7 USB Configuration

Choose “USB Configuration” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

USB Configuration

USB Configuration	Help Item	
Module Version - 2.23.2-7.4	Enable USB host controllers.	
USB Devices Enabled : None		
USB Function		8 USB Ports
Legacy USB Support		Enabled
USB 2.0 Controller		Enabled
USB 2.0 Controller Mode		FullSpeed
► USB Mass Storage Device Config Press Enter		

USB Function Allows you to set the USB Function on the USB port (s).

Choices: 8 USB Ports; Disabled

Legacy USB Support Allows you to enable / disable the Legacy USB support.

Choices: Enabled; Disabled; Auto

USB 2.0 Controller Allows you to enable/ disable the USB 2.0 Controller.

USB 2.0 Controller Allows you to configure the USB 2.0 Controller Mode.

Mode Choices: FullSpeed; HiSpeed.

► **USB Mass Storage Device Config** Press "Enter" to view its submenu shown below.

USB Mass Storage Reset Delay To select number of seconds POST waits for the USB mass storage device after start unit command.

Choices: 10 Sec; 20 Sec; 30 Sec; 40 Sec

No USB Mass Storage Device detected If no USB Mass Storage device is detected, this line will appear on screen.

4-6.3.8 Frequency/Voltage Control

Choose "Frequency/Voltage Control" in "Advanced BIOS Features" and press <Enter>. The following sub-screen will appear for configuration:

Frequency/Voltage Control

Frequency/Voltage Configuration		Help Item
CPU Linear Frequency	Enabled	Press "+" "/" "-" to select.
CPU Clock	100MHz	
Fix AGP/PCI Frequency	Enabled	
AGP Voltage Control	1.5V	
DIMM Voltage Control	2.5V	
CPU Voltage Control	Auto	

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

CPU Linear Frequency This item allows you to enable / disable this setting function.

CPU Clock If CPU Linear Frequency is set at Enabled, this item allows you to set CPU Clock.
 Choices: 100MHz ~350MHz in 1MHz stepping.
 (100MHz~250MHz is for 100MHz CPU;
 133MHz~283MHz is for 133MHz CPU;
 200MHz~350MHz is for 200MHz CPU.)

Fix AGP/PCI Frequency Allows you to fix AGP/PCI Frequency.
 Choices: Enabled; Disabled

AGP Voltage Control Allows you to configure the AGP Voltage.
 Choices: 1.5V; 1.6V; 1.7V; 1.8V

DIMM Voltage Control Allows you to configure the DIMM Voltage.
 Choices: 2.5V; 2.6V; 2.7V; 2.8V

CPU Voltage Control Allows you to configure the CPU Voltage. Usually, to raise CPU voltage will raise the chance of CPU overclocking and yet risk damage of CPU.
 Choices: Auto; 1.1000V ~1.850V in 0.025V stepping

4-6.3.9 Power Management

Choose “Power Management” in “Advanced BIOS Features” and press <Enter>. The following sub-screen will appear for configuration:

Power Management		Help Item
APM Configuration		
Power Management/APM	Enabled	Enable or disable APM.
Video Power Down Mode	Suspend	
Hard Disk Power Down Mode	Suspend	
Standby Time Out	Disabled	
Suspend Time Out	Disabled	
Power Button mode	On/Off	
Restore on AC Power Loss	Power Off	
Resume On Ring	Disabled	
Resume On LAN/PME#	Disabled	
Resume On RTC Alarm	Disabled	

Power Management/ APM Allows you to enable (default)/ disable the Power management / Advanced Power Management function.

Video Power Down Mode Allows you to select the Video Power Down Mode.
 Choices: Disabled; Standby; Suspend

Hard Disk Power Down Mode Allows you to select the Hard Disk Power Down Mode.
 Choices: Disabled; Standby; Suspend

Standby Time Out (Minute) To set the duration of Standby Time Out.
 Choices: Disabled; 1; 2; 4; 8; 10; 20; 30; 40; 50; 60

Suspend Time Out (Minute) To set the duration of Suspend Time Out.
 Choices: Disabled; 1; 2; 4; 8; 10; 20; 30; 40; 50; 60

Power Button Function Allows you to set power Button function.
 Choices: On/Off (default); Suspend

Restore on AC/Power Loss Allows you to set the restore state from AC/Power Loss.
 Choices: Last State; Power Off (default); Power On

4-6.4.1 NorthBridge Configuration

Choose “NorthBridge Configuration” in “Advanced Chipset Features” and press <Enter>. The following sub-screen will appear for configuration:

NorthBridge Configuration

		Help Item
DRAM Frequency	Auto	
Configure DRAM Timing by SPD	Enabled	
Memory Hole	Disabled	
Init. Graphic Adapter Priority	AGP/Int-VGA	
Internal Graphics Mode Select	Enabled, 8MB	
Graphics Aperture Size	64MB	
Boot Display Device	Auto	
Flat Panel Type	640x480LVDS	
TV Standard	Auto	

DRAM Frequency Allows you to set the current SDRAM frequency.
Choices: Auto; 266MHz; 333MHz; 400MHz

Configure SDRAM Timing by SPD SPD (Serial presence detect) is a device in memory module for storing the module information such as DRAM timing and chip parameters. If this option is enabled, BIOS will access SPD automatically to configure module timing. If disabled, DRAM timing can be configured manually.
Default: Enabled

DRAM CAS# Latency With SDRAM Timing by SPD disabled, you can select the SDRAM CAS# (Column Address Strode)lately manually.
Choices: 2 Clocks; 2.5 Clocks; 3 Clocks

DRAM RAS# Precharge With SDRAM Timing by SPD disabled, you can select the SDRAM RAS# (Row Address Strode) Precharge cycle manually.
Choices: 2 Clocks; 3 Clocks; 4 Clocks

DRAM RAS# to CAS# Delay With SDRAM Timing by SPD disabled, select SDRAM RAS# to CAS# delay cycle manually.
Choices: 2 Clocks; 3 Clocks; 4 Clocks

- DRAM Precharge Delay** Allows you to set the SDRAM Precharge Delay cycle.
Choices: 5 Clocks; 6 Clocks; 7 Clocks; 8 Clocks
- DRAM Burst Length** With SDRAM Timing by SPD disabled, you can select the SDRAM Burst length manually.
Choices: 8; 4
- Memory Hole** Allows you to enable / disable (default) the support of Memory Hole which is reserved for ISA card.
Choices: Disabled; 15MB-16MB
- Init. Graphics Adapter Priority** Allows you to select the initial Graphics Adapter.
Choices: AGP/PCI; PCI/AGP;
- Internal Graphics Mode Select** Allows you to set the internal graphic mode.
Choices: Enabled(1MB; 4MB; 8MB; 16MB; 32MB); Disabled
- AGP Aperture Size** Series of options are available: 4, 8, 16, 32, 64, 128, 256MB. Memory mapped and graphics data structures can reside in a Graphics Aperture. This area is like a linear buffer. BIOS will automatically report the starting address of this buffer to the O.S. The default setting is 64MB.
- Boot Display Device** Allows you to select the Boot Display device.
Choices: Auto (default); CRT; TV; EFP; LFP; CRT+EFP; CRT+LFP
- Flat Panel Type** Allows you to select the flat panel type.
Choices: 640x480LVDS;800x600LVDS;
1024x768LVDS; 1280x1024LVDS;
1400x1050LVDS;1600x1200LVDS;
640x480CMOS; 800x600CMOS;
1024x768CMOS; 1280x1024CMOS;
1400x1050CMOS; 1600x1200CMOS
- TV Standard** Allows you to select the TV standard.
Choices: Auto (default); NTSC(M / M_J / 433 / N);
PAL(B / G / D / H / I / M / N / 60);
SECAM(L / L1 / B / D / G / H / K / K1 /)

4-6.4.2 SouthBridge Configuration

1. Choose "SouthBridge Configuration" in "Advanced Chipset Features" and press <Enter>. The following sub-screen will appear for configuration:

SouthBridge Configuration

OnBoard AC'97 Audio	Auto	Help Item

Onboard AC'97 Audio Allows you to disable AC' 97 Audio.
 Choices: Auto (default); Disabled

4-6.5 PCI/PNP Resource Management

Choose "PCI/PNP Resource Management" from the Main Menu and a screen with a list of options will appear:

CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.
PCI/PNP Resource Management

Advanced PCI/PNP Settings	Help Item
Warning: Setting wrong values in below sections may cause system to malfunction.	
Plug & Play O/S	No
PCI Latency Timer	32
Allocate IRQ to PCI VGA	Yes
Palette Snooping	Disabled
PCI IDE BusMaster	Disabled
OffBoard PCI/ISA IDE Card	Auto
IRQ3	Available
IRQ4	Available
IRQ5	Available
IRQ7	Available
IRQ9	Available
IRQ10	Available
IRQ11	Available
IRQ14	Available
IRQ15	Available
DMA Channel 0	Available
DMA Channel 1	Available
DMA Channel 3	Available
DMA Channel 5	Available
DMA Channel 6	Available
DMA Channel 7	Available
Reserved Memory Size	Disabled

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

- Plug & Play O/S** Allows you to configure the PNP devices by BIOS or O/S.
Choices: No(by BIOS) (default); Yes(by O/S)
- PCI Latency Timer (PCI Clocks)** Allows you to set the PCI Latency Time.
Choices: 32(default); 64; 96; 192; 128; 160; 192; 224; 248;
- Allocate IRQ to PCI VGA** Allows you to assign IRQ to PCI VGA card if card requests IRQ.
Choices: Yes(default); No
- Palette Snooping** This option allows the BIOS to preview VGA status, and to modify the information delivered from the feature Connector of the VGA card to MPEG card. This option can solve the display inversion to black after you have used a MPEG card.
- PCI IDE BusMaster** Allows you to enable / disable(default) the PCI IDE Bus Master function.
- OffBoard PCI/ISA IDE Card** Some PCI IDE cards may require this to be set to the PCI slot number that is holding the card.
Choices: Auto; PCI Slot1; PCI Slot2; PCI Slot3; PCI Slot4; PCI Slot5; PCI Slot6
- IRQ 3/4/5/7/9/10/11/14/15** Allows you to specify available IRQs to be used by PCI/PNP devices.
Choices: Available(default); Reserved
- DMA 0/1/3/5/6/7** Allows you to specify available DMAs to be used by PCI/PNP devices.
Choices: Available(default); Reserved
- Reserved Memory Size** Allows you to specify memory size to reserve for legacy ISA devices.
Choices: Disabled(default); 16K; 32K; 64K

4-6.6 Boot Configuration Setup

Boot Configuration Setup allows you to modify the system's boot settings.

Choose "Boot Configuration Setup" from the Main Menu and a screen with a list of options will appear:

**CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.
Boot Configuration Setup**

Boot Settings	Help Item
▶ Boot Setting Configuration Press Enter	Configure Settings during System Boot.
▶ Boot Device Priority Press Enter	

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

4-6.6.1 Boot Settings Configuration

Choose "Boot Settings Configuration" in "Boot Configuration Setup" and press <Enter>. The following items will appear for onfiguration:

Boot Configuration Setup

Boot Settings	Help Item
Quick Boot Enabled	Configure Settings during System Boot.
Bootup Num-Lock On	
PS/2 Mouse Support Auto	
Wait For 'F1' If Error Enabled	
Hit 'DEL' Message Display Enabled	
Interrupt 19 Capture Disabled	

Quick Boot Allows you to enable / disable quick boot of your system. If enabled, BIOS will skip certain tests while booting. This will decrease the time needed to boot the system.

Bootup Num-lock Allows you to toggle between On (default) or Off to control the state of the NumLock keys when the system boots. If On, the numeric keypad is in numeric mode. If off, the numeric keypad is in cursor control mode.

PS/2 Mouse Support If "Auto" is set, the system will auto detect the PS/2 Mouse. If disabled, PS/2 Mouse is not supported.

Wait For 'F1' If Error Allows you to hit F1 key when errors occur.

Hit 'DEL' Message Display The system will show "Press DEL key to run Setup" when enabled.

Interrupt 19 Capture Allows option ROMs to trap interrupt 19.

4-6.6.2 Boot Device Priority

Choose "Boot Device Priority" in "Boot Configuration Setup" and press <Enter>. The bootable devices installed on board will appear and are allowed to assign the Boot Priority.

Boot Device Priority

Boot Device Priority		Help Item
1st Boot Device	1st FLOPPY DRIVE	Configure Settings during System Boot.
2nd Boot Device	PM-WDC WD400BB-00	

1st/2nd/3rd Boot Device Allows you to set (by pressing <Enter>) floppy or IDE devices already installed to be the 1st/2nd/3rd boot device.
 Choices: Disabled; Device(s) installed

4-6.7 Boot Security Features

Boot Security Features allows you to modify the system's boot security settings.

Choose "Boot Security Features" from the Main Menu and a screen with a list of options will appear:

CMOS Setup Utility - Copyright (C) 1985-2002, American Megatrends, Inc.
Boot Security Features

Security Settings	Help Item
Supervisor Password : Not Installed User Password : Not Installed	Install or Change the password.
Change Supervisor Password Press Enter	
User Access Level Full Access	
Change User Password Press Enter	
Clear User Password Press Enter	
Password Check Setup	
Boot Sector Virus Protection Disabled	

↑↓←→ : Move Enter : Select +/- : Values F10: Save Esc: Exit F1: General Help
 F7 : Previous Values F8 : Fail-Safe Defaults F9: Optimized Defaults

4-6.7.1 Supervisor Password

To show the status of Supervisor Password. "Installed" is displayed when supervisor password is set up. Otherwise, "Not Installed" is displayed.

4-6.7.2 User Password

To show the status of User Password. "Installed" is displayed when supervisor password is set up. Otherwise, "Not Installed" is displayed.

4-6.7.3 Change Supervisor Password

This option allows you to set a new Supervisor password for the system:

1. Choose "Change Supervisor Password" in the "BIOS Security Features" and press <Enter>. Then the following message appears:

[Enter new supervisor password]

2. The first time you run this option, enter your password up to 6 characters and press <Enter>. (The screen does not display the entered characters.)
3. After you enter the password, the following message appears, prompting you to confirm the password:

[Confirm New Password]

4. Enter the same password "exactly" the same as you have just typed to confirm the password and press <Enter>.
5. The following message appears to confirm the new password setup.

[Password installed]
[OK]

6. Then press any key to continue your CMOS Setup. To save the password setup, you should press "Save Changes and Exit" and choose "OK" to exit and save setup.
7. If you enter a new password into the box, you will be using this new password after you have finished and saved this new setup. Instead, if you press <Enter> before you enter any new password into the instruction box, another message box appears, telling you that you have disabled the Supervisor Password. That means, no password is set for either entering BIOS Setup or system:

[Password uninstalled]
[OK]

User Access Level Allows you to set four different Access Levels when Supervisor Password has been set.
 Choices: Full Access; Limited; View Only; No Access

Note: "User Access Level" and "Password Check" will appear when "Supervisor Password" has been set.

4-6.7.4 Change User Password

This option allows you to set a new User password for the system:

1. Choose "Change User Password" in the "BIOS Security Features" and press <Enter>. Then the following message appears:

[Enter New Password]

2. The first time you run this option, enter your password up to 6 characters and press <Enter>. (The screen does not display the entered characters.)
3. After you enter the password, the following message appears, prompting you to confirm the password:

[Confirm New Password]

4. Enter the same password "exactly" the same as you have just typed to confirm the password and press <Enter>.
5. The following message appears to confirm the new password setup.

[Password installed]
[OK]

6. Then press any key to continue your CMOS Setup. To save the password setup, you should press "Save Changes and Exit" and choose "OK" to exit and save setup.

4-6.7.5 Clear User Password

1. To remove the current user password, choose "Clear User Password" and press <Enter>. An instruction box appears on the screen, assuring to clear User Password:

Clear User Password?
[OK] [Cancel]

2. Then choose [OK] and press <Enter>. The User Password is successfully removed.

Password Check Allows you to set BIOS to check up password with a password prompt at BIOS Setup or whenever re-starting system. This option will appear when you have set Supervisor Password or User Password. Choices: Setup (default); Always

4-6.7.6 Boot Sector Virus Protection

Boot Sector Virus Protection When enabled, you receive a warning message if a program (specifically, a virus) attempts to write to the boot sector or the partition table of the hard disk drive. You should then run an antivirus program. Keep in mind that this feature protects only the boot sector, not the entire hard drive.

NOTE: Many disk diagnostic programs that access the boot sector table can trigger the virus warning message. If you plan to run such a program, we recommend that you disable the virus warning.

4-6.8 Save Changes and Exit

Save Changes and Exit allows you to save all modifications you have specified into the CMOS memory. Highlight this option on the Main Menu and press <Enter>. The following message appears:

[Saving configuration changes and exit setup?]	
[OK]	[Cancel]

Press <Enter> key to save the configuration changes and exit CMOS Setup to restart your system.

4-6.9 Discard Changes (and Exit)

Discard Changes option allows you to exit (or not exit) the Setup Utility without saving the modifications that you have specified. Highlight this option on the Main Menu and press <Enter> and the following message appears:

[Discard Changes (and exit setup?)]	
[OK]	[Cancel]

Follow the message and press <Enter> key to exit CMOS Setup and restart system.

4-6.10 Load Optimal Defaults

When you press <Enter> on this item, you will get a confirmation dialog box with a message similar to:

[Load Optimal Defaults ?]	
[OK]	[Cancel]

Press <Enter> now to load Optimal values for all the Setup options.

4-6.11 Discard Changes

Discard Changes option allows you to cancel the modifications that you have specified in the Setup Utility. Highlight this option on the Main Menu and press <Enter> and the following message appears:

[Discard Changes?]	
[OK]	[Cancel]

Follow the message and press <Enter> key to cancel the modifications that you have specified.