


SRI00-L20C

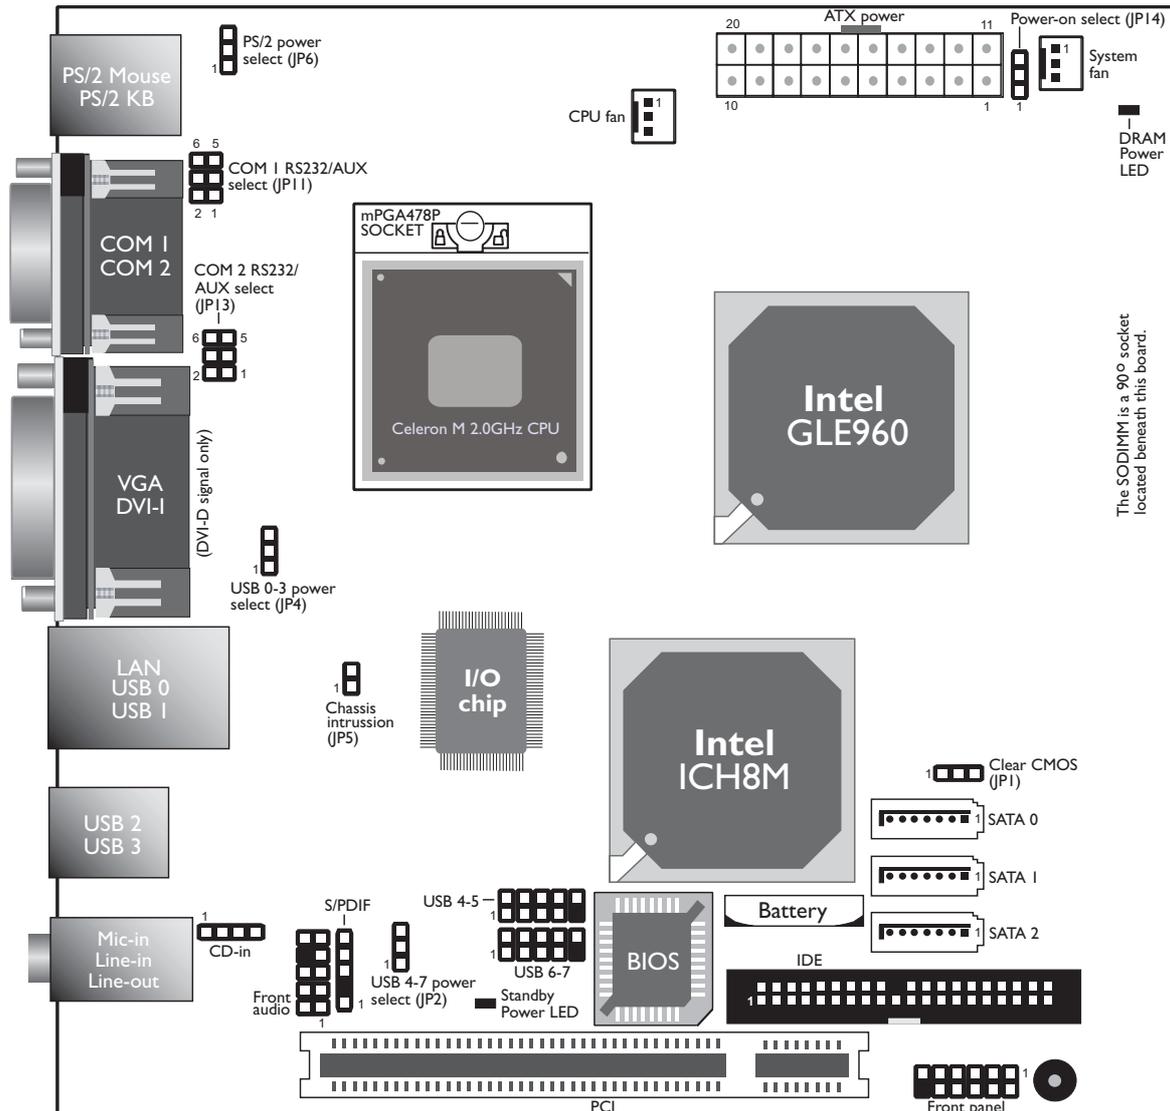

Power-on Select		JP14	USB Power: 0-3 (JP4), 4-7 (JP2)	
Power-on via power button (default)	1-2	On	5V (default)	1-2 On
Power-on via AC power	2-3	On	5V_standby	2-3 On
COM 1 RS232/AUX	JP11		COM 2 RS232/AUX	JP13
RS232	1-3, 2-4	On (default)	RS232	1-3, 2-4 On (default)
Auxiliary power	3-5 (5V), 4-6 (12V)	On	Auxiliary power	3-5 (5V), 4-6 (12V) On
Clear CMOS Data	JP1		PS/2 Power	JP6
Normal (default)	1-2	On	5V (default)	1-2 On
Clear CMOS Data	2-3	On	5V_standby	2-3 On