

The video DIP switch (SW1) on the main logic board has two switch positions (1 and 2) that you can change. The following table shows the different settings for switch numbers one and two:

SW1 Switch Settings

Switch #	Feature	Description	Switch Setting
1	Video Interrupt	IRQ9 Disable*	OFF
		Enable	ON
2	On-board Video	Enabled*	OFF
		Disable	ON

*Indicates the factory setting.

AUDIO JUMPER SETTINGS

Function	Description	Jumper Settings
Audio Input installed Source installed	Microphone*	E24 and E25
	Line-Level	E25 and E26
Audio Output installed Source installed	Headphone*	E28 and E29
	Line-Level	E29 and E30

*Indicates the factory setting.