

Realtek ALC888T

USER'S MANUAL-A Preliminary Version

Executive Summary

1. Introduction: A brief introduction about what functions are provided
2. Hot Key Snapshot: Providing users how to operate the system accurately
3. Before Getting Started: Inform users how to successfully initiate the function
4. Examples: A step by step illustration for using VoIP functions.

Introduction

You are allowed to use any of your desk telephone for PC to PC or, PC to Telephone communication. No more uncomfortable headset, no more extra cost for USB skype phone. Currently, Realtek ALC888T supports Skype and is co-working with other potential internet based telephony providers.


Hot Key Snapshots

******: Press the star sign twice and you may freely switch between PSTN and Skype.

##: After pressing the pawn sign twice, you may control Skype GUI with your telephone directly;

“2” means up; “8” means down; “4” means left and “6” means right.

Attention: After VoIP adapter has plugged into the computer and make sure Skype software has finished installing, Skype software will pup-up below screen “**Another program wants to use Skype**” (Please refer to below screen). You **MUST** select “**Allow this program to use Skype**” and click “**OK**”. Therefore, the desk phone can successfully connect to Skype utility.

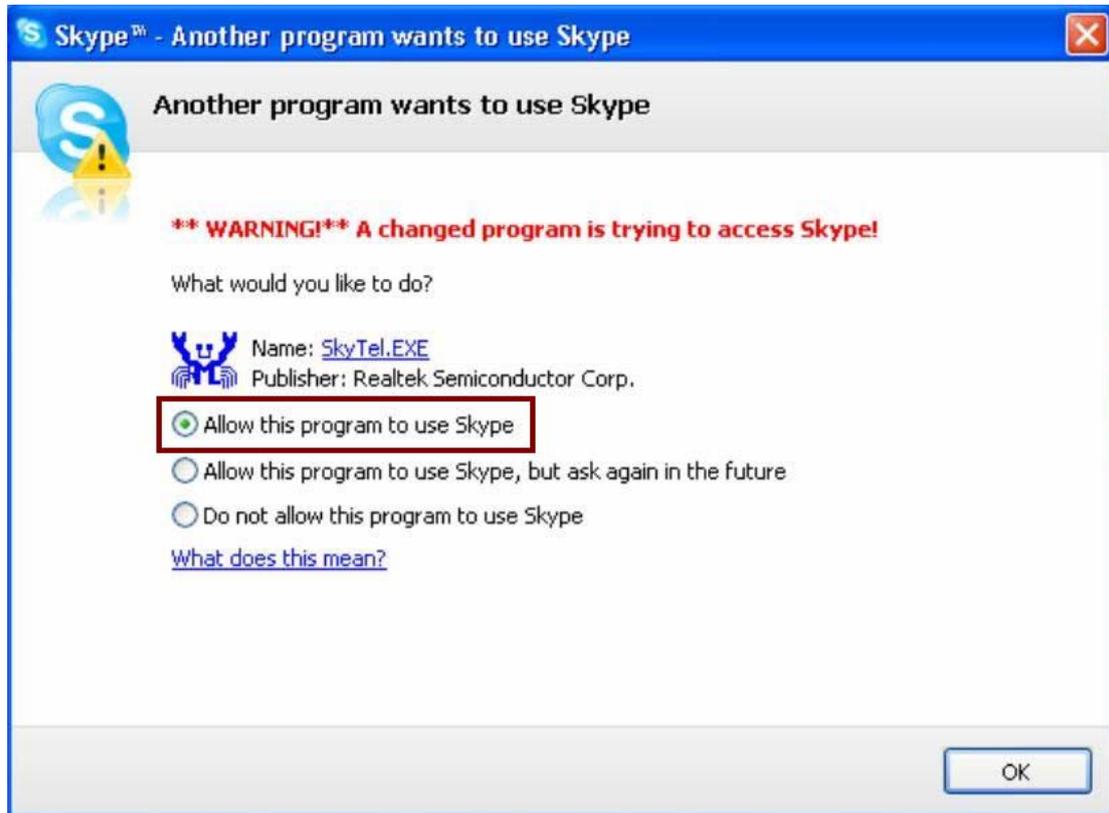


Before Getting Started

1. Make sure your phone line and telephone line correctly plug into the RJ11.
2. Make sure your internet connection functions.
3. If you don't have Skype Software, please download the Skype software at www.skype.com.
Realtek driver supports the latest Skype version.
4. Please purchase SkypeOut credits if you are likely to dial landline/mobile with skype, more details please visit the concerning website for more details.




When you hook off the telephone, Skype window will pop up accordingly

Example I: SkypeOut – Local Landline

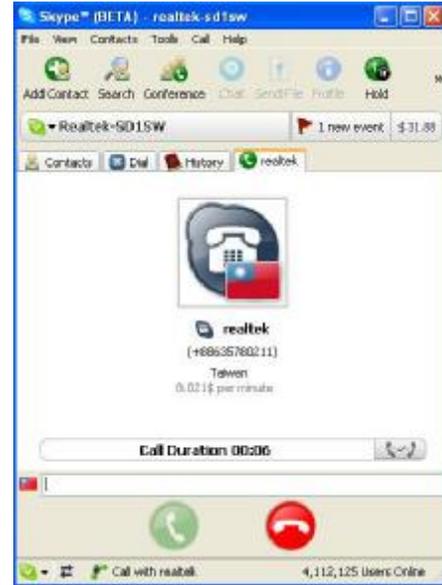

1. Confirm your Skype country setting is correct. When your call is successfully connected, the GUI will inform you a message of “call duration” as well as “calling fare” for your reference.
2. Dial “area code + telephone number”(no space or other symbol). E.g. Taipei City, 02888xxxx; San Francisco: 510-xxx-xxxx

Example II: SkypeOut – Mobile

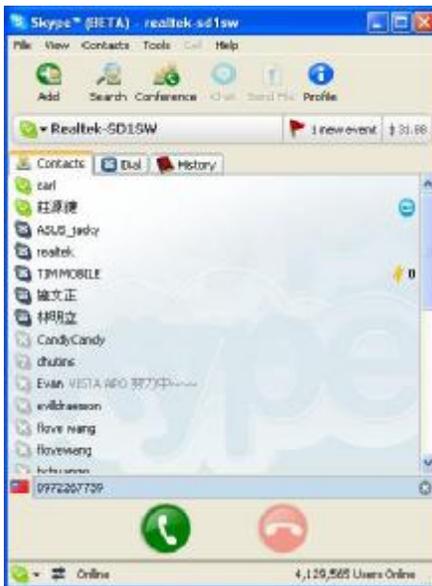

1. Confirm your Skype country setting is correct. When your call is successfully connected, the GUI will inform you a message of “call duration” as well as “calling fare” for your reference.
2. Dial the mobile number directly, e.g. Taiwan: 09xx-xxxxxx; San Francisco: 510-xxx-xxxx

Example III: Skype-Peer to Peer

1. Hook off & Press “#” twice, you may use the telephone to control the phone book: 2 (up) and 8 (down)
2. Select the desired contact and press “#” to complete the dialing.



Example VI: Speed Dialing




1. Provided by Skype, you need to Setup a dedicated number for each contact; e.g. 1 for Mr. Wang
2. Dial 1 and wait for a second, it will reach the person

1. When your phone is answered, the GUI will show up related information for your reference.

Appendix

1. Dialing International Calls

Method 1

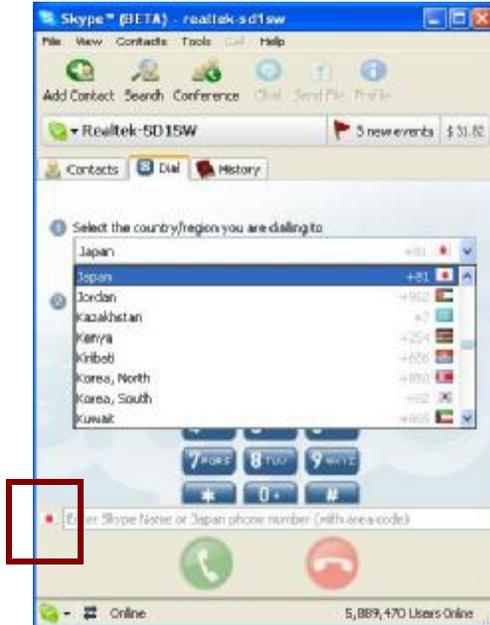

1. Click the “ Dial” icon right next to the “Contacts” and you will see an option of selecting country you are dialing to
2. Figure out the country and the default setting will be altered accordingly, which you could tell from the “flag”.
3. Once the country code is correctly set, you may dial the desired number accordingly.

Method 2



1. Stay with the current setting, while dial the desired international call by starting with the star sign, and the international code and telephone number. “ * + intl. code + local number “