



## ***Declaration of Conformity***

According to 47 CFR, Parts 2 and 15 of the FCC Rules

The following designated product:

**EQUIPMENT: MAINBOARD**

**MODEL NO.: 9SJD**

is a Class B digital device that complies with 47 CFR Parts 2 and 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This declaration is given to the manufacturer:

**CHAINTECH - EXCEL COMPUTER U.S., INC.**

**4427 Enterprise ST. Fremont, CA 94538, U.S.A.**

<http://www.chaintech-excel.com>

Chaintech President: Simon Ho

Signature:

A handwritten signature in black ink, appearing to be 'S. Ho', written over a horizontal line.

---

## **Federal Communications Commission Statement**

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- ♦ This device may not cause harmful interference
- ♦ This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If this equipment is not installed and used in accordance with the manufacturer's instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ♦ Reorient or relocate the receiving antenna.
- ♦ Increase the separation between the equipment and receiver.
- ♦ Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- ♦ Consult the dealer or an experienced radio/TV technician for help.

The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## **Canadian Department of Communications Statement**

This digital apparatus does not exceed the Class B limits for audio noise emissions from digital apparatuses set out in the Radio Interference Regulations of the Canadian Department of Communications.

## **Manufacturer's Disclaimer Statement**

The information in this document is subject to change without notice and does not represent a commitment on the part of the vendor. No warranty or representation, either expressed or implied, is made with respect to the quality, accuracy or fitness for any particular purpose of this document. The manufacturer reserves the right to make changes to the content of this document and/or the products associated with it at any time without obligation to notify any person or organization of such changes. In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages. This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for any purpose without expressed written consent of it's authors. Product names appearing in this document are mentioned for identification purposes only. All trademarks, product names or brand names appearing in this document are registered property of their respective owners.

Printed in Taiwan

**November 2001**

**100%** POST-CONSUMER  
RECYCLED PAPER 

---

# Table of Contents

<b>Chapter 1 Introduction .....</b>	<b>1</b>
1-1 Product Specifications .....	1
1-2 Package Contents .....	2
1-3 Mainboard Layout .....	3
1-4 Connector and Jumper Reference Chart .....	4
<b>Chapter 2 Hardware Setup .....</b>	<b>5</b>
2-1 Installing a CPU in a Socket 478 .....	5
2-2 Plug and Play CPU Configuration.....	5
2-3 Connector and Jumper Settings .....	6
2-4 Main Memory Configuration .....	11
<b>Chapter 3 Award BIOS Setup Program .....</b>	<b>12</b>
3-1 Standard CMOS Features .....	13
3-2 Advanced BIOS Features .....	14
3-3 Advanced Chipset Features .....	17
3-4 Integrated Peripherals .....	18
3-5 Power Management Setup .....	20
3-6 PnP/PCI Configuration .....	23
3-7 PC Health Status .....	24
3-8 Frequency/Voltage Control .....	24
3-9 Load Fail-Safe Defaults .....	25
3-10 Load Optimized Defaults .....	25
3-11 Supervisor Password & User Password Setting .....	26
3-12 Save and Exit Setup .....	26
3-13 Exit Without Saving .....	26
<b>Feature Explanations</b>	
Software Power-off Control .....	6
Over-ride Power Button .....	7
Blinking LED in Suspend Mode .....	6
Power On By Modem .....	6/22
Power On By Alarm .....	22
Poly-fuse Over Current Protection .....	6
Wake Up On LAN .....	9
<b>Appendices</b>	
Appendix I Embedded Flash Utility .....	27
Appendix II HDD Instant Recovery Utility .....	28
Appendix III CMedia 8738 Audio Subsystem (optional).....	30

---

# Chapter 1

## Introduction

### 1-1 Product Specifications

#### ❑ Processor

- Supports Intel Pentium 4 Socket 478 processors
- System bus 400MHz

#### ❑ Chipset

- SiS 645 + SiS 961 Chipset

#### ❑ DRAM Memory

- Three 184-pin DDR DIMM sockets support up to 3GB
- Supports PC1600/PC2100/PC2700 DDR SDRAM

#### ❑ Expansion Slots

- One Universal-AGP slot for both 2X/4XAGP at 3.3v or 1.5v (v2.0 compliant)
- Five 32-bit PCI slots (Rev 2.2 compliant)

#### ❑ Boot-Block Flash ROM

- Award BIOS, supports PnP, APM, DMI, ACPI & Multi-device booting features i.e. floppy, LS120, CD-ROM, HDD(IDE, SCSI), ZIP-ATAPI etc.
- Includes Trend ChipAway Virus protection for virus-free boot and virus free operating system

#### ❑ Embedded Ultra DMA-100 PCI IDE controller

- Supports two IDE ports up to 4 ATAPI devices
- Supports up to PIO Mode 4 up to 16.6MBps, Multi Mode 4 up to 66MBps and Multi Word Mode 5 up to 100MBps with bus mastering
- Bus Mastering software drivers for common multi-task operating systems

#### ❑ Onboard W83L518D Smart @ I/O Function (optional)

- Integrates smart card reader function and interface, to be qualified for meeting PC/SC standard
- Supports flash memory card (Memory Stick and SD Memory interface)

#### ❑ Onboard Ultra I/O

- ITE 8705F chip with keyboard controller
- Three UARTs support two serial ports and IR function for HPSIR and ASKIR
- One parallel supports SPP/ECP/EPP
- One floppy disk drive connector supports up to 2.88MB

#### ❑ Embedded USB Controller

- UHCI compliant USB host controller with Root Hub
- Support up to six USB ports (UHCI v1.0 compliant)
- Optional USB adapter for additional 2 USB ports

**Double Stack Back-Panel I/O Connectors**

- PS/2 Mini-DIN keyboard and mouse port
- Two USB ports
- Two 9-pin D-SUB male Serial port
- One 25-pin D-SUB female Printer port
- Audio Line-in/out and Mic-in jacks
- One 15-pin D-SUB female Game/MIDI port

**Onboard PCI CMedia 8738Audio Subsystem (optional)**

- Full-duplex operation for simultaneous recording and playback
- 6 channel speaker audio support

**Audio Subsystem via AC-link (optional)**

- AC"97 V2.1 compliant CODEC with integrated SRC

**Onboard High Performance 1394 Link-Layer Controller (optional)**

- Serial bus data rates at 100,200 and 400Mbps
- IEEE P1394a compliant and IEEE std. 1394-1995
- Programmable ATA/ATAPI interface supporting PIO/DMA/ULTRA DMA modes 0-4

**Embedded System Monitor Hardware**

- 8 external voltage inputs
- 2 temperature sensor with thermistor for CPU and system
- 2 Fan speed (CPU and System) monitoring

## 1-2 Package Contents

This product comes with the following components:

- One mainboard
  - One 40-pin (80-wire) UDMA-100 IDE connector ribbon cable (Figure 1-1)  
\* **Color coded connection:** Blue to mainboard, Gray to Master and Black to slave
  - One 34-pin floppy disk drive ribbon cable (Figure 1-2)
  - One User's Manual
  - One CD-ROM that includes
    - Award Flash Utility and Award DMI Utility for DOS
    - SiS audio drivers and utilities for Win9x/2000/NT/XP
    - SiS Service Pack for Windows OS including Bus Master IDE drivers, AGP VxD and etc.
  - Optional **Value Pack 2001** software pack including Norton AntiVirus, AutoSave, ADOBE ActiveShare, Acrobat Reader, Imagemore, X-stop, Appio and Ewalla.
- See the Readme.txt file in the CD-ROM's root directory for installation instructions of all driver and software utilities.


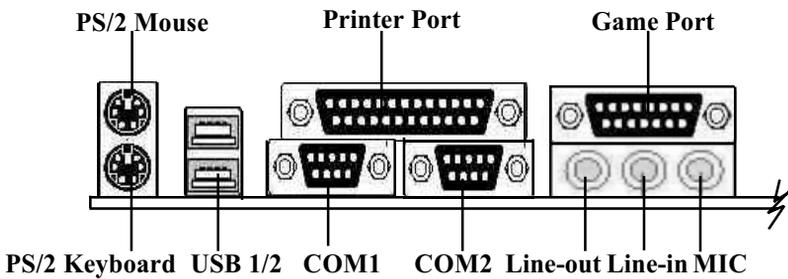


**Figure 1-1** UDMA-100 IDE cable



**Figure 1-2** Standard Floppy cable

### 1-3 Mainboard Layout

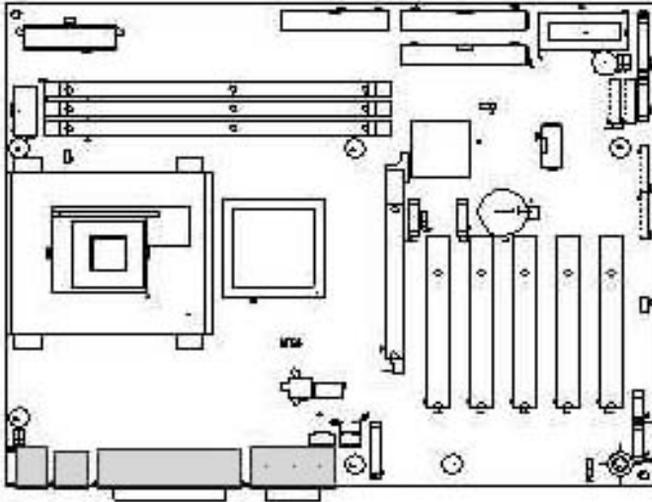

## 1-4 Connector and Jumper Reference Chart

Jumper & Connector No.	Function	Page
JP1	Clear CMOS Data Jumper	8
JP5	Power On By Keyboard	8
JP6/JP6A	Power On By USB 1/2 and 3/4	8
JP8	Optional Onboard Audio	8
JP24 or SW1	External Clock Frequency	8
CN1A	Over ride Power Button Connector	7
	Power Indicator LED Connector	
	Green Button Switch/LED Connector	
	System Reset Switch Connector	
	Speaker Connector	
	IDE Activity LED Connector	
CN2	CD-ROM Audio in Connector	9
CN3	Auxiliary Audio-in Connector	9
CN4	Audio Mono-in/out Connector	9
CN4B	AC3 Surround/Center + Bass Connector	9
CN4C	Optional S/PDIF-in/out Connector	9
CN5	WOL (Wake-on-LAN) Connector	9
CN7A/B/C	Optional Smart@I/O Reader Connectors	9
CN17	Blue LED Connector	10
USB1/CN20	USB 1/2 Ports and USB 3/4 Connector	10
CN22	Front Panel Audio Connector	10
CN23/CN24	Optional Wafer1394 Connectors	10
IR2	IR/CIR Connector	10
FAN1/FAN2/FAN3	CPU/System/Case Cooling Fan Connector	10
PT1	PS/2 Mouse and Keyboard Ports	11
PW1/PW3/PW4	ATX/ATX12V Power Supply Connector	6

## Chapter 2

# Hardware Setup

If your mainboard has already been installed in your computer you may still need to refer to this chapter if you plan to upgrade your system's hardware.



**Be sure to disconnect the power cable from the power source before performing any work on your mainboard, i. e. installing a CPU, memory module, changing a jumper setting, etc. Not doing so may result in electrical shock!**

### 2-1 Installing a CPU in a Socket 478

The Intel Socket 478, designed for the Pentium 4 processor, has been incorporated as a standard mainboard specification. To insert your CPU into Socket 478 please do the following:

1. Locate a small dot marked on the top surface of the CPU close to one of its corners. The same corner will also be cut off, leaving a noticeable notch in the CPU's corner. These markings indicate Pin 1 of the CPU.
2. Pull up the lever of Socket 478 so that it is perpendicular with the surface of the mainboard. Gently insert the CPU with Pin 1 at the same corner of Socket 478 that contains the end of the lever. Allow the weight of the CPU to push itself into place. Do not apply extra pressure as doing so may result in damaging your CPU. Snap the lever back into place.



**Installing a heat sink with cooling fan is necessary for proper heat dissipation from your CPU. Failing to install these items may result in overheating and possible burn-out of your CPU.**

### 2-2 Plug and Play CPU Configuration

This mainboard support plug and play CPU configuration, if you install a CPU on this mainboard, the board will automatically detect and set the CPU voltage and system bus frequency speed. It is no longer necessary to make many jumper settings as on conventional mainboards.

- ✎ After installing all your hardware into your PC system, you can manually configure your CPU and memory clock speed according to your processor's and memory's specifications at (JP24) External Clock Frequency on page 8.

## 2-3 Connector and Jumper Settings

Connectors are used to link the system board with other parts of the system, including the power supply, the keyboard, and the various controllers of the system case.



The power supply connector is the last connection to be made while installing a mainboard. Before connecting the power supply, please make sure it is not connected to the power source.

### ATX/ATX12V Power Supply Connector (PW1/PW3/PW4)



The ATX power supply provides a single 20-pin connector interface which incorporates standard +/-5V, +/-12V, optional 3.3V and Soft-power signals. The Soft-power signal, a 5V trickle supply is continuously supplied when AC power is available. When the system is in the Soft-Off mode, this trickle supply maintains the system in its minimum power state.

PW1

Pin	Signal	Wire
1	COM	BLK
2	COM	BLK
3	+12VDC	YEL
4	+12VDC	YEL

PW2

Pin	Signal	Wire
1	COM	BLK
2	COM	BLK
3	COM	BLK
4	+3.3VDC	ORG
5	+3.3VDC	ORG
6	+5VDC	RED

PW4

The ATX12V power supply has a new +12 V (4-pin) and +5V/3.3V (6-pin) auxiliary power connector. To enable the delivery of more +12 VDC and +5/3.3V VDC current to the motherboard.

### Software Power-Off Control

This mainboard can be powered down using the Windows 9x Software Power-Off function. To power down your computer, click the START button on the Windows 9x task bar. Select "Shut Down The Computer" and the system turns off. The message "It is now safe to turn off your computer" will not be shown when using this function.

### Power-On By Modem

While in Soft-off state, if an external modem ring-up signal occurs, the system wakes up and can be remotely accessed. You may enable this function in BIOS's Power Management Setup menu. (See Chapter 3)

### Blinking LED in Suspend Mode


While in Suspend mode, the LED light on the front panel of your computer will flash. Suspend mode is entered by pressing the Override Power Button, pushing the Green button on your ATX case, or enabling the Power Management and Suspend Mode options in BIOS's Power Management menu. (See Chapter 3)

### Poly-fuse Over Current Protection

The poly-fuse protects the system from dangerous voltages the system might be exposed to via the keyboard or USB connectors. In case of such exposure, the poly-fuse will immediately be disconnected from the circuit, just like a normal fuse. After being disconnected for a certain period of time, the poly-fuse will return to its normal state, after which the keyboard or USB can function properly again.

## Front Panel Connector Set (CN1A) A through F

### A. Over-ride Power Button Connector

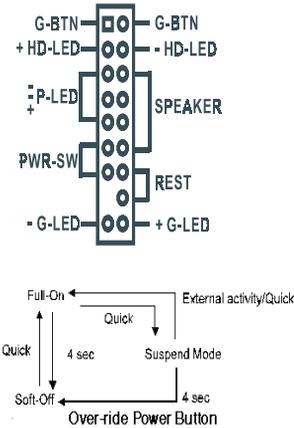

The power button on the ATX chassis can be used as a normal power switch as well as a device to activate Advanced Power Management Suspend mode. This mode is used for saving electricity when the computer is not in use for long periods of time. The Soft-OFF by PWR-BTTN function in BIOS's Power Management Setup menu must be set to "Delay 4 Sec." to activate this function.

When the Soft-OFF by PWR-BTTN function is enabled, pushing the power button rapidly will switch the system to Suspend mode. Any occurrence of external activities such as pressing a key on the keyboard or moving the mouse will bring the system back to Full-On. Pushing the button while in Full-On mode for more than 4 seconds will switch the system completely off. See Over-ride Power Button Operation diagram.

### B. Power Indicator LED Connector

The power indicator LED shows the system's power status. It is important to pay attention to the correct cables and pin orientation (i.e., not to reverse the order of these two connectors.)

### C. Green Button Switch/LED Connector

Some ATX cases provide a Green button switch which is used to put the system in Suspend mode. In Suspend mode, the power supply to the system is reduced to a trickle, the CPU clock is stopped, and the CPU core is in its minimum power state. The system is woken up whenever the keyboard or mouse is touched. The system resumes in different ways as defined by Power Management Setup screen in BIOS.

### D. System Reset Switch Connector

This connector should be connected to the reset switch on the front panel of the system case. The reset switch allows you to restart the system without turning the power off.

### E. Speaker Connector

This 4-pin connector connects to the case-mounted speaker

### F. IDE Activity LED Connector

The IDE activity LED lights up whenever the system reads/writes to the IDE devices.

### Clear CMOS Data (JP1)

Pin	Definition
1~2	Normal (default)
2~3	Clear CMOS Data

To clear the contents of the CMOS, please follow the steps below.

1. Disconnect the system power supply from the power source.
2. Set the jumper cap at location 2~3 for 5 seconds, then set it back to the default position.
3. Connect the system's power and then start the system.
4. Enter BIOS's CMOS Setup Utility and choose Load Setup Defaults. Type Y and press enter.
5. Set the system configuration in the Standard CMOS Setup menu.

### Power On By Keyboard (JP5)

Pin	Definition
1~2	Disable (default)
2~3	Enable

This board is able to be turned on by the PS/2 keyboard (hot key). To use this function, select a hot key of your choice at the PS2KB Wakeup option under Wake Up Events in the BIOS's Power On Management screen. You must also set this jumper's cap to pins 2-3 to use this function.

### Power On By USB 1/2 , 3/4 and 5/6 (JP6/JP6A)

Pin	Definition
1~2	Disable (default)
2~3	Enable

This board is able to be turned on by a USB keyboard hot key or a USB mouse click. To use this function, select a hot key of your choice at the USB Resume From S3 option under Wake Up Events in the BIOS's Power On Management screen. You must also set this jumper's cap to pins 2-3 to use this function.



### Optional Onboard Audio (JP8)

Pin	Definition
1~2	Enable
2~3	Disable

This function allows you to enable or disable the on board audio. You must set the jumper cap to pins 1-2 to enable or set pins 2-3 to disable this function.

### External Clock Frequency (JP24 or SW1)


This jumper or switch allows user to configure the CPU and memory clock speed according to user processor and memory specification.



CPU	SDRAM	A	B	C	D	E
100	100	1~2	2~3	2~3	2~3	2~3
100	133	1~2	1~2	2~3	2~3	2~3
100	160	2~3	1~2	1~2	2~3	2~3


CPU	SDRAM	1	2	3	4	5
100	100	OFF	ON	ON	ON	ON
100	133	OFF	OFF	ON	ON	ON
100	160	ON	OFF	OFF	ON	ON

### CD-ROM Audio-in Connector (CN2)




Use the audio cable enclosed with your CD-ROM disk drive to connect the CD-ROM to your mainboard. This will enable your CD-ROM's audio function.

### Auxiliary Audio-in Connector (CN3)




This connector is for use with a secondary CD-ROM, DVD-ROM or CDR/CDRW disk drive.

### Optional Audio Mono-in/out Connector (CN4)




This connector is used for Add on Card e.g. modem with Mono In/Out connector

### AC3 Surround/Center + Bass Connector (CN4B)

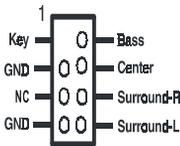


This connector is for Surround and Center+Bass speaker output ext. Plug in the optional AC3 Surround/Center+Bass jack extension into this connector. The black colored jack is for surround speaker output and the orange colored jack is for center+bass speaker output.

### Optional S/PDIF-in/out Connector (CN4C)

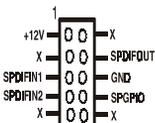

The S/PDIF-in/out connector supports the digital audio. This connector must be connected to the cable from an external device (i.e. 2-channel decoded AC-3 from DVD decoders).

### WOL (Wake-on-LAN) Connector (CN5)




Enable the Wake Up On LAN selection in BIOS's Power Management Menu to use this function. This header is used to connect an add-in NIC (Network Interface Card) which gives WOL capability to the mainboard.

### Optional Smart@I/O Reader Connectors (CN7A/CN7B/CN7C)

Connector	Color	Interface
CN7A	Yellow	Smart Card
CN7B	White	Memory Stick
CN7C	Sienna brown	SD Memory


The W83L518D Smart @ I/O Reader (optional) supports flash memory card (Memory Stick and SD Memory interface) with color coded connectors for easy installation.

### Blue LED Connector(CN17)

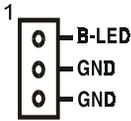


This feature work entirely the same as the power indicator LED, both shows the system's power status. The only difference is that this one is blue while the other is red LED.

### USB 1/2 Ports and USB 3/4 & 5/6 Connectors (USB1/CN20/CN20A)

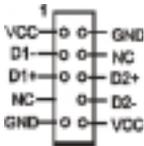

If you want to use a USB Keyboard, you must enable the USB keyboard support function in BIOS's Integrated Peripherals menu (See Section 3-4). This board contains a USB Host controller and includes a root hub with two USB 0/1 ports a connector for optional USB Adaptor (USB 3/4).

### Front Panel Audio Connector (CN22)

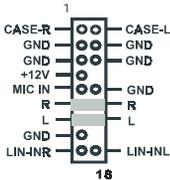


This connector give you the option of a front panel audio jack cable ext. to be plug into a special custom designed system case. Simply remove the two jumper caps at pin 11-12 and 13-14 then plug it into the (optional) cable ext. connector. Pin 11-12 and 13-14 are shorted (default) to enabled the back panel audio function.

### Optional Wafer1394 Connectors (CN23/CN24)




This feature supports the High Performance 1394 Link-Layer Controller. The (optional) 1394 ports with cable and bracket should be attached to this connectors.

### IR/CIR Connector (IR2)

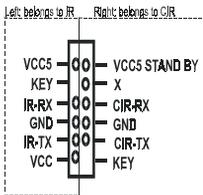

Select a UART Mode in BIOS's Integrated Peripherals menu the UART port to support IR/CIR functions. (See section 3-4)

### CPU/System/Chip Cooling Fan Connectors (FAN1/FAN2/FAN3)



The board's management extension hardware is able to detect the CPU and system fan speed in rpm (revolutions per minute). The wiring and plug may vary depending on the manufacturer. On standard fans, the red is positive (+12V), the black is ground, and the yellow wire is the rotation signal.

## PS/2 Mouse and Keyboard Ports (PT1)


Pin	Definition
1	Data
2	No Connection
3	Ground
4	+5v(Fused)
5	Clock
6	No Connection

If a PS/2 mouse is used, BIOS will automatically detect and assign IRQ12 to the PS/2 mouse.



## 2-4 Main Memory Configuration

The DDR SDRAM memory system consists three banks and can supports the memory size up to **1GB** per bank. If you only use one bank it does not matter which one you use and if you use two or more banks, it does not matter which bank you install first.

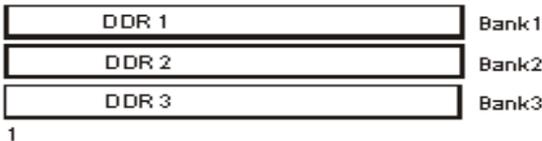

## DDR SDRAM Specifications

FSB Frequency	Internal System Bus Freq.
100 MHz	200 MHz
133 MHz	266 MHz
160 MHz	320MHz

DIMM type: 2.5V, Registered 64/128/256-bit DDR SDRAM

Module size: Single/double-sided 64/128/256/512MB/1GB

Parity: Either parity or non-parity



This mainboard supports two PC2700 DDR SDRAM modules only. We recommend user to use bank 1 and bank 2.

# Chapter 3

## Award BIOS Setup Program

Award's BIOS ROM has a built-in setup program that allows users to modify the basic system configuration. This information is stored in CMOS RAM so that it can retain the setup information, even when the power is turned off. When you turn on or reboot the system, press the Delete key to enter the Award BIOS setup program. The primary screen as shown in Figure 3-1 is a list of the menus and functions available in the setup program. Select the desired item and press enter to make changes. Operating commands are located at the bottom of this and all other BIOS screens. When a field is highlighted, on-line help information is displayed on the left bottom edge of the screen.

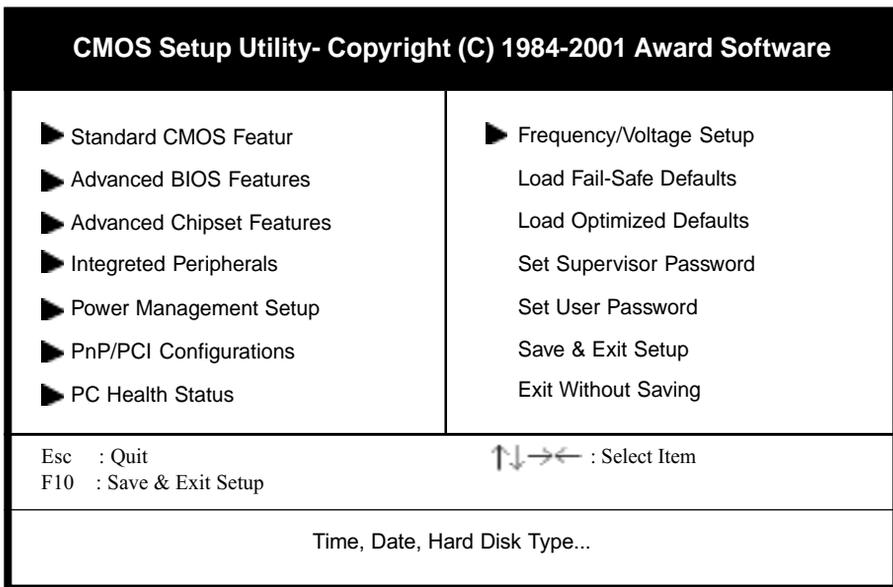


Figure 3-1 Setup Program Initial Screen

 **This mainboard is configured to manufacturer's default values.**

### 3-1 Standard CMOS Setup

The Standard CMOS Setup allows users to configure system components such as hard disk drive, floppy disk drive and video display as well as date, time and boot-up error signaling. This configuration menu should be changed when installing a mainboard for the first time, changing hardware in your system such as the HDD, FDD, video display, or when the CMOS data has been lost or contaminated. Choose the Standard CMOS Setup option from the CMOS Setup Utility menu (Figure 3-1) to display the following screen.

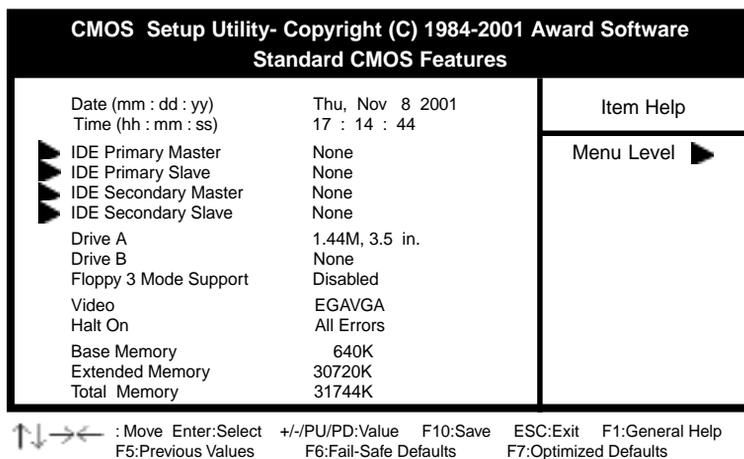


Figure 3-2 Standard CMOS Features Screen

#### Date/Time

Set the date and time. Do not skip this function as all of your timed events such as power management, saving files, etc. are based on this timer.

#### Hard Disk Setup (Primary/Secondary; Master/Slave)

This category identifies up to four IDE hard disk drives that have been installed in the computer. This section does not show information on other IDE devices such as CD-ROM drives or other hard drive types such as SCSI drives.

#### Floppy Disk Drives

Choose the memory capacity and disk size that corresponds with that of your floppy disk drive(s).

#### Video


Select the type of video adapter present in your system. You can ignore this setting if you are using a VGA monitor since VGA BIOS automatically configures this setting.

#### Halt

When the system is powered on, BIOS performs a series of diagnostic tests called POST (Power On Self Test). This function stops the computer if BIOS detects a hardware error. You can tell BIOS to halt on all errors, no errors, or not to halt on specific errors.

## 3-2 Advanced BIOS Features

By choosing the Advanced BIOS Features option from the Standard CMOS Features menu (Figure 3-1), the screen below is displayed. This sample screen is for reference use only.

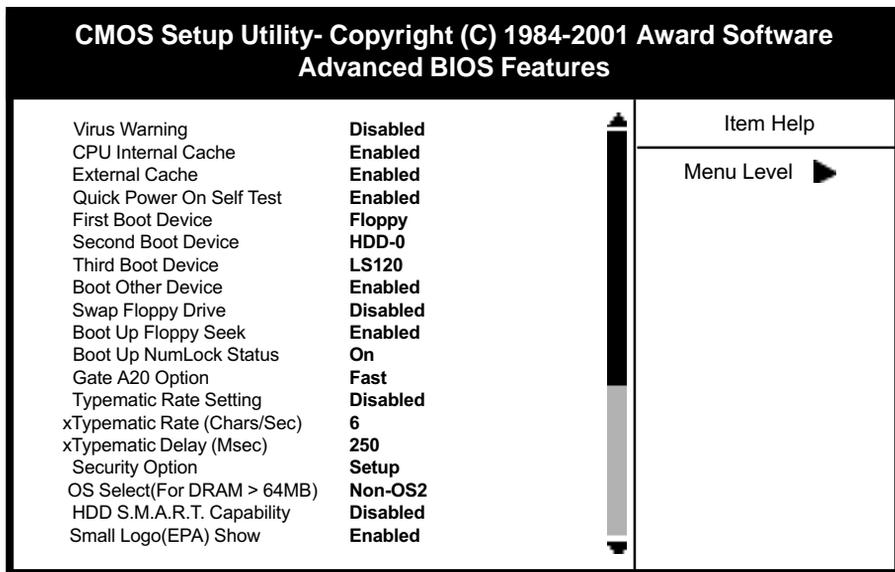

↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Figure 3-3 Sample of Advanced BIOS Features Screen

### A. Virus Warning

Virus Warning is a code incorporated in the mainboard's BIOS firmware. During the boot-up sequence, BIOS loads before loading of the partition table or boot sector. Virus Warning loads with BIOS and is able to detect boot-up viruses before they have a chance to infect the hard drive. Virus Warning employs rule-based logic that doesn't look for specific viruses but rather detects patterns found in every virus, eliminating the need to perform periodical version updates after new viruses have been found.

### B. CPU Internal and External Cache

Cache memory is much faster than conventional DRAM system memory. These fields allow you to enable or disable the CPUs Level 1 built-in cache and Level 2 external cache. Both settings are left enabled to significantly increase the performance of your computer.

## **C. Boot Up Features**

After turning on the system, BIOS will perform a series of device initializations and diagnostic tests discussed below.

### **Quick Power On Self Test (POST)**

Enable this function to reduce the amount of time required to run the POST (Power On Self Test). BIOS saves time by skipping some items during POST. It is recommended that you disable this setting. Discovering a problem during bootup is better than losing data during your work.

### **First/Second/Third/Boot Other Device**

This option sets the sequence of drives BIOS attempts to boot from after POST completes. BIOS will search these drives for an operating system.

### **Swap Floppy Drive**

Enabling this function will swap the floppy drive assignment so that drive A will function as drive B, and drive B will function as drive A. Note that the boot sequence assignment mentioned directly above does not include booting from floppy drive B. This function is useful if floppy drives B and A are of a different format and you want to boot from floppy drive B.

### **Boot up Floppy Seek**

During POST, BIOS will determine if the installed floppy disk drive has 40 or 80 tracks. A 360K drive has 40 tracks and 720K, 1.2M and 1.44M drives have 80 tracks. All modern floppy disk drives have 80 tracks.

### **Boot Up NumLock Status**

This function defines the keyboard's numberpad as number keys or arrow keys.

## **D. Gate A 20 Option**

Gate A20 refers to the way the system addresses memory above 1 MB (extended memory). When set to Fast, the system chipset controls Gate A20. When set to Normal, a pin in the keyboard controller controls Gate A20. Setting Gate A20 to Fast improves system speed, particularly with OS/2 and Windows.

## **E. Keyboard Interface**

### **Typematic Rate Setting**

When enabled, you can set the following two typematic control items. When disabled, keystrokes are determined arbitrarily by the keyboard controller in your system.

### **Typematic Rate (Chars/Sec)**

The typematic rate sets the rate at which characters on the screen repeat when a key is pressed and held down.

### **Typematic Delay (Msec)**

The typematic delay sets how long after you press a key that a character begins repeating.

## **F. Security Option**

The Supervisor and/or User Password functions shown in Figure 3-1 must be set to take advantage of this function. See Section 3-11 for password setting information. When the Security Option is set to System, a password must be entered to boot the system or enter the BIOS setup program. When the Security Option is set to Setup, a password is required to enter the BIOS setup program.

## **G. OS Select (For DRAM > 64MB)**

If your system's DRAM is larger than 64MB and you are running OS/2, select OS/2 as the item value. Otherwise, set the item value to Non-OS/2 for all other operating systems.

## **H. HDD S.M.A.R.T. Capability**


S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) enables a drive's internal status to be monitored through diagnostic commands. Both your hard drive must support this capability and this function must be enabled in order to take advantage of this function. See your hard drive literature for more information.

## **I. HDD Instant Recovery**

This board supports HDD Instant Recovery, select enabled to use this function. Upon system boot up, the HDD Instant Recovery Utility will be shown on the screen. Selet **Install** or **Do Not Install** to continue booting (See Appendix II).

### 3-3 Advance Chipset Features

By choosing the Advanced Chipset Features option from the Standard CMOS Features menu (Figure 3-1), the screen below is displayed. This sample screen is for reference use only.

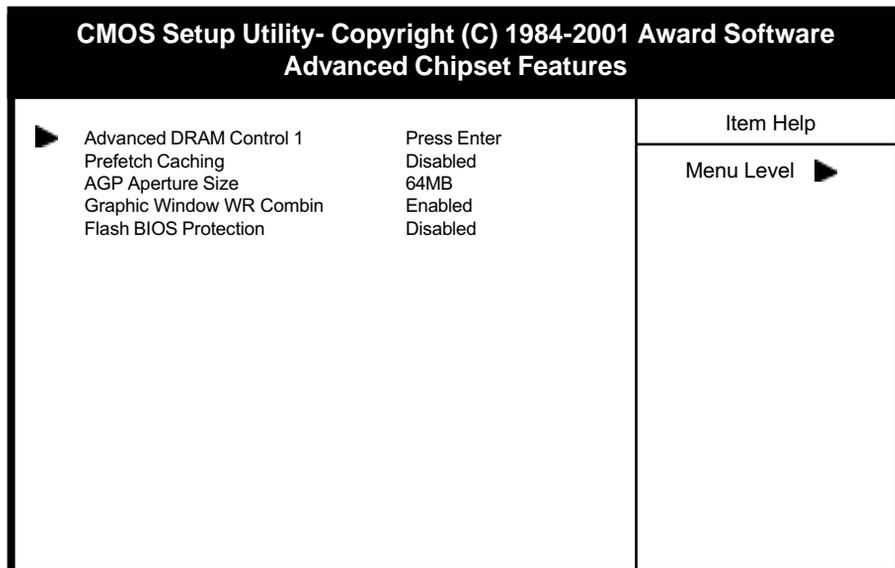

↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

**Figure 3-4 Sample of Advanced Chipset Features Screen**



All of the above settings have been determined by the mainboard manufacturer and should not be changed unless you are absolutely sure of what you are doing. Explanation of the DRAM timing and chipset features setup is lengthy, highly technical and beyond the scope of this manual. Below are abbreviated descriptions of the functions in this setup menu. You can look on the world wide web for helpful chipset and RAM configuration information including AWARD's web site at <http://www.award.com>.

#### A. AGP Aperture Size

Select the size of Accelerated Graphics Port (AGP) aperture. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation.

### 3-4 Integrated Peripherals

This section provides information on setting peripheral devices. By choosing the Integrated Peripherals option from the Standard CMOS Features menu (Figure 3-1), the screen below is displayed. This sample screen is for reference use only.

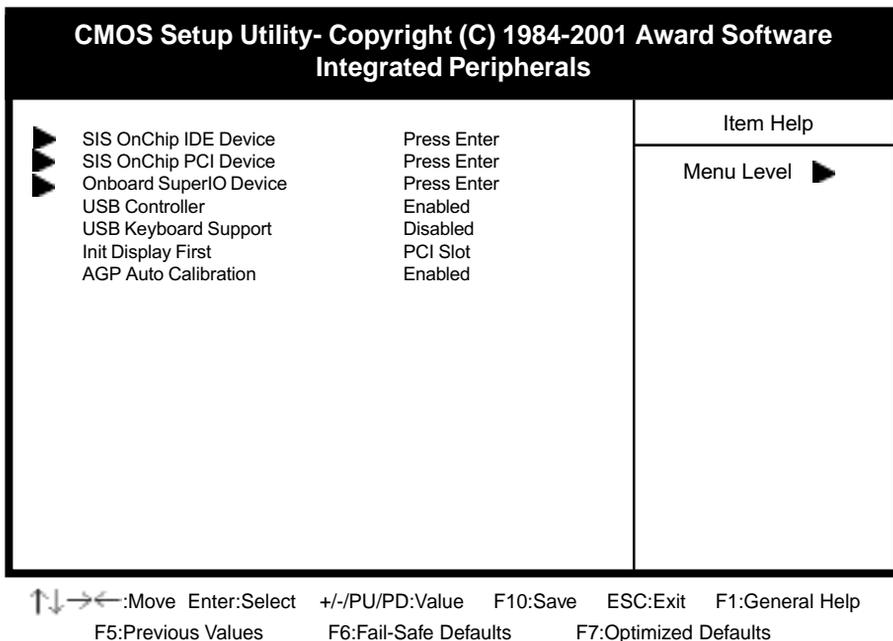


Figure 3-5 Sample of Integrated Peripherals Screen

#### A. SIS OnChip IDE Device

##### On-chip Primary/Secondary PCI IDE

You can set this to disable the On-chip IDE controller if you are going to add a higher performance IDE board.

##### IDE Primary/Secondary Master/Slave PIO

The four IDE PIO (programmed Input/Output) fields let you set a PIO mode (0-4) for each IDE device that the internal PCI IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

#### B. SIS OnChip PCI Device

##### Onboard CMedia Audio

This feature allows user to select 6 channels function, if they installed an optional 6ch Expansion kit on this mainboard.

### **C. Super IO Device**

#### **Onboard FDC Controller**

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install an add-in FDC or the system has no floppy drive, select Disabled in this field.

#### **UART Select**

This function allows you to select an operating mode for the second serial port. (Normal RS-232C serial port/IrDA/ASKIR/SCR infrared port)

#### **Onboard Parallel Port**

Select a logical LPT port address and corresponding interrupt for the physical parallel port.

### **D. USB Controller**

Enable the on-board Universal Serial Bus (USB) controller if you want to connect a USB peripheral devices to your system.

### **E. USB Keyboard Support**


If your current operating system doesn't support USB drivers (i.e., DOS) this function must be enabled for USB keyboard operation in these operating systems.

### **F. Init Display First**

This function allows user to choose between AGP slot or PCI slot to initialise Display first .

### 3-5 Power Management Setup

This section provides information on the Green PC power management functions. By choosing the Power Management Setup option from the Standard CMOS Features menu (Figure 3-1), the screen below is displayed. This sample screen is for reference use only.

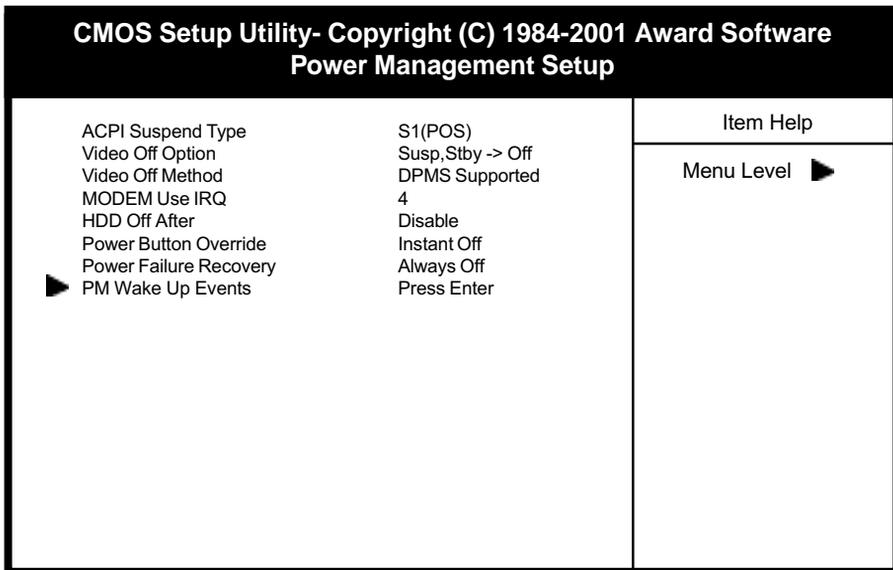

↑↓:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
 F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Figure 3-6 Sample of Power Management Setup Screen

#### A. ACPI Suspend Type

This feature allows user to select a suspend type for the operating system to turn off peripherals devices, such as CD-ROM players, when they are not in use.

#### B.Video Off Option

This setting allow you to selects the power-saving modes during which the monitor goes blank.

#### C.Video Off Method

This function serves as both a screen saver and power saver for monitors. See the next function, Video Off After, for setting the video timer.

**Blank** - BIOS will only blank the monitor's screen. The electricity saved in this mode is negligible and this function is only used as a screen saver to prevent screen damage while the screen is on but not in use.

**V/H SYNC+Blank** - The system turns off the vertical and horizontal synchronization ports, writes blanks to the VGA buffer and the monitor's electron gun turns off. This function requires a monitor with Green features in order to take advantage of the power saving function. If you enable this function and do not have a Green monitor, the result will be the same as if you had selected Blank. This function serves as both a screen saver and an electricity saver.

**DPMS Supported** - Select this option if your video card supports the Display Power Management Signaling (DPMS) standard (i.e., you have a monitor that supports Green features). Use software supplied by your video subsystem to set video power management options.

#### ***D. Modem Use IRQ***

If your computer has a modem, use this function to tell BIOS which IRQ is being occupied by the modem card. When the system is in Green mode, the modem requires an IRQ assignment to wake up the system and perform tasks. This assignment is compliant with the APM 1.2 specification and is to be used in coordination with APM 1.2 compliant operating systems.

#### ***E. HDD Power Down***

The Power Management function must not be set to disabled to enable this function. When the HDD idle time has elapsed, BIOS sends a command to the hard disk to turn off the motor. Set a time between 1 and 15 to indicate time required to wait before the hard drive enters a power saving mode. Some old hard drives may not support this function.

#### ***F. Power Button Override***

When set to Delay 4 Sec., this function allows the power button to put the system in Suspend, a power saving mode. See Section 2-4 for operation instructions of the over-ride power button operation which puts the system in Suspend mode. When set to Instant-Off the Power Button Override function is disabled and the computer turns completely off when the power button is pressed.

#### ***G. Wake Up Events***

##### **IRQ 8 Break Suspend**

You can Enable or Disable monitoring of IRQ8 (the Real Time Clock) so it does not awaken the system from Suspend mode.

**Power On By Modem**

When enabled, a modem that receives a signal will wake up the system from soft off and green mode. You should connect the modem to the COM port and turn on the resume event in green mode.

**Power On PCI Card**

When enabled, a PCI interface that receives a signal will wake up the system from soft off and green mode.

**Power On Keyboard**

Set this function to Keyboard 98 to turn on the computer by touching a key on the keyboard 98. If you set this function to Password you must designate the keystrokes that will turn on the computer. Note that the power button is always able to turn on the computer regardless of how this function is set.

**Power On By Alarm**

When enabled, this setting allows the system to turn back on at a designated time of the month. User must designate date of month and time of day. This function is only available when using an ATX power supply and the Software Power-Off function to turn off the computer. See the Software Power-Off feature in Section 2-4 of this manual for instructions.

### 3-6 PNP/PCI Configuration

This section provides IRQ and DMA setting information. By choosing the PNP/PCI Configuration option from the Standard CMOS Features menu (Figure 3-1), the screen below is displayed. This sample screen is for reference use only.

CMOS Setup Utility- Copyright (C) 1984-2001 Award Software		Item Help
PnP/PCI Configurations		Menu Level ▶
Reset Configuration Data	Disabled	
Resources Controlled By x IRQ Resources	Auto(ESCD) Press Enter	
PCI/VGA Palette Snoop	Disabled	
Slot 1,5 Use IRQ No.	Auto	
Slot 2 Use IRQ No.	Auto	
Slot 3 Use IRQ No.	Auto	
Slot 4 Use IRQ No.	Auto	
FDD IRQ Can Be Free	Yes	

↑↓←→:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help  
F5:Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults

Figure 3-7 Sample of PnP/PCI Configurations Screen

#### A. Resources Controlled By

When set to Manual the system BIOS will not refer to the ESCD for IRQ & DMA information. Instead, it will refer to the items in the setup menu for assigning IRQ & DMA. When set to Auto the system BIOS will refer to the ESCD for all legacy information.



ESCD(Extended System Configuration Data) provides a detailed format of the configuration data structures stored in flash memory. Each data structure defines the resources used by a device or a card in the system. This includes legacy and PCI/ISA PnP devices.

#### B. FDD IRQ Can Be Free

This function allows user to choose if the FDD IRQ is able to be freed up. The default setting is Yes and this does not allow the IRQ to be free.

### 3-7 PC Health Status

By choosing the PC Health Status option from the CMOS Setup Utility menu (Figure 3-1), the screen below is displayed. This field shows you the current system temperature/external voltages input and the current CPU FAN and System FAN operating speed.

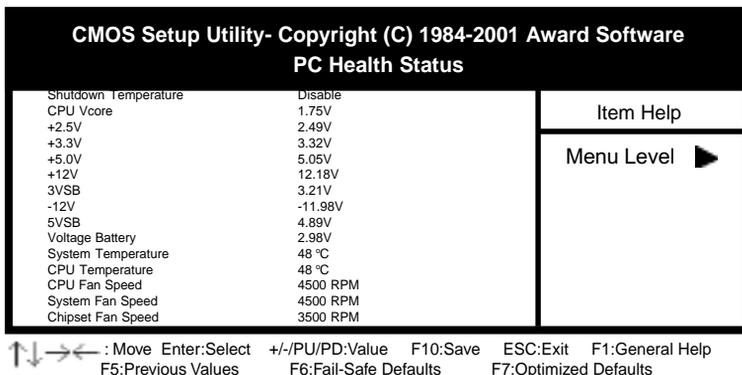


Figure 3-8 Sample of PC Health Status Screen

### 3-8 Frequency/Voltage Control

By choosing the Frequency/Voltage Control option from the CMOS Setup Utility menu (Figure 3-1), the screen below is displayed. This sample screen is for reference use only.

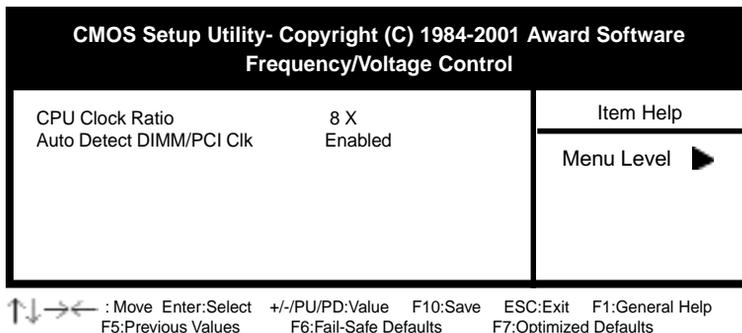


Figure 3-9 Sample of Frequency/Voltage Control Screen

#### A. CPU Clock Ratio

This feature allows user to manually configure your CPU clock ratio according to your processor's specifications.

#### B. Auto Detect DIMM/PCI CLK

When Enabled this function will automatically detect your DIMM/pci clock speed.

### 3-9 Load Fail-Safe Defaults

Load Fail-Safe Defaults loads the default BIOS values directly from the CMOS Setup Utility menu (Figure3-1). If the stored record created by the setup program becomes corrupted and therefore unusable, these defaults will be loaded automatically when you turn on the computer.

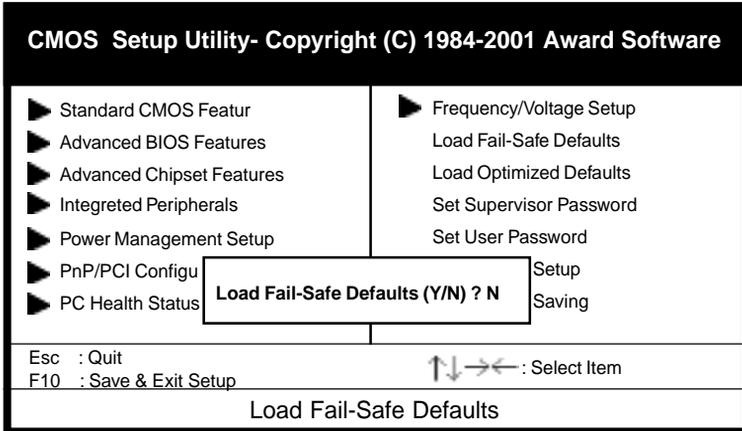


Figure 3-10 Sample of Load Optimized Defaults Screen

### 3-10 Load Optimized Defaults

Load Optimized Defaults loads the default system values directly from the CMOS Setup Utility menu (Figure3-1). If the stored record created by the setup program becomes corrupted and therefore unusable, these defaults will be loaded automatically when you turn on the computer.

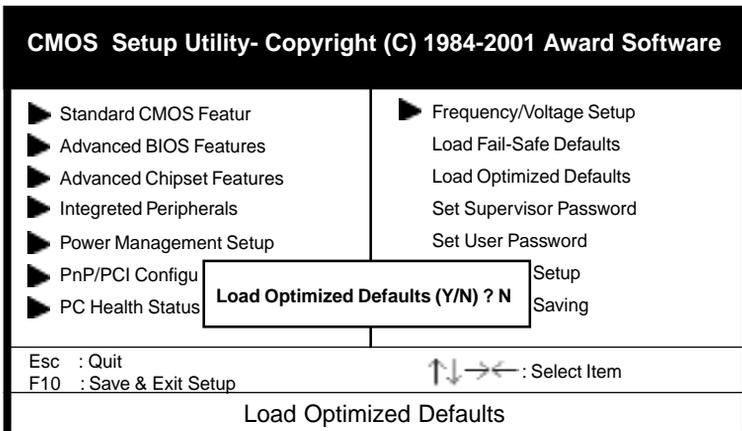


Figure 3-11 Sample of Load Optimized Defaults Screen

### **3-11 Supervisor Password & User Password Setting**

There are four different variables that control password settings. The first two are located under the Security Option function in BIOS Features Setup Menu (Figure 3-1). When the Security Option function is set to Setup, a password is required to enter BIOS and change BIOS settings. When the Security Option function is set to System, a password is required to enter both BIOS and the computer's operating system (for example Windows 98) found on the boot drive. The third and fourth variables are user password and supervisor password selected in BIOS (Figure 3-1). The main purpose of separating user and supervisor is to allow only the supervisor to have control over the settings in BIOS. The user, on the other hand, is only allowed to access the computer's operating system and change the user password in BIOS. Note that when there is no supervisor password set, the user password controls access to all BIOS settings.

### **3-12 Save and Exit Setup**

If you select this and type **Y** (for yes) followed by the [ Enter] key, the values entered in the setup utilities will be recorded in the CMOS memory of the BIOS chip.

### **3-13 Exit Without Saving**


Selecting this option by pressing **Y** (for yes) followed by the [ Enter] key, let you exit the setup utilities without recording any new values or changing old ones.

## Embedded Flash Utility

This mainboard is equipped with an Erasable Flash ROM and an Embedded Flash Utility which allows the user to update the BIOS to a newer version. Embedded Flash Utility eases BIOS upgrade and eliminate the compatibility issue between different Flash ROM type and version of Flash utility.

### Update Your System BIOS

1. Start computer, upon post, press ALT+F2 Keys to enter AWDFLASH setup.
2. Insert the floppy disk with the latest BIOS file into the floppy drive A and then press Enter to start programming.

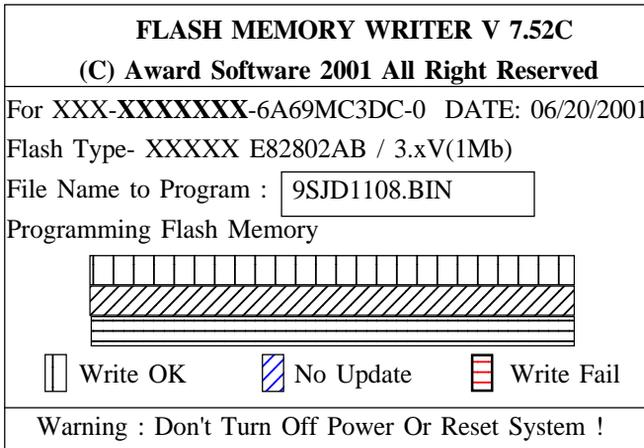

**Sample of Programing Flash Memory Screen**

3. When finished, the system will automatically restart.

### Note:

- ✎ Flash BIOS Protection must be set to Disabled in the Advance Chipset Feature from the CMOS Setup Utility menu. See Chapter 3.
- ✎ Don't turn off or restart your system during programming process.
- ✎ Make sure that your floppy diskette have only one BIN file to avoid confusion.

# HDD Instant Recovery Utility

This mainboard is equipped with HDD Instant Recovery utility embedded in the BIOS ROM. The feature is an option which allows the user to install or not. HDD Instant Recovery utility is a Pre-O.S. backup technology that provides backup before any OS is being activated. Just one press on the Hotkey, HDD Instant Recovery can revive your system even if your O.S. crashed or not working properly.

### ❑ HDD Instant Recovery Concept

HDD IR will save your vital O.S. and application software in a hidden space inside the same hard drive. Since the backup file occupies some space in the hidden directory, the displayed disk space will be reduced. HDD IR will backup your system either with the Smart or Equivalent Backup depends on your O.S. type.

**Smart Backup** (FAT16/32 format i.e. Win 95/98 O.S.)

- Backup space is the actual system space used.

**Equivalent Backup** (NTFS format i.e. Windows 2000/NT.)

- Backup space equivalent to the drive space where the O.S. located.

### ❑ Utility Installation

1. Enable the HDD Instant Recovery in the BIOS Features setup from the CMOS Setup Utility menu. Save and exit to reboot.
2. Upon system boot up, the HDD Instant Recovery Utility will be shown on the screen. Selet **Install** and press Enter key to read the instruction.
3. Press **F8** key to continue, you will be prompt to confirmed to keep original data.
4. Type **Y** and press Enter and wait for the installation process to finish and the system will automatically reboot.

### HDD Instant Recovery Utility

<Alt-F1>: Backup System

<Alt-F2>: Disk Information

<Alt-F3>: Restore System

<Alt-F4>: Defragmenter

<Alt-F5>: Hard Disk Copy

<Alt-F6>: Uninstall

---

Sample of HDD Instant Recovery Utility Setup screen

---

## ❑ Backup System

### Smart Backup

1. Upon system boot up, the HDD Instant Recovery Utility will be shown on the screen. Select Backup System by pressing **Alt+F1** key.
2. Select your hard drive to backup.
3. Wait for the backup process to finish and the system will automatically reboot.

### Equivalent Backup

\* Still under evaluation testing for future Windows 2000/NT/XP supports.

## ❑ Disk Information

1. Upon system boot up, the HDD Instant Recovery Utility will be shown on the screen. Select Disk Information by pressing **Alt+F2** key to view Disk Info.

## ❑ Restore System

1. Upon system boot up, the HDD Instant Recovery Utility will be shown on the screen. Select Restore System by pressing **Alt+F3** key.
2. You will be prompt to confirmed restore drive. Type **Y** and press **Enter** key.
3. Wait for the backup process to finish and the system will automatically reboot.

## ❑ Defragmenter

1. Upon system boot up, the HDD Instant Recovery Utility will be shown on the screen. Select Defragmenter by pressing **Alt+F4** key.
2. You will be prompt to confirmed defragment your drive. Type **Y** and press **Enter** key.
3. Wait for the defragmentation process to finish and the system will automatically reboot.

## ❑ Hard Disk Copy

1. Upon system boot up, the HDD Instant Recovery Utility will be shown on the screen. Select Hard Disk Copy by pressing **Alt+F5** key.
2. Select which hard drive to backup.(Copy 1 to 2 or 2 to 1 or 1 to 2 3 4)
3. Wait for the hard disk copy process to finish and the system will auto reboot.

## ❑ Uninstall

1. Upon system boot up, the HDD Instant Recovery Utility will be shown on the screen. Select uninstall by pressing **Alt+F6** key.
2. You will be prompt to confirmed uninstall. Type **Y** and press **Enter** key.
3. Wait for the uninstalling process to finish and press any key to reboot



This function does not support Multi-Booting management utility like System Commander, etc.



Always uninstall this function before you format or partition the hard disk for other usage.

# CMedia 8738 Audio Subsystem (Optional)

The CMedia 8738 offers a new generation PCI audio solution: it utilizes the state-of-the-art CRL® 3D Audio technology (HRTF 3D positional audio), and supports Microsoft® Direct Sound®3D and Aureal®'s A3D® interfaces. Better yet, it supports two/four/six speakers and DLS based (Down Loadable Sound) wave table music synthesizer which supports the Direct Music®.

### Feature

- Advanced 64-voice wavetable synthesizer
- Programmable independent sample rate from 4KHz to 48KHz for record and playback
- Full-duplex operation for simultaneous recording and playback
- Supports MS DLS (Downloadable sample) level-1 technology with limitless variety of instrument samples using PC RAM
- Supports HRTF 3D positional audio with MSDS, DS3D, DirectMusic, Aureal A3D and Creative EAX (Environment Audio Extensions), C3DX APIs
- 6-Channel speaker audio support is easy to build up a Home Theater environment
- Supports Fiber Optic module for Internet music, PC, and MD connections
- Supports MIDI and dual game ports
- Embedded 32OHM .5w earphone amplifier

### 6 Speakers System

The CMedia 8738 Audio subsystem provides 3 wave channels (front/rear/center+bass), known as the 6 speakers system. When games or application programs via DirectSoundR 3D or A3DR interface locate the sound sources to the listener's back, the two rear speakers will work to enhance the rear audio positional effect, so as to complement the insufficiency of using only two front speakers to emulate the audio effect. The following is the hardware installation and the software setups:

---

## Installation

1. Connect the front pair speakers to the Line-out jack of the audio adapter, and then connect rear pair speakers to Line-in/Rear jack of the audio adapter. The original Line-in can be moved to Aux-in.
2. Install the audio driver and Audio Rack application software(see chapter 4).
3. There is a multi speakers option in the volume control of the mixer, and when you enable this option, it means the rear speakers are connected to Line-in/Rear jack. When Line-in/Rear jack is connected to other external Line-in sources, please **DO NOT** enable this option in order to avoid hardware conflicts. Regarding rear speaker option, you can turn **ON** or turn **OFF** the output of the back speakers, and adjust the volume, to have the rear/front speakers have the same volume.



Multi Speaker selector Button

**Note:** You can test your multi-channel system by clicking the Multi-Channel Audio Demo at C:\WINDOWS\Start Menu\Programs\PCI Audio Application\Multi-Channel Audio Demo(as shown in figure below).

