

AM810MX
MicroATX Form Factor
Main Board
User's Manual

Document number:AM810MX-E-004LS

Copyright

Copyright ©1999, no part of this document may be reproduced, transmitted, transcribed, stored in a retrievable system, or translated into any natural or computer language, in any form or by any means without prior written permission. This manual and the information contained herein are protected by copyright. All rights reserved.

Warning and disclaimer

This manual is designed to provide information about the Pentium® II main board. Meticulous efforts have been made to make this manual as accurate as possible, but no warranty or fitness is implied. All the information is provided on an 'as is' basis. The author and his corresponding publishing company shall have neither liability nor responsibility to any person or entity with respect to any loss or damages arising from the information contained in this manual or from the use of the system board that accompanies it.

Information contained in this manual is subject to change without notice. The manufacturer of the system board will not be held responsible for technical or editorial omissions made herein, nor for the incidental or consequential damages resulting from its furnishing, performance, functionality or use. Subsequent changes to this manual will be incorporated into the next edition. We welcome any suggestion regarding this manual or our computer products.

Trademarks

- Intel® and Pentium® are registered trademarks of Intel® Corporation.
- IBM® is a registered trademark of International Business Machines Corporation.
- Microsoft is a registered trademark of Microsoft® Corporation.
- PCI is a registered trademark of PCI Special Interest Groups.
- AWARD® is a registered trademark of Award Software Inc.

All other trademarks are the property of their respective owners.

Table of contents

| | | |
|--------|---|----------|
| ■ | Chapter 1 Introduction..... | 1 |
| 1-1 | Overview..... | 1 |
| 1-2 | Specifications..... | 3 |
| 1-3 | Limitation..... | 5 |
| 1-4 | Notice of Hardware Installation..... | 6 |
| 1-5 | Software Driver Installation..... | 7 |
| ■ | Chapter 2 Installation..... | 9 |
| 2-1 | Layout Reference..... | 9 |
| 2-2 | Jumper Setting..... | 10 |
| 2-2-1 | JP10 : Audio Function Selector..... | 10 |
| 2-2-2 | CMOS Status..... | 11 |
| 2-2-3 | VID0-VID4 : Switching Regulator for CPU Vcore Supply..... | 12 |
| 2-2-4 | JP9 : CPU Vcore Selector..... | 14 |
| 2-3 | Connectors | 15 |
| 2-3-1 | Front Panel..... | 15 |
| 2-3-2 | Back Panel..... | 17 |
| | COM 1/COM2..... | 18 |
| | KBD/PS2 MOUSE..... | 18 |
| | LPT..... | 18 |
| | USB..... | 18 |
| | MIDI/Game Port & External Audio Connectors..... | 18 |
| 2-3-3 | ATX Power Supply Connector..... | 19 |
| 2-3-4 | CPU Fan Connectors..... | 20 |
| 2-3-5 | I.R. Connector..... | 21 |
| 2-3-6 | Floppy Disk Connector..... | 22 |
| 2-3-7 | IDE1 & IDE2..... | 23 |
| 2-3-8 | SB-Link Connector..... | 24 |
| 2-3-9 | TV-OUT Function & NTSC/PAL Connector(Optional)..... | 25 |
| 2-3-10 | CD-in..... | 26 |

| | | |
|--------|---|-----------|
| 2-4 | DIMM Installation..... | 27 |
| ■ | Chapter 3 BIOS Setup..... | 28 |
| 3-1 | Award BIOS CMOS Setup..... | 28 |
| 3-1-1 | Standard CMOS Setup..... | 29 |
| 3-1-2 | Advanced BIOS Features | 32 |
| 3-1-3 | Chipset Features Setup..... | 36 |
| 3-1-4 | Integrated Peripherals..... | 39 |
| 3-1-5 | Power Management Setup..... | 42 |
| 3-1-6 | PNP/PCI Configuration Setup..... | 45 |
| 3-1-7 | Frequency/Voltage Control..... | 47 |
| 3-1-8 | PC Health Status..... | 48 |
| 3-1-9 | Supervisor/User Password..... | 49 |
| 3-1-10 | Load Optimized Defaults..... | 52 |
| 3-1-11 | Save and Exit Setup..... | 53 |
| 3-1-12 | Quit Without Saving..... | 54 |
| ■ | Chapter 4 Appendix..... | 55 |
| 4-1 | Memory Map..... | 55 |
| 4-2 | I/O Map..... | 56 |
| 4-3 | Time & DMA Channels Map..... | 57 |
| 4-4 | Interrupt Map..... | 58 |
| 4-5 | RTC & CMOS RAM Map..... | 59 |
| 4-6 | Award BIOS Hard Disk Type..... | 60 |
| 4-7 | ISA I/O Address Map..... | 62 |
| ■ | Chapter 5 Q&A..... | 64 |
| 5-1 | Error Messages During Power on Self Test..... | 64 |

Chapter 1 Introduction

1-1 Overview

The main board utilizes Intel's latest i810 chipset integrated with new architectures such as integrated graphic, sound, ULTRA DMA-66 (optional), USB & AMR is designed to fit INTEL SECC2 type Slot-1 or PPGA type Socket-370 CPUs.

Intel's i810 is a cost-effective yet high-performance chipset which has integrated graphics controller(i752) with a 24 Bit 230MHz RAMDAC & software MPEG2 DECODE. It supports UMA (unified memory architect) mode up to 64MB with main memory or 4MB 3D texture memory(or called display cache) that can accelerate its 3D graphics performance. The on board AD1881 AC-97 CODEC chip provides perfect 3D sound function.

The main board also employs ITE I/O LPC controller with full Plug and Play device and keyboard password setup. It supports 2.88 MB Floppy, Dual 16550 compatible (with 16 bytes FIFO, up to 460K baud rate) serial Port, ECP (Enhanced Capabilities Port), EPP (Enhanced Parallel Port) parallel port, SPP(Standard Parallel Port), Infrared IrDA (HPSIR), and Amplitude Shift Keyed IR. (ASKIR) port and hardware monitor functions too.

The main board contains 3*PCI for highest performance I/O add-on adapter cards. The system board supports three Bus Mastering Slots for high-performance I/O add-on cards. It supports Matrix Independent PCI routing for optimal multiple PCI adapter operations and is PCI2.2 specification compliant. 133MB/s data transfer rate can be compared to 33MB/s on EISA bus or 8MB/s on ISA bus. It supports back to back sequential CPU to PCI Memory writes to PCI Burst Write for full PCI throughput. The new AMR Slot is designed to fit low cost A(Audio) M(Modem) R(Riser) or MR card.



The current "A2" version chipset doesn't support to Slot-1 or Socket-370 type PIII CPUs.

The main board has 2 dual in-line memory modules (DIMM) which can be installed with PC-100 SDRAM memory. The memory subsystem supports up to 512 MB SDRAM of non-buffered 3.3V using standard 168-pin DIMM sockets.

The main board is strengthened with Power Management Wake up Event such as **“Modem ring on”** which is the new invention to enable PCs to be turned on via the network or modem and **Suspend to RAM(STR)** function. These are also key benefits in PC operation, asset management, new system setup and power conservation.

In addition to the above hardware features, this main board is DIP switch design which allows user to set CPU frequency through BIOS. With this design, the disadvantages of setting hardware CPU jumpers are improved to a better and easier procedure through BIOS.

In conclusion, the system chipset and design make the main board a high performance, cost-effective, and energy efficient main board which meets a variety of price/performance levels. The main board is an ideal platform for the increasing requirements of today’s and future’s desktop applications.

1-2 Specifications

- **Chipset** : There are 4 sets of i810 listed as below:

| Type | 810-L | 810 | 810-DC100 | 810-DC-133 |
|---------------|--------|--------|-------------|-------------|
| North | GMCH0 | GMCH0 | GMCH | GMCH-E |
| South | ICH0 | ICH | ICH | ICH |
| FSB | 100MHz | 100MHz | 100MHz | 133MHz |
| Display Cache | NO | NO | Yes, 100MHz | Yes, 100MHz |
| ATA | ATA33 | ATA66 | ATA66 | ATA66 |
| PCI REQ/GNT | 4 | 6 | 6 | 6 |

- **CPU** : can take current Socket-370 66MHz FSB Celeron-A CPUs or Slot-1 P-II 66/100MHz.
- **Memory** : accepts 2 * DIMM in PC-100 specification memory
- **VGA** : On chip 3D graphics function with shared (i810L & i810) or 4MB (i810DC -100/133) 3D texture memory (or called display cache)
- **Sound** : Provides sound function with AD1881 AC-97 3D sound CODEC.
- **Expansion Slot** : 3x PCI slots, 1 x AMR(used for AMR card or MR card)
- **IDE** : support ULTRA DMA-33(i810L) or 66(i810, i810DC-100/133) mode
- **PCB Board size** : 24.40cm x 22.0cm, Micro ATX form factor
- **Optional Items** :
 - TV-out (Chrontal CH7007 chip is needed)



Caution : System needs PC-100 memory & over 1 Ampere current power supply for this main board



Caution : Cannot install Socket-370 and Slot-1 CPUs together.

● **Other features**

- Modem ring on
- Windows 95/98 power off
- Keyboard wake-up
- Mouse wake-up
- DMI, ACPI supported BIOS
- Suspend to RAM(STR)



Caution : Do use on-board sound & VGA functions.

1-3 Limitation

There are some limitations on i810 chipset shown as below:

1. Hardware:

- * Must use PC-100 specification DIMM
- * Power Supply with over 1 Ampere current (+5V Standby) must be use.

Must use **Software (Driver or BIOS):**

- * Windows 95 & 98 don't provide driver (utilities) for i810 chipset. User needs to install drivers carefully before using this board (Refer to 1-6 i810 driver and utility installation)

2. Power Supply

- * We strongly recommend using good quality power supply in your computer system. Poor power supply may cause problems of system stability or even system cannot be turn on.

1-4 Notice of Hardware Installation

Before installing the main board hardware, note the following things.

A. Check the package

If any of the below items is missing or damaged, contact the dealer from whom you purchase. Leave this main board in its original package until you are ready to install it. In the package, there are:

- The motherboard
- User's manual
- 1 FDD cable & 1 ATA66 HDD cable
- Driver & utility / CD

B. Make sure power is off.

During hardware installation, be sure that there is no power connected in this period.

C. Avoid ESD (Electrical Static Discharge)

While working with this main board, always wear a grounded wristband or ankle strap to avoid ESD (Electrical Static Discharge).

1-5 Software Driver Installation

Unlike i440BX and i440LX, i810 chipset is not supported by the drivers in Windows-95 or Windows-98, **USERS NEED TO INSTALL DRIVERS VERY CAREFULLY OR SYSTEM WILL HANG UP UNEXPECTEDLY!**

Load drivers from attached CD & find sub-directories under i810 directory as:

Infr21.....(Setup driver for i810 chipset)
VGA.....(VGA Driver)
AD1881-Audio.....(Drivers for sound function)
ALC100-Audio.....(Drivers for sound function)

1. FOR WINDOWS 95:

- (1) Install Infr21:
 - A. Install Window 95 OSR2 V2.0 or higher version firstly.
 - B. Install "USBSUPP" driver.
 - C. Load attached CD & find "Infr21" directory. Then execute "Setup" file, during the selection procedure, to select: "Windows-95 with USB supplement "for OSR2 or higher version, if not, select: "Windows-95 without USB supplement" don't select "Windows-98".
- (2) VGA Driver Installation :

Find directory VGA and Win9X sub-directory then execute SETUP and RESTART system.
- (3) Find DX61 and execute DIRECTx61 or latest version of this software , then RESTART system to complete VGA drivers installation.
- (4) Audio Driver Installation
Before installing Audio Driver, please make sure which CODEC is on board. If AD1881 CODEC is on board, please choose "AD-1881-Audio" sub-directory. If not, please choose "ALC100-Audio" sub-directory.

-
- A. Find “AD1881-Audio” sub-directory, then find Win-95 sub-directory, then find “DRIVER 0040” execute “SETUP” & restart system.
 - B. Find “ALC100-Audio” sub-directory, then find Win-95 sub-directory, then execute “SETUP” & restart system.

2. FOR WINDOWS 98:

The installation procedures are similar to Windows 95, below are the differences :

- A. No need to install “USBSUPP” driver.
- B. When installing INTELINF & execute SETUP, select “Window-98”.
- C. When installing VGA and sound driver, select Win98 instead of Win95.




Cautions : When install Windows 95/98, don't change the default directory path called “Windows” or Sound chip AD1881-Audio/ALC100-Audio can't find correct path and causes users to be unable to complete the installation.

Wrong installation of system drivers may cause system malfunction. Please follow above instruction and complete installation carefully.

Chapter 2 Installation


2-1 Layout Reference

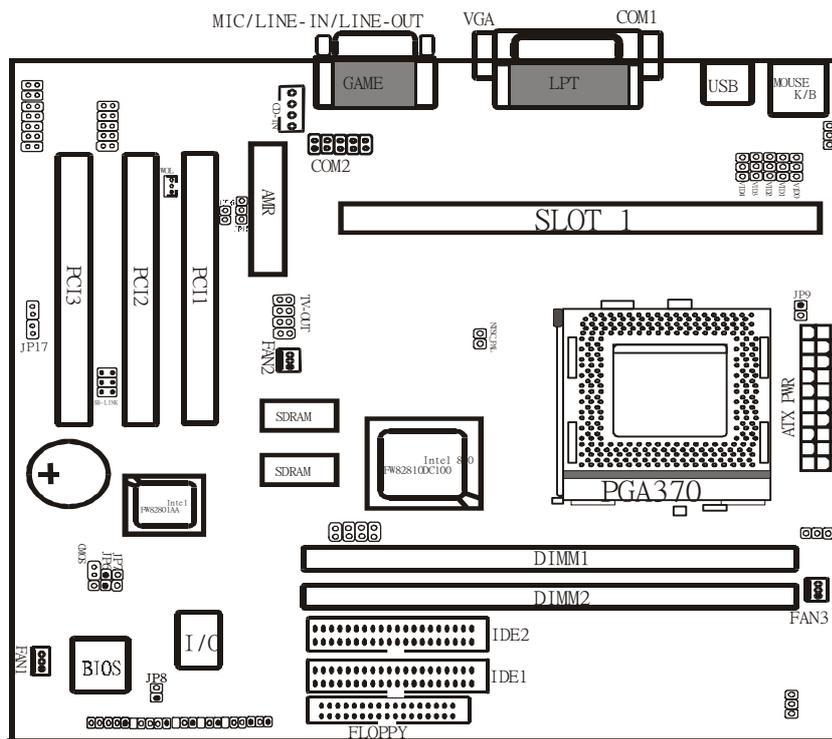

2-2 Jumper Setting


2-2-1 JP10 : Audio Function Selector

JP10 is a 3-pin jumper to enable/disable on board audio function. Set “1-2” to disable on board audio function and use AMR card installed on slot, set “2-3” to enable on board audio function and use MR card installed on slot.

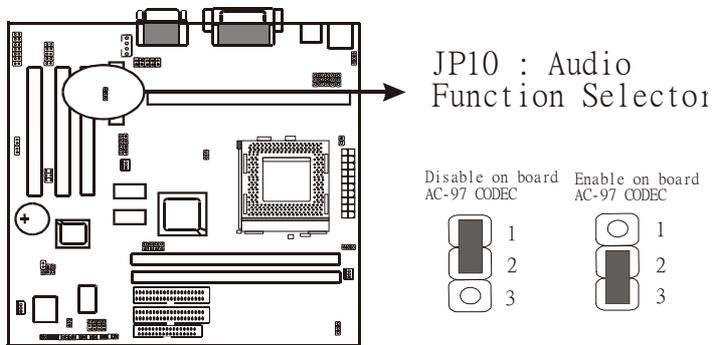

2-2-2 CMOS Status

Please clear CMOS if password is forgotten. Below is the details to clear CMOS.

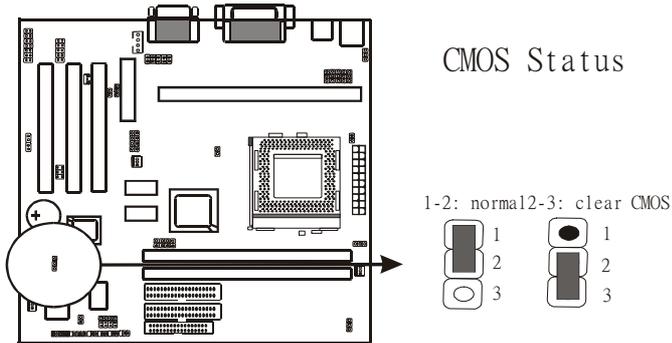

Procedure to clear CMOS:

- Step 1: Shut down the system and disconnect the power supply from AC power.
- Step 2: Pull out the power supply cable from the power connector.
- Step 3: Short the CMOS jumper by putting jumper cap on Pin 2-3 for a few seconds.
- Step 4: Return the cap to pin 1-2 at normal setup.
- Step 5: Link the power cable to the connector & connect AC power to power supply.
- Step 6: Turn on system power.


If you'd like to set password, press "Del" Key during system boot up to enter CMOS setup and establish a new password.



This main board accepts Slot-1 and Socket-370 CPU. Do clear CMOS if user wants to change CPU type (from Slot-1 to Socket-370 or Socket-370 to Slot-1).

2-2-3 VID0-VID4--Switching Regulator for CPU Vcore Supply (For Slot-1 or Socket-370 CPUs)

VID0-VID4 are 3-pin jumpers which provide CPU Vcore Selection.

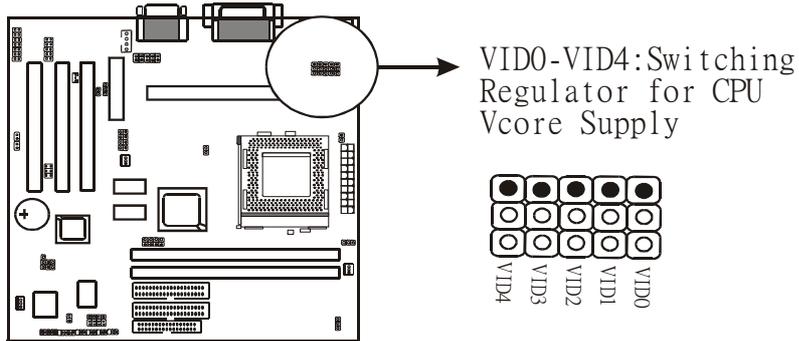

| VID4 | VID3 | VID2 | VID1 | VID0 | CPU Vcore |
|------|------|------|------|------|-----------|
| 0 | 2-3 | 2-3 | 2-3 | 2-3 | 3.5V |
| 0 | 2-3 | 2-3 | 2-3 | 0 | 3.4V |
| 0 | 2-3 | 2-3 | 0 | 2-3 | 3.3V |
| 0 | 2-3 | 2-3 | 0 | 0 | 3.2V |
| 0 | 2-3 | 0 | 2-3 | 2-3 | 3.1V |
| 0 | 2-3 | 0 | 2-3 | 0 | 3.0V |
| 0 | 2-3 | 0 | 0 | 2-3 | 2.9V |
| 0 | 2-3 | 0 | 0 | 0 | 2.8V |
| 0 | 0 | 2-3 | 2-3 | 2-3 | 2.7V |
| 0 | 0 | 2-3 | 2-3 | 0 | 2.6V |
| 0 | 0 | 2-3 | 0 | 2-3 | 2.5V |
| 0 | 0 | 2-3 | 0 | 0 | 2.4V |
| 0 | 0 | 0 | 2-3 | 2-3 | 2.3V |
| 0 | 0 | 0 | 2-3 | 0 | 2.2V |
| 0 | 0 | 0 | 0 | 2-3 | 2.1V |


| | | | | | |
|-----|-----|-----|-----|-----|-------|
| 0 | 0 | 0 | 0 | 0 | 2.0V |
| 2-3 | 2-3 | 2-3 | 2-3 | 2-3 | 2.05V |
| 2-3 | 2-3 | 2-3 | 2-3 | 1-2 | 2.00V |
| 2-3 | 2-3 | 2-3 | 0 | 2-3 | 1.95V |
| 2-3 | 2-3 | 2-3 | 0 | 0 | 1.90V |
| 2-3 | 2-3 | 0 | 2-3 | 2-3 | 1.85V |
| 2-3 | 2-3 | 0 | 2-3 | 0 | 1.80V |
| 2-3 | 2-3 | 0 | 0 | 2-3 | 1.75V |
| 2-3 | 2-3 | 0 | 0 | 0 | 1.70V |
| 2-3 | 0 | 2-3 | 2-3 | 2-3 | 1.65V |
| 2-3 | 0 | 2-3 | 2-3 | 0 | 1.60V |
| 2-3 | 0 | 2-3 | 0 | 2-3 | 1.55V |
| 2-3 | 0 | 2-3 | 0 | 0 | 1.50V |
| 2-3 | 0 | 0 | 2-3 | 2-3 | 1.45V |
| 2-3 | 0 | 0 | 2-3 | 0 | 1.40V |
| 2-3 | 0 | 0 | 0 | 2-3 | 1.35V |
| 2-3 | 1-2 | 1-2 | 1-2 | 1-2 | AUTO |



Caution : Please select the correct working voltage for your CPU (reference to your CPU installation guide or consult your dealer). Wrong setting of CPU voltage may get a result of permanent damage.

2-2-4 JP9 : CPU Vcore Selector

JP9 is a 2-pin jumper which provide CPU Vcore Selection. Please see details as below.

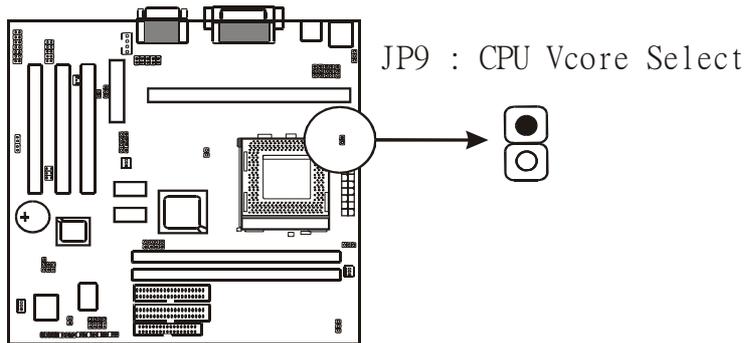

| JP9 | VID0 | VID1 | VID2 | VID3 | VID4 |
|-------------|------|------|------|------|------|
| ON(default) | 1-2 | 1-2 | 1-2 | 1-2 | 2-3 |




If set to "off", CPU Vcore may over 2.0V and CPU will be damaged. Therefore, please don't change default setting. The manufacturer shall have neither liability nor responsibility to any person or entity with respect to any loss or damages arising by users' over-clocking or over-voltage.

2-3 Connectors

There are many connectors on this main board. Refer to the following pages for details.

2-3-1 Front Panel

Front panel has connectors such as “POWER SW.,” “TB-LED,” “HD-LED,” “RESET,” “SPEAKER,” “PW-LED,” ”KEYLOCK.” Please refer to the following for further information.

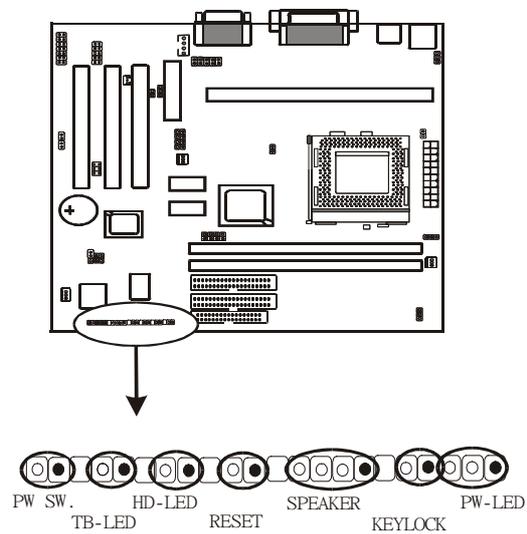

POWER SW. is a 2-pin connector which controls power “on” and “off”.

TB-LED is a 2-pin Berg strip on case front panel indicates the current speed status of system.

HD-LED (Hard Disk activity LED connector) is a 2-pin keyed Berg strip. It is used to connect to front panel Hard Disk LED.

RESET is a 2-pin keyed Berg strip, connected to the push button reset switch on the case’s front panel. Shorting both pin 1 & pin 2 can reset the system, which is similar to the power off and then on again.


SPEAKER is a 4-pin keyed Berg strip. It is used to connect the case speaker to the main board for sound effect.

PW-LED is a 3-pin connector. It is used to connect to the LED on the case front panel. The LED shows the status of the power.

KEYLOCK is a 2-pin connector. It is used to connect the key lock on the case front panel (if there is). Keyboard may be disconnected from the system through this function. Set to “on” to disconnect the connector from the system and “off” for normal status.

2-3-2 Back Panel

Back Panel Connectors are GAME Port, MIC, LINE-IN, LINE-OUT, COM1/COM2, LPT, USB, PS/2 keyboard, and PS/2 mouse on case back panel. Refer to below details.

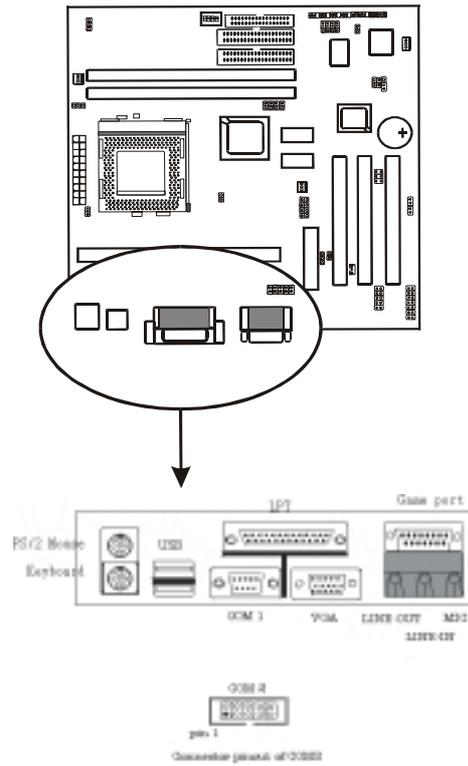

COM1 & COM2

The onboard serial port 1 and port 2 are the 9-pin D-subminiature male connector COM1 and COM2. COM1 and COM2 can be disabled in BIOS setup. Please refer to Chapter 3 “Integrated Peripherals” for more information.

KBD/PS2 MOUSE

The onboard PS/2 keyboard and mouse connectors are 6-pin Mini-Din connectors.

LPT

The onboard parallel port is a 25-pin female connector. It supports standard printer port, Enhanced Parallel Port (EPP), Extended Capabilities Port (ECP), Standard Parallel Port (SPP).

USB: USB (Universal Serial Bus) Connector


Universal Serial Bus connector, marked as “**USB**,” is used to connect USB devices. There are 2 USB connectors on this main board.

Midi/Game Port & External Audio Connectors

Midi/Game port has 15 pins connecting to the game joystick. External Audio connectors are “LINE-OUT, LINE-IN, MIC-IN” for audio functions.

2-3-3 ATX Power Supply Connector


ATX power connector has 20 pins, which is especially designed for ATX case. The ATX power supply supports the function of the “**Soft Power On Momentary switch**” which connects on the front panel switch to the 2-pin **SOFT-PWR** on the system board. While the power switch on the back of ATX power is turned on, the full power will not go into the system board until the front panel switch is momentarily pressed. Push the switch again to turn off the power to the system board.

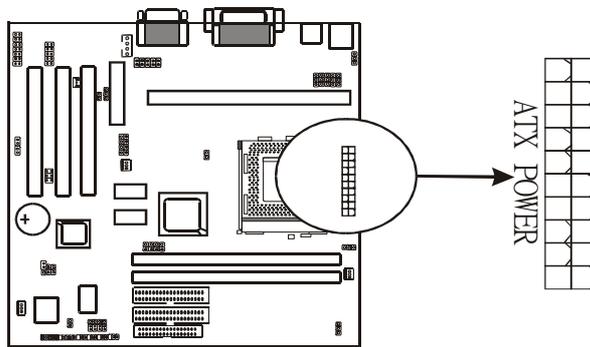

To support i810 chipset, we suggest that Pin 17 signal 5VSB on ATX Power supply should be able to offer at least 1A current(I) driving ability.

2-3-4 CPU Fan Connectors


There are 3 fan connectors on this system board, and it is marked as “CPUFAN”. Each fan connector has three pins.

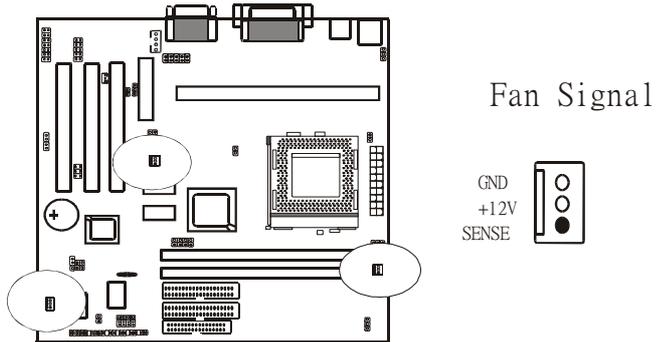

2-3-5 I.R. : IrDA Connector

IR connector supports wireless infrared module. With this module and application software like Laplink, or Win95 Direct Cable Connection, user can transfer data to or from laptops, notebooks, PDA and printers. This connector supports **HPSIR**, **ASKIR**, and **Fast IR**.


Attach Infrared module to IR connector. Be sure to put in the right direction during installation.

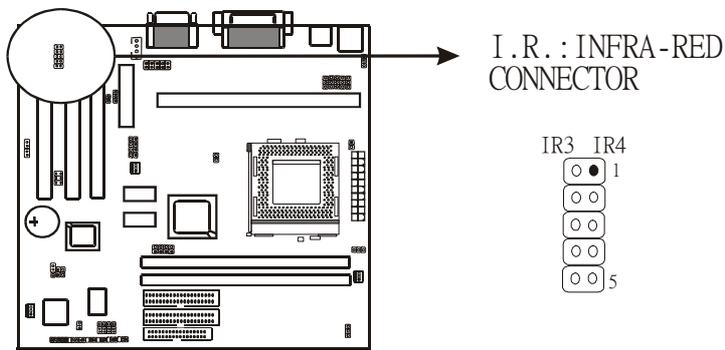

| | IR3(normal IR) | IR4(consumer IR) |
|----------|-----------------------|-------------------------|
| 1 | VCC | VCC |
| 2 | | |
| 3 | IRRX | CIRRX |
| 4 | GND | GND |
| 5 | IRTX | CIRTX |


2-3-6 Floppy Disk Connector

Floppy Disk Connector has 34 pins and is used to attach the floppy drive cable.

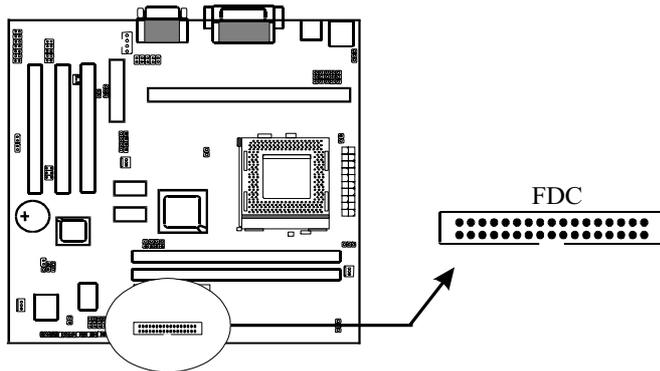


2-3-7 IDE1 & IDE2

IDE1 and IDE2 are 39-pin IDE connectors (Ultra 66). **IDE1** is primary channel, and **IDE2** is secondary channel. Each channel supports 2 IDE devices, and 4 devices in total for this main board.

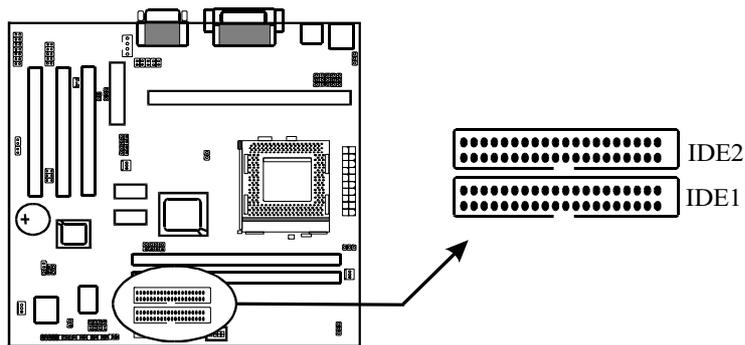

2-3-8 SB-Link Connector


SB-LINK is used to attach any “PC/PCI” standard sound card like Creative AWE64D or Yamaha XG...for compatibility under DOS mode.

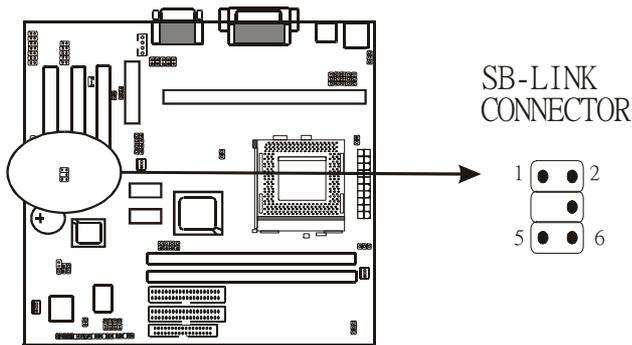

 *Depends on the design and the features of the Motherboard, above jumper may not available.*

2-3-9 TV-OUT Function & NTSC/PAL Connector(Optional)


TV-OUT function is a 7-pin connector. NTSC/PAL is a 2-pin connector.

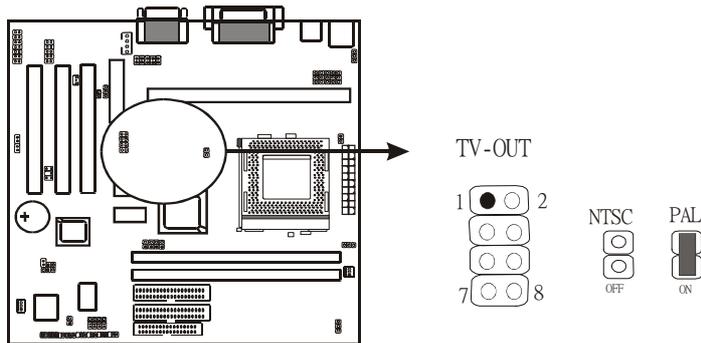

 *Depends on the design and the features of the Motherboard, above jumper may not available.*

2-3-10 CD-in


CD-in is a CD ROM external audio input signal to line-out(speaker) of the main board.

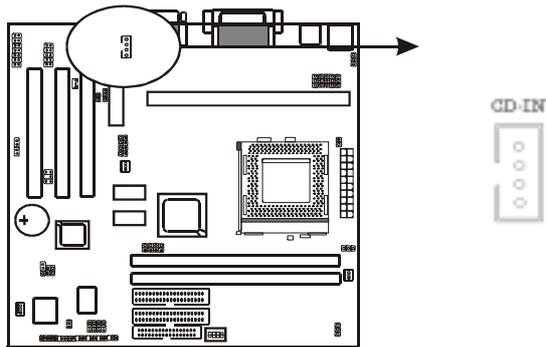

2-4 DIMM Installation

Please make sure DIMM is 3.3V DIMM. Both DIMM1 and DIMM2 support 8 MB, 16 MB, 32 MB, 64 MB, and 128MB. Maximum memory for **SDRAM is up to 512 MB**. The user may insert DIMM modules in either DIMM1, or DIMM2.

Insert the module as shown. Due to different number of pins on either side of the breaks, the module will only fit in the direction as shown. SDRAM DIMM modules have different pin contacts on each side and therefore have a higher pin density.

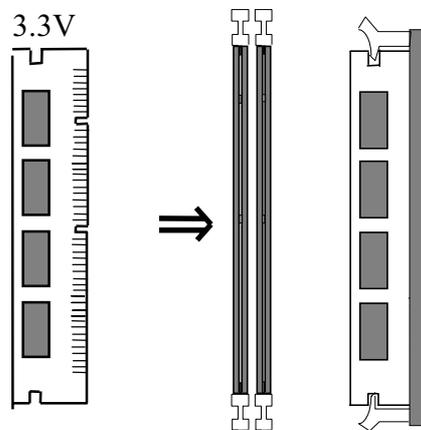

SDRAM memory have to be supports PC-100 DIMM or above, or system may not be stable.

Chapter 3 BIOS Setup

3-1 Award® BIOS CMOS Setup

CMOS Setup Utility - Copyright (C) 1984-1999

| | |
|--|---------------------------|
| Standard CMOS Feature | Frequency/Voltage Control |
| Advanced BIOS Feature | Load Optimized Defaults |
| Advanced Chipset Feature | Set Supervisor Password |
| Integrated Peripherals | Set User Password |
| Power Management Setup | Save & Exit Setup |
| PnP/PCI Configurations | Exit Without Saving |
| PC Health Status | |
| Esc : Quit F9 : Menu in BIOS ↑ ↓ ← → : Select Item | |
| F10 : Save & Exit Setup | |
| Time, Date, Hard Disk Type | |

The menu displays all the major selection items and allows user to select any of the shown item. The selection is made by moving cursor (press any direction key) to the item and press <Enter> key. An on-line help message is displayed at the bottom of the screen as cursor is moves to various items which provides user better understanding of each function. When a selection is made, the menu of the selected item will appear. So the user can modify associated configuration parameters.

3-1-1 Standard CMOS Setup

| Standard CMOS Features | | Item Help |
|--|------------------|--|
| Date: | Mon, Jul 5 1999 | |
| Time: | 17:42:44 | |
| ➤ IDE Primary Master | Press Enter None | Menu Level ➤ |
| ➤ IDE Primary Slave | Press Enter None | |
| ➤ IDE Secondary Master | Press Enter None | Change the day, month, year and century |
| ➤ IDE Secondary Slave | Press Enter None | |
| Drive A | 1.44M, 3.5 in. | |
| Drive B | None | |
| Video | EGA/VGA | |
| Halt On | All,But Keyboard | |
| Based Memory | 640K | |
| Extended Memory | 64512K | |
| Total Memory | 65536K | |
| ↑↓←→Move Enter:Select +/-/PU/PD: Value F10:Save ESC:Exit F1:General Help F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults | | |

The "Standard CMOS Setup" allows user to configure system setting such as **current date** and **time**, **type of hard disk drive** installed in the system, **floppy drive type**, and the type of **display monitor**. Memory size is auto detected by the BIOS and displayed for your reference. When a field is highlighted (direction keys to move cursor and <Enter> key to select). The entries in the field will be changed by pressing <PageDown> or <PageUp> key or user can enter new data directly from the keyboard.

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software
IDE Primary Master

| | | |
|---|-------------|---|
| IDE HDD Auto-Detection | Press Enter | Item Help |
| IDE Primary Master | Auto | |
| Capacity | 8455MB | Menu Level > |
| Access Mode | Auto | To auto-detect the HDD's size, head.....on this channel. |
| Cylinder | 16383 | |
| Head | 16 | |
| Precomp | 0 | |
| Landing Zone | 16382 | |
| Sector | 63 | |
| ↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults | | |

Hard Disk Configurations

-
- 1. IDE HDD Auto-Detection** : press this item to Auto Detect the HDD type.
- 2. IDE Primary Master** : select "AUTO" to detect the mode type automatically. Select "NORMAL" users have to redefine the following 4-8 items according to HDD. "NONE" means this item disabled.
- 3. ACCESS MODE** : Select "AUTO" to detect the mode type automatically. If your hard disk supports the LBA mode, select "LBA" or "LARGE". However, if your hard disk cylinder is more than 1024 and does not support the LBA function, you have to set at "LARGE." Select "NORMAL" if your hard disk supporting cylinder is below 1024.
- 4. CYLS** : the cylinder number of the hard disk.
- 5. HEAD** : the read/write head number of hard disk. The range is from "1" to "16".
- 6. PRECOMP**: the cylinder number at which the disk drive changes the write timing.
- 7. LANDZ** : the cylinder number that the disk drive heads (read/write) are seated when the disk drive is parked.
- 8. SECTOR** : the sector number of each track defined on the hard disk. The range is from "1" to "64".



Note1: if hard disk primary master/slave and secondary master/slave were set to "auto", the hard disk size and model will be auto detected on display during POST.



Note2: "halt on" is to determine when to halt the system by the BIOS if error occurred during POST.

3-1-2 Advanced BIOS Features

:Enabled (default)
:Disabled

CPU Internal Cache

Enabled : enable L1 cache(default)
Disabled: disable L1 cache

External Cache

Enabled (default): enable L2 cache
Disabled: disable L2 cache

CPU L2 Cache ECC Checking

Enabled (default): enable L2 cache ECC checking
Disabled: disable L2 cache ECC checking

Quick Power On Self Test

This category speeds up power on self test.

Enabled (default) : BIOS will shorten or skip some check items.
Disabled: normal speed

First Boot Device

This category determines which drive the system searches first. System will search in turn for floppy disk drive; then hard disk drive, and finally Floppy drive. Default value is “**FLOPPY**”. Options are as below:

FLOPPY; LS/ZIP; HDD-0; SCSI; CDROM; HDD-1; HDD-2; HDD-3; LAN;
Disabled

Second Boot Device

This category determines which drive the system searches first. System will search in turn for floppy disk drive; then hard disk drive, and finally Floppy drive. Default value is “**HDD-0**”. Options are as below:

FLOPPY; LS/ZIP; HDD-0; SCSI; CDROM; HDD-1; HDD-2; HDD-3; LAN;
Disabled

Third Boot Device

This category determines which drive the system searches first. System will search in turn for floppy disk drive; then hard disk drive, and finally Floppy drive. Default value is “**LS/ZIP**”. Options are as below:

FLOPPY; LS/ZIP; HDD-0; SCSI; CDROM; HDD-1; HDD-2; HDD-3; LAN; Disable

Swap Floppy Drive

Enabled: floppy A&B will be swapped.

Disabled(default): floppy A&B will not be swapped.

Boot Up Floppy Seek

BIOS will determine if the floppy disk drive is 40 or 80 tracks. 360k type is 40 tracks while 720K/ 1.2M and 1.44M are all 80 tracks. Default value is **enabled**.

Boot Up Numlock Status

:On

:Off(default)

Gate A20 Speed

:Normal

:Fast (default)

Typematic Rate Setting

This determines the typematic rate.

Enabled: enable typematic rate and typematic delay programming.

Disabled (default) : disable typematic rate and typematic delay programming. The system BIOS will use default value of this 2 items and the default is controlled by keyboard.

Typematic Rate(Chars/Sec)

6 : 6 Characters Per Second (default)

8 : 8 Characters Per Second

10 :10 Characters Per Second

12 : 12 Characters Per Second

15 : 15 Characters Per Second

20 : 20 Characters Per Second
24 : 24 Characters Per Second
30 : 30 Characters Per Second

Typematic Delay (Msec)

This is the interval between the first and second character displayed.

250 : 250 msec (default)
500 : 500 msec
750 : 750 msec
1000 :1000 msec

Security Option

| Item | Function | Note |
|-----------------|--|---|
| Setup (default) | Security protection in CMOS setup menu | After setting password in BIOS CMOS “Supervisor Password” or User Password, it protects BIOS CMOS setup. |
| System | Security protection in system boot-up & BIOS setup | This function secures the system under system boot-up and BIOS setup after setting password. |

OS Select For DRAM> 64MB

This option is especially set for OS2 operating system. Set **“OS2”** for RAM memory over 64MB and set **“Non-OS2”** for other operating systems like Windows® 95/98 or NT.

:Non-OS2 (default)
:OS2

3-1-3 Chipset Features Setup

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software
Advanced Chipset Features

| | | |
|--|-------------|--------------|
| SDRAM CAS Latency Time | 3 | Item Help |
| SDRAM Cycle Time Tras/Trc | 6/8 | |
| SDRAM RAS-to-CAS Delay | 3 | Menu Level > |
| SDRAM RAS Precharge Time | 3 | |
| System BIOS Cacheable | Enabled | |
| Video BIOS Cacheable | Enabled | |
| Memory Hole At 15M-16M | Disabled | |
| Delay Transaction | Enabled | |
| On-Chip Video Window Size | 64MB | |
| Local Memory Frequency | 100 MHz | |
| * Onboard Display Cache Setting * | | |
| CAS# Latency | 3 | |
| Paging Mode Control | Close | |
| RAS-to-CAS Override | by CAS # LT | |
| RAS# Timing | Slow | |
| RAS# Precharge Timing | Slow | |
| ↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults | | |

SDRAM RAS to CAS delay

This controls the DRAM page miss and row miss leadoff timing.

: 2

: 3 (default)

SDRAM RAS Precharge Time

SDRAM precharge time by RAS.

: 2

: 3 (default)

System BIOS cacheable

define whether system BIOS area cacheable or not.

:Enabled (default)

:Disabled

Video BIOS cacheable: to define whether video BIOS area cacheable or not.

:Enabled (default)

:Disabled

Memory Hole at 15M-16M: this field enables a memory hole in main memory space. CPU cycles matching an enabled hold are passed on to PCI note that a selection can not be changed while the L2 cache is enabled.

:Enabled

:Disabled (default)

Delay Transaction

:Enabled (default)

:Disabled

Onboard Display Cache Setting

CAS# Latency

:3(default)

:2

Paging Mode Control

:Close(default)

:Open

RAS-to-CAS Override

:by CAS # LT(default)

:Override(2)

RAS# Timing

:Slow(default)

:Fast

RAS# Precharge Timing

:Slow(default)

:Fast

3-1-4 Integrated Peripherals

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software
 Integrated Peripherals

| | | |
|--|----------|--|
| OnChip Primary PCI IDE | Enabled | Item Help |
| OnChip Secondary PCI IDE | Enabled | |
| IDE Primary Master PIO | Auto | Menu Level > |
| IDE Primary Slave PIO | Auto | If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/write per sector the drive can support |
| IDE Secondary Master PIO | Auto | |
| IDE Secondary Slave PIO | Auto | |
| IDE Primary Master UDMA | Auto | |
| IDE Primary Slave UDMA | Auto | |
| IDE Secondary Master UDMA | Auto | |
| IDE Secondary Slave UDMA | Auto | |
| USB Controller | Enabled | |
| USB Keyboard Support | Disabled | |
| Init Display First | Onboard | |
| AC97 Audio | Enabled | |
| AC97 Modem | Disabled | |
| IDE HDD Block Mode | Enabled | |
| POWER ON Function | | |
| KB Power ON Password | Enter | |
| Hot Key Power ON | Ctrl-F1 | |
| ↑↓←→ Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults | | |

OnChip Primary PCI IDE

:Enabled(default)

:Disabled

OnChip Secondary PCI IDE

:Enabled(default)

:Disabled

IDE Primary Master PIO

This feature detects your primary master hard disk device.

:Auto (default)

:Mode 0,1,2,3,4

IDE Primary Slave PIO

This feature detects your primary slave hard disk device.

:Auto (default)

:Mode 0,1,2,3,4

IDE Secondary Master PIO

This feature detects your secondary master hard disk device.

:Auto (default)

:Mode 0,1,2,3,4

IDE Secondary Slave PIO

This feature detects your secondary slave hard disk device.

:Auto (default)

:Mode 0,1,2,3,4

IDE Primary Master UDMA

:Auto(default)

:Disabled

IDE Primary Slave UDMA

:Auto(default)

:Disabled

IDE Secondary Master UDMA

:Auto(default)

:Disabled

IDE Secondary Slave UDMA

:Auto(default)

:Disabled

USB Controller

:Enabled(default)

:Disabled

USB Keyboard support

:Enabled

:Disabled(default)

Init Display First

:PCI Slot

:Onboard (default)

AC97 Audio

:Enabled(default)

:Disabled

AC97 Modem

:Enabled

:Disabled(default)

IDE HDD Block Mode

:Enabled(default)

:Disabled

3-1-5 Power Management Setup

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software
Power Management Setup

| | | |
|--|-------------|--------------|
| ACPI Function | Disabled | Item Help |
| ACPI Suspend Type | S1(POS) | |
| Power Management | User Define | Menu Level > |
| Video Off Method | DPMS | |
| Video Off In Suspend | YES | |
| Suspend Type | Stop Grant | |
| MODEM Use IRQ | 3 | |
| Suspend Mode | Disabled | |
| HDD Power Down | Disabled | |
| Soft-Off by PWRBTN | Instant Off | |
| Power On by Ring | Disabled | |
| USB KB Wake-Up From S3 | Disabled | |
| Resume by Alarm | Disabled | |
| Date(of Month) Alarm | 0 | |
| Time(hh:mm:ss) Alarm | 0 0 0 | |
| ** Reload Global Timer Events ** | | |
| Primary IDE 0 | Disabled | |
| Primary IDE 1 | Disabled | |
| ↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults | | |

When using the function of Suspend to RAM, please follow the below procedures.

1. Choose "Power Management Setup" from the main menu, then press <Enter>.
2. Set the item of "ACPI Function" to "Enabled."
3. Choose "S3(STR)" on "ACPI Suspend Type."
4. Press <Esc> at any time to return to the main menu.
5. Choose "Save & Exit Setup" then press <Enter>, type <Y> then press <Enter>.
6. Before installing Windows® 98, please key in below parameters:
[drive]:>setup /pj

If you had installed Windows®98 already, you have to update your system to support ACPI. About updating information, please contact with Microsoft for technical support.

7. Setup Windows® 98, click "start" on the Windows® 98 screen, please move cursor to "Settings", then to click "Control Panel".
8. On "Control Panel" screen, click "Power Management".
9. Click "Advanced", then choose "stand by" in "When I press the power button on my computer".
10. After completing above procedures, if you want to shut down system, please ignore the procedure of shut down file, application software. To press power button shut down system immediately or choose "stand by" on Windows® 98 system.

Note : If you want to restart system, please press power button, then your preserve properties will be appeared within 8 seconds. But if you had set "keyboard password" on "KB Power On Password", you have to restart system by keying password.

Power Management

:User Define(default)--users can configure their own power management

:Min Saving

:Max Saving

Video Off Method

:DPMS(default)

:Blank Screen

:V/H Sync+Blank

Video Off In Suspend

:Yes (default)

:No

MODEM Use IRQ

:3 (default)

:4, 5, 7, 9, 10, 11, NA

Suspend mode

:Disabled(default), 1min --- 2 min, 4 min, 8 min, 12 min, 20 min, 30 min, 40 min,
1 Hour

HDD Power Down

:Disabled(default), 1 min --- 15 min

3-1-6 PNP / PCI Configuration Setup

CMOS Setup Utility – Copyright © 1984-1999 Award Software
PnP/PCI Configurations

| | | |
|--|-------------|-------------------------------------|
| PnP OS Installed | No | Item Help |
| Reset Configuration Data | Disabled | ----- |
| Resources Controlled By | Auto(ESCD) | Menu Level > |
| > IRQ Resources | Press Enter | Default is Disabled. Select |
| > DMA Resources | Press Enter | Enabled to reset Extended System |
| > PCI/VGA Palette Snoop | Disabled | Configuration Data(ESCD) when you |
| | | exit Setup if you have installed |
| | | a new add-on and the system |
| | | reconfiguration has caused such a |
| | | serious conflict that the OS cannot |
| | | boot |
| ↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults | | |

PnP OS Installed

:No(default)

OS will not recognize PnP devices.

:Yes

OS will arrange the setup of PnP devices.

Reset Configuration Data

:Disabled(default)

:Enabled--- to reset “**Extended System Configuration Data(ESCD)** when you exit setup if you have installed a new add-on card and the system reconfiguration has caused such a serious conflict that the operating system can not boot up.

Resources Controlled By

:Manual

The table will show the below items: “**Reset Configuration Data, IRQ-3 assigned to, DMA-0 assigned to.**” The user can adjust the shown items as required.

:Auto (default)

The table will not show the above items, and the system will automatically assign the above setup.

PCI/VGA Palette Snoop

:Disabled (default)

:Enabled

3-1-7 Frequency/Voltage Control

CMOS Setup Utility – Copyright © 1984-1999 Award Software
Frequency/Voltage Control

| | | |
|--|----------|----------------|
| Auto Detect DIMM/PCI CIK | Disabled | Item Help |
| Spread Spectrum | Disabled | ----- |
| CPU Host/PCI Clock | Default | Menu Level ➤ |
| CPU Ratio | x 3 | |
| ↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help | | |
| F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults | | |

Auto Detect DIMM/PCI CIK

: Enabled

: Disabled (default)

Spread Spectrum

: Enabled

: Disabled (default)



This selection is reserved for manufacturers to pass CE test only not available for users.

3-1-8 PC Health Status

CMOS Setup Utility – Copyright © 1984-1999 Award Software
PC Health Status

| | |
|---|--------------------------------------|
| Voltage 0 Voltage 1 Voltage 2 Voltage 3 Voltage 4 Voltage 5 Voltage 6 Voltage 7 Voltage Battery CPU Temperature Fan 1 Speed Fan 2 Speed Fan 3 Speed | Item Help ----- Menu Level ➤ |
| ↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults | |

Current CPU Temperature, Current CPU Fan1 speed/CPU Fan2 speed/Current Vin3(V)/Vin1(V)/VIN(2)/Vdd(V):

System will automatically detect the above items and show the status.

3-1-9 Supervisor/User Password

The "Supervisor/User Password setting" utility sets the security protection. There are two kinds of password functions in the setup menu : one is "Supervisor Password," and the other is "User Password." Their difference is:

Supervisor Password: this function allows you the right to change the options of setup menu.

User Password: this function only allows you to enter the setup menu but not to change the options of the setup menu except "USER PASSWORD," "SAVE & EXIT SETUP," and "EXIT WITHOUT SAVING."

1. How to set "Supervisor Password" & "User Password"

The setup of "Supervisor Password" and "User Password" has the same steps.

Step 1: Enter Password --Press <Enter> after appointing the password.

CMOS Setup Utility - Copyright (C) 1984-1999

| | |
|----------------------------|--------------------------------|
| Standard CMOS Feature | Frequency/Voltage Control |
| Advanced BIOS Feature | Load Optimized Defaults |
| Advanced Chipset Feature | <u>Set Supervisor Password</u> |
| Integrated Peripherals | Set User Password |
| Power Management | Setup |
| PnP/PCI Config | Saving |
| PC Health Status | |
| ENTER PASSWORD : _____ | |
| Esc : Quit | ↑ ↓ ← → : Select Item |
| F10 : Save & Exit Setup | |
| Time, Date, Hard Disk Type | |

Chapter 4 Appendix

4-1 Memory Map

| Address range | Size | Description |
|---------------|------|--|
| 00000-7FFFF | 512K | Conventional memory |
| 80000-9FBFF | 127K | Extended conventional memory |
| 9FC00-9FFFF | 1K | Extended BIOS data area if PS/2 mouse is installed |
| A0000-C7FFF | 160K | Available for hi DOS memory |
| C8000-DFFFF | 96K | Available for hi DOS memory and adapter ROMs |
| E0000-EEFFF | 60K | Available for UMB |
| EF000-EFFFF | 4K | Video service routine for monochrome & CGA adapter |
| F0000-F7FFF | 32K | BIOS CMOS setup utility |
| F8000-FCFFF | 20K | BIOS runtime service routine (2) |
| FD000-FDFFF | 4K | Plug and play escd data area |
| FE000-FFFFF | 8K | BIOS runtime service routine (1) |

4-2 I/O Map

| | |
|---------|--------------------------------------|
| 000-01F | DMA controller (master) |
| 020-021 | Interrupt controller (master) |
| 022-023 | Chipset control registers. I/O ports |
| 040-05F | Timer control registers |
| 060-06F | Keyboard interface controller (8042) |
| 070-07F | RTC ports & CMOS I/O ports |
| 080-09F | DMA register |
| 0A0-0BF | Interrupt controller (slave) |
| 0C0-0DF | DMA controller (slave) |
| 0F0-0FF | Math coprocessor |
| 1F0-1FB | Hard disk controller |
| 278-27F | Parallel port 2 |
| 2B0-2DF | Graphics adapter controller |
| 2F8-2FF | Serial port 2 |
| 360-36F | Network ports |
| 378-37F | Parallel port 1 |
| 3B0-3BF | Monochrome & parallel port adapter |
| 3C0-3CF | EGA adapter |
| 3D0-CDF | CGA adapter |
| 3F0-3F7 | Floppy disk controller |
| 3F8-3FF | Serial port-1 |

4-3 Time & DMA Channels Map

Time map:

- Timer channel 0 system timer interrupt
- Timer channel 1 DRAM refresh request
- Timer channel 2 speaker tone generator

Dma channels:

- DMA channel 0 available
- DMA channel 1 onboard ECP (option)
- DMA channel 2 floppy disk (ITE chip)
- DMA channel 3 onboard ECP (default)
- DMA channel 4 cascade for DMA controller 1
- DMA channel 5 available
- DMA channel 6 available
- DMA channel 7 available

4-4 Interrupt Map

A. **NMI:** non-maskable interrupt

B. **IRQ(H/W):**

- 0 system timer interrupt from timer 0
- 1. keyboard output buffer full
- 2. cascade for IRQ 8-15
- 3. serial port2
- 4. serial port1
- 5. parallel port 2
- 6. floppy disk (ITE chip)
- 7. parallel port 1
- 8. RTC clock
- 9. available
- 10. available
- 11. available
- 12. PS/2 mouse
- 13. math coprocessor
- 14. onboard hard disk (IDE1) channel
- 15. onboard hard disk (IDE2) channel

4-5 RTC & CMOS RAM Map

| | |
|-------|---|
| 00 | Seconds |
| 01 | Seconds Alarm |
| 02 | Minutes |
| 03 | Minutes Alarm |
| 04 | Hours |
| 05 | Hours Alarm |
| 06 | Day of Week |
| 07 | Day of Month |
| 08 | Month |
| 09 | Year |
| 0A | Status Register A |
| 0B | Status Register B |
| 0C | Status Register C |
| 0D | Status Register D |
| 0E | Diagnostic Status Byte |
| 0F | Shutdown Byte |
| 10 | Floppy Disk Type Drive Type Byte |
| 12 | Hard Disk Type Byte |
| 13 | Reserved |
| 14 | Equipment Type |
| 15 | Base Memory Low Byte |
| 16 | Base Memory High Byte |
| 17 | Extension Memory Low Byte |
| 18 | Extension Memory High Byte |
| 19-2D | |
| 2E-2F | |
| 30 | Reserved for Extension Memory Low Byte |
| 31 | Reserved for Extension Memory High Byte |
| 33 | Information Flag |
| 34-3F | Reserved |
| 40-7F | Reserved for Chipset Setting Data |

4-6 Award BIOS Hard Disk Type

| Type | Cylinder | Heads | Write Pre-comp | Landing Zone | Sectors | Size |
|------|----------|-------|-------------------|-----------------|---------|-------|
| 1 | 306 | 4 | 128 | 305 | 17 | 10MB |
| 2 | 615 | 4 | 300 | 615 | 17 | 21MB |
| 3 | 615 | 6 | 300 | 615 | 17 | 32MB |
| 4 | 940 | 8 | 512 | 940 | 17 | 65MB |
| 5 | 940 | 6 | 512 | 940 | 17 | 49MB |
| 6 | 615 | 4 | 65535 | 615 | 17 | 21MB |
| 7 | 462 | 8 | 256 | 511 | 17 | 32MB |
| 8 | 733 | 5 | 65535 | 733 | 17 | 31MB |
| 9 | 900 | 15 | 65535 | 901 | 17 | 117MB |
| 10 | 820 | 3 | 65535 | 820 | 17 | 21MB |
| 11 | 855 | 5 | 65535 | 855 | 17 | 37MB |
| 12 | 855 | 7 | 65535 | 855 | 17 | 52MB |
| 13 | 306 | 8 | 128 | 319 | 17 | 21MB |
| 14 | 733 | 7 | 65535 | 733 | 17 | 44MB |
| 16 | 612 | 4 | 0 | 663 | 17 | 21MB |
| 17 | 977 | 5 | 300 | 977 | 17 | 42MB |
| 18 | 977 | 7 | 65535 | 977 | 17 | 59MB |
| 19 | 1024 | 7 | 512 | 1023 | 17 | 62MB |
| 20 | 733 | 5 | 300 | 732 | 17 | 31MB |
| 21 | 733 | 7 | 300 | 732 | 17 | 44MB |
| 22 | 733 | 5 | 300 | 733 | 17 | 31MB |
| 23 | 306 | 4 | 0 | 336 | 17 | 10MB |
| 24 | 977 | 5 | 0 | 925 | 17 | 42MB |
| 25 | 1024 | 9 | 65535 | 925 | 17 | 80MB |
| 26 | 1224 | 7 | 65535 | 754 | 17 | 74MB |

| Type | Cylinder | Heads | Write Pre-comp | Landing Zone | Sectors | Size |
|------|----------|-------|-------------------|-----------------|---------|-------|
| 27 | 1224 | 11 | 65535 | 754 | 17 | 117MB |
| 28 | 1224 | 15 | 65535 | 699 | 17 | 159MB |
| 29 | 1024 | 8 | 65535 | 823 | 17 | 71MB |
| 30 | 1024 | 11 | 65535 | 1023 | 17 | 98MB |
| 31 | 918 | 11 | 65535 | 1023 | 17 | 87MB |
| 32 | 925 | 9 | 65535 | 926 | 17 | 72MB |
| 33 | 1024 | 10 | 65535 | 1023 | 17 | 89MB |
| 34 | 1024 | 12 | 65535 | 1023 | 17 | 106MB |
| 35 | 1024 | 13 | 65535 | 1023 | 17 | 115MB |
| 36 | 1024 | 14 | 65535 | 1023 | 17 | 124MB |
| 37 | 1024 | 2 | 65535 | 1023 | 17 | 17MB |
| 38 | 1024 | 16 | 65535 | 1023 | 17 | 142MB |
| 39 | 918 | 15 | 65535 | 1023 | 17 | 119MB |
| 40 | 820 | 6 | 65535 | 820 | 17 | 42MB |
| 41 | 1024 | 5 | 65535 | 1023 | 17 | 44MB |
| 42 | 1024 | 8 | 65535 | 1023 | 17 | 68MB |
| 43 | 809 | 6 | 65535 | 852 | 17 | 42MB |
| 44 | 809 | 9 | 65535 | 852 | 17 | 64MB |
| 45 | 776 | 8 | 65535 | 775 | 17 | 104MB |
| 46 | AUTO | 0 | 0 | 0 | 0 | |
| 47 | USER'S | TYPE | | | | |

4-7 ISA I/O Address Map

| I/O Address (HEX) | I/O device |
|-------------------|------------------------------------|
| 000 - 01F | DMA Controller 1, 8237A-5 |
| 020 - 03F | Interrupt Controller 1, 8259A |
| 040 - 05F | System Timer, 8254-2 |
| 060 - 06F | 8042 Keyboard Controller |
| 070 - 07F | real-time Clock/CMOS and NMI Mask |
| 080 - 09F | DMA Page Register, 74LS612 |
| 0A0 - 0BF | Interrupt Controller 2, 8259A |
| 0C0 - 0DF | DMA Controller 2, 8237A-5 |
| 0F0 - 0FF | i486 Math Coprocessor |
| 1F0 - 1F8 | Fixed Disk Drive Adapter |
| 200 - 207 | Game I/O |
| 20C - 20D | Reserved |
| 21F | Reserved |
| 278 - 27F | Parallel Printer Port 2 |
| 2B0 - 2DF | Alternate Enhanced Graphic Adapter |
| 2E1 | GPIB Adapter 0 |
| 2E2 - 2E3 | Data Acquisition Adapter 0 |
| 2F8 - 2FF | Serial Port 2 (RS-232-C) |
| 300 - 31F | Prototype Card |
| 360 - 363 | PC Network (Low Address) |
| 364 - 367 | Reserved |
| 368 - 36B | PC Network (High Address) |
| 36C - 36F | Reserved |
| 378 - 37F | Parallel Printer Port 1 |

| I/O Address (HEX) | I/O device |
|--------------------------|--|
| 380 - 38F | SDLC, Bisynchronous 2 |
| 390 - 393 | Cluster |
| 3A0 - 3AF | Bisynchronous 1 |
| 3B0 - 3BF | Monochrome Display and Printer Adapter |
| 3C0 - 3CF | Enhanced Graphics Adapter |
| 3D0 - 3DF | Color/Graphics Monitor Adapter |
| 3F0 - 3F7 | Diskette Drive Controller |
| 3F8 - 3FF | Serial Port 1 (RS-232-C) |
| 6E2 - 6E3 | Data Acquisition Adapter 1 |
| 790 - 793 | Cluster Adapter 1 |
| AE2 - AE3 | Data Acquisition Adapter 2 |
| B90 - B93 | Cluster Adapter 2 |
| EE2 - EE3 | Data Acquisition Adapter 3 |
| 1390 - 1393 | Cluster Adapter 3 |
| 22E1 | GPIB Adapter 1 |
| 2390 - 2393 | Cluster Adapter 4 |
| 42E1 | GPIB Adapter 2 |
| 62E1 | GPIB Adapter 3 |
| 82E1 | GPIB Adapter 4 |
| A2E1 | GPIB Adapter 5 |
| C2E1 | GPIB Adapter 6 |
| E2E1 | GPIB Adapter 7 |

Chapter 5 Q & A

5-1 Error Messages During Power on Self Test

During **power on self test (post)**, BIOS will automatically detect the system devices. Below are the questions that users most often meet. The user may press “**Esc**” key to skip the full memory test.

1. *Beep sound*

On power on, the system make beep sound to offer different messages. If the system is configured correctly, it prompts a short beep to show device configuration is done correctly. When VGA card and DIMM modules are not plugged well, the system makes longer and constant beep sounds.

2. *BIOS ROM checksum error*

It indicates the checksum of the BIOS code is not right and system will always halt on power on screen. Contact the dealer to exchange a new BIOS.

3. *CMOS battery fails*

It indicates the CMOS battery does not work. Contact the dealer to exchange a new battery.

4. *CMOS checksum error*

It indicates the CMOS checksum is incorrect. Load the default values in BIOS to solve this problem. This error may result from a weak BIOS, so replace a new BIOS if necessary.

5. *Hard disk initialize*

Please wait a moment...

Some hard drives require more time to initialize.

6. *Hard disk install failure*

The system can not find or initialize the hard drive controller or the drive. Check if the controller is set correctly. If no hard disk is installed, "**Hard drive selection**" must be set to "**none.**"

7. *Keyboard error or no keyboard present*

This means the system can not initialize the keyboard. Check if the keyboard is plugged well and be sure no keys are pressed during POST.

8. *Keyboard is lock out - Unlock the key*

When this message comes out, check if there is anything mis-placed on the keyboard. Be sure nothing touches the keys.

9. *Memory test fails*

There will be more information to specify the type and location of the memory error.

10 *Primary master hard disk fail*

The BIOS find an error in the primary master hard disk drive.

11 *Primary slave hard disk fail*

The BIOS finds an error in the primary slave hard disk drive.

12 *Secondary master hard disk fail*

The BIOS finds an error in the secondary slave master hard disk drive.

13 *Secondary slave hard disk fail*

The BIOS finds an error in the secondary slave IDE hard disk drive.