

Statement:

This manual is the intellectual property of Foxconn, Inc. Although the information in this manual may be changed or modified at any time, Foxconn does not obligate itself to inform the user of these changes.

Trademark:

All trademarks are the property of their respective owners.

Version:

User's Manual V1.0 in English for P4M9007MB motherboard.

Symbol description:

-  **Note:** refers to important information that can help you to use motherboard better.
-  **Attention:** indicates that it may damage hardware or cause data loss, and tells you how to avoid such problems.
-  **Warning:** means that a potential risk of property damage or physical injury exists.

More information:

If you want more information about our products, please visit Foxconn's website: www.foxconnchannel.com

Declaration of conformity



HON HAI PRECISION INDUSTRY COMPANY LTD
66 , CHUNG SHAN RD., TU-CHENG INDUSTRIAL DISTRICT,
TAIPEI HSIEN, TAIWAN, R.O.C.

declares that the product

Motherboard
P4M9007MB

is in conformity with

(reference to the specification under which conformity is declared in
accordance with 89/336 EEC-EMC Directive)

- EN 55022: 1998/A2: 2003 Limits and methods of measurements of radio disturbance characteristics of information technology equipment
- EN 61000-3-2: 2000 Electromagnetic compatibility (EMC)
Part 3: Limits
Section 2: Limits for harmonic current emissions
(equipment input current \leq 16A per phase)
- EN 61000-3-3/A1:2001 Electromagnetic compatibility (EMC)
Part 3: Limits
Section 2: Limits of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current \leq 16A
- EN 55024: 1998/A2:2003 Information technology equipment-Immunity characteristics limits and methods of measurement

Signature :

Place / Date : TAIPEI/2006

Printed Name : James Liang

Position/ Title : Assistant President

Declaration of conformity



Trade Name: Foxconn
Model Name: **P4M9007MB**
Responsible Party: PCE Industry Inc.
Address: 458 E. Lambert Rd.
Fullerton, CA 92835
Telephone: 714-738-8868
Facsimile: 714-738-8838

Equipment Classification: FCC Class B Subassembly
Type of Product: Motherboard
**Manufacturer: HON HAI PRECISION INDUSTRY
COMPANY LTD**
Address: 66 , CHUNG SHAN RD., TU-CHENG
INDUSTRIAL DISTRICT, TAIPEI HSIEN,
TAIWAN, R.O.C.

Supplementary Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tested to comply with FCC standards.

Signature : 

Date : 2006

Table of Contents

Chapter 1	Product Introduction	
Main Features		2
Layout		4
Rear I/O Ports		5
Chapter 2	Installation Instructions	
CPU		7
Memory		10
Power Supply		11
Other Connectors		12
Extension Slots		15
Jumpers		16
Chapter 3	BIOS Description	
Enter BIOS Setup		19
Main menu		19
Standard CMOS Features		21
Central Control Unit		23
Advanced BIOS Features		26
Advanced Chipset Features		29
Integrated Peripherals		31
Power Management Setup		35
PnP/PCI Configurations		36
PC Health Status		37
Load Optimized Defaults		38
Set Supervisor/User Password		38
Save & Exit Setup		39
Exit Without Saving		39
Chapter 4	Driver CD Introduction	
Utility CD content		41
Installing Drivers		42
Installing Utilities		42
Chapter 5	Directions for Bundled Software	
FOX ONE		43
Fox LiveUpdate		50

i Attention:

1. Attach the CPU and heatsink using silica gel to ensure full contact.
2. It is suggested to select high-quality, certified fans in order to avoid damage to the motherboard and CPU due to high temperatures.
3. Never turn on the machine if the CPU fan is not properly installed.
4. Ensure that the DC power supply is turned off before inserting or removing expansion cards or other peripherals, especially when you insert or remove a memory module. Failure to switch off the DC power supply may result in serious damage to your system or memory module.

i Attention:

We cannot guarantee that your system will operate normally while over-clocked. Normal operation depends on the over-clock capacity of your device.

i Attention:

Since BIOS programs are upgraded from time to time, the BIOS description in this manual is just for reference. We do not guarantee that the content of this manual will remain consistent with the actual BIOS version at any given time in the future.

i Attention:

The pictures of objects used in this manual are just for your reference. Please refer to the physical motherboard.

This manual is suitable for motherboard of P4M9007MB. Each motherboard is carefully designed for the PC user who wants diverse features.

- 6 with 6-Channel audio (Default omitted.)
- 8 with 8-Channel audio
- E with 1394 connector
- L with onboard 10/100M LAN (Default is omitted.)
- K with onboard Gigabit LAN
- R with RAID function
- S with SATA connector
- 2 with DDR2 slots
- H comply with RoHS directive

You can find PPID label on the motherboard. It indicates the functions that the motherboard has.

For example:



The letters on the black mark of the PPID label mean that the motherboard supports 6-channel Audio (-6, Default is omitted), onboard 10/100M LAN (-L, Default is omitted), 1394 port (-E), SATA function (-S), DDR2 Slots(-2), RoHS Directive(-H).

Chapter 1

Thank you for buying Foxconn P4M9007MB series motherboard. This series of motherboard is one of our new products, and offers superior performance, reliability and quality, at a reasonable price. This motherboard adopts the advanced VIA® P4M900 + VT8237A chipset, providing users a computer platform with a high integration-compatibility-performance price ratio.

This chapter includes the following information:

- ❖ Main Features
- ❖ Layout
- ❖ Rear I/O Ports

Main Features

Size

- uATX form factor of 9.6 inch x 9.0 inch

Microprocessor

- Supports Intel® Core™ 2 Extreme, Core™ 2 Duo, Pentium® D, Pentium® 4, processors in an LGA775 package
- Supports FSB at 1066 MHz /800 MHz /533 MHz

Chipset

- VIA® P4M900 (North Bridge) + VT8237A (South Bridge)

System Memory

- Two 240-pin DIMM slots
- Supports DDR2 667/533/400
- Supports up to 4GB DDR2 memory

USB 2.0 Ports

- Supports hot plug
- Eight USB 2.0 ports(four rear panel ports, two onboard USB headers providing four extra ports)
- Supports USB 2.0 protocol up to 480Mb/s transmission rate

Onboard Serial ATA

- 150MB/s data transfer rate
- Supports RAID 0, RAID 1, JBOD
- Supports up to two Serial ATA devices

Onboard LAN (-L/-K) (optional)

- Supports 10/100(-L) Mb/s Ethernet
- Supports 10/100/1000(-K) Mb/s Ethernet
- LAN interface built-in onboard

Onboard Graphics

- Supports integrated VGA display function

Onboard IEEE 1394a (-E) (optional)

- Support hot plug
- With rate of transmission at 400 Mb/s
- Connect with 2 independent IEEE 1394a units synchronously at most

Chapter 1 Product Introduction

Onboard Audio (-8)

- Supports Intel® High Definition Audio
- Supports S/PDIF output
- Supports Jack-Sensing function
- Supports 8-channel audio


Expansion Slots

- Two PCI slots
- One PCI Express x1 slot
- One PCI Express x16 Graphics slot

PCI Express x16 Support

- Supports 4 GB/s (8 GB/s concurrent) bandwidth
- Low power consumption and power management features

Layout

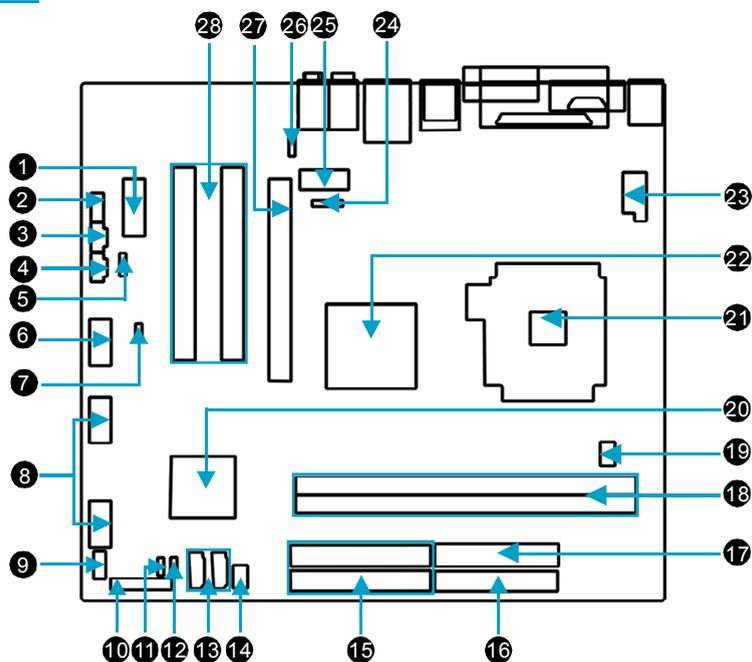


- | | |
|--------------------------------------|----------------------------------|
| 1.PCI Express x1Slot | 15.IDE Connectors |
| 2.Front Audio Connector | 16.Floppy Connector |
| 3.CD_IN Connector | 17.24-pin ATX Power Connector |
| 4.AUX_IN Connector (optional) | 18.DDR2 DIMM Slots |
| 5.Speaker Connector | 19.CPU_FAN Connector |
| 6.IEEE 1394a Connector (optional) | 20.South Bridge:VT8237A Chipset |
| 7.Clear CMOS Jumper | 21.CPU Socket |
| 8.Front USB Connectors | 22.North Bridge:P4M900 Chipset |
| 9.Front Panel Connector | 23.8-pin ATX_12V Power Connector |
| 10.TPM Connector | 24.IrDA Connector |
| 11.WP-EN Jumper | 25.COM2 Connector |
| 12.BIOS TBL Enable Jumper (optional) | 26.S/PDIF OUT Connector |
| 13.SATA Connectors | 27.PCI Express x16 Graphics Slot |
| 14.SYS_FAN Connector | 28.PCI Slots |

 **Note: The above motherboard layout is provided for reference only, please refer to the physical motherboard.**

Rear I/O Ports

This motherboard provides the ports as below:

For -8 model

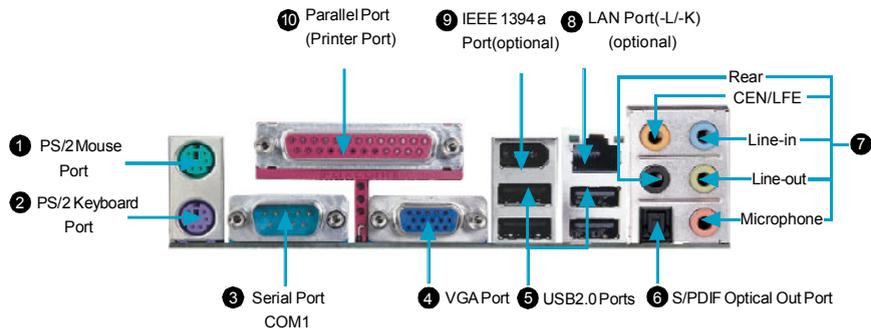

7 Line in, Line out, Microphone, Rear, LEF/CEN Jacks

When using an 8-channel sound source, connect the front speaker to the green audio output; connect the rear sound speaker to the black audio output; connect the center speaker/subwoofer to the orange audio output.

Chapter 2

This chapter introduces the hardware installation process, including the installation of the CPU, memory, power supply, slots, and pin headers, and the mounting of jumpers. Caution should be exercised during the installation of these modules. Please refer to the motherboard layout prior to any installation and read the contents in this chapter carefully.

This chapter includes the following information:

- ❖ CPU
- ❖ Memory
- ❖ Power supply
- ❖ Other Connectors
- ❖ Expansion Slots
- ❖ Jumpers


CPU

This motherboard supports single processor including Intel® Core™ 2 Extreme, Core™ 2 Duo, Pentium® D, Pentium® 4 processors in an LGA775 package.

For the detailed CPU support list on this motherboard, please visit the website: <http://www.foxconnchannel.com>

Installation of CPU

Below is the CPU socket illustration. Follow these procedures to install a CPU.

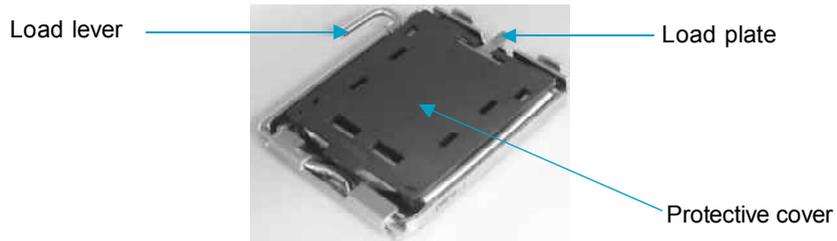


1. Use thumb and forefinger to hold the hook of the load lever and pull the lever down and away from socket to unlock it. Lift the load lever.




2. Push down the rear tab with your forefinger to bring the front end of the load plate up slightly. Open the load plate with thumb. Be careful not to touch the contacts.


Chapter 2 Installation Instructions

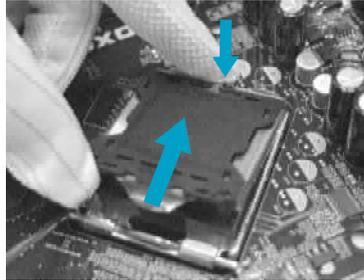

3. Hold CPU with thumb and forefinger. Ensure fingers align to socket cutouts. Match the CPU triangle marker to Pin 1 position as shown below. The alignment key also provides the orientation directed function. Lower the CPU straight down without tilting or sliding the CPU in the socket.

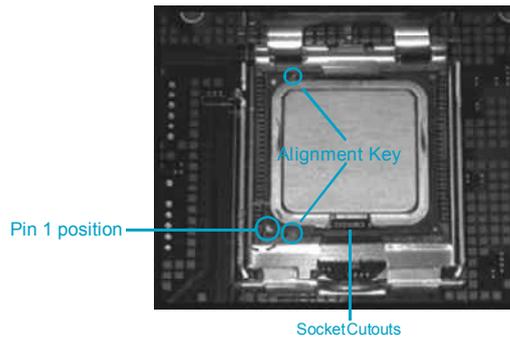

4. After installing the CPU, remove the protective cover from load plate. The protective cover is used to protect the contacts of the socket. Do not discard the protective cover. Always replace the socket cover if the CPU is removed from the socket.

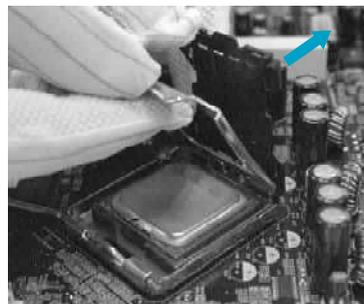

Chapter 2 Installation Instructions

5. Close the load plate, and slightly push down the tongue side.



6. Lower the lever and lock it to the load plate, then the CPU is locked completely.



 **Note :**

Excessive temperatures will severely damage the CPU and system. Therefore, you should install CPU cooling fan and make sure that the cooling fan works normally at all times in order to prevent overheating and damaging to the CPU. Please refer to your CPU fan user guide to install it properly.


Memory

This motherboard includes two 240-pin DDR2 DIMM slots. So You must install at least one memory bank to ensure normal operation.

For the detailed memory support list on this motherboard, please visit the website: <http://www.foxconnchannel.com>

Installation of DDR2 Memory

1. There is only one gap near the center of the DIMM slot, and the memory module can be fixed in one direction only. Unlock a DIMM slot by pressing the module clips outward.
2. Align the memory module to the DIMM slot, and insert the module vertically into the DIMM slot.

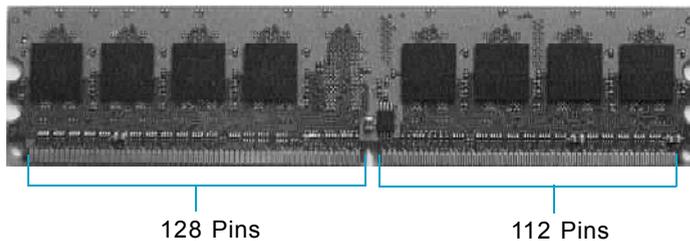


3. The plastic clips at both sides of the DIMM slot will lock automatically.

Power Supply

This motherboard uses an ATX power supply. In order to avoid damaging any devices, make sure that they have been installed properly prior to connecting the power supply.

24-pin ATX power connector: PWR1


PWR1 is the ATX power supply connector. Make sure that the power supply cable and pins are properly aligned with the connector on the motherboard. Firmly plug the power supply cable into the connector and make sure it is secure.

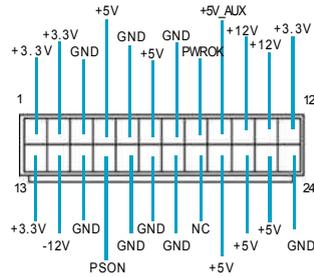

24-pin ATX Power Connector

8-pin ATX_12 V Power Connector: PWR2

The 8-pin ATX 12V power supply connects to PWR2 and provides power to the CPU.

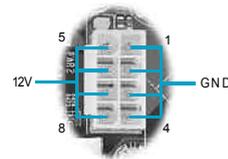


8-pin ATX_12 V Power Connector

Note:

We recommend that you use 8-pin ATX_12V power supply. If you want to use 4-pin power supply, connect the 4-pin power connector as shown.

Connect a 4-pin power plug here

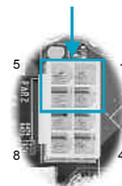

Chapter 2 Installation Instructions

Other Connectors

This motherboard includes connectors for FDD devices, IDE devices, Serial ATA devices, USB devices, IR module, CPU fan, System fan and others.

FDD Connector: FLOPPY


This motherboard includes a standard FLOPPY connector, supporting [360K, 5.25in], [1.2M, 5.25in], [720K, 3.5in], [1.44M, 3.5in] and [2.88M, 3.5in] FDDs.

IDE Connectors: PIDE & SIDE

The two IDE connectors support Ultra ATA 133/100/66 IDE hard disk drive. Connect the cable's blue connector to the IDE connector, then connect the gray connector to the slave device (hard disk drive) and the black connector to the Ultra ATA master device.


Fan Connectors: CPU_FAN, SYS_FAN

The fan speed can be detected and viewed in "PC Health Status" section of the CMOS Setup. These fans will be automatically turned off after the system enters S3, S4 and S5 mode.

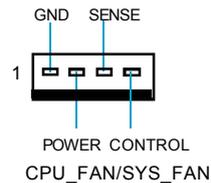


USB Headers: F_USB1, F_USB2

Besides four USB ports on the rear panel, the series of motherboards also have two headers on board which may connect to front panel USB cable to provide additional four USB ports.

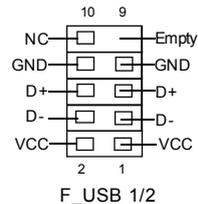

Additional COM Connector: COM2


Besides one COM1 port on the rear panel, The series of motherboards also provide an additional serial header COM2 for your machine. Connect one side of a switching cable to the header, then attach the serial device to the other side of the cable.

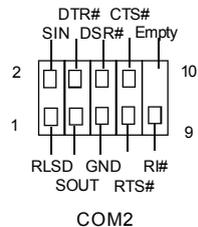

Chapter 2 Installation Instructions

Front Panel Connector: FP1

This motherboard includes one connector for connecting the front panel switch and LED indicators.

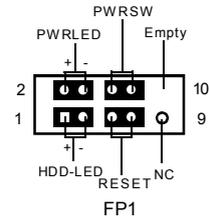

HDD LED Connector (HDD-LED)

The connector connects to the case's HDD indicator LED indicating the activity status of hard disks.

Reset Switch (RESET)

Attach the connector to the Reset switch on the front panel of the case; the system will restart when the switch is pressed.

Power LED Connector (PWRLLED)


Attach the connector to the power LED on the front panel of the case. The Power LED indicates the system's status. When the system is in S0 status, the LED is on. When the system is in S1 status, the LED is blink; When the system is in S3, S4, S5 status, the LED is off.

Power Switch Connector (PWRSW)

Attach the connector to the power button of the case. Pushing this switch allows the system to be turned on and off rather than using the power supply button.


Audio Connector: F_AUDIO

The audio interface provides two kinds of audio output choices: the Front Audio and the Rear Audio. Their priority is the same. Front Audio supports re-tasking function.

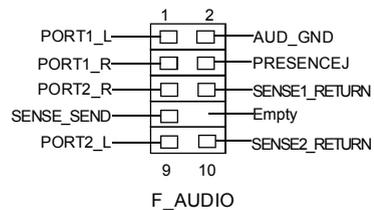

IrDA Connector: IR


This header supports wireless transmitting and receiving device. Before using this function, configure the settings of IR Mode from the "Integrated Peripherals" section of the CMOS Setup.

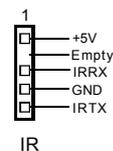

Chapter 2 Installation Instructions


Serial ATA Connectors: SATA_1, SATA_2

The Serial ATA connector is used to connect the Serial ATA device to the motherboard. These connectors support the thin Serial ATA cables for primary storage devices. The current Serial ATA interface allows up to 150MB/s data transfer rate.

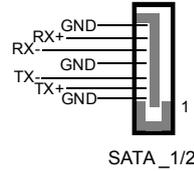

S/PDIF Out Connector: SPDIF_OUT


The S/PDIF Out connector is capable of providing digital audio to external speaker or compressed AC3 data to an external Dolby digital decoder.

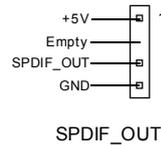

Note: The empty pin of SPDIF cable should be aligned to empty pin of SPDIF out connector.



Speaker Connector: SPEAKER

The speaker connector is used to connect speaker of the chassis.

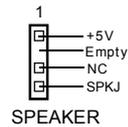


Audio Connector: CD_IN, AUX_IN (optional)

CD_IN, AUX_IN are Sony standard CD audio connectors, They can be connected to a CD-ROM drive through a CD audio cable.

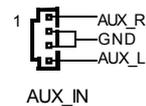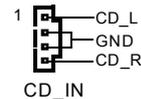

IEEE 1394a Connector: F_1394 (optional)

The IEEE 1394a expansion cable can be connected to either the front (provided that the front panel of your chassis is equipped with the appropriate interface) or rear panel of the chassis.

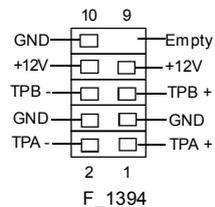

Expansion Slots

This motherboard includes two 32-bit master PCI slots, one PCI Express x1 slot, one PCI Express x16 slot.

PCI Slots

The expansion cards can be installed in the two PCI slots. PCI slots support cards such as a LAN card, USB card, SCSI card and other cards that comply with PCI specifications.

PCI Express x1 Slot

This motherboard has one PCI Express x1 slot that designed to accommodate less bandwidth-intensive cards, such as a modem or LAN card.

PCI Express x16 Slot

This motherboard has one PCI Express x16 slot that reserved for graphics or video cards. The difference in bandwidth between the x16, x1 slot is notable to be sure, with the x16 slot pushing 4GB/s (8GB/s concurrent) of bandwidth, and the PCI Express x1 slot offering 250MB/s.

For the detailed PCI Express x16 graphics cards support list on this motherboard, please visit the website: <http://www.foxconnchannel.com>

Jumpers

The users can change the jumper settings on this motherboard if needed. This section explains how to use the various functions of this motherboard by changing the jumper settings. Users should read the following content carefully prior to modifying any jumper settings.

Description of Jumpers

1. For the jumpers on this motherboard, pin 1 can be identified by the bold silk-screen next to it. However, in this manual, pin 1 is simply labeled as “1”.
2. The following table provides some explanation of the jumper pin settings. User should refer to this when adjusting jumper settings.

Jumper	Diagram	Definition	Description
1	1 	1-2	Set pin1 and pin2 closed
	1 	2-3	Set pin2 and pin3 closed
1	1 	Closed	Set the pin closed
	1 	Open	Set the pin opened

Clear CMOS Jumper: CLR_CMOS

The motherboard uses the CMOS RAM to store all the set parameters. The CMOS can be cleared by removing the CMOS jumper.

How to clear CMOS?

1. Turn off the AC power supply and connect pins 1 and 2 together using the jumper cap.
2. Return the jumper setting to normal (pins 2 and 3 together with the jumper cap).
3. Turn the AC power supply back on.

NORMAL 1 
(Default)


CLEAR 1 
CLR_CMOS

Warning:

1. Disconnect the power cable before adjusting the jumper settings.
2. Do not clear the CMOS while the system is turned on.


BIOS TBL Enable Jumper: TBL_EN (optional)

If the BIOS failed to be flashed in conventional flash BIOS process, the system can not boot. You will have no such worry when using the BIOS TBL jumper which is used to protect BIOS “Top Boot Block”. By using this function, the system still can boot even if the falsh BIOS fails and show some information to recover the BIOS. To utilize this function, you just leave this jumper as short pin 2 and pin 3 with the jumper cap.

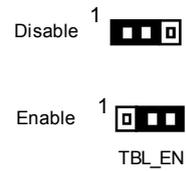

BIOS protection Jumper: WP_EN

If the jumper WP_EN is set as Enable, the system BIOS is protected from being attacked by a serious virus, such as the CIH virus. You will be unable to flash the BIOS to the motherboard, when the system BIOS is protected. To utilize this function, you just leave this jumper as short pin 2 and pin 3 with the jumper cap.

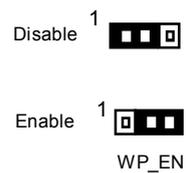

Chapter 3

This chapter tells how to change system settings through the BIOS Setup menus. Detailed descriptions of the BIOS parameters are also provided.

You have to run the Setup Program when the following cases occur:

1. An error message appears on the screen during the system POST process.
2. You want to change the default CMOS settings.

This chapter includes the following information:

- ❖ Enter BIOS Setup
- ❖ Main Menu
- ❖ Standard CMOS Features
- ❖ Central Control Unit
- ❖ Advanced BIOS Features
- ❖ Advanced Chipset Features
- ❖ Integrated Peripherals
- ❖ Power Management Setup
- ❖ PnP/PCI Configurations
- ❖ PC Health Status
- ❖ Load Optimized Defaults
- ❖ Set Supervisor/User Password
- ❖ Save & Exit Setup
- ❖ Exit Without Saving

Enter BIOS Setup

The BIOS is the communication bridge between hardware and software, correctly setting up the BIOS parameters is critical to maintain optimal system performance. Power on the computer, when the following message briefly appears at the bottom of the screen during the POST (Power On Self Test), press key to enter the Award BIOS CMOS Setup Utility.

Press TAB to show POST Screen, DEL to enter SETUP

Note:

We do not suggest that you change the default parameters in the BIOS Setup, and we shall not be responsible for any damage that result from any changes that you make.

Main Menu

The main menu allows you to select from the list of setup functions and two exit choices. Use the arrow keys to select among the items and press <Enter> to accept or go to the sub-menu.



Main Menu

The items in the main menu are explained as below:

Standard CMOS Features

The basic system configuration can be set up through this menu.

Central Control Unit

The special features can be set up through this menu.

Advanced BIOS Features

The advanced system features can be set up through this menu.

Advanced Chipset Features

The values for the chipset can be changed through this menu, and the system performance can be optimized.

Integrated Peripherals

All onboard peripherals can be set up through this menu.

Power Management Setup

All the items of Green function features can be set up through this menu.

PnP/PCI Configurations

The system's PnP/PCI settings and parameters can be modified through this menu.

PC Health Status

This will display the current status of your PC.

Load Optimized Defaults

The optimal performance settings can be loaded through this menu, however, the stable default values may be affected.

Set Supervisor Password

The supervisor password can be set up through this menu.

Set User Password

The user password can be set up through this menu.

Save & Exit Setup

Save CMOS value settings to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

Standard CMOS Features

This sub-menu is used to set up the standard CMOS features, such as the date, time, HDD model and so on. Use the arrow keys select the item to set up, and then use the <PgUp> or <PgDn> keys to choose the setting values.



Standard CMOS Features Menu

Date

This option allows you to set the desired date (usually as the current day) with the <day><month><date><year> format.

Day—weekday from Sun. to Sat., defined by BIOS (read-only).

Month—month from Jan. to Dec..

Date—date from 1st to 31st, can be changed using the keyboard.

Year—year, set up by users.

Time

This option allows you to set up the desired time (usually as the current time) with <hour><minute><second> format.

IDE Channel 0/1 Master/Slave & IDE Channel 2/3 Master

These categories identify the HDD types of 1 IDE channel installed in the computer system. There are three choices provided for the Enhanced IDE BIOS: None, Auto, and Manual. “None” means no HDD is installed or set; “Auto” means the system can auto-detect the hard disk when booting up; by choosing “Manual” and changing Access Mode to “CHS”, the related information should be entered manually. Enter the information directly from the keyboard and press < Enter>:

Cylinder	number of cylinders	Head	number of heads
Precomp	write pre-compensation	Landing Zone	landing zone
Sector	number of sectors		

Chapter 3 BIOS Description

Award (Phoenix) BIOS can support 3 HDD modes: CHS, LBA and Large or Auto mode.

CHS	For HDD<528MB
LBA	For HDD>528MB & supporting LBA (Logical Block Addressing)
Large	For HDD>528MB but not supporting LBA
Auto	Recommended mode

Drive A

This option allows you to select the kind of FDD to be installed, including “None”, [360K, 5.25 in], [1.2M, 5.25 in], [720K, 3.5 in], [1.44M, 3.5 in] and [2.88 M, 3.5 in].

Halt On

This category determines whether or not the computer will stop if an error is detected during powering up.

All Errors	Whenever the BIOS detects a nonfatal error, the system will stop and you will be prompted.
No Errors	The system boot will not stop for any errors that may be detected.
All, But Keyboard	The system boot will not stop for a keyboard error; but it will stop for all other errors.
All, But Diskette	The system boot will not stop for a floppy disk error; but it will stop for all other errors.
All, But Disk/Key	The system boot will not stop for a keyboard or disk error, but it will stop for all other errors.

Installed Memory

The option identifies the capacity of memory installed in the system.

Central Control Unit



Central Control Unit Menu

❖ [Smart BIOS]

Smart Power LED

Smart debug LED function within power LED. Enable this function, the power LED status can show the system status of POST process.

System Status	Power LED Status
Normal	on
No CPU Fan	blinking once (blinking 0.5 sec., off 0.5 sec.)
No Display	blinking once (blinking 2 sec., off 2 sec.)
No Memory	blinking twice
Post Error Message	blinking thrice

❖ **Smart Boot Menu**

Smart boot menu with a timer to let user to control boot device easily.

❖ **Smooth Over Clock**

To open smooth over clock function can let over clocking to be more stable.

❖ **DRAM Clock/Driver Control**

Press Enter to set the items of DRAM Clock/Driver Control.

❖ **CPU Clock Ratio**

This option is used to set the ratio of an unlocked CPU. Using different CPU the setting values are different.

❖ **CPU Clock**

This option is used to set the CPU clock.

❖ **Current FSB Frequency**

This option is used to show the current frequency of FSB.

❖ **Current DRAM Frequency**

This option is used to show the current frequency of DRAM.

❖ **Auto Detect PCI Clk**

This option is used to set whether the clock of an unused PCI slot will be disabled to reduce electromagnetic interference. The setting values are Disabled and Enabled.

❖ **Spread Spectrum**

If you enable spread spectrum, it can significantly reduce the EMI(Electro-Magnetic Interference) generated by the system. The setting values are Disabled and Enabled.



DRAM Clock/Drive Control Menu

❖ **DRAM Clock**

This allows you to control the speed at which the DRAM operates. The default setting is typically BY SPD. The SPD is the serial presence detect mechanism of the DIMM.

❖ **DRAM Timing**

Selects whether DRAM timing is controlled by the SPD (Serial Presence Detect) EEPROM on the DRAM module. Setting to “Auto By SPD” enables DRAM timings to be determined by BIOS based on the configurations on the SPD. Selecting “Manual” allows users to configure the DRAM timings manually.

❖ **SDRAM CAS Latency [DDR/DDR2]**

When synchronous SDRAM is installed, the number of clock cycles of CAS latency depends on the SDRAM timing.

❖ **Bank Interleave**

This feature enables you to set the interleave mode of the SDRAM interface. Interleaving allows banks of SDRAM to alternate their refresh and access cycles. One bank will undergo its refresh cycle while another is being accessed.

❖ **Precharge to Active (Trp)**

This option controls the number of cycles for Row Address Strobe (RAS) to be allowed to precharge. If insufficient time is allowed for the RAS to accumulate its charge before DRAM refresh, refresh may be incomplete and DRAM may fail to retain data. This option applies only when synchronous DRAM is installed in the system.

❖ **Active to Precharge(Tras)**

This option is used to set active to precharge(Tras).

❖ **Active to CMD<Trcd>**

When DRAM is refreshed, both rows and columns are addressed separately. This setup option allows you to determine the timing of the transition from RAS (row address strobe) to CAS (column address strobe). The less the clock cycles, the faster the DRAM performance.

❖ **REF to ACT/REF (Trfc)**

This option is used to set REF to ACT/REF (Trfc).

❖ **ACT(0) to ACT(1) (TRRD)**

This option is used to set ACT(0) to ACT(1) (TRRD).

Advanced BIOS Features



Advanced BIOS Features Menu

❖ CPU Feature

Press enter to set the items of CPU feature.

❖ Removable Device Priority

This option is used to remove the priority for removable device startup. After pressing <Enter>, you can remove the removable device using the <PageUp>/<PageDn> or Up/Down arrow keys, and change the removable device priority using <+> or <->. To exit this option, press <Esc>.

❖ Hard Disk Boot Priority

This option is used to select the priority for HDD startup. After pressing <Enter>, you can select the HDD using the <PageUp>/<PageDn> or Up/Down arrow keys, and change the HDD priority using <+> or <->; you can exit this menu by pressing <Esc>.

❖ CD-ROM Boot Priority

This option is used to select the priority for CD-ROM startup. After pressing <Enter>, you can select the CD-ROM using the <PageUp>/<PageDn> or Up/Down arrow keys, and change the CD-ROM priority using <+> or <->. To exit this option, press <Esc>.

❖ CPU L3 Cache

This option allows you to turn on or off the L3 CPU Cache.

❖ Hyper-Threading Technology

This option is used to turn on or off the Hyper-Threading function of the CPU.

Note: This function will not be displayed until a CPU that supports Hyper-Threading has been installed.

❖ **First/Second/Third Boot Device**

This option allows you to set the boot device's sequence.

❖ **Boot Other Device**

With this function set to enable, the system will boot from some other devices if the first/second/third boot devices failed. The setting values are: Disabled and Enabled.

❖ **Boot Up NumLock Status**

This item defines if the keyboard Num Lock key is active when your system is started. The available setting values are: On and Off.

❖ **Security Option**

When it is set to "Setup", a password is required to enter the CMOS Setup screen; When it is set to "System", a password is required not only to enter CMOS Setup, but also to start up your PC.

❖ **MPS Version Control For OS**

This option is used to set up the version of MPS Table used in OS.

❖ **Delay For HDD(secs)**

This option is used to set the delay time of selecting the HDD controller.

❖ **Full Screen LOGO Show**

This option allows you to enable or disable the full screen logo. The available setting values are: Disabled and Enabled.

❖ **Small Logo (EPA) Show**

This item allows you to enable or disable the EPA logo.



CPU Feature Menu

❖ Delay Prior to Thermal

This option is used to set the delay time before the CPU enters auto thermal mode. The setting values are: 4 Min, 8 Min, 16 Min, 32 Min.

❖ Thermal Management

This option is used to manage Prescott CPU thermal.

❖ TM2 Bus Ratio

Represents the frequency bus ratio of the throttled performance state that will be initiated when the on-diesensor goes from not hot to hot .

❖ TM2 Bus VID

Represents the voltage of the throttled performance state that will be initiated when the on-diesensor goes from not hot to hot.

❖ Limit CPUID MaxVal

The option is used to set limit CPUID MaxVal. The available setting values are: Disabled and Enabled. Set Limit CPUID MaxVal to 3, should be "Disabled" for WinXP.

❖ C1E Function

The option is used to enable or disable C1E(Enhanced Halt State)function.


❖ Execute Disable Bit

The option is used to enable or disable execute disable bit.

❖ Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by vendor pool technology.

Advanced Chipset Features

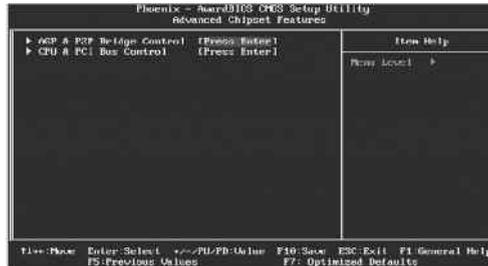


Advanced Chipset Features Menu

❖ AGP & P2P Bridge Control

Press enter to set the items about AGP & P2P bridge.

❖ CPU & PCI Bus Control

Press enter to set the items about CPU & PCI bus.

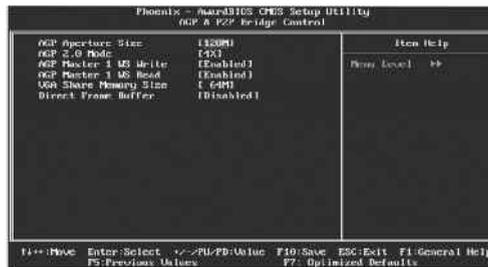

AGP & P2P Bridge Control Menu

❖ AGP Aperture Size

This option defines the size of the aperture if you use an AGP graphics adapter. The aperture is a portion of the PCI memory address range dedicated for graphic memory address space.

Note: This function does not work when onboard VGA is used.

❖ AGP 2.0 Mode

This option is used to set an appropriate mode for the installed AGP card.

❖ AGP Master 1 WS Write

When "Enabled", writes to the AGP (Accelerated Graphics Port) are executed with one wait states. The setting values are: Disabled and Enabled.

❖ AGP Master 1 WS Read


When "Enabled", reads to the AGP (Accelerated Graphics Port) are executed with one wait states. The setting values are: Disabled and Enabled.

❖ VGA Share Memory Size

This option is used to set the onboard VGA share memory size. If you are running under Windows XP or Windows 2000, set this option to 32M or lower. The setting values are: Disabled, 16M, 32M, 64M.

❖ Direct Frame Buffer

This option is used to enable or disable direct frame buffer.

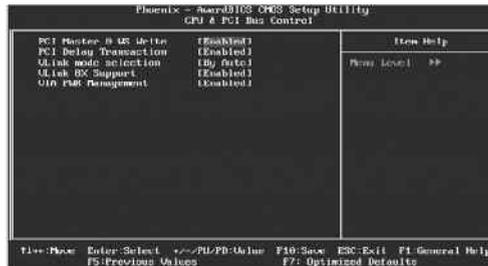

CPU & PCI Bus Control Menu

❖ PCI Master 0 WS Write

This option allows you to enable or disable the support of PCI Master 0 Wait State Write. The setting values are: Disabled and Enabled.

❖ PCI Delay Transaction

This option allows you to enable or disable PCI delay transaction. The setting value are: Disabled and Enabled.

❖ VLink mode selection

This option allows you to select VLink mode.

❖ VLink 8X Support

This option allows you to enable or disable the VLink 8X support. When "Enabled", it may increase system performance. The setting values are: Disabled and Enabled.

❖ VIA PWR Management

This option is used to manage the power supply of VIA.

Integrated Peripherals



Integrated Peripherals Menu

- ❖ **OnChip IDE Device**
Press <Enter> to set onchip IDE device.
- ❖ **OnChip PCI Device**
Press <Enter> to set onchip PCI device.
- ❖ **SuperIO Device**
Press <Enter> to set SuperIO device.
- ❖ **USB Device Setting**
Press <Enter> to set USB device setting.



OnChip IDE Device Menu

- ❖ **SATA Controller**
This option is used to enable or disable the controller of SATA.
- ❖ **SATA Controller Mode**
This option is used to select SATA mode. The setting values are: IDE and RAID.
- ❖ **IDE DMA transfer access**
This option is used to set the IDE transfer access—with it set to Enabled, the IDE Transfer Access uses the DMA mode; with it set to Disabled, the IDE Transfer Access uses the PIO mode.

❖ OnChip IDE Channel 0/1

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Choose “Enabled” to activate each channel separately. The setting values are: Disabled and Enabled.

❖ IDE Prefetch Mode

This option is used to enable or disable IDE prefetch mode. The setting values are: Disabled and Enabled.

❖ Primary Slave UDMA & Secondary Master/Slave UDMA

UltraDMA technology provides faster access to IDE devices. If you install a device that supports UltraDMA, change the appropriate item on this list to Auto. The available setting values are: Disabled and Auto.

❖ IDE HDD Block Mode

This option is used to set whether the IDE HDD block mode is allowed.



OnChip PCI Device Menu

❖ Azalia HDA Controller

“Auto” allows the motherboard’s BIOS to detect whether you’re using any audio devices. If so, the onboard audio controller will be enabled. If not, the onboard audio controller will be disabled. If you want to use different controller cards to connect audio connectors, set the option to “Disabled”. The setting values are: Disabled and Auto.

❖ Onboard Lan Device

This option is used to set whether the Lan Device is enabled.

❖ Lan Boot ROM

This option is used to decide whether to invoke the Boot ROM of the onboard Lan chip.



SuperIO Device Menu

❖ Onboard FDC Controller

This option is used to set whether the Onboard FDC Controller is enabled.

❖ Onboard Serial Port 1/2

This option is used to assign the I/O address and interrupt request (IRQ) for the serial Port 1/2.

❖ UART Mode Select

Use This option to select the UART mode. Setting values include Normal, IrDA, ASKIR. The setting value is determined by the infrared module installed on the board.

❖ UR2 Duplex Mode

This option is available when UART mode is set to either ASKIR or IrDA. This item enables you to determine the infrared function of the onboard infrared chip.

❖ Onboard Parallel Port


This option allows you to determine onboard parallel port controller I/O address and interrupt request (IRQ).

❖ Parallel Port Mode

Select an address and corresponding interrupt for the onboard parallel port. The setting values are: SPP, EPP, ECP, ECP+EPP.

❖ ECP Mode Use DMA

When the Parallel Port Mode is set to ECP or ECP+ EPP, this option is used to select the channel for the ECP mode. The setting values are: 1 and 3.

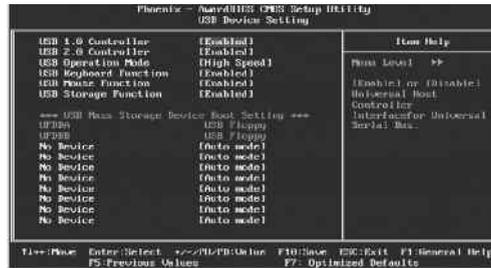

USB Device Setting Menu

❖ USB 1.0 Controller

This option is used to set whether the USB 1.0 Controller is enabled. The available setting values are: Disabled and Enabled.

❖ USB 2.0 Controller

This option is used to set whether the USB 2.0 Controller is enabled.

❖ USB Operation Mode

This item is used to set the operation mode of USB.

❖ USB Keyboard Function

This option is used to set whether the USB keyboard controller is enabled.

❖ USB Mouse Function

This option is used to set whether the USB mouse controller is enabled.

❖ USB Storage Function

This option is used to set whether the USB storage controller is enabled.

❖ USB Mass Storage Device Boot Setting

This option is used to set the simulation mode when boots from USB device.

Power Management Setup



Power Management Setup Menu

❖ PowerOn by PCI Card

This option is used to set the power to wake up by PCI Card or OS.

❖ ACPI function

ACPI stands for “Advanced Configuration and Power Interface”. ACPI is a standard that defines power and configuration management interfaces between an operating system and the BIOS. In other words, it is a standard that describes how computer components work together to manage system hardware. In order to use this function the ACPI specification must be supported by the OS (for example, Windows2000 or WindowsXP).

❖ ACPI Suspend Type

This option is used to set the energy saving mode of the ACPI function. When you select “S1 (POS)” mode, the power will not shut off and the supply status will remain as it is, in S1 mode the computer can be resumed at any time. When you select “S3 (STR)” mode, the power will be cut off after a delay period. The status of the computer before it enters STR will be saved in memory, and the computer can quickly return to previous status when the STR function wakes.

❖ MODEM Use IRQ

This option is used to set the IRQ in which the modem can use. The system will automatically wake up when the modem receives an incoming call. In order for this function to work, the Fax/Modem must be connected to the WOM header on the motherboard.

❖ Power Button

This option is used to set the power down method. This function is only valid for systems using an ATX power supply. When “Instant-Off” is selected, press the power switch to immediately turn off power. When “Delay 4 Sec.” is selected, press and hold the power button for four seconds to turn off power.

❖ Power Failure

This item is used to set what action the PC will take with the power supply when it resumes after a sudden power failure. The available options are: Off (remain in turn off status), On (auto power on) and Former-Sts (resume with the previous status).

PnP/PCI Configurations



PnP/PCI Configurations Menu

❖ PNP OS Installed

Set this field to “Yes” if you are running Windows 95, which is PnP compatible. It is recommended to keep the default setting.

❖ Init Display First

This option is used to set which display device will be used first when your PC starts up.

❖ Resources Controlled By

This option is used to set whether the system is permitted to automatically distribute IRQ DMA and I/O addresses when each time that the machine is turned on.

❖ IRQ Resources

Press the <Enter> key, then manually set IRQ resources.

❖ PCI/VGA Palette Snoop

If you use a non-standard VGA card, use this option to solve graphic acceleration card or MPEG audio card problems (e.g., colors not accurately displayed).

❖ Maximum Payload Size

This option is used to set maximum TLP payload size for PCI Express devices. The unit is byte.

PC Health Status



PC Health Status Menu

❖ Case Open Warning

This option is used to enable or disable case open warning function.

❖ Shutdown Temperature

This option is used to set the system temperature upper limit. When the temperature exceeds the setting value, the motherboard will automatically cut off power to the computer.

❖ CPU Warning Temperature

This option is used to set the warning temperature for the system. When the temperature of CPU is higher than setting value, the motherboard will send out warning information.

❖ Vcore/+3.3V/+5V/12V/5VSB(V)

The current voltages will be automatically detected by the system.

❖ Voltage Battery

This option is used to show the voltage of battery.

❖ Current CPU/System Temperature

The Current CPU/System temperature will be automatically detected by the system.

❖ Current CPU/SYSTEM FAN Speed

The current CPU/System fan speed will be automatically detected by the system.

❖ Smart FAN Control

This option is used to enable or disable smart fan function. “PWM Mode” can enable smart fan function.

❖ CPU Fan Start Temperature

This option is used to set beginning temperature. when temperature gets to this value, Smart Fan starts to take effect.

❖ CPU Fan Start PWM Value

This option is used to set the beginning rotated speed for Smart Fan.

❖ CPU Fan Slope(PWM/°C)

This option is used to set the rotated speed level which Smart Fan varies with variational temperature. When temperature increase one degree, rotated speed raises the set level.

Load Optimized Defaults

Select this option and press <Enter>, and a dialogue box will pop up to let you load the optimized BIOS default settings. Select <Y> and then press <Enter> to load the optimized defaults. Select <N> and press <Enter> to exit without loading. The defaults set by BIOS are the optimized performance parameters for the system, to improve the performance of your system components. However, if the optimized performance parameters are not supported by your hardware devices, it will likely cause system reliability and stability issues. If you only want to load the optimized default for a single option, select the desired option and press the <F7> key.

Set Supervisor/User Password

The access rights and permissions associated with the Supervisor password are higher than those of a regular User password. The Supervisor password can be used to start the system or modify the CMOS settings. The User password can also start the system. While the User password can be used to view the current CMOS settings, these settings cannot be modified using the User password. When you select the Set Supervisor/User Password option, the following message will appear in the center of the screen, which will help you to set the password:

Enter Password:

Enter your password, not exceeding 8 characters, then press <Enter>. The password you enter will replace any previous password. When prompted, key in the new password and press <Enter>.

Chapter 3 BIOS Description

If you do not want to set a password, just press <Enter> when prompted to enter a password, and in the screen the following message will appear. If no password is keyed in, any user can enter the system and view/modify the CMOS settings.

Password Disabled!!!
Press any key to continue ...

Under the menu “Advanced BIOS Features”, if you select “System” from the Security Option, you will be prompted to enter a password once the system is started or whenever you want to enter the CMOS setting program. If the incorrect password is entered, you will not be permitted to continue.

Under the menu “Advanced BIOS Features”, if you select “Setup” from the Security Option, you will be prompted to enter a password only when you enter the CMOS setting program.

Save & Exit Setup

When you select this option and press <Enter>, the following message will appear in the center of the screen:

SAVE to CMOS and EXIT (Y/N)?Y

Press <Y> to save your changes in CMOS and exit the program; press <N> or <ESC> to return to the main menu.

Exit Without Saving

If you select this option and press <Enter>, the following message will appear in the center of the screen:

Quit Without Saving (Y/N)?N

Press <Y> to exit CMOS without saving your modifications; press <N> or <ESC> to return to the main menu.

Chapter 4

The utility CD that came with the motherboard contains useful software and several utility drivers that enhance the motherboard features.

This chapter includes the following information:

- ❖ Utility CD content
- ❖ Installing Drivers
- ❖ Installing Utilities

Utility CD Content

This motherboard comes with one Utility CD. To begin using the CD, simply insert the CD into your CD-ROM drive. The CD will automatically display the main menu screen.



1. Install Driver

Using this choice, you can install all the drivers for your motherboard. You should install the drivers in order and you need to restart your computer after the drivers all installed.

- | | |
|-----------------------|-----------------------------|
| A. VIA Chipset Driver | B. Realtek HDA Audio Driver |
| C. Realtek LAN Driver | D. VIA P4M900 VGA Driver |

2. Utility

Use this option to install additional software programs.

- | | |
|-----------------------------|-----------------------------|
| A. FOX ONE | B. Fox LiveUpdate |
| C. Microsoft DirectX 9.0 | D. Adobe Acrobat Reader |
| E. Norton Internet Security | F. Creat RAID Driver Floppy |


3. Link to Website

Click static Foxconn Logo to visit our homepage.

Chapter 4 Driver CD Introduction


Installing Drivers

There are two ways to install drivers, manual or automatic. Click the drivers that you want to install and begin the setup steps manually. Or you just click “One Click Setup” button to install the drivers automatically after installing Intel Chipset Driver.

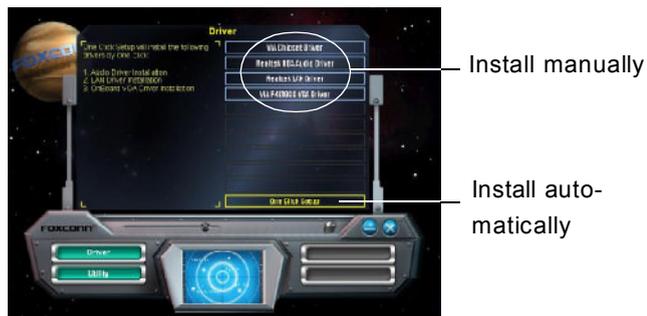

Installing Utilities

You can select the utilities that you want to install and begin the setup steps.

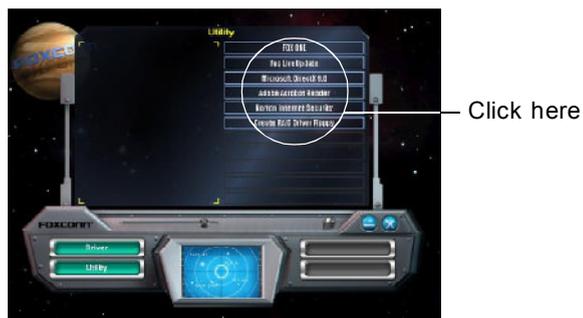

Chapter 5

This chapter will introduce how to use attached software.

This chapter provides the following information:

- ❖ FOX ONE
- ❖ Fox LiveUpdate

FOX ONE

FOX ONE is a powerful utility for easily modifying system settings. It also allows users to monitor various temperature values, voltage values, frequency and fan speed at any time.

With FOX ONE, you can


- Modify system performance settings, such as bus speeds, CPU voltages, fan speed, and other system performance options that are supported by the BIOS
- Monitor hardware temperature, voltage, frequency and fan speed

Supported Operating Systems:

- Windows 2000
- Windows XP (32-bit and 64-bit)
- Windows 2003 (32-bit and 64-bit)

Using FOX ONE:

1. Main Page

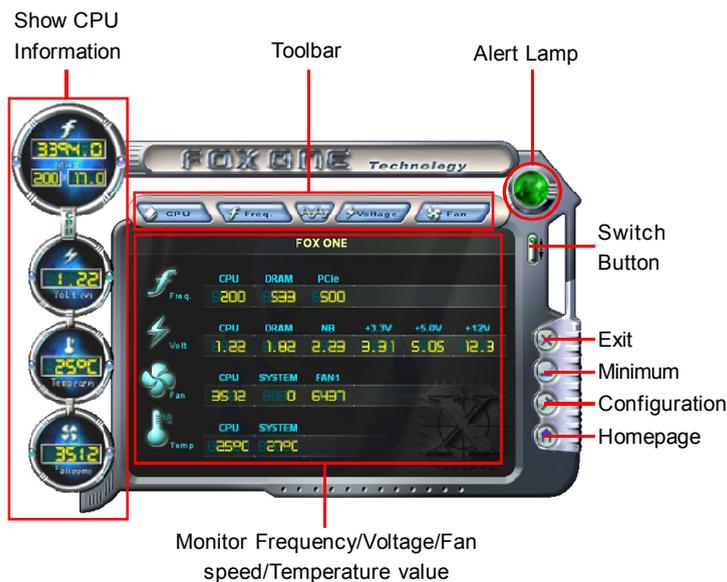

Chapter 5 *Directions for Bundled Software*

Toolbar

Use the toolbar to navigate to other pages.

Alert Lamp

When the system is in healthy status, the alert lamp color is green. When the system is in abnormal status, the alert lamp color is red.

Switch Button

Click this button, it will shorten to below figure. It helps you to monitor your system healthy status at any time.



Click here to return to previous status

Exit

Click this button to exit the program.

Minimum

Click this button to minimize the window.

Configuration


Click this button to configure the parameters for the program. It determines which items will be shown in shorten mode.

Homepage

Click this button to visit Foxconn motherboard website.


2. CPU Page - CPU Control

This page lets you select and run the FOX ONE developed benchmarks to determine the current performance level of the system. You can also adjust by manual. Only this page is set to Manual Adjustment, the Freq., Voltage, and Fan pages can be adjusted by manual.

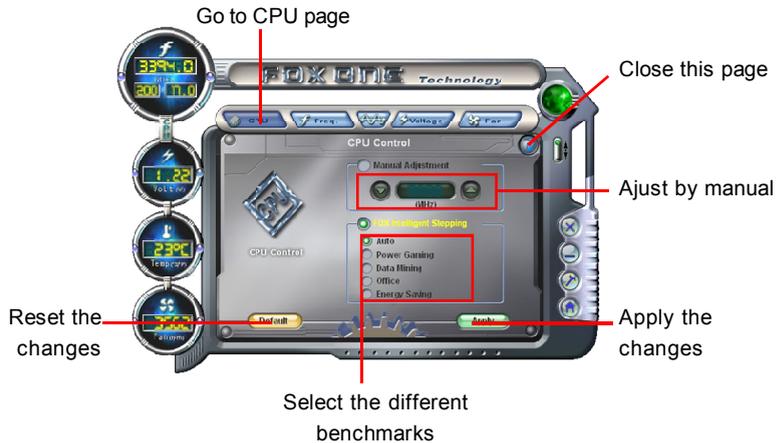


3.1 Limit Setting - CPU Temp.

This page lets you to set CPU high limit temperature and enable the alert function.

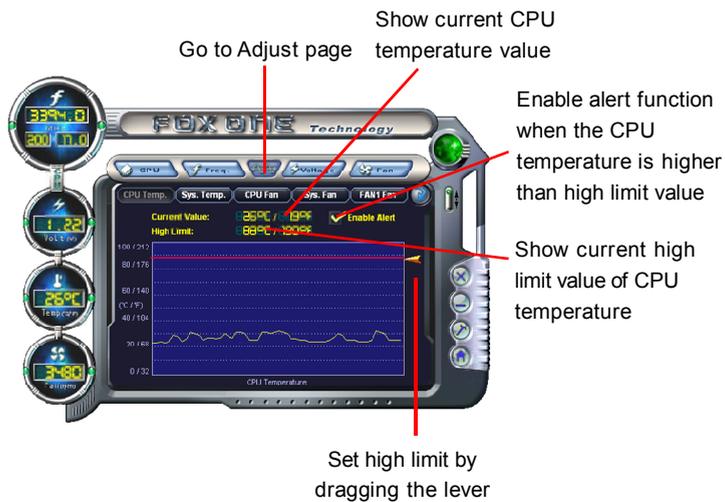


3.2 Limit Setting - Sys Temp.

This page lets you to set system high limit temperature and enable the alert function.

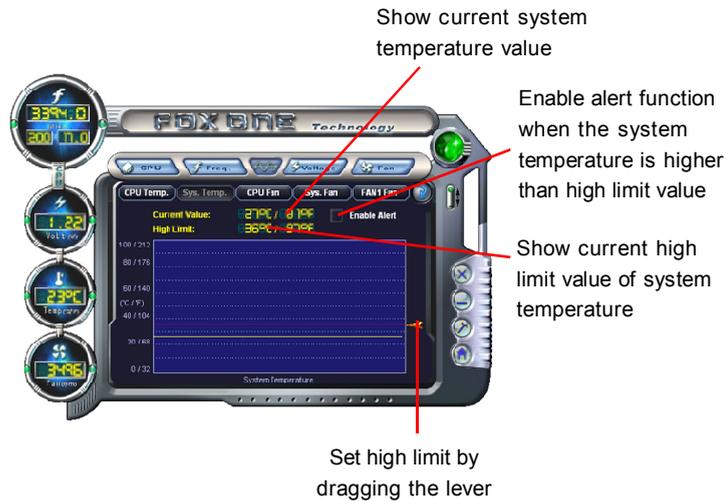


3.3 Limit Setting - CPU Fan

This page lets you to set CPU fan low limit rpm and enable the alert function.

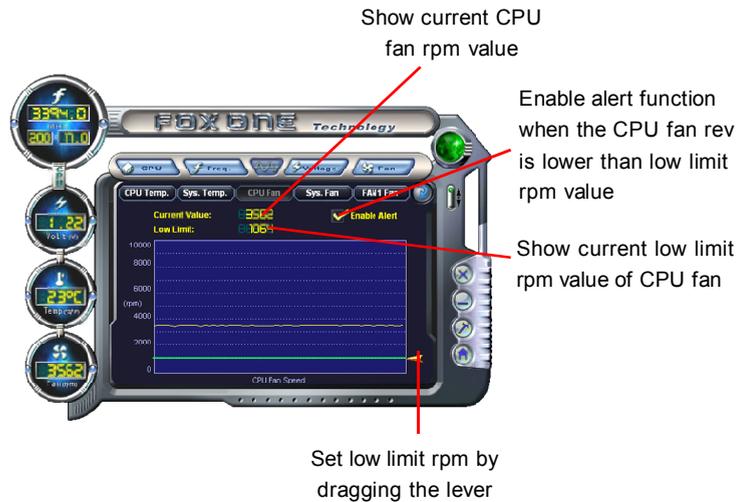


3.4 Limit Setting - Sys Fan

This page lets you to set system low limit rpm and enable the alert function.

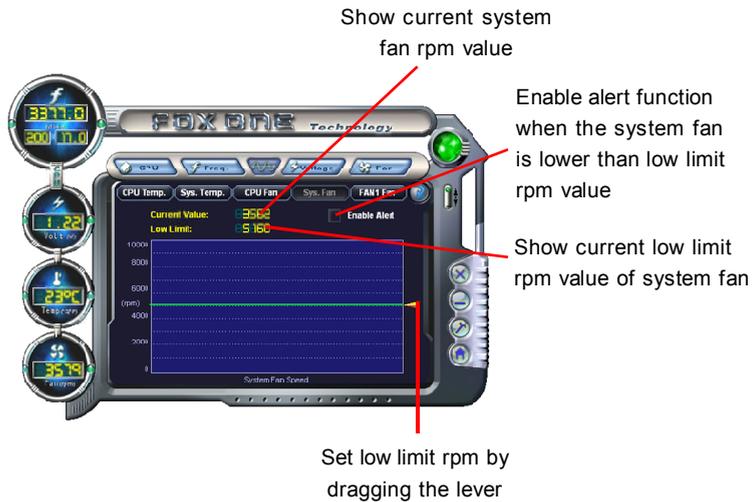


3.5 Limit Setting - Chassis Fan

This page lets you to set chassis fan low limit rpm and enable the alert function.

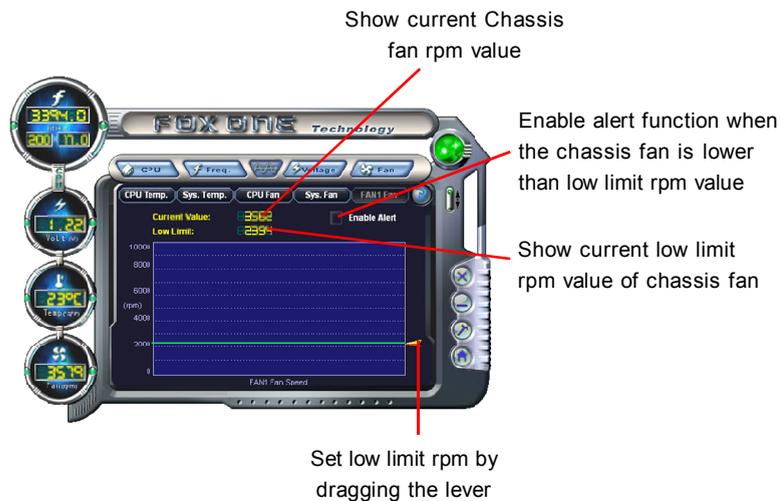

4. Fan Page - Fan Control

This page lets you enable smart Fan function or set fan speed by manual.

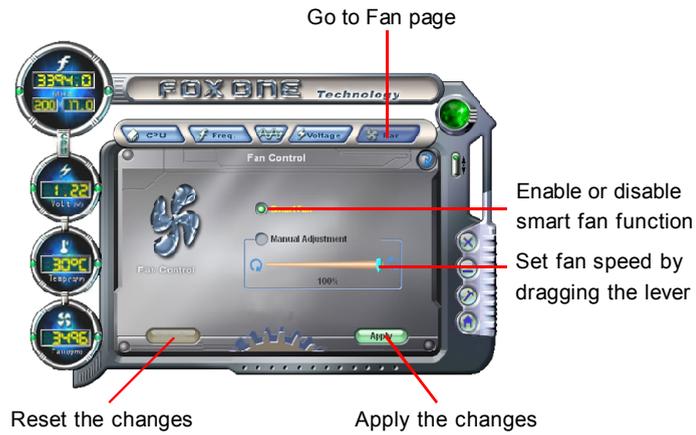

Fox LiveUpdate

Fox LiveUpdate is a useful utility for backuping and updating the system BIOS, drivers and utilities by local or online.


Supported Operating Systems:

- Windows 2000
- Windows XP (32-bit and 64-bit)
- Windows 2003 (32-bit and 64-bit)

Using Fox LiveUpdate:


1.1 Local Update - BIOS Info.

This page lets you know your system BIOS information.

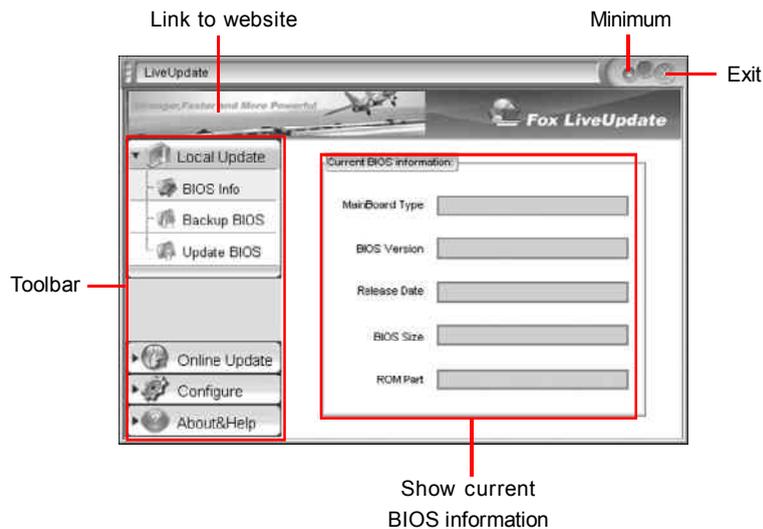


1.2 Local Update - Backup

This page lets you backup your system BIOS. Click “Backup”, then give a name. Click “Save” to finish the backup operation.

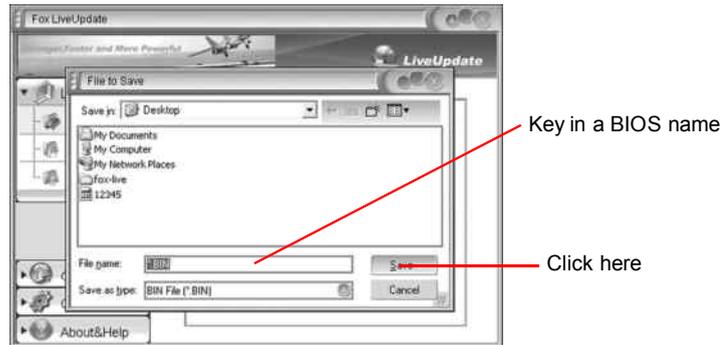

1.3 Local Update - Update

This page lets you update your system BIOS from Internet. After click “Update”, there will show warning message, please read it carefully. If you still want to continue, click “Yes”. Then load a local BIOS file and follow the wizard to finish the operation.


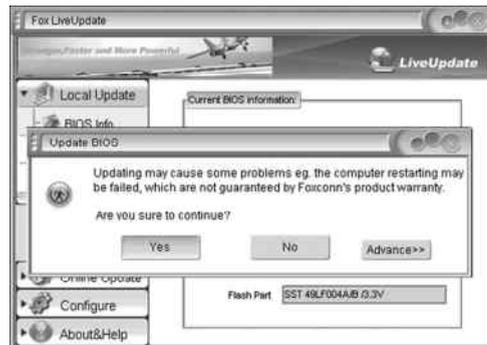


 **Note:**

Fox LiveUpdate will auto backup BIOS before update because we have enabled this function in Configure option.


2.1 Online Update - Update BIOS

This page lets you update your system BIOS from Internet. Click "start", it will search the new BIOS from Internet. Then follow the wizard to finish the update operation.

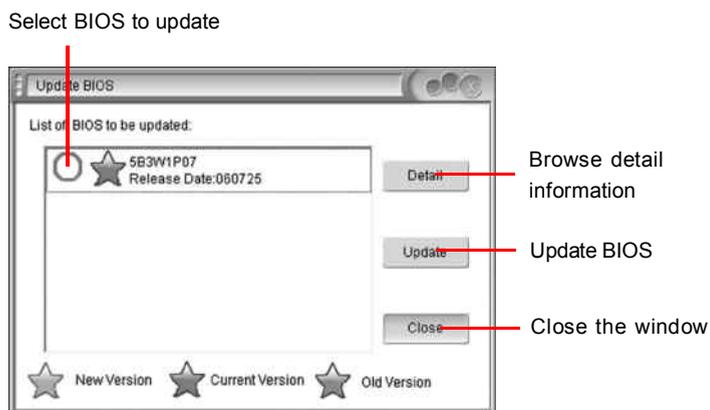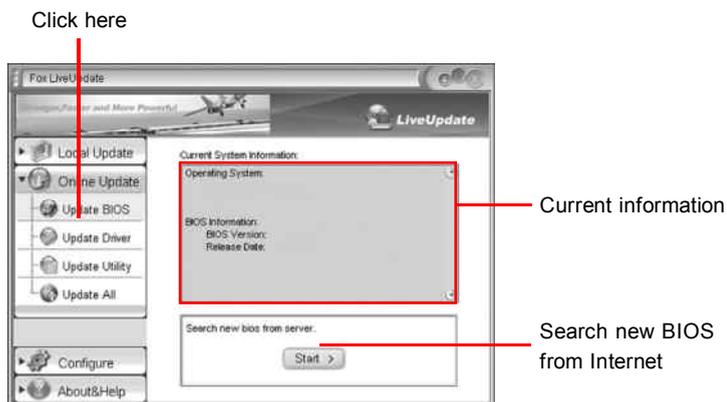


2.2 Online Update - Update Driver

This page lets you update your system drivers from Internet. Click “start”, it will search the new drivers from Internet. Then follow the wizard to finish the update operation.

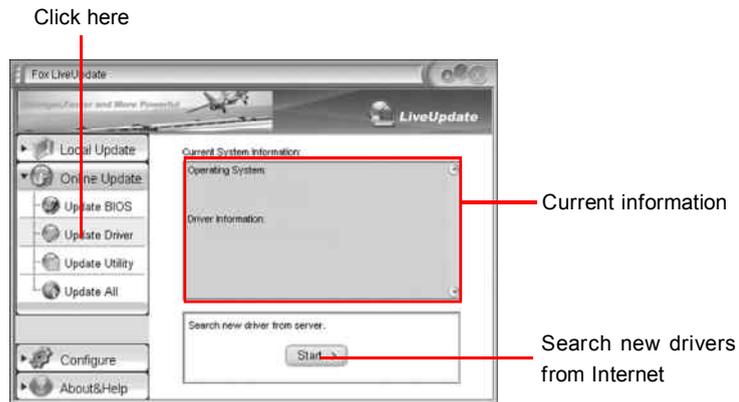


Select the drivers to update

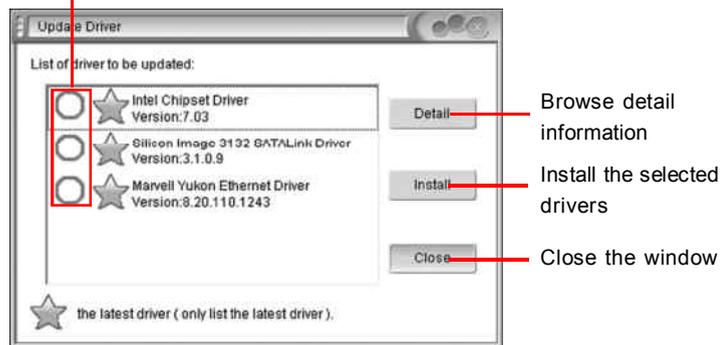


2.3 Online Update - Update Utility

This page lets you update utilities from Internet. Click “start”, it will search the new utilities from Internet. Then follow the wizard to finish the update operation.

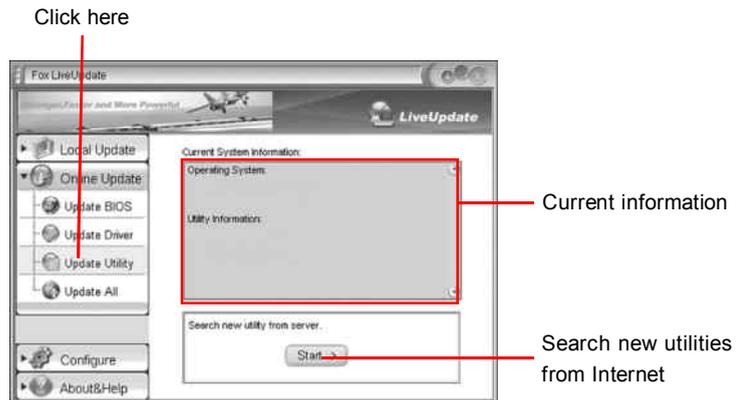


2.4 Online Update - Update All

This page lets you update your system drivers from Internet. Click “start”, it will search all new BIOS/drivers/utilities from Internet. Then follow the wizard to finish the update operation.

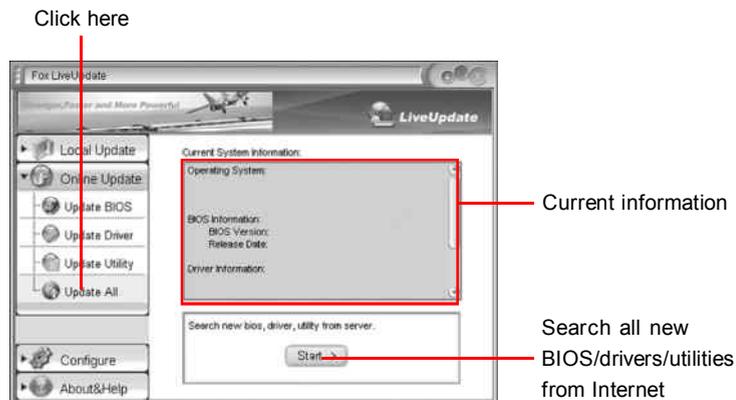


3.1 Configure - option

This page lets you set auto search options. After your setting, the utility will start searching and related information will show on the task bar.

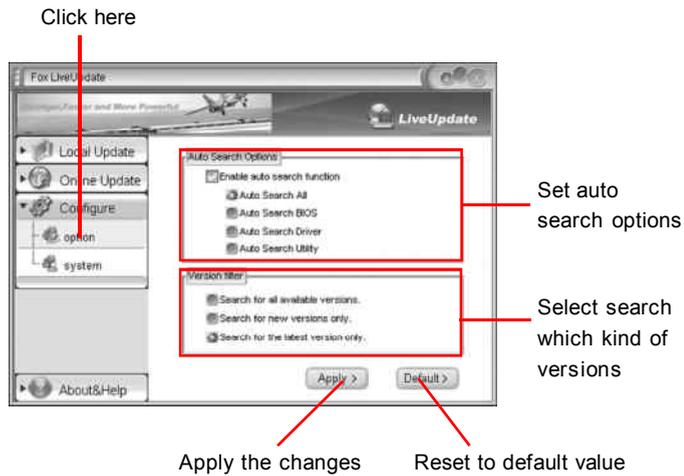


 **Note:**

When enable auto search function, Fox LiveUpdate will appear searching result on task-bar. Double click the icon, you can see the detail information.

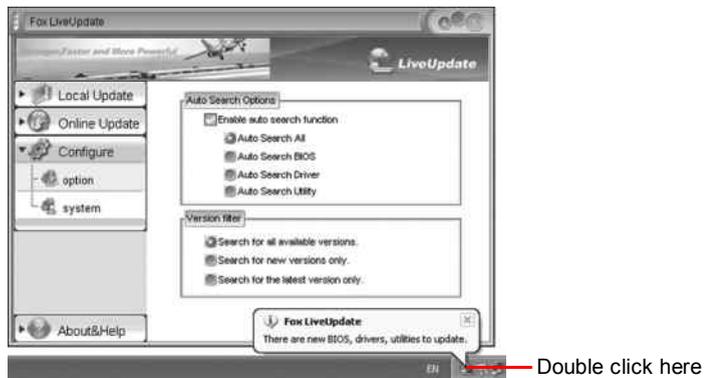

3.2 Configure - System

This page lets you set the backup BIOS location and change different skin of the utility.

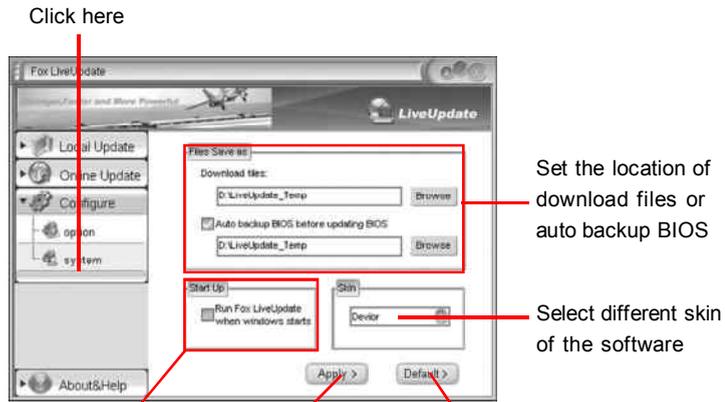

Determine if the Fox LiveUpdate can auto run when the system starts up

Apply the changes

Reset to default value

4. About & Help

This page shows some information about Fox LiveUpdate.

