

PK - 009

USER'S MANUAL

PK - 009

USER'S MANUAL

IBM PCTM, PC/XTTM and PC/ATTM are registered trademarks of International Business Machines Corporation.

CONTENT OF TABLE

About the BABY-AT Motherboard	1
Quick Installing Guide	2
How to Set up An Evaluation Motherboard	4
EMS Driver Set-Up	10
Connector Pinout	12
Instruction for EMS Driver Preparation	14
Memory Address	16
EMS Interface	17
System Block Diagram	18
BABY-AT Motherboard Layout	19

ABOUT THE BABY-AT MOTHERBOARD

Specification

- * 6 or 12 MHz 80286 selectable by keyboard or by hardware switch
- * 4 mega byte high-speed memory standard
- * 16 mega byte expandable in the protected virtual address mode
- * 2 sockets for PHOENIX or AWARD or ERSO or AMI BIOS fully compatible with IBM BIOS.
- * 8 I/O expansion slots
- * Socket for 80287 numeric processor
- * CMOS clock and calendar circuit
- * Battery on-board and easily serviceable for replacement
- * 6 custom chips set used to reduce total ICs
- * EMS control circuit
- * 24-bit addressing and 16-bit data pathing capabilities
- * 16-level interrupt
- * 7-channel direct memory access (DMA)
- * 3-programmable timers
- * Speaker/keyboard connector
- * Standard AT power supply connector
- * Small AT dimensions
- * High temperature burned-in
- * 0-wait-state or 1-wait-state selectable.

QUICK INSTALLING GUIDE

Peripherals Required:

- 1) **BABY-AT** 4 Mega Byte system board.
- 2) IBM AT power supply or compatible equivalent
- 3) IBM monochrome/graphic display board or color card or EGA card or compatible equivalent.
- 4) IBM keyboard or compatible equivalent.
- 5) Monochrome or color monitor or EGA Monitor.

Pracdures:

- 1) Connect power supply connectors to P8 as marked.
- 2) Plug in keyboard connector to the keyboard receptical (J22) at the back.
- 3) Install monochrome or color graphic display board in expansion slot 1 or 7.
- 4) Select monochrome or color at switch (SW1)

Bit1-2	Bit2-3	TYPE
ON	OFF	MGP
OFF	ON	color

- 5) Connect monitor cable to the display board.
- 6) Make sure "LOW BYTE" or "EVEN BYTE" BIOS is ON IC23.
- 7) Make sure "HIGH BYTE" or "ODD BYTE" BIOS is ON IC33.
- 8) Set the RAM size as follows by DIP Switch DSP1: #6-8.

#6	#7	#8	MODE	SIZE
ON	ON	ON	0	512KB
ON	ON	OFF	1	640KB
ON	OFF	ON	2	640KB + 384KB
ON	OFF	OFF	3	640KB + EMS (384KB)
OFF	ON	ON	4	640KB + 1408KB
OFF	ON	OFF	5	640KB + EMS (1048KB)
OFF	OFF	ON	6	640KB + 3456KB
OFF	OFF	OFF	7	640KB + EMS (3456KB)

- 9) On Board 3.6V 60mA Back-up battery.
- 10) For those which have the IBM PC/ATTM chassis or compatible equivalent, plug in the speaker connector to SP, and the Key Lock and Power LED connector to J20 at the front.
- 11) Turn on the monitor.
- 12) Turn on the power supply.

HOW TO SET UP AN EVALUATION MOTHERBOARD

MODE	SW1	SW2	SW3	SW4
0	ON	ON	ON	ON
1	OFF	ON	ON	ON
2	ON	OFF	ON	ON
3	ON	ON	OFF	ON
4	ON	ON	ON	OFF
5	OFF	OFF	OFF	OFF
6	OFF	OFF	OFF	ON
7	OFF	OFF	OFF	ON

A. BIOS ROM

1. BIOS ROM (Lo) is inserted into IC22.
2. BIOS ROM (Hi) is inserted into IC23.
3. When 27128 type is used, DSP1 switch -5 is set to ON.
4. When 27256 type is used, DSP1 switch -5 is set to OFF.


B. KEYBOARD BIOS

1. 8742 with keyboard BIOS programmed in it is inserted into 8742-marked location.

JUMPER	SETTING	FUNCTION DESCRIPTION
JP1	ON (JP2, JP3, JP4 OFF)	8742 PIN #32 OUTPUT
JP2	ON (JP1, JP3, JP4 OFF)	8742 PIN #27 OUTPUT
JP3	ON (JP1, JP2, JP4 OFF)	8742 PIN #23 OUTPUT
JP4	ON (JP1, JP2, JP3 OFF)	8742 PIN #30 OUTPUT

C. DRAM

1. A total of 8 (0-7) modes are available, depending on memory sizes, for insertion of DRAMs. A figure below shows ways of the DRAM insertion. When 4164 or 41256 DRAM is used, either DRAM is inserted to the 16-pin side. When 411000 DRAM is used, it is inserted to the 18-pin side.

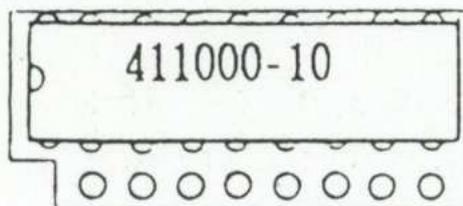

2. For base RAM setting, J18 is set to 2-3 side.
3. Mode 0
A total of 18 DRAMs (41256-10) are inserted onto BANK 0. The DSP1 switches -6, -7, and -8 are each set to ON. In this instance, the memory location is 00000 – 7FFFFH and the memory size is 512KB.
4. Mode 1
A total of 18 DRAMs (41256-10) are inserted onto BANK 0, and a total of 18 DRAMs (4164-10) are inserted onto BANK 1. The DSP1 switches -6, -7, and -8 are set to ON, ON, OFF, respectively. In this instance, the memory location is 00000 – 9FFFFH, and the memory size is 640KB.
5. Mode 2
A total of 18 DRAMs (41256-10) are inserted onto BANK 0, and a total of 18 DRAMs (41256-10) are inserted onto BANK 1. The DSP1 switches -6, -7, and -8 are set to ON, OFF, ON, respectively. In this instance, the memory locations are 00000 – 9FFFFH, 100000H – 15FFFFH, and memory size is 640KB + 384KB.
6. Mode 3
A total of 18 DRAMs (41256-10) are inserted onto BANK 0, and a total of 18 DRAMs (41256-10) are inserted onto BANK 1. The DSP1 switches -6, -7, and -8 are set to ON, OFF, OFF, respectively. In this instance, the memory location is 00000 – 9FFFFH, and the memory size is 640KB + EMS (384KB). The EMS (384KB) memory can be used as an EXPAND memory with a capacity of 16KB x 24 pages, by using a SUNTAC EMS driver program.
7. Mode 4
A total of 18 DRAMs (411000-10) are inserted onto

BANK 0. The DSP1 switches -6, -7, and -8 are set to OFF, ON, ON, respectively. In this instance, the memory locations are 00000 – 9FFFFH, 100000H – 25FFFFH, and the memory size is 640KB + 1,408KB.

8. Mode 5

A total of 18 DRAMs (411000-10) are inserted onto BANK 0. The DSP1 switches -6, -7, and -8 are set to OFF, ON, OFF, respectively. In this instance, the memory location is 00000 – 9FFFFH, and the memory size is 640KB + EMS (1,408KB). The EMS (1,4808KB) memory can be used as an EXPAND memory with a capacity of 16KB x 88 pages, by using a SUNTAC EMS driver program.

9. Mode 6

A total of 18 DRAMs (411000-10) are inserted onto BANK 0, and a total of 18 DRAMs (411000-10) are inserted onto BANK 1. The DSP1 switches -6, -7, and -8 are set to OFF, OFF, ON, respectively. In this instance, the memory locations are 00000 – 9FFFFH, 100000H – 45FFFFH and the memory size is 640KB + 3,456KB.

10. Mode 7

A total of 18 DRAMs (411000-10) are inserted onto BANK 0, and a total of 18 DRAMs (411000-10) are inserted onto BANK 1. The DSP1 switches -6, -7, and -8 are set to OFF, OFF, OFF, respectively. In this instance, the memory location is 00000 – 9FFFFH, and the memory size is 640KB + EMS (3,456KB). The EMS (3,456KB) memory can be used as an EXPAND memory with a capacity of 16KB x 216 pages, by using a SUNTAC EMS driver program.

D. MONITOR TYPE

1. When a color monitor is used, the DSP1 #2 ON.
2. When a monochrome monitor is used, DSP1 #2 OFF 1-2 side.

E. CLOCK SPEED SWITCHING

1. When fixing to High Speed:

TUBSET (JP9) is set to 2-3 side, and DSP 1switch-1 is set to OFF.

2. When fixing to Low Speed:

TUBSET (JP9) is set to 2-3 side, and DSP 1switch-1 is set to ON.

3. When switching speeds externally:

TUBSET (JP9) is set to 1-2 side, and a mechanical switch is installed onto TUB. (JP7)

TUB (JP7) in state of OPEN provides LOW Speed, and TUB (JP7) in state of CLOSE provides High Speed.

When TUB (JP7) is OPEN, the clock speed can be switched by use of the keyboard.

- A. **CNTL** + **ALT** + **-** - Change speed
- B. **CNTL** + **ALT** + **+** - Turn to High speed
- CNTL** + **ALT** + **-** - Turn to Low speed
- C. **CNTL** + **ALT** + **H** - Turn to High speed
- CNTL** + **ALT** + **L** - Turn to Low speed

When TUB (JP7) is OPEN and then power is turned on, it will turn to Low Speed.

When TUB (JP7) is CLOSE and power is turned on, it will invalidate the keyboard operation and will turn to High Speed at all times.

F. I/O WAIT SELECTION

AUTOSWITCHABLE 6 WAIT is selected when the external clock speed is switched to High Speed; 4 WAIT is selected when it is switched to Low Speed.

G. EMS PORT ADDRESS

1. When using 0E8H- 0EFH as EMS Port Address, DSP1 switch -4 is set to ON. SUNTAC EMS driver program setting is used at this point.
2. When using 098H- 09FH as EMS Port Address, DSP1 switch -4 is set to OFF SUNTAC EMS driver program setting is used at this point.


I. RESET SWITCH

A mechanical switch is installed onto JP6. When JP6 is OPEN, the CPU will run, and when JP6 is CLOSE, the CPU will be reset.


J. MAIN MEMORY (0 WAIT MODE)

A following additional circuit needs to be installed when main memories are used at 0 WAIT mode:


1. An additional circuit to be needed for 0 WAIT when DRAM is in state of READ or WRITE:

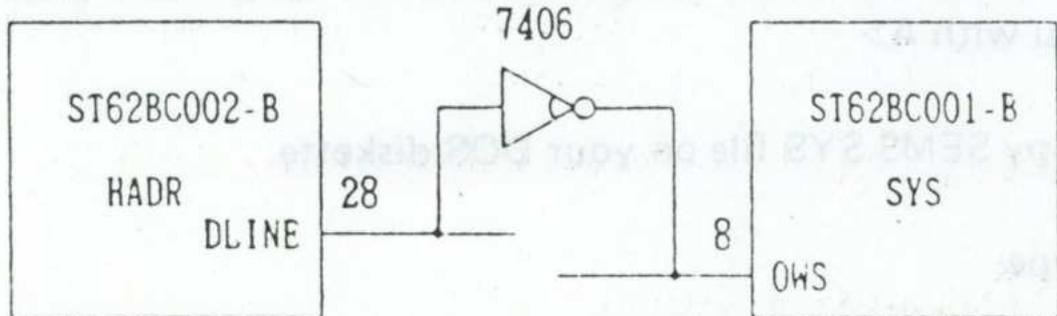

2. An additional circuit to be needed for 0 WAIT when DRAM is in state of READ:

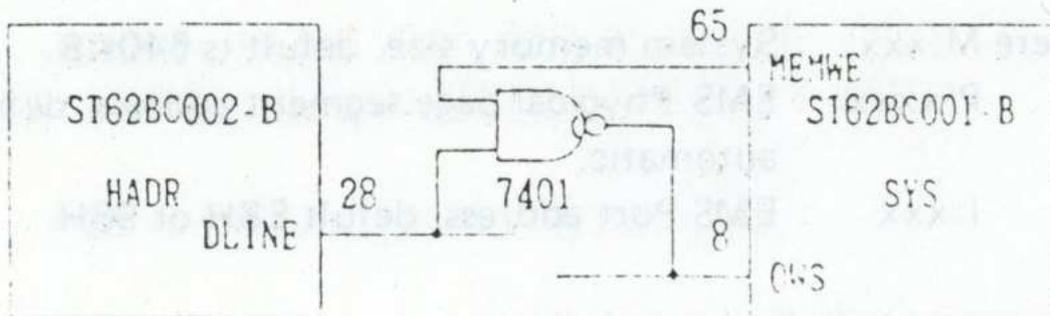

3. An additional circuit to be needed for 0 WAIT when DRAM is in state of READ or WRITE and when PROM is in state of READ:

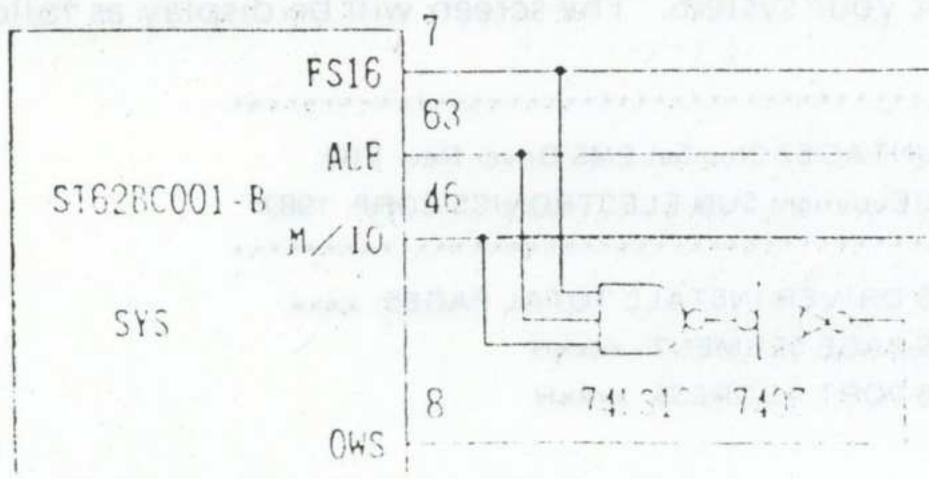

EMS DRIVER SET-UP

1. Boot PC system by using DOS and the system will prompt you with A>
2. Copy SEMS.SYS file on your DOS diskette.
3. Type:

```
COPY CON CONFIG.SYS<ENTER>
```

```
DEVICE=SEMS.SYS /M:xxx /P:xxxx /I:xxx<ENTER>
```

```
^Z<ENTER>
```

where M:xxx : System memory size, default is 640KB.

P:xxxx : EMS Physical page segment address, default automatic.

I:xxx : EMS Port address, default E8H or 98H.

The screen will display as follows:

```
1 File(s) copied  
A>
```

4. Reboot your system. The screen will be display as follows:

```
.....  
SUNTAC-62 Chip Set EMS Driver Rev. 1.00  
(C)Copyright SUN ELECTRONICS CORP. 1987  
.....  
EMS DRIVER INSTALL TOTAL PAGES: xxxx  
EMS PAGE SEGMENT. xxxxH  
EMS PORT ADDRESS. xxxxH  
A
```

5. You can run the RAMBANK software like VD.SYS, PB.COM, RAMTEST. example:

When 384K has been set as virtual disk, then type in command line in:

COPY CON CONFIG.SYS<ENTER>

DEVICE=SEMS.SYS<ENTER>

DEVICE=VD.SYS /384/<ENTER>

^Z<ENTER>

(1) THE EMS software supports SEMS, SEMS4, SEMS5.

(2) IF you have VGA & ARCHET in your system, you probably need to set DEVICE=SEMS5, SYS/P:CC00/.

CONNECTOR PINOUT

1. POWER SUPPLY CONNECTOR (P8)

PIN	DESCRIPTION
1	POWER GOOD
2	+ 5V DC
3	+12V DC
4	-12V DC
5	GROUND
6	GROUND
7	GROUND
8	GROUND
9	- 5V DC
10	+ 5V DC
11	+ 5V DC
12	+ 5V DC

2. SPEAKER CONNECTOR (SP)

PIN	DESCRIPTION
1	SPEAKER DATA OUT
2	KEY
3	GROUND
4	+ 5V DC

3. KEYBOARD SWITCH & LED CONNECTOR (J20)

PIN	DESCRIPTION
1	LED POWER
2	KEY
3	GROUND
4	KEYBOARD INHIBITOR
5	GROUND

4. KEYBOARD CONNECTOR (J22)

PIN	DESCRIPTION
1	KEYBOARD CLOCK
2	KEYBOARD DATA
3	SPARE
4	KEYBOARD GROUND
5	+ 5V DC

5. RESET CONNECTOR (JP6)

PIN	DESCRIPTION
1	RESET IN
2	GROUND

6. HIGH SPEED LED CONNECTOR (TUBLED) (JP9)

PIN	DESCRIPTION
1	+ ANODE
2	- CATHODE

- NOTES: 1. XTAL SET 24MHz = LED ON
2. XTAL SET 12MHz = LED OFF

INSTRUCTION FOR EMS DRIVER PREPARATION

1. After power is turned on, and before DRAM begins refreshing, an initial value needs to be written in EMS Register R0 (This writing to be done within BIOS ROM).

Initial values

- (1) Write 9DH when I/O port address is E8H.
- (2) Write 93H when I/O port address is 98H.

2. When data has been written in EMS Registers R0-R7, Bit 7 in R0 has to be read as a way to confirm if the Register contents have been transferred from DADR to HADA.

- (1) When Bit 7 in R0 is 1, it means that the transfer has yet to be achieved.
- (2) When Bit 7 in R0 is 0, it means that the transfer has been achieved.

3. The system memory size in EMS Register shall not be set at any value larger than 640KB (A0H).
4. The segment start address in EMS Register R3 shall not be set at any value smaller than the system memory size (R2).
5. When setting the page Nos. of banks 0-3 in EMS Registers R4-R7, these Nos. shall correspond to these page Nos. counted, by 16KB unit, from the DRAM address 0000 0000H.

Example

When EMS has a system memory size of 640KB and the usable page head is to be set: $640 \div 16 = 40$ (28H)

Therefore, 28H is set as the page head.

Incidentally, a physical page can be released by setting its corresponding bank at 0.

6. The banks 0-3 in EMS Registers R4-R7 are always in correspondence to physical pages 0-3.
7. When the system memory size is 1MB (as shown in the Memory Address Setting 3 in an attached Table), the setting of EMS page No. at 40H will result in production of an image from the memory's 0000 : 0000H.
8. EMS maximum page Nos. are 216 pages at 4MB. The memory size that can be used with DOS is 640KB.

MEMORY ADDRESS

DRAM

NO	DIP Switch setting			Memory type		Memory size	Memory Location
	S6	S7	S8	BANK1	BANK0		
0	ON	ON	ON	NONE	256Kbits	512KB	0~7FFFF
1	ON	ON	OFF	64Kbits	256Kbits	640KB	0~9FFFF
2	ON	OFF	ON	256Kbits	256Kbits	640KB+384KB	0~9FFFF 10000~15FFFF
3	ON	OFF	OFF	256Kbits	256Kbits	640KB+EMS(16KBx24pages)	0~9FFFF
4	OFF	ON	ON	NONE	1Mbits	640KB+1408KB	0~9FFFF 10000~25FFFF
5	OFF	ON	OFF	NONE	1Mbits	640KB+EMS(16KBx88pages)	0~9FFFF
6	OFF	OFF	ON	1Mbits	1Mbits	640KB+3456KB	0~9FFFF 10000~45FFFF
7	OFF	OFF	OFF	1Mbits	1Mbits	640KB+EMS(16KBx216pages)	0~9FFFF

PROM

Memory type	ROM0, ROM2 Location address	ROM1, ROM3 Location address
128Kbits	0E0000 ~ 0E7FFF 0F0000 ~ 0F7FFF FE0000 ~ FE7FFF FF0000 ~ FF7FFF	0E8000 ~ 0EFFFF 0F8000 ~ 0FFFFF FE8000 ~ FEFFFF FF8000 ~ FFFFFF
256Kbits	0E0000 ~ 0EFFFF FE0000 ~ FEFFFF	0F0000 ~ 0FFFFF FF0000 ~ FFFFFF

EMS INTERFACE


EMS Port Address


EMS98/E8	Location	Description
"L"	E8H	Access to 80287 is impossible at E8 - EFH.
"H"	98H	Access to 74LS612 is impossible at 98 - 9FH.

EMS Registers

		D7	D6	D5	D4	D3	D2	D1	D0	Description
R0	Variable port address.	T/R flag	Variable port address.							T/R flag Read 1: Transfer yet to be done 0: Transfer done Write 1: Read possible 0: Read impossible
	Transfer flag. (Read) R0 Read enable (Write)		A9	A8	A7	A6	A5	A4	A3	
R1	Reserved.									
R2	System memory size.	A19	A18	A17	A16	A15	A14	fixed 0		Read impossible (AOH:00000~9FFFFH)
R3	Segment start address.	A19	A18	A17	A16	A15	A14	fixed 0		Read impossible (COH:segmentC000H)
R4	Bank 0	P7	P6	P5	P4	P3	P2	P1	P0	Read impossible
R5	Bank 1	P17	P16	P15	P14	P13	P12	P11	P10	Read impossible
R6	Bank 2	P27	P26	P25	P24	P23	P22	P21	P20	Read impossible
R7	Bank 3	P37	P36	P35	P34	P33	P32	P31	P30	Read impossible

SYSTEM BLOCK DIAGRAM

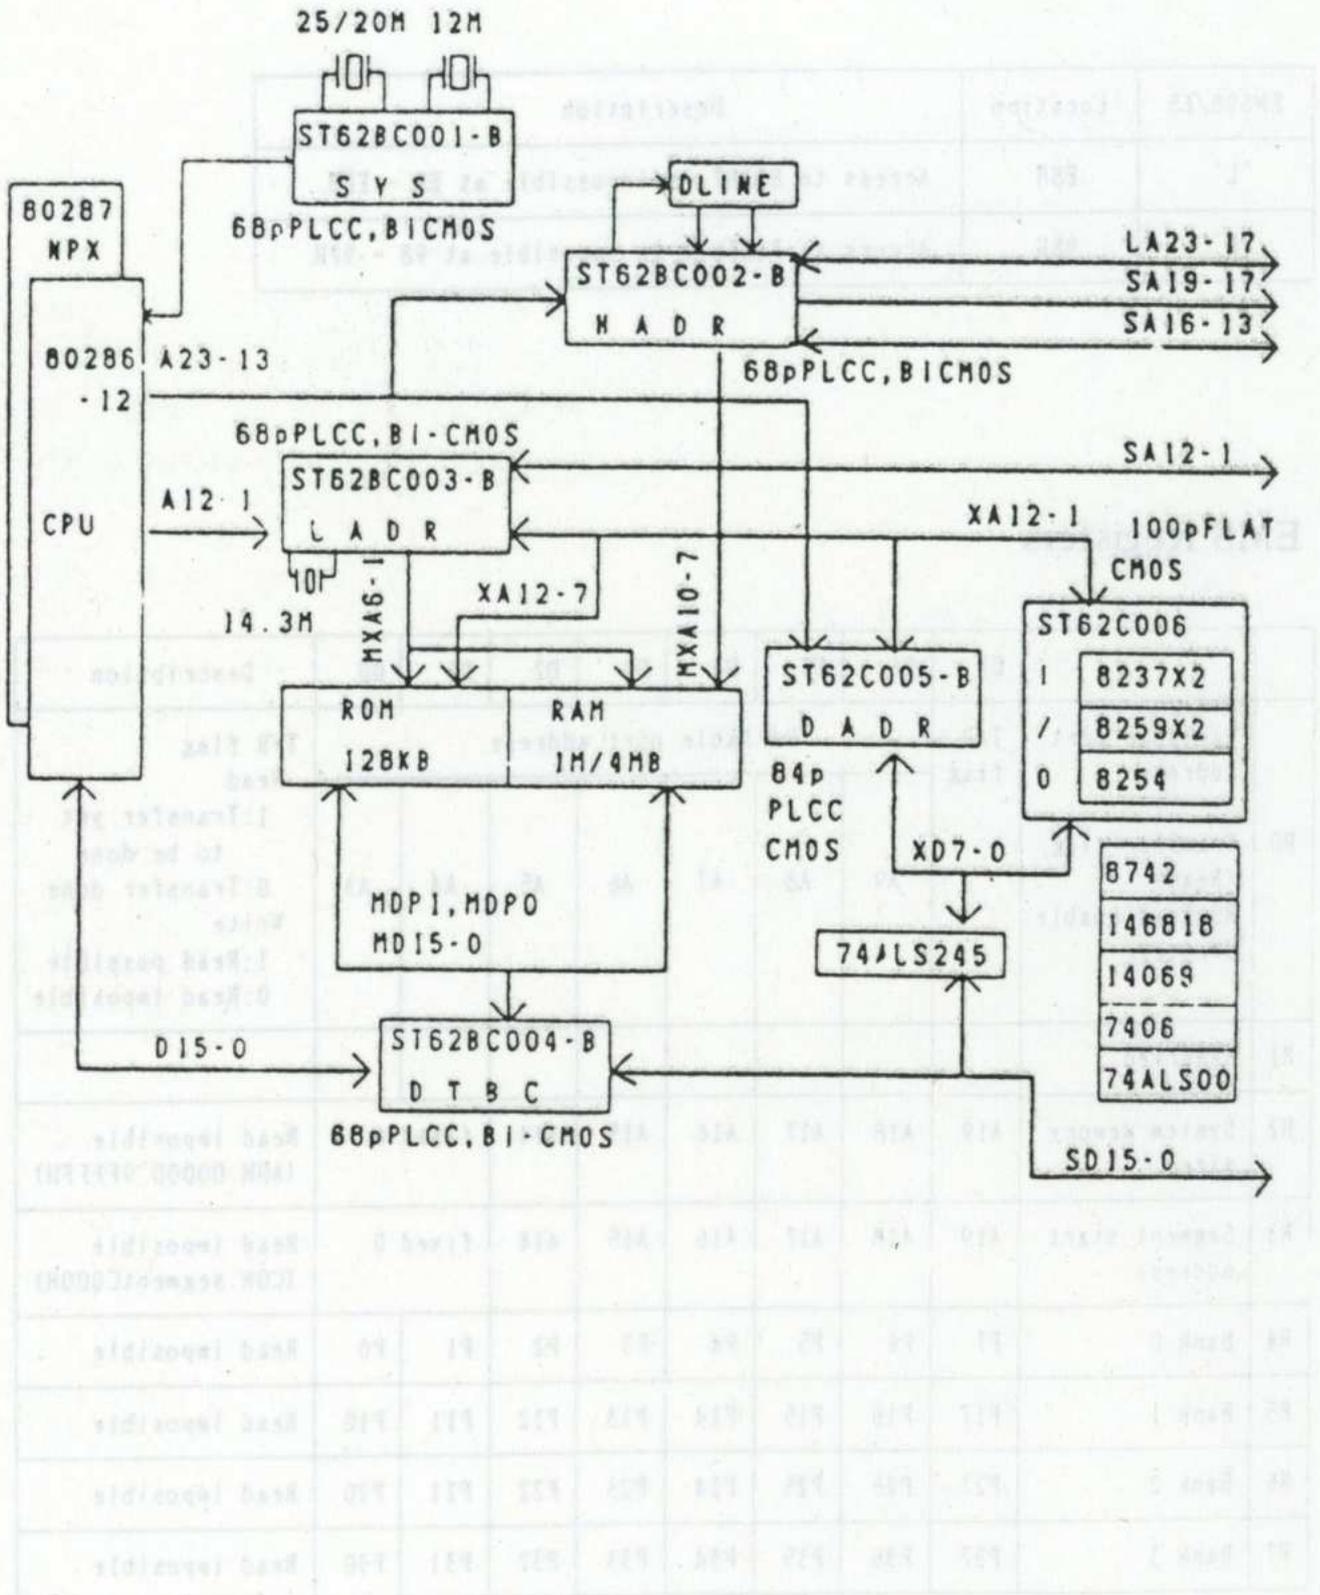

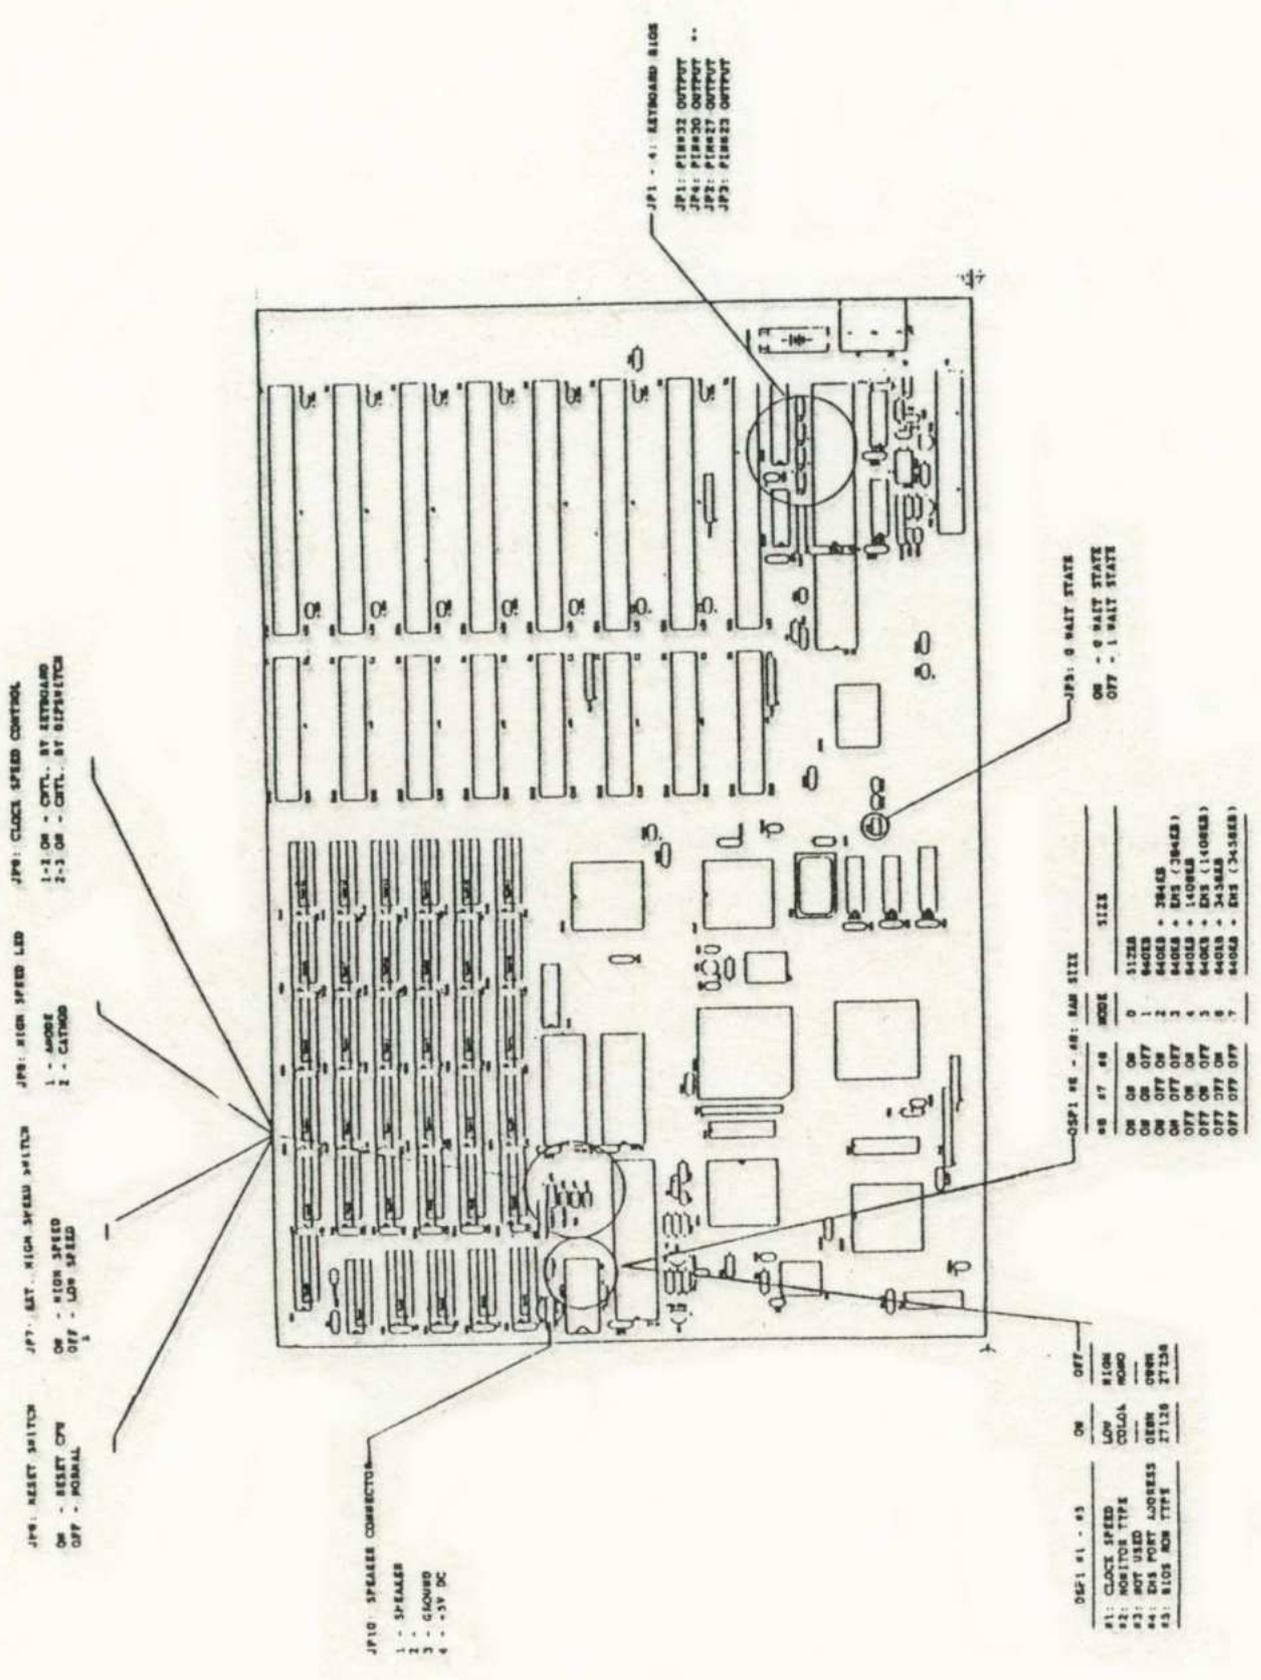

JP4. RESET SWITCH
 ON - RESET CPU
 OFF - NORMAL

JP7. HST. HIGH SPEED SWITCH
 ON - HIGH SPEED
 OFF - LOW SPEED

JP8. HIGH SPEED LED
 1 - ANODE
 2 - CATHOD

JP9. CLOCK SPEED CONTROL
 1-1 ON - CTRL. BY RETROGRADE
 2-3 ON - CTRL. BY BIPHASIC

JP10. SPEAKER CONNECTOR
 1 - SPEAKER
 2 - GROUND
 4 - +5V DC

JP1 - 4. EXTENDED SIOB
 JP1: FIRM32 OUTPUT
 JP4: FIRM30 OUTPUT
 JP2: FIRM27 OUTPUT
 JP3: FIRM23 OUTPUT

JP5. 0 WAIT STATE
 ON - 0 WAIT STATE
 OFF - 1 WAIT STATE

88	87	86	MODE	SIZE
ON	ON	ON	0	312KB
ON	ON	OFF	1	840KB
ON	OFF	ON	2	840KB + 284KB
ON	OFF	OFF	3	840KB + 8MS (284KB)
OFF	ON	ON	4	840KB + 140KB
OFF	ON	OFF	5	840KB + 8MS (140KB)
OFF	OFF	ON	6	840KB + 343KB
OFF	OFF	OFF	7	840KB + 8MS (343KB)

0821	81	83	ON	OFF	LOW	HIGH
81:	CLOCK SPEED		LOW	HIGH		
82:	MONITOR TYPE		COLOA	MONO		
83:	NOT USED					
84:	8MS PORT ADDRESS		078H			
85:	810S MON TYPE		27126			


• NOTE: KEYBOARD ENCODER OUTPUT PIN IS BIOS DEPENDENT PLUS SELECT ONE OF FOUR AT A TIME

IC 23 BIOS ROM HI
IC22 BIOS ROM LO
OWS = 0 WAIT
2 1 OPEN - 1 WAIT
2 1 CLOSE - 0 WAIT

JPG: RESET SWITCH
2 1 OPEN/RUN
2 1 CLOSE/RESET CPU
TUB: HARDWARE TURBO SWITCH
2 1 OPEN/LOWSPEED
2 1 CLOSE/HI SPEED
TUBLED: HIGH SPEED LED
1 - ANODE
2 - CATHODE
TUBSET: TURBO SETTING
SOFTWARE OR TUB CONTROL
DIP CONTROL

PJ1: PIN32
PJ4: PIN30
PJ2: PIN27
PJ3: PIN23

BACKUP BATTERY

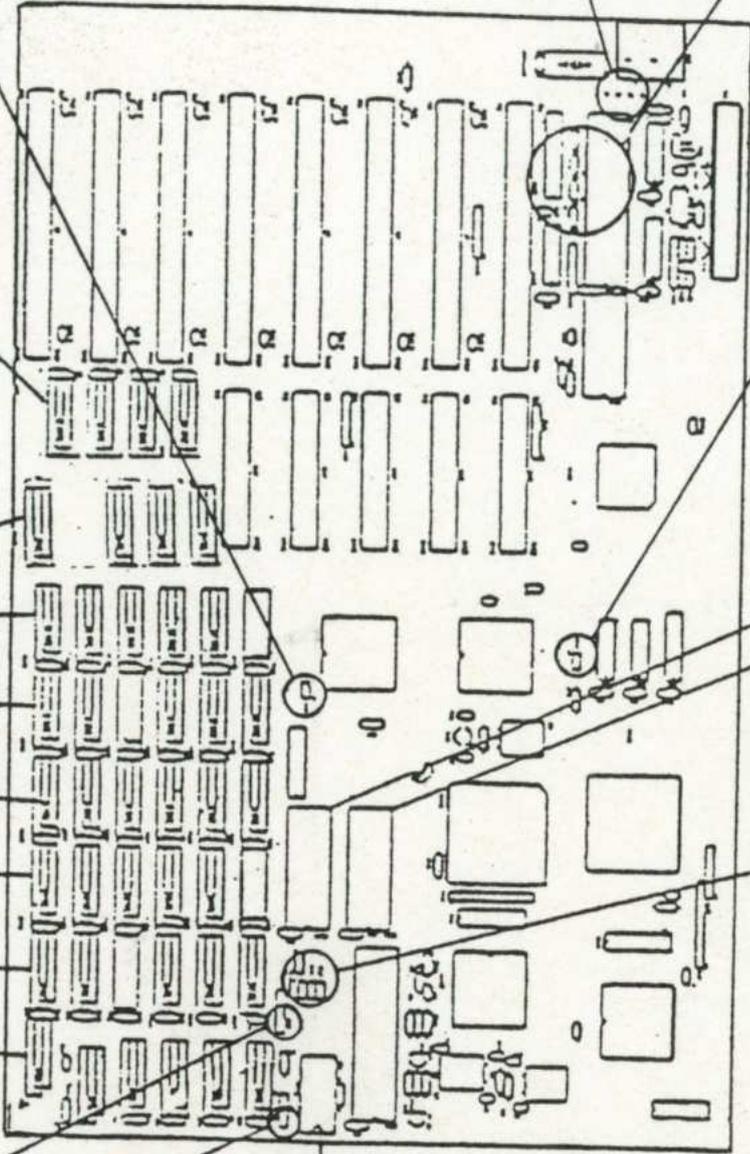

J15
CLOSE: W/PARITY DRAM
OPEN: W/O PARITY DRAM
(PARITY DRAM LOCATION: IC 9 21 36 45)

DRAM BANK 1-1
MODE 9: 44256-10 x 4
OR 4464-10 x 4
BANK 1 & BANK-1 ONLY
CAN CHOOSE ONE

DRAM BANK 0-1
MODE 8: 44256-10 x 4
BANK 0 & BANK-1
ONLY CAN CHOOSE ONE

DRAM BANK 1
MODE 1: 4164-10 x 18
MODE 3: 41256-10 x 18
MODE 7: 411000-10 x 18

DRAM BANK 0
MODE 0-3: 41256-10 x 18
MODE 4-7: 411000-10 x 18

J20: KEY LOCK & LED CONNECTOR
1. LED POWER
2.
3. GND
4. KB LOCK
5. GND

SP: CONNECTOR
1. SPEAKER
2.
3. GND
4. +5V

DSP1: #1 - #5

#1: CLOCK SPEED	ON	OFF
#2: COLOR/MONO	LOW	HIGH
#3: TEST	COLOR	MONO
#4: EMS/PORT ADDRESS	NORMAL	098H
#5: PROM TYPE	0E8H	27128
	27128	27256

DSP 1: #6 - 8: RAM SIZE

#8	#7	#6	MODE	SIZE
ON	ON	ON	0	512KB
OFF	ON	ON	1	640KB
ON	OFF	ON	2	640KB + 384KB
OFF	OFF	ON	3	640KB + EMS (384KB)
ON	ON	OFF	4	640KB + 140KB
OFF	ON	OFF	5	640KB + EMS (1,408KB)
ON	OFF	OFF	6	640KB + 3,456KB
OFF	OFF	OFF	7	640KB + EMS (3,456KB)

