AMPRO COMPUTERS, INC.

COREMODULE/P5I

Configuration

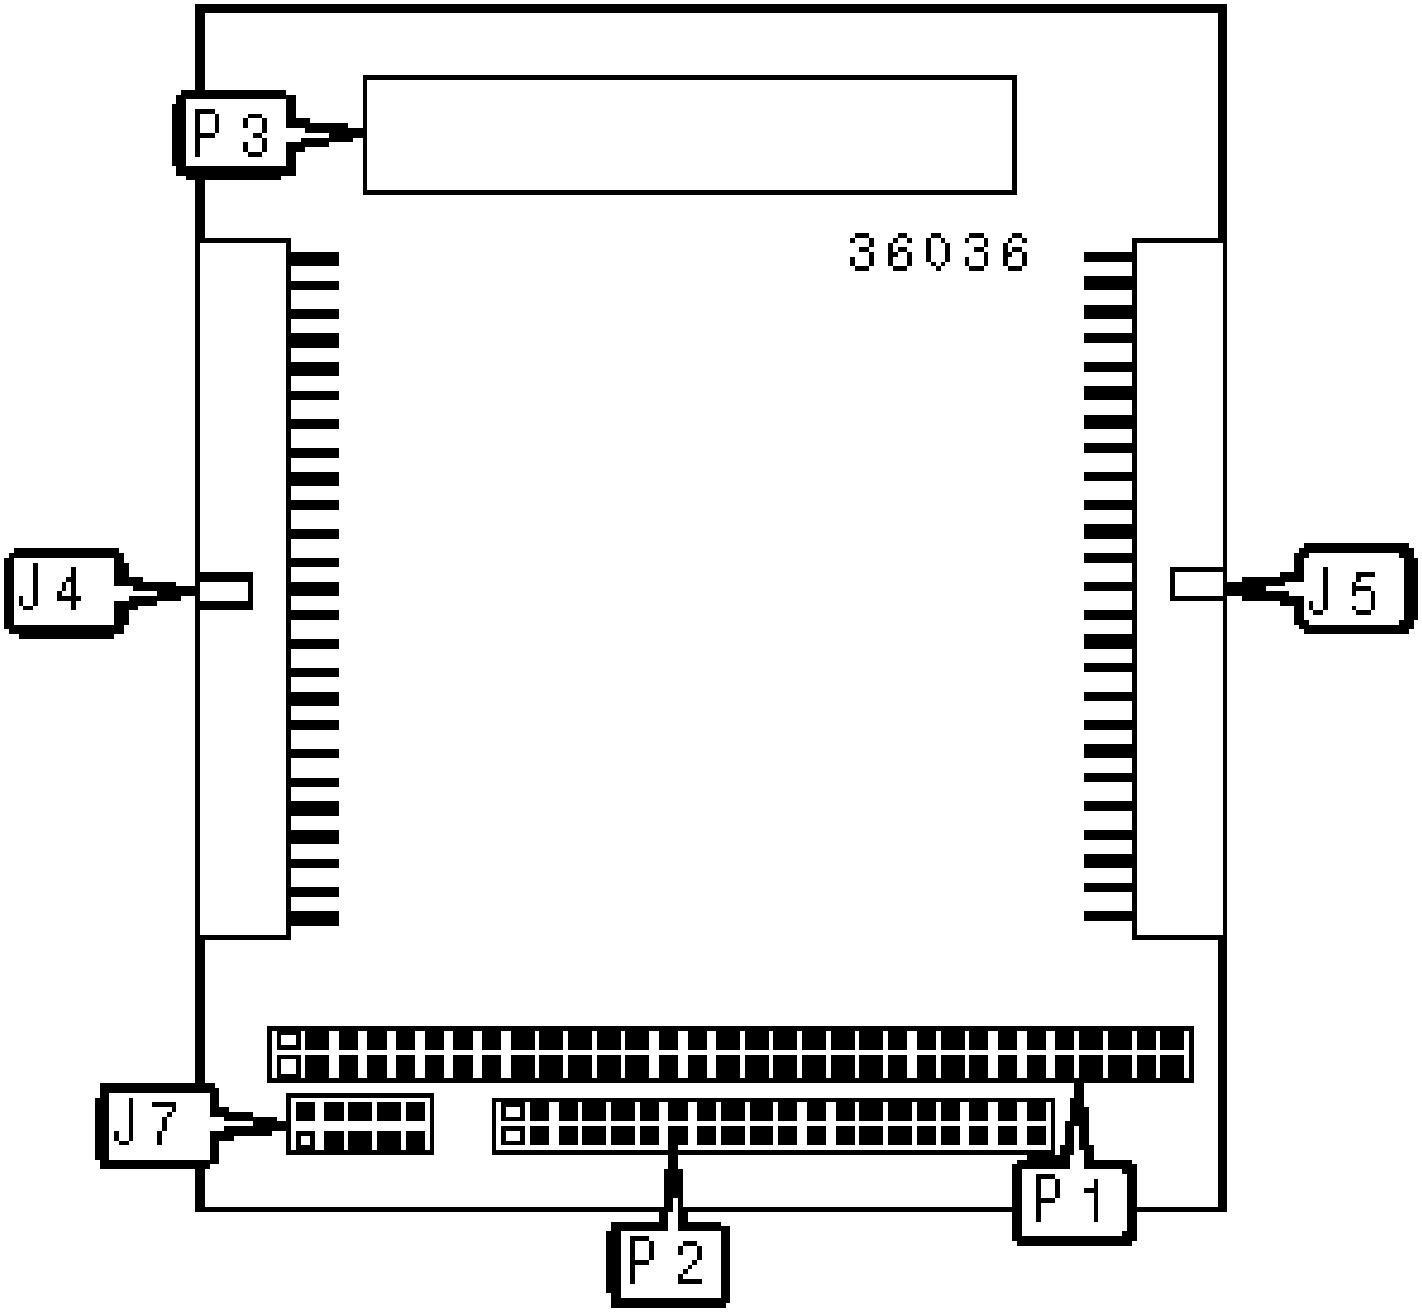

CONNECTIONS

Purpose	Location	Purpose	Location
Floppy drive/IDE interface	J4	PC/104 connector	P2
Front panel I/O connector	J5	PCI bus connector	P3
PC/104 connector	P1	Power connector	J7

Note: J5 is comprised of speaker, keyboard, mouse, reset, IDE LED, battery, serial ports, IR connector, USB connectors and parallel port.

USER CONFIGURABLE SETTINGS

Function		Label	Position
»	Factory configured - do not alter	J1	Unidentified
»	Factory configured - do not alter	J2	Unidentified
»	Factory configured - do not alter	J3	Unidentified
»	Factory configured - do not alter	J6	Unidentified

Note: The location of the above jumpers is unidentified.

SIMM CONFIGURATION

Size	Bank 0
8MB	8MB module
16MB	16MB module
32MB	32MB module
64MB	64MB module