EL332-IP

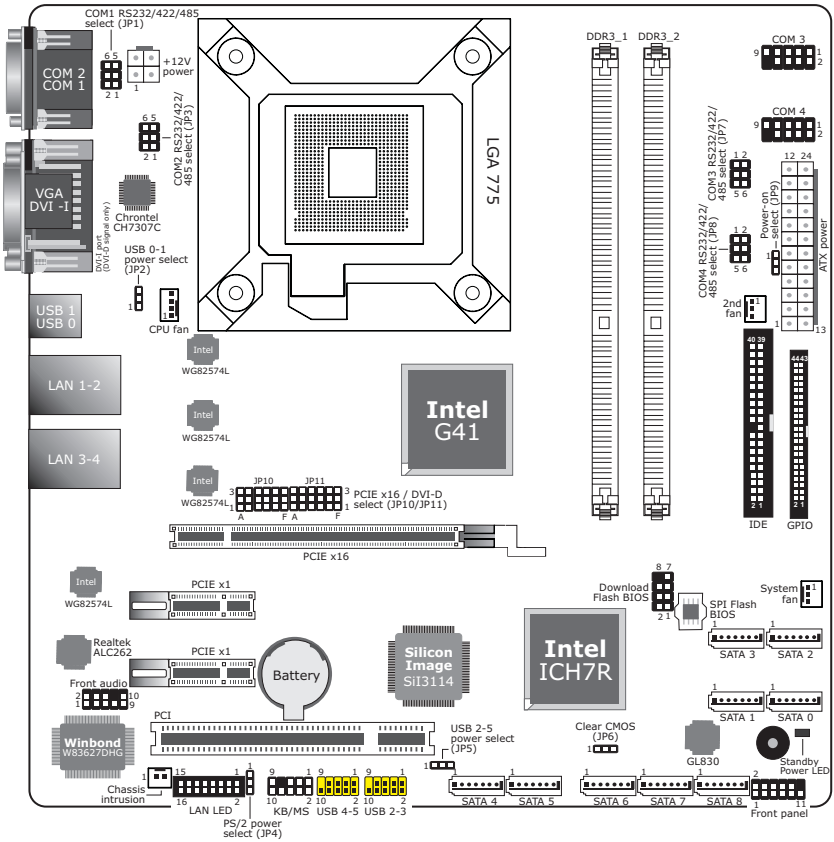

USB Power: 0-1 (JP2), 2-5 (JP5)	
5V (default)	1-2 On
5V_standby	2-3 On

Clear CMOS Data	JP6
Normal (default)	1-2 On
Clear CMOS Data	2-3 On

Power-on Select	JP9
Power-on via power button (default)	1-2 On
Power-on via AC power	2-3 On

PS/2 Power	JP4
5V (default)	1-2 On
5V_standby	2-3 On

COM 1 (JP1), COM 2 (JP3), COM 3 (JP7), COM 4 (JP8) RS232/RS422/RS485 Select	
RS232 (default)	1-2 On
RS422 Half Duplex	3-4 On
RS485	5-6 On

PCIE x16 / DVI Select	JP10/JP11
PCIE x16 slot	A1-A2, F1-F2 On
Onboard DVI-D (default)	A2-A3, F2-F3 On

A14901027