


PERCEPTIVE SOLUTIONS INC. HYPERSTORE-816

Q4/92

Data bus: 16-bit, ISA
 Size: Full-length, full-height card
 Hard drives supported: The hS supports MFM, RLL, ESDI, SCSI, or IDE via Mediadapters
 Floppy drives supported: Two 360KB, 720KB, 1.2MB, or 1.44MB
 Maximum heads/cyl.: 15 heads and 1024 cylinders

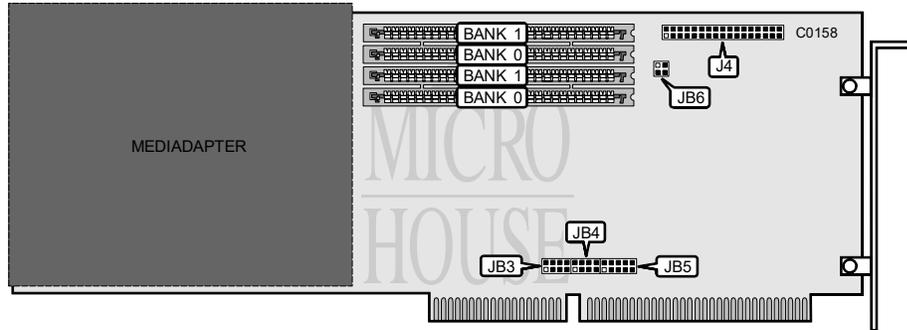

CONNECTIONS	
Functions	Location
34-pin data cable connector-floppy drive	J4

USER CONFIGURABLE SETTINGS		
Function	Location	Setting
i Factory configured - do not alter	JB4/jumpers 1 - 4	open
i Factory configured - do not alter	JB5/jumper 1 - 4	open
i BIOS address is C800h	JB5/jumper 5	closed
BIOS address is CA00h	JB5/jumper 5	open
i Floppy drive port address is 3F2-3F7h	JB6/jumper 1	open
Floppy drive port address is 372-377h	JB6/jumper 1	closed
i Single speed floppy drive supported	JB6/jumper 2	open
Dual speed floppy drive supported	JB6/jumper 2	closed

Continued on next page . . .

PERCEPTIVE SOLUTIONS INC.
HYPERSTORE-816

. . . continued from previous page

INTERRUPT REQUEST				
IRQ	JB3/jumper 1	JB3/jumper 2	JB3/jumper 3	JB3/jumper 4
í Disabled	open	open	open	open
IRQ5	closed	open	open	open
IRQ12	open	closed	open	open
IRQ14	open	open	closed	open
IRQ15	open	open	open	closed

CACHE MEMORY CONFIGURATION		
Size	Bank 0	Bank 1
512KB	(2) 256K x 9	NONE
1MB	(2) 256K x 9	(2) 256K x 9
2MB	(2) 1M x 9	NONE
2.5MB	(2) 1M x 9	256KB