


GATEWAY COMMUNICATIONS, INC.  
 G/EtherNet 16 Adapter (FUJITSU CHIPSET)

**NIC Type** Ethernet  
**Transfer Rate** 10Mbps  
**Data Bus** 16-bit ISA  
**Topology** Linear Bus  
**Wiring Type** RG-58A/U 50ohm coaxial  
**Boot ROM** Available

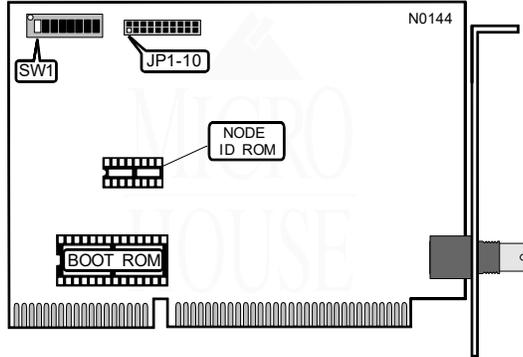

INTERRUPT REQUEST											
IRQ	JP1	JP2	JP3	JP4	JP5	JP6	JP7	JP8	JP9	JP10	
2/9	Closed	Open	Open	Open							
3	Open	Closed	Open	Open	Open						
4	Open	Open	Closed	Open	Open	Open	Open	Open	Open	Open	Open
i5	Open	Open	Open	Closed	Open	Open	Open	Open	Open	Open	Open
6	Open	Open	Open	Open	Closed	Open	Open	Open	Open	Open	Open
7	Open	Open	Open	Open	Open	Closed	Open	Open	Open	Open	Open
10	Open	Open	Open	Open	Open	Open	Closed	Open	Open	Open	Open
11	Open	Closed	Open	Open	Open						
12	Open	Closed	Open	Open							
15	Open	Open	Closed								

I/O BASE ADDRESS			
Address	SW1/1	SW1/2	SW1/3
260-27F	On	On	On
280-29F	Off	On	On
i2A0-2BF	On	Off	On
2E0-2FF	Off	Off	On
300-31F	On	On	Off
320-33F	Off	On	Off
380-39F	On	Off	Off
3E0-3FF	Off	Off	Off

Continued on next page . . .

... continued from previous page

BOOT ROM ADDRESS			
Address	SW1/4	SW1/5	SW1/6
C4000-C7FFF	On	On	On
C8000-CBFFF	Off	On	On
CC000-CFFFF	On	Off	On
D0000-D3000	Off	Off	On
D4000-D7000	On	On	Off
D8000-DBFFF	Off	On	Off
DC000-DFFFF	On	Off	Off
iDisabled	Off	Off	Off

MISCELLANEOUS NOTES
Different drivers must be used for the National & the Fujitsu chipset cards, & are not interchangeable. Fujitsu adapters may be used for either 8 or 16 bit Fujitsu cards. While the National chipset cards require a different driver for an 8 or 16 bit card.