


**NIC Type** Ethernet  
**Transfer Rate** 10Mbps  
**Data Bus** 16-bit ISA  
**Topology** Linear bus  
 Star  
**Wiring Type** Unshielded twisted pair  
**Boot ROM** Available

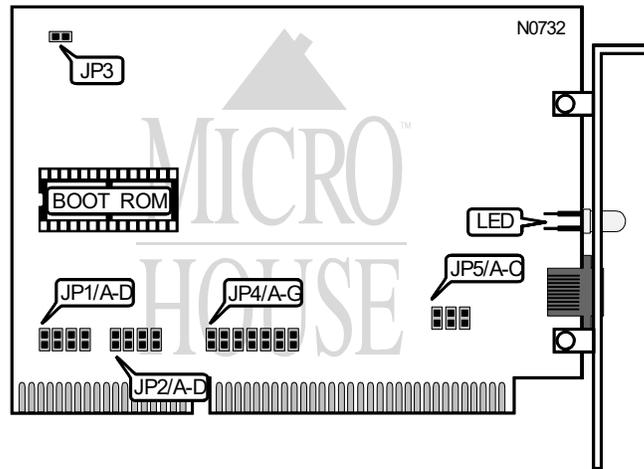

BOOT ROM	
Setting	JP5/A
í Disabled	Open
Enabled	Closed

BASE MEMORY ADDRESS SELECT			
ROI Address	I/C Address	J '5/B	J '5/C
í C800h	í 300h	Closed	Closed
CC00h	320h	Closed	Open
D000h	340h	Open	Closed
D400h	360h	Open	Open

DMA CONFIGURATION								
DMA	JP1/A	JP1/B	JP1/C	JP1/D	JP2/A	JP2/B	JP2/C	JP2/D
í 5	Open	Closed	Open	Open	Open	Closed	Open	Open
3	Closed	Open	Open	Open	Closed	Open	Open	Open
6	Open	Open	Closed	Open	Open	Open	Closed	Open
7	Open	Open	Open	Closed	Open	Open	Open	Closed

Continued on next page . . .

SVEC COMPUTER CORPORATION  
FD0421C

... continued from previous page

INTERRUPT SELECT							
IRQ	JP4/A	JP4/B	JP4/C	JP4/D	JP4/E	JP4/F	JP4/G
IRQ3	Open	Closed	Open	Open	Open	Open	Open
IRQ2	Closed	Open	Open	Open	Open	Open	Open
IRQ4	Open	Open	Closed	Open	Open	Open	Open
IRQ5	Open	Open	Open	Closed	Open	Open	Open
IRQ10	Open	Open	Open	Open	Closed	Open	Open
IRQ11	Open	Open	Open	Open	Open	Closed	Open
IRQ15	Open	Open	Open	Open	Open	Open	Closed

CONNECTIONS	
Purpose	Location
External LED connector	JP3

DIAGNOSTIC LED		
Color	Status	Condition
Green	On	Network connection is good
Green	Blinking	Data is being received
Green	Off	Network connection is broken