


**Chapter 5: Jumper Settings**  
**DIGITAL COMMUNICATIONS ASSOCIATES, INC.**  
**IRMATRAC ISA 4/16 TOKEN-RING ADAPTER**

**NIC Type** Token Ring  
**Transfer Rate** 4/16Mbps  
**Data Bus** 16-bit ISA  
**Topology** Ring  
**Wiring Type** Shielded twisted pair  
 Unshielded twisted pair  
**Boot ROM** Available

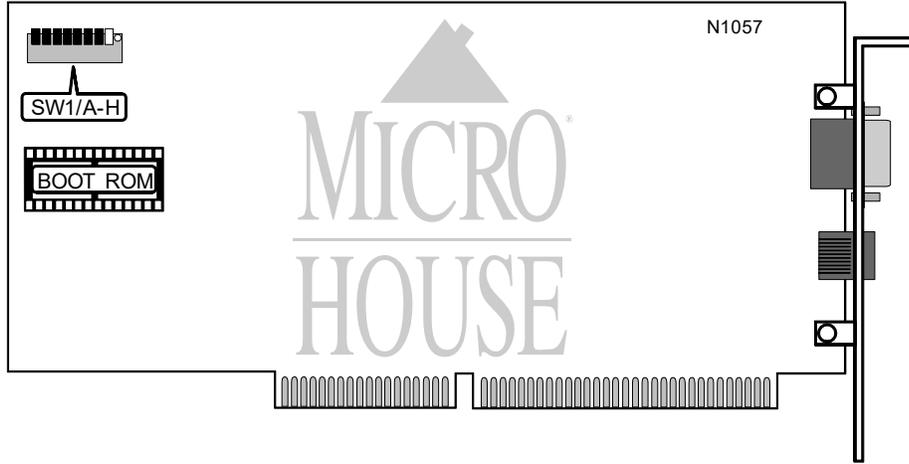

ADAPTER I/O ADDRESS SELECTION			
Select	SW1/A	SW1/B	SW1/C
X'0A00'	On	On	On
X'0A20'	Off	On	On
X'0A40'	On	Off	On
X'0A60'	Off	Off	On
X'1A00'	On	On	Off
X'1A20'	Off	On	Off
X'1A40'	On	Off	Off
X'1A60'	Off	Off	Off

ADAPTER I/O ADDRESS SELECTION	
Address	SW1/A
X'0A20'	On
X'1A20'	Off

Note: This setting applies only when using Ver.1 (SW1/H on)

Continued next page...

**THE NETWORK INTERFACE CARD TECHNICAL GUIDE**  
**DIGITAL COMMUNICATIONS ASSOCIATES, INC.**  
**IRMATRAC ISA 4/16 TOKEN-RING ADAPTER**

... continued from previous page.

BOOT ROM CONFIGURATION			
Address	SW1/D	SW1/E	SW1/F
X'C4000'	Off	On	On
X'C8000'	On	Off	On
X'CC000'	Off	Off	On
X'D4000'	Off	On	Off
i X'D8000'	On	Off	Off
X'DC000'	Off	Off	Off

BOOT RAM CONFIGURATION	
Select	SW1/G
Enabled	Off
Disabled	On

IRMATRAC VERSION CONFIGURATION	
Version	SW1/H
1.x	On
2.0 or newer	Off