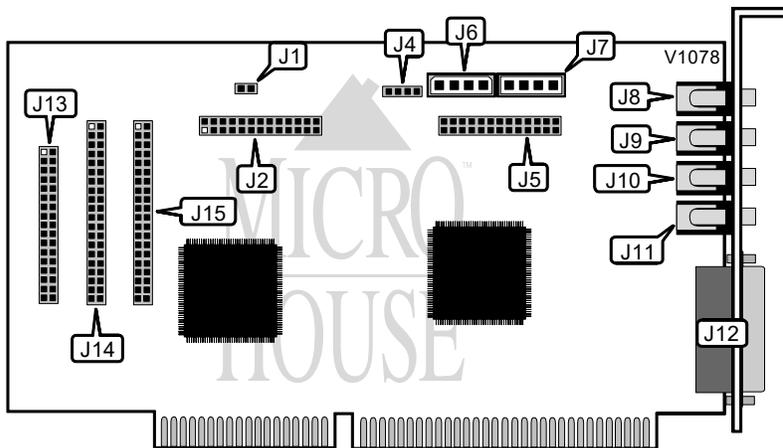# SHUTTLE COMPUTER INTERNATIONAL, INC.
H O T - 2 2 3

Card Type   Sound card
Chipset Controller   MAD16 OPTI 82C928
I/O Options   CD-ROM audio in (3), CD-ROM interface (3), game/MIDI port, line in, line
                           out, microphone in, speaker out, synthesizer connector, wavetable connector
Maximum DRAM   N/A

CONNECTIONS			
Purpose	Location	Purpose	Location
Synthesizer connector	J2	Line in	J10
Sony CD - audio in	J4	Microphone in	J11
Wavetable connector	J5	Game/MIDI port	J12
Panasonic CD - audio in	J6	Sony CD-ROM interface	J13
Mitsumi CD - audio in	J7	Mitsumi CD-ROM interface	J14
Speaker out	J8	Panasonic CD-ROM interface	J15
Line out	J9		

ONBOARD OPL CONFIGURATION	
Setting	J1
OPL3	Closed
OPL4	Open
Note: OPL4 is active only when daughter board is connected to the external synthesizer (J2).	