


DIALOGIC CORPORATION

DIALOG/4

Card Type Telephony (voice)
Chipset Unidentified
Line Type PBX
Data Bus 8-bit ISA
Card Size Full height, one-half length

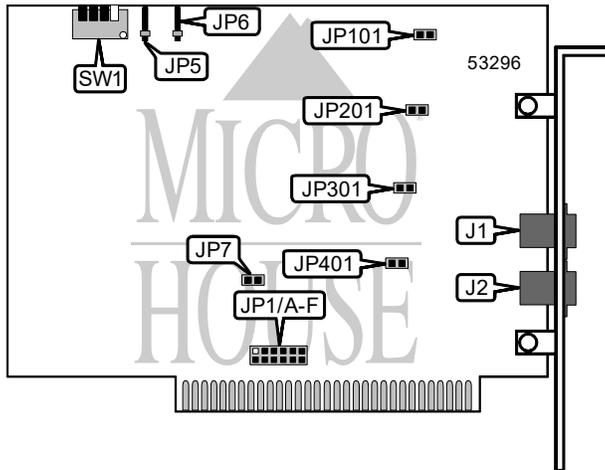

CONNECTIONS			
Function	Label	Function	Label
Telephone lines 1 & 2 out	J1	Telephone lines 3 & 4 out	J2

USER CONFIGURABLE SETTINGS			
Setting	Label	Position	
Board is interrupt master	JP7	Closed	
Board is interrupt slave	JP7	Open	
Line 1 set to normal ring sensitivity	JP101	Open	
Line 1 set to high ring sensitivity	JP101	Closed	
Line 2 set to normal ring sensitivity	JP201	Open	
Line 2 set to high ring sensitivity	JP201	Closed	
Line 3 set to normal ring sensitivity	JP301	Open	
Line 3 set to high ring sensitivity	JP301	Closed	
Line 4 set to normal ring sensitivity	JP401	Open	
Line 4 set to high ring sensitivity	JP401	Closed	
Lines ring without answer (on-hook) before firmware initialization	SW1/4	Off	
Lines are busy (off-hook) before firmware initialization	SW1/4	On	

INTERRUPT SELECTION						
Setting	JP1/A	JP1/B	JP1/C	JP1/D	JP1/E	JP1/F
2/9	Closed	Open	Open	Open	Open	Open
3	Open	Closed	Open	Open	Open	Open
4	Open	Open	Closed	Open	Open	Open
5	Open	Open	Open	Closed	Open	Open
6	Open	Open	Open	Open	Closed	Open
7	Open	Open	Open	Open	Open	Closed

Note: All DIALOG/4 boards installed in the system should be set to the same interrupt.

Continued on next page. . .

DIALOGIC CORPORATION
 DIALOG/4

... continued from previous page

SHARED RAM ADDRESS SELECTION					
Setting	JP5	JP6	SW1/1	SW1/2	SW1/3
A000h	Closed	Open	Off	Off	Off
A200h	Closed	Open	Off	Off	On
A400h	Closed	Open	Off	On	Off
A600h	Closed	Open	Off	On	On
A800h	Closed	Open	On	Off	Off
AA00h	Closed	Open	On	Off	On
AC00h	Closed	Open	On	On	Off
AE00h	Closed	Open	On	On	On
B800h	Closed	Closed	On	Off	Off
BA00h	Closed	Closed	On	Off	On
BC00h	Closed	Closed	On	On	Off
BE00h	Closed	Closed	On	On	On
C000h	Open	Closed	Off	Off	Off
C200h	Open	Closed	Off	Off	On
C400h	Open	Closed	Off	On	Off
C600h	Open	Closed	Off	On	On
C800h	Open	Closed	On	Off	Off
CA00h	Open	Closed	On	Off	On
CC00h	Open	Closed	On	On	Off
CE00h	Open	Closed	On	On	On
D000h	Open	Open	Off	Off	Off
D200h	Open	Open	Off	Off	On
D400h	Open	Open	Off	On	Off
D600h	Open	Open	Off	On	On
D800h	Open	Open	On	Off	Off
DA00h	Open	Open	On	Off	On
DC00h	Open	Open	On	On	Off
DE00h	Open	Open	On	On	On