


EMULEX CORPORATION CONNECTPLUS DL

Card Type Serial card
Chip Set Unidentified
Data Bus 16-bit ISA

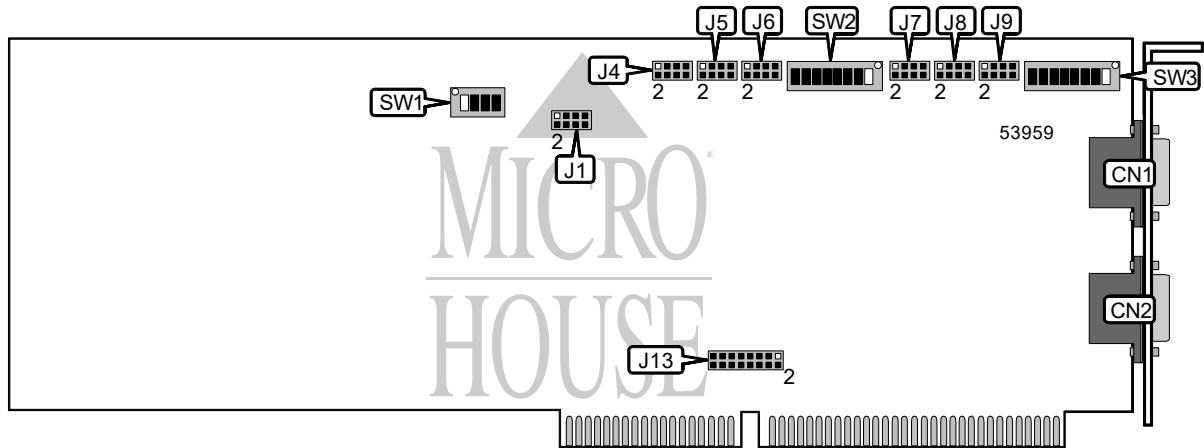

CONNECTIONS			
Function	Label	Function	Label
9-pin serial port 1	CN1	9-pin serial port 2	CN2

USER CONFIGURABLE SETTINGS			
Function	Label	Position	
í Factory configured – do not alter (software compatibility level)	J1/pins 1 & 2	Closed	
í Factory configured – do not alter (control register 4)	J1/pins 3 & 4	Closed	
í Factory configured – do not alter (window group)	J1/pins 5 & 6	Closed	
í Factory configured – do not alter (memory size)	J1/pins 7 & 8	Closed	

INTERRUPT SELECTION	
IRQ	J13
IRQ2	Pins 1 & 2 closed
í IRQ3	Pins 3 & 4 closed
IRQ4	Pins 5 & 6 closed
IRQ5	Pins 7 & 8 closed
IRQ10	Pins 9 & 10 closed
IRQ11	Pins 11 & 12 closed
IRQ12	Pins 13 & 14 closed
IRQ15	Pins 15 & 16 closed

Continued on next page...

EMULEX CORPORATION CONNECTPLUS DL

... continued from previous page

BASE I/O ADDRESS SELECTION				
Setting	SW1/1	SW1/2	SW1/3	SW1/4
03C	On	On	On	On
07C	Off	On	On	On
0BC	On	Off	On	On
0FC	Off	Off	On	On
13C	On	On	Off	On
17C	Off	On	Off	On
1BC	On	Off	Off	On
1FC	Off	Off	Off	On
23C	On	On	On	Off
27C	Off	On	On	Off
2BC	On	Off	On	Off
2FC	Off	Off	On	Off
33C	On	On	Off	Off
37C	Off	On	Off	Off
3BC	On	Off	Off	Off
3FC	Off	Off	Off	Off

SERIAL PORT 1 DTE SELECTION			
Setting	J7	J8	J9
RS-232	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8
V.35	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 3, 2 & 4, 5 & 7, 6 & 8

Note: Pins designated should be in the closed position.

SERIAL PORT 1 DTE SELECTION (CON'T)								
Setting	SW3/1	SW3/2	SW3/3	SW3/4	SW3/5	SW3/6	SW3/7	SW3/8
RS-232	On	On	On	On	On	On	On	Off
V.35	Off	Off	Off	Off	Off	Off	Off	On

SERIAL PORT 2 DTE SELECTION			
Setting	J4	J5	J6
RS-232	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8
V.35	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 3, 2 & 4, 5 & 7, 6 & 8

Note: Pins designated should be in the closed position.

SERIAL PORT 2 DTE SELECTION (CON'T)								
Setting	SW2/1	SW2/2	SW2/3	SW2/4	SW2/5	SW2/6	SW2/7	SW2/8
RS-232	On	On	On	On	On	On	On	Off
V.35	Off	Off	Off	Off	Off	Off	Off	On

Continued on next page. . .

EMULEX CORPORATION CONNECTPLUS DL

... continued from previous page

SERIAL PORT 1 DCE SELECTION			
Setting	J7	J8	J9
RS-232	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8
V.35	1 & 3, 2 & 4, 5 & 7, 6 & 8	1 & 3, 2 & 4, 5 & 7, 6 & 8	1 & 3, 2 & 4, 5 & 7, 6 & 8
Note: Pins designated should be in the closed position.			

SERIAL PORT 1 DCE SELECTION (CON'T)								
Setting	SW3/1	SW3/2	SW3/3	SW3/4	SW3/5	SW3/6	SW3/7	SW3/8
RS-232	Off	On	On	On	On	On	On	On
V.35	Off	Off	On	On	Off	On	On	On

SERIAL PORT 2 DCE SELECTION			
Setting	J4	J5	J6
RS-232	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8	1 & 2, 3 & 4, 5 & 6, 7 & 8
V.35	1 & 3, 2 & 4, 5 & 7, 6 & 8	1 & 3, 2 & 4, 5 & 7, 6 & 8	1 & 3, 2 & 4, 5 & 7, 6 & 8
Note: Pins designated should be in the closed position.			

SERIAL PORT 2 DCE SELECTION (CON'T)								
Setting	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
RS-232	Off	On	On	On	On	On	On	On
V.35	Off	Off	On	On	Off	On	On	On