


SEALEVEL SYSTEMS, INC. SIO-II

Card Type	Serial card
Chip Set	Unidentified
Maximum Onboard Memory	Unidentified
I/O Options	Serial port
Hard Drives supported	None
Floppy drives supported	None
Data Bus	8-bit ISA
Card Size	Half-length, full-height

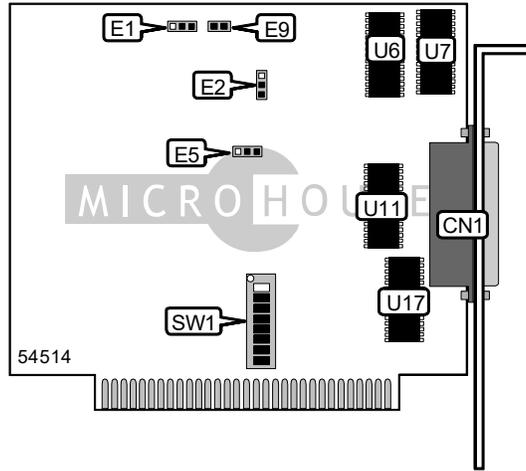

CONNECTIONS	
Function	Label
Serial Port 1	CN1

USER CONFIGURABLE SETTINGS			
Function	Label	Position	
RS-485 enabled by RTS	E2	Closed	
RS-485 always enabled	E2	Open	
RS-232 with U7 & U11 installed	E5	Pins 2 & 3 closed	
i RS-422/485 with U6 & U7 installed	E5	Pins 2 & 3 closed	
Current Loop with U6 & U7 installed	E5	Pins 1 & 2 closed	

Note: For the RS-422, the RS-485, and the Current loop, the RS-422/485 driver/receiver pair are installed at U6 and U7. For the RS-232, U6 and U7 must be removed and the RS-232 driver/receiver pair are installed at locations U17 and U11.

BASE I/O ADDRESS SELECTION PORT 1								
Setting	SW1/1	SW1/2	SW1/3	SW1/4	SW1/5	SW1/6	SW1/7	SW1/8
238h	On	Off						
2B8h	Off	On	Off	Off	Off	Off	Off	Off
338h	Off	Off	On	Off	Off	Off	Off	Off
3B8h	Off	Off	Off	On	Off	Off	Off	Off
278h	Off	Off	Off	Off	On	Off	Off	Off
2F8h	Off	Off	Off	Off	Off	On	Off	Off
378h	Off	Off	Off	Off	Off	Off	On	Off
i 3F8h	Off	On						
Disabled	Off							

Continued on next page . . .

. . . continued from previous page

SERIAL PORT 1 INTERRUPT SELECTION			
IRQ	E1/Pins 1 & 2	E1/Pins 2 & 3	E9
IRQ3	Closed	Closed	Open
í IRQ4	Open	Closed	Open
IRQ5	Open	Open	Closed
None	Open	Open	Open