


ADAPTEC, INC. AHA-1520

Q2/92

Data bus: 16-bit, ISA
 Size: Half-length, full-height card
 Hard drives supported: Up to seven SCSI devices
 Floppy drives supported: Two 360KB, 720KB, 1.2MB or 1.44MB

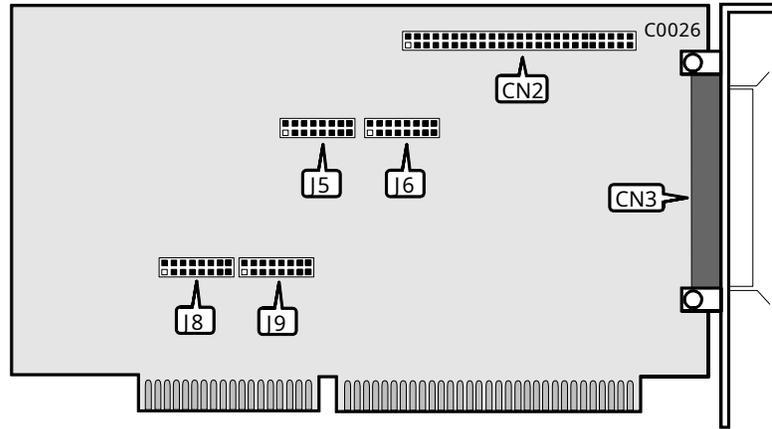

CONNECTIONS	
Function	Location
50-pin SCSI cable connector-internal	CN2
50-pin SCSI cable connector-external	CN3

USER CONFIGURABLE SETTINGS		
Function	Location	Setting
f Data transfer in DMA disabled	J5/jumper 1	open
Data transfer in DMA enabled	J5/jumper 1	closed
f Boot enabled (Intercept INT19 call)	J5/jumper 2	closed
Boot disabled (INT19 normal)	J5/jumper 2	open
f Synchronous negotiation enabled	J5/jumper 5	closed
Synchronous negotiation disabled	J5/jumper 5	open
f Disconnect by target / INT15 enabled	J5/jumper 6	closed
Disconnect by target / INT15 disabled	J5/jumper 6	open
f Factory configured - do not alter	J5/jumpers 7 & 8	open

Continued on next page . . .

ADAPTEC, INC.
AHA-1520

. . . continued from previous page

USER CONFIGURABLE SETTINGS		
Function	Location	Setting
í SCSI parity check enabled	J6/jumper 8	open
SCSI parity check disabled	J6/jumper 8	closed
í		
í		
í		
í I/O port address 340h	J9/jumper 5	open
I/O port address 140h	J9/jumper 5	closed

SCSI ADDRESS			
SCSI ID	J6/jumper 1	J6/jumper 2	J6/jumper 3
0	open	open	open
1	closed	open	open
2	open	closed	open
3	closed	closed	open
4	open	open	closed
5	closed	open	closed
6	open	closed	closed
í 7	closed	closed	closed

DMA CHANNEL						
DMA	J6/6	J6/7	J8/1 & 5	J8/2 & 6	J8/3 & 7	J8/4 & 8
7	closed	closed	closed	open	open	open
6	open	closed	open	closed	open	open
5	closed	open	open	open	closed	open
í 0	open	open	open	open	open	closed

INTERRUPT REQUEST						
IRQ	J6/4	J6/5	J9/1	J9/2	J9/3	J9/4
IRQ9	open	open	open	open	open	closed
IRQ10	closed	open	open	open	closed	open
í IRQ11	open	closed	open	closed	open	open
IRQ12	closed	closed	closed	open	open	open

Continued on next page . . .

ADAPTEC, INC.
AHA-1520

. . . continued from previous page

BIOS ADDRESS			
Address	J9/jumper 6	J9/jumper 7	J9/jumper 8
DC000h	closed	closed	closed
C8000h	open	open	closed
CC000h	open	closed	closed
D8000h	closed	open	closed
Disabled	N/A	N/A	open

FLOPPY DRIVE DMA - J7				
DMA	DRQ		DACK	
	Jumper 2	Jumper 3	Jumper 4	Jumper 5
DMA Channel 2	closed	open	closed	open
DMA Channel 3	open	closed	open	closed

MESSAGE SELECT		
Msg #0 - Adaptec Header Msg #1 - Jumper config. info. Msg #2 - SCSI device info. Msg #3 - Boot Progress info. Msg #4 - Error messages		
Message	JP5/jumper 3	JP5/jumper 4
Msg #0 and #4	open	open
Msg #0, #3 and #4	open	closed
All messages displayed	closed	open
Msg #4 only	closed	closed