

**W-606****W-606A**

# SUPER I/O CARD (IDE+FDC+2S/1P/1G)


**R1.0****USER'S MANUAL**

- A. WINBOND CHIPS: 83757+83758  
 B. GAME PORT CAN DISABLE OR ENABLE  
 C. "▲" → ARE NORMAL SETTING [DEFAULT]  
 D. JUMPER SETTING:

JP1 FDD CONNECTOR	JP5 COM-2
JP2 IDE CONNECTOR	JP6 PRINTER PORT
JP3 GAME PORT	JP7 LED CONNECTOR
JP4 COM-1	JP8 ▲ SHORT - PRINTER AS O/P PORT OPEN - PRINTER AS I/O PORT

JP9 (1-3) A,B CHG (FDD)		(7-9) FDC
H A,B CHG'MODE		H DISABLE
▲ L NORMAL		▲ L ENABLE
(4-6) IDE		
H DISABLE		
▲ L ENABLE		
JP10	1 2 RS232-1	5 6 PRINTER
H H COM4 (2E8H)		H H LPT3 (3BCH)
▲ H L COM1 (3F8H)		H L LPT2 (278H)
L H COM3 (3E8H)		▲ L H LPT1 (378H)
L L DISABLE		L L DISABLE
	3 4 RS232-2	
H H COM3 (3E8H)		
▲ H L COM2 (2F8H)		
L H COM4 (2E8H)		
L L DISABLE		
JP11	1 2 3 RS232-1	7 8 PRINTER
▲ ON	IRQ4	▲ ON
	ON IRQ3	
	ON IRQ5	ON
	4 5 6 RS232-2	
▲ ON	IRQ3	
	ON IRQ4	
	ON IRQ5	
JP15 GAME PORT:	▲ 1-2 ENABLE GAME PORT L	
	2-3 DISABLE GAME PORT H	
JP17	ON: ALE DATA FOR OLD HDD 28 PIN DATA	
	▲ OFF: CSEL DATA FOR NEW HDD 28 PIN DATA (DEFAULT)	

LAYOUT BOARD

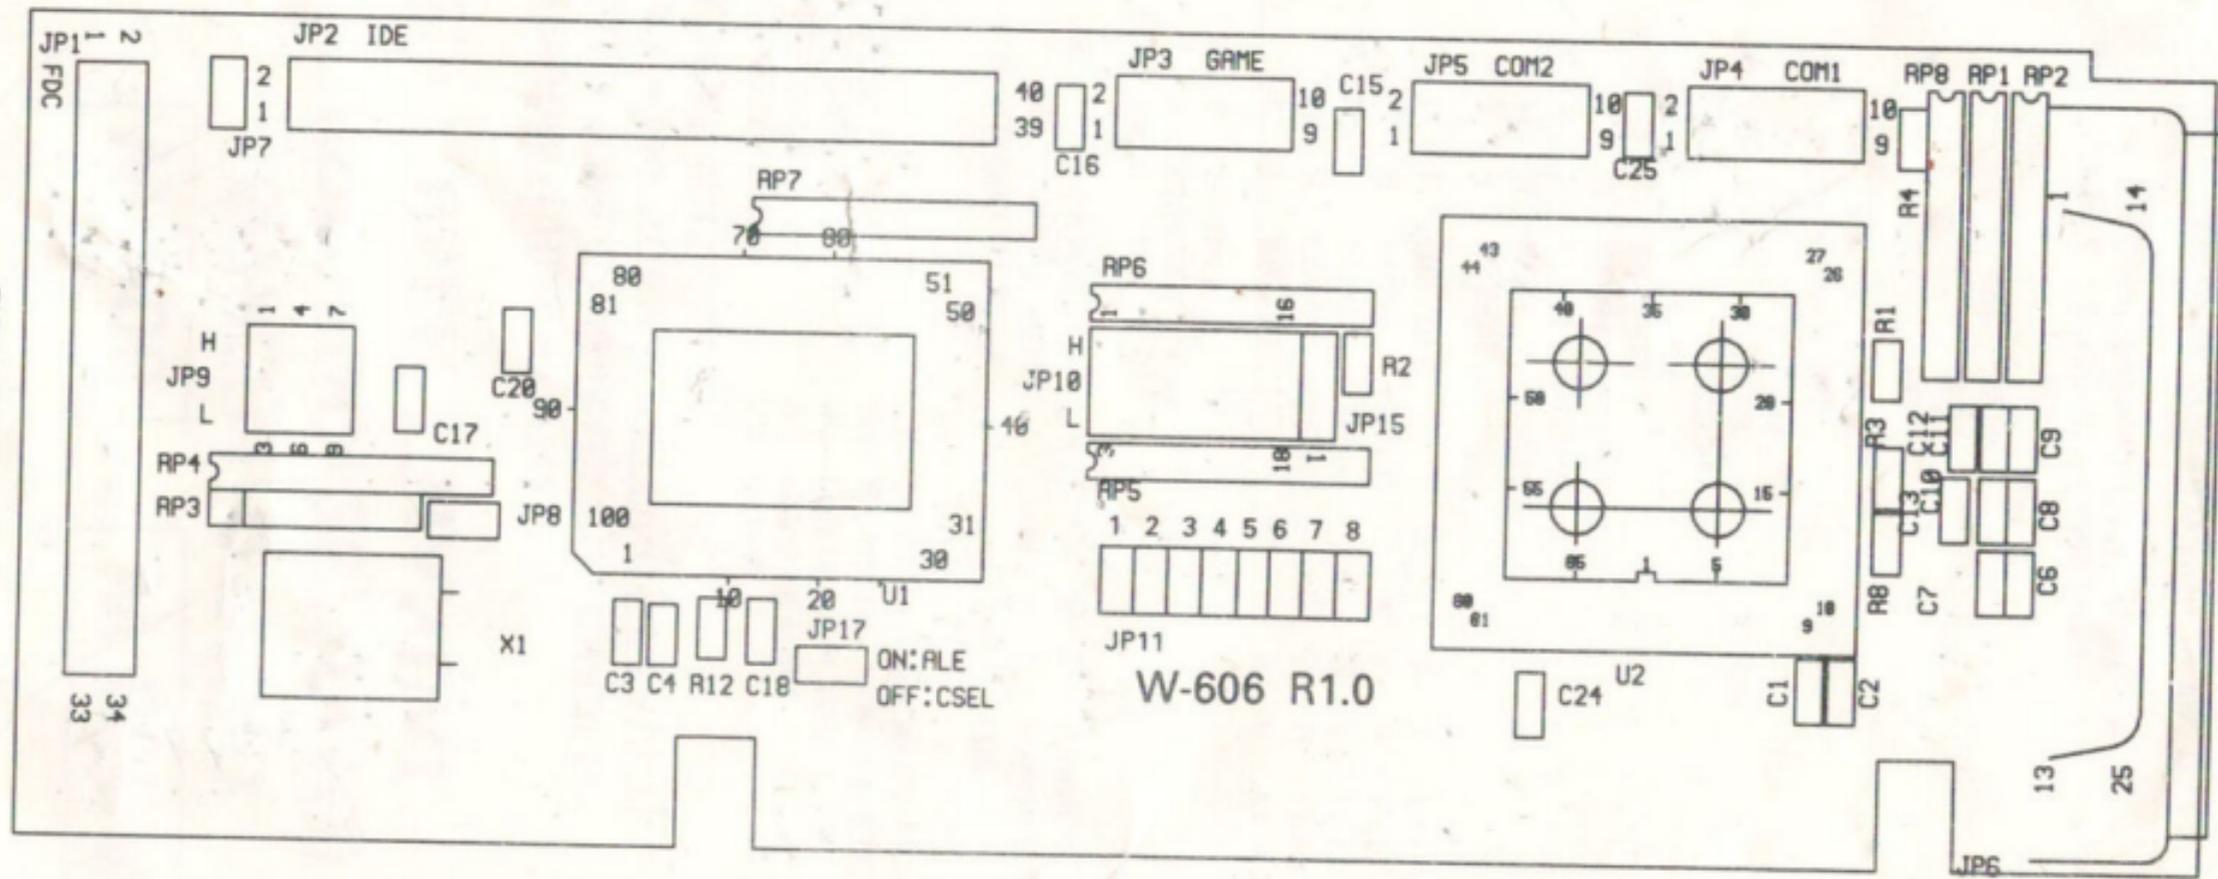

Printed in Taiwan