
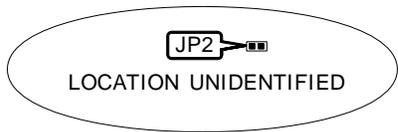


# UNIDENTIFIED

## SN 386 - 25

<b>Processor</b>	80386
<b>Processor Speed</b>	25MHz
<b>Chip Set</b>	Unidentified
<b>Video Chip Set</b>	None
<b>Maximum Onboard Memory</b>	16MB (8MB on external memory card)
<b>Maximum Video Memory</b>	None
<b>Cache</b>	None
<b>BIOS</b>	AMI
<b>Dimensions</b>	330mm x 218mm
<b>I/O Options</b>	External memory card
<b>NPU Options</b>	80387/3167

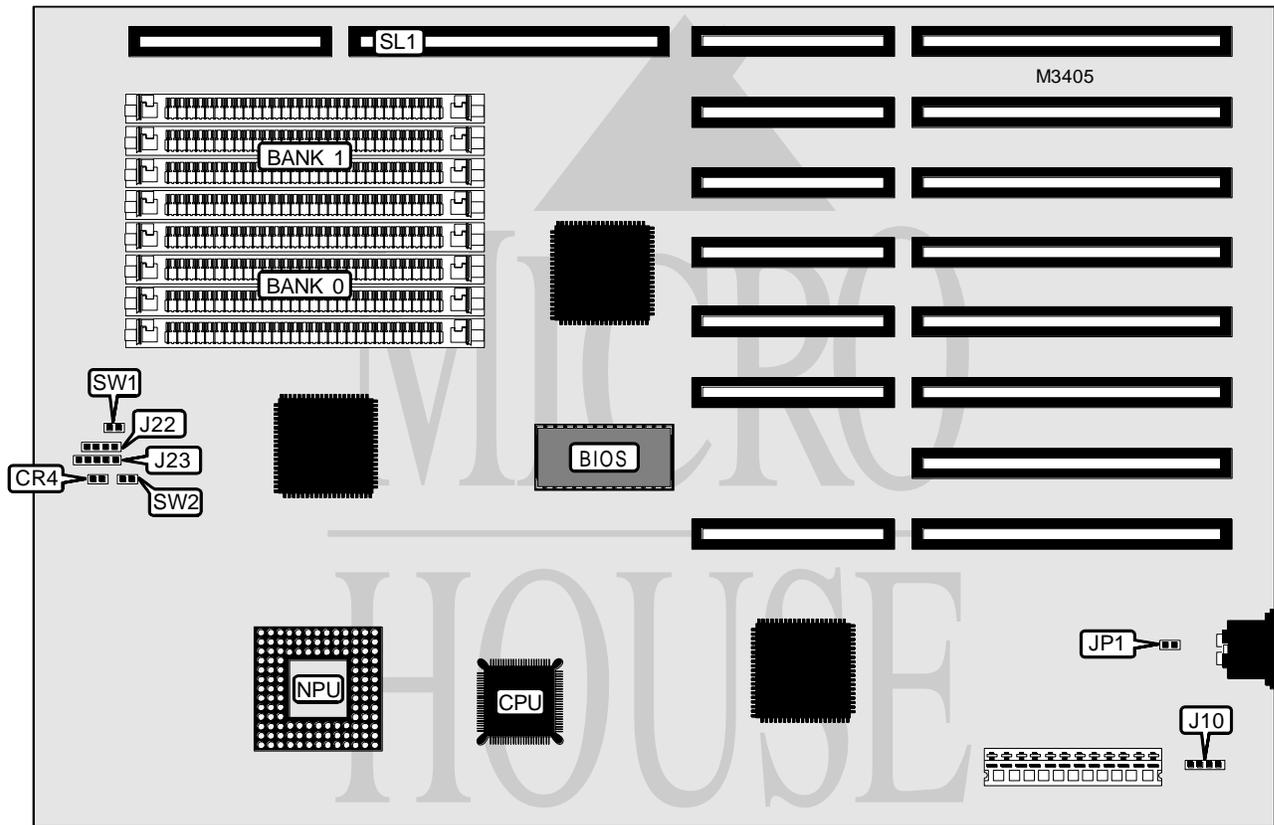

*Continued on next page...*

**UNIDENTIFIED**  
**SN 386 - 25**

... continued from previous page

CONNECTIONS			
Purpose	Location	Purpose	Location
Turbo LED	CR4	External memory card	SL1
External battery	J10	Reset switch	SW1
Speaker	J22	Turbo switch	SW2
Power LED & keylock	J23		

USER CONFIGURABLE SETTINGS		
Function	Label	Position
Monitor type select color/CGA/EGA/VGA	JP1	Closed
Monitor type select monochrome	JP1	Open
Battery type select internal	JP2	Closed
Battery type select external	JP2	Open
Turbo switch enabled	SW2	Closed
Turbo switch controlled by keyboard CTRL, ALT - (low), CTRL, ALT + (high)	SW2	Open

DRAM CONFIGURATION				
Size	Bank 0	Bank 1	Bank 2	Bank 3
1MB	(4) 256K x 9	None	None	None
2MB	(4) 256K x 9	(4) 256K x 9	None	None
4MB	(4) 1M x 9	None	None	None
8MB	(4) 1M x 9	(4) 1M x 9	None	None
3MB	(4) 256K x 9	(4) 256K x 9	(4) 256K x 9	None
4MB	(4) 256K x 9			
12MB	(4) 1M x 9	(4) 1M x 9	(4) 1M x 9	None
16MB	(4) 1M x 9			

Note: Banks 2 & 3 are located on the external memory card.