


TEKRAM TECHNOLOGY CO., LTD.

P5T30-B4E

Configuration

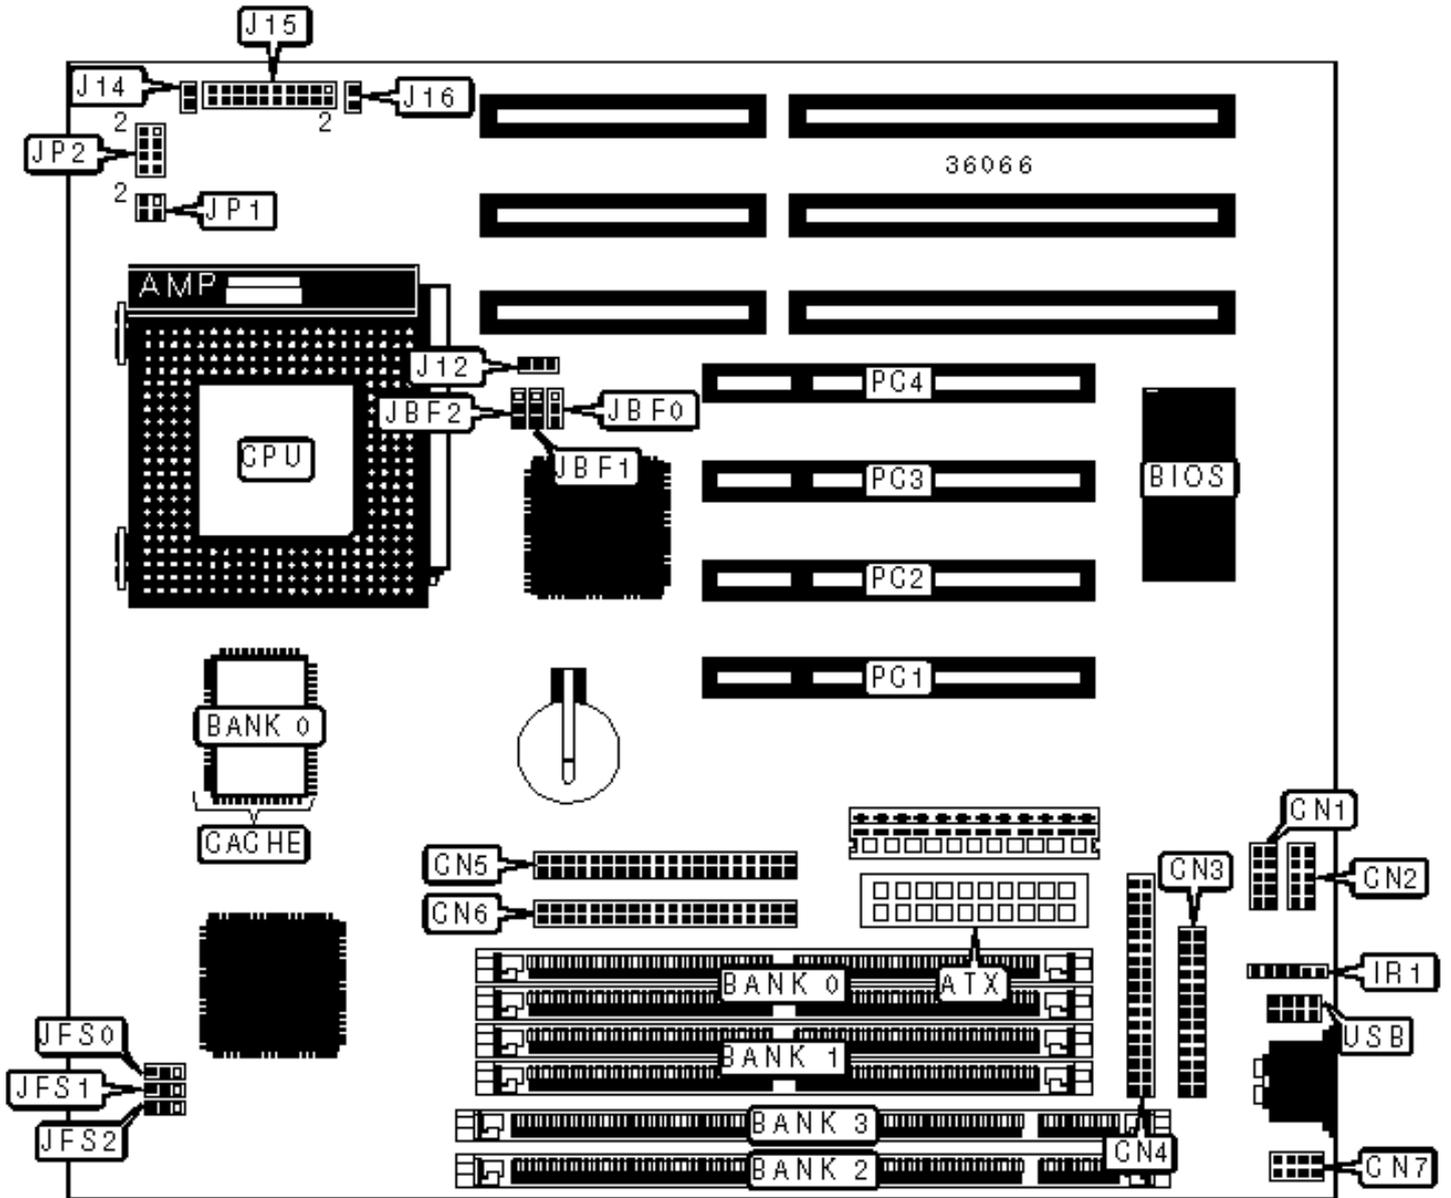

CONNECTIONS

Purpose	Location	Purpose	Location
ATX power connector	ATX	IDE interface LED	J14
Serial port 1	CN1	Power LED & keylock	J15/pins 2/4/6/8/10
Serial port 2	CN2	Turbo LED	J15/pins 3 & 5
Parallel port	CN3	Green PC connector	J15/pins 7 & 9
Floppy drive interface	CN4	Speaker	J15/pins 14/16/18/20
IDE interface 2	CN5	Reset switch	J15/pins 17 & 19
IDE interface 1	CN6	Soft off power supply	J16
PS/2 mouse interface	CN7	32-bit PCI slots	PC1 – PC4
IR connector	IR1	USB connector	USB
Chassis fan power	J12		

SIMM CONFIGURATION

Size	Bank 0	Bank 1
8MB	(2) 1M x 36	None
16MB	(2) 2M x 36	None
16MB	(2) 1M x 36	(2) 1M x 36
24MB	(2) 2M x 36	(2) 1M x 36
32MB	(2) 4M x 36	None
32MB	(2) 2M x 36	(2) 2M x 36
40MB	(2) 4M x 36	(2) 1M x 36
48MB	(2) 4M x 36	(2) 2M x 36
64MB	(2) 8M x 36	None
64MB	(2) 4M x 36	(2) 4M x 36
72MB	(2) 8M x 36	(2) 1M x 36

80MB	(2) 8M x 36	(2) 2M x 36
96MB	(2) 8M x 36	(2) 4M x 36
128MB	(2) 8M x 36	(2) 8M x 36
128MB	(2) 16M x 36	None
136MB	(2) 16M x 36	(2) 1M x 36
144MB	(2) 16M x 36	(2) 2M x 36
160MB	(2) 16M x 36	(2) 4M x 36
192MB	(2) 16M x 36	(2) 8M x 36
256MB	(2) 16M x 36	(2) 16M x 36
Note: Board accepts EDO memory.		

DIMM CONFIGURATION		
Size	Bank 2	Bank 3
8MB	(1) 1M x 64	None
16MB	(1) 2M x 64	None
16MB	(1) 1M x 64	(1) 1M x 64
24MB	(1) 2M x 64	(1) 1M x 64
32MB	(1) 4M x 64	None

DIMM CONFIGURATION		
Size	Bank 2	Bank 3
32MB	(1) 2M x 64	(1) 2M x 64
40MB	(1) 4M x 64	(1) 1M x 64
48MB	(1) 4M x 64	(1) 2M x 64
64MB	(1) 8M x 64	None
64MB	(1) 4M x 64	(1) 4M x 64

72MB	(1) 8M x 64	(1) 1M x 64
80MB	(1) 8M x 64	(1) 2M x 64
96MB	(1) 8M x 64	(1) 4M x 64
128MB	(1) 16M x 64	None
128MB	(1) 8M x 64	(1) 8M x 64
136MB	(1) 16M x 64	(1) 1M x 64
144MB	(1) 16M x 64	(1) 2M x 64
160MB	(1) 16M x 64	(1) 4M x 64
192MB	(1) 16M x 64	(1) 8M x 64
256MB	(1) 16M x 64	(1) 16M x 64

Note: Board accepts SDRAM memory.

CACHE CONFIGURATION

Size	Bank 0
512KB	(1) 64K x 64

CPU SPEED SELECTION (CX 6X86)

CPU speed	Clock speed	Multiplier	JBF0	JBF1	JBF2	JFS0	JFS1	JFS2
120MHz	50MHz	2x	2 & 3	1 & 2	1 & 2	2 & 3	2 & 3	2 & 3
133MHz	55MHz	2x	2 & 3	1 & 2	1 & 2	2 & 3	2 & 3	1 & 2
150MHz	60MHz	2x	2 & 3	1 & 2	1 & 2	2 & 3	1 & 2	1 & 2
166MHz	66MHz	2x	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2
200MHz	75MHz	2x	2 & 3	1 & 2	1 & 2	1 & 2	2 & 3	1 & 2

Note: Pins designated should be in the closed position.

CPU SPEED SELECTION (CX 6X86MX)

CPU speed	Clock speed	Multiplier	JBF0	JBF1	JBF2	JFS0	JFS1	JFS2
166MHz	60MHz	2.5x	2 & 3	2 & 3	1 & 2	2 & 3	1 & 2	1 & 2
166MHz	66MHz	2x	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2
200MHz	66MHz	2.5x	2 & 3	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2
200MHz	75MHz	2x	2 & 3	1 & 2	1 & 2	1 & 2	2 & 3	1 & 2
233MHz	75MHz	2.5x	2 & 3	2 & 3	1 & 2	1 & 2	2 & 3	1 & 2

Note: Pins designated should be in the closed position.

CPU SPEED SELECTION (AM K5)								
CPU speed	Clock speed	Multiplier	JBF0	JBF1	JBF2	JFS0	JFS1	JFS2
75MHz	50MHz	1.5x	1 & 2	1 & 2	1 & 2	2 & 3	2 & 3	2 & 3
90MHz	60MHz	1.5x	1 & 2	1 & 2	1 & 2	2 & 3	1 & 2	1 & 2
100MHz	66MHz	1.5x	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2
120MHz	60MHz	1.5x	1 & 2	1 & 2	1 & 2	2 & 3	1 & 2	1 & 2
133MHz	66MHz	1.5x	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2
150MHz	60MHz	2.5x	2 & 3	2 & 3	1 & 2	2 & 3	1 & 2	1 & 2
166MHz	66MHz	2.5x	2 & 3	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2
200MHz	66MHz	3x	1 & 2	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2

Note: Pins designated should be in the closed position.

CPU SPEED SELECTION (AM K6)								
CPU speed	Clock speed	Multiplier	JBF0	JBF1	JBF2	JFS0	JFS1	JFS2
166MHz	66MHz	2.5x	2 & 3	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2
200MHz	66MHz	3x	1 & 2	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2
233MHz	66MHz	3.5x	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2
266MHz	66MHz	4x	2 & 3	1 & 2	2 & 3	1 & 2	1 & 2	1 & 2

300MHz	66MHz	4.5x	2 & 3	2 & 3	2 & 3	1 & 2	1 & 2	1 & 2
--------	-------	------	-------	-------	-------	-------	-------	-------

Note: Pins designated should be in the closed position.

CPU SPEED SELECTION (INTEL)

CPU speed	Clock speed	Multiplier	JBF0	JBF1	JBF2	JFS0	JFS1	JFS2
75MHz	50MHz	1.5x	1 & 2	1 & 2	1 & 2	2 & 3	2 & 3	2 & 3
90MHz	60MHz	1.5x	1 & 2	1 & 2	1 & 2	2 & 3	1 & 2	1 & 2
100MHz	66MHz	1.5x	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2
120MHz	60MHz	2x	2 & 3	1 & 2	1 & 2	2 & 3	1 & 2	1 & 2
133MHz	66MHz	2x	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2
150MHz	60MHz	2.5x	2 & 3	2 & 3	1 & 2	2 & 3	1 & 2	1 & 2
166MHz	66MHz	2.5x	2 & 3	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2
200MHz	66MHz	3x	1 & 2	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2

Note: Pins designated should be in the closed position.

CPU SPEED SELECTION (INTEL MMX)

CPU speed	Clock speed	Multiplier	JBF0	JBF1	JBF2	JFS0	JFS1	JFS2
166MHz	66MHz	2.5x	2 & 3	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2
200MHz	66MHz	3x	1 & 2	2 & 3	1 & 2	1 & 2	1 & 2	1 & 2
233MHz	66MHz	3.5x	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2	1 & 2

Note: Pins designated should be in the closed position.

CPU VOLTAGE SELECTION (SINGLE)

Voltage	JP1
3.3v	Pins 1 & 2 closed
3.5v	Pins 3 & 4 closed

CPU VOLTAGE SELECTION (DUAL)

Voltage	JP2/pins 1 & 2	JP2/pins 3 & 4	JP2/pins 5 & 6	JP2/pins 7 & 8
2.2v	Open	Closed	Open	Open
2.8v	Open	Open	Open	Closed
2.9v	Closed	Open	Open	Closed
3.2v	Closed	Closed	Open	Open