

USER'S MANUAL

ProX-1510

**NS-Geode Half-size
Embedded Card
With VGA/LAN**

Prox-1510 M1

***ProX-1510 NS-Geode Half-size
EMBEDDED CARD
With VGA / LAN***

OPERATION MANUAL

COPYRIGHT NOTICE

This operation manual is meant to assist both Embedded Computer manufacturers and end-users in installing and setting up the system. The information contained in this document is subject to change without any notice.

This manual is copyrighted April 2002 (Revised Edition: October 24, 2002). You may not reproduce or transmit in any form or by any means, electronic, or mechanical, including photocopying and recording.

ACKNOWLEDGEMENTS

All trademarks and registered trademarks mentioned herein are the property of their respective owners.

TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION

1-1	About This Manual	1-2
1-2	System Specification	1-3
1-3	Safety Precautions	1-6

CHAPTER 2 HARDWARE CONFIGURATION

2-1	Jumper & Connector Quick Reference Table	2-2
2-2	Component Locations	2-3
2-3	How to Set the Jumpers	2-4
2-4	COM Port Connector	2-6
2-5	RS232/422/485 (COM2) Selection	2-7
2-6	Keyboard or PS/2 Mouse Connector	2-8
2-7	Keyboard or PS/2 Mouse Selection	2-8
2-8	External Keyboard Connector	2-9
2-9	Reset Connector	2-9
2-10	Hard Disk Drive Led Connector	2-9
2-11	Floppy Disk Drive Connector	2-10
2-12	Hard Disk Drive Connector	2-11
2-13	LAN Connector	2-12
2-14	LAN Enable/Disable Selection	2-12
2-15	VGA CRT Connector	2-13
2-16	LCD Connector	2-14
2-17	Panel Power Connector	2-15
2-18	Panel VCC Selection	2-15
2-19	Universal Serial Bus Connector	2-16
2-20	IrDA Connector	2-16
2-21	Fan Connector	2-17
2-22	Power Led & KeyLock Connector	2-17
2-23	RTC Function Selection	2-18
2-24	External Speaker Connector	2-18
2-25	Watchdog Selection – Reset	2-19
2-26	Power Connector	2-19
2-27	ATX Power Button	2-20
2-28	ATX Signal Connector	2-20
2-29	Printer Connector	2-21
2-30	Solid State Disk Socket	2-22

2-31	SSD Memory Mapping Selection	2-23
2-32	Memory Installation	2-24

CHAPTER 3 SOFTWARE UTILITIES

3-1	Introduction	3-2
3-2	VGA Driver Utility	3-2
3-3	Flash BIOS Update	3-4
3-4	LAN Driver Utility	3-6
3-5	Watchdog Timer Configuration	3-8

CHAPTER 4 AWARD BIOS SETUP

4-1	Introduction	4-2
4-2	Entering Setup	4-3
4-3	The Standard CMOS Setup	4-4
4-4	The BIOS Features Setup	4-9
4-5	Chipset Features Setup	4-13
4-6	Power Management Setup	4-15
4-7	PNP/PCI Configuration	4-16
4-8	Load BIOS Defaults	4-18
4-9	Load Setup Defaults	4-18
4-10	Integrated Peripherals	4-19
4-11	Password Settings	4-21
4-12	IDE HDD Auto Detection	4-23
4-13	Save & Exit Setup	4-24
4-14	Exit Without Saving	4-25

APPENDIX A EXPANSION BUS

	PC-104 Connector Pin Assignment	A-2
	ISA Bus Pin Assignment	A-3

APPENDIX B TECHNICAL SUMMARY

	Block Diagram	B-2
	Interrupt Map	B-3
	RTC & CMOS RAM Map	B-4
	Timer & DMA Channels Map	B-5


I/O & Memory Map B-6

APPENDIX C TROUBLE SHOOTING

Trouble Shooting for Error Messages C-2
Trouble Shooting for POST Code C-5



INTRODUCTION

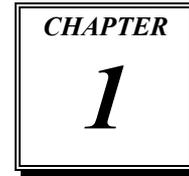

This chapter gives you the information for Prox-1510. It also outlines the System specifications.

Section includes:

- About This Manual
- System Specifications
- Safety precautions

Experienced users can skip to chapter 2 on page 2-1 for a Quick Start.

1-1. ABOUT THIS MANUAL

Thank you for purchasing our Prox-1510 NS-Geode Half-size Card with VGA/LAN, which is fully PC/AT compatible. The Prox-1510 provides faster processing speed, greater expandability and can handle more tasks than before. This manual is designed to assist you how to install and setup the system. It contains four chapters. The user can apply this manual for configuration according to the following chapters :

Chapter 1 Introduction

This chapter introduces you to the background of this manual, and the specification of the system. Final page in this chapter will give you some ideas on how to avoid damaging your Embedded Card.

Chapter 2 Hardware Configuration

This chapter outlines the component locations and their functions. In the end of this chapter, you will know how to set jumper and how to configure this card to meet your own needs.

Chapter 3 Software Utilities

This chapter contains helpful information for proper installations of the VGA driver utility, LAN driver utility and how to update BIOS. It also describes the Watchdog timer configuration.

Chapter 4 Award BIOS Setup

This chapter shows you how to set up the BIOS configurations.

Appendix A Expansion Bus

This Appendix introduces you the ISA BUS.

Appendix B Technical Summary

This section gives you the information about the Technical maps.

Appendix C Trouble Shooting

This section outlines the error messages and offers you some solutions.

1-2. SYSTEM SPECIFICATION

- **CPU :**
 - Built-in NS-Geode™ GX1-300 MHz
(Low-Power Processor)
 - 2.0V CPU Voltage.

- **MEMORY :**
 - 32MB SDRAM on board (optional), plus
 - One 168-pin DIMM socket.

- **CHIPSET :**
 - NS Geode™ 5530A

- **CACHE :**
 - Built-in CPU.

- **SUPER I/O :**
 - Winbond 83977F.

- **REAL-TIME CLOCK / CALENDAR :**
 - 256-byte battery backed CMOS RAM.
 - Hardware implementation to indicate century rollover.

- **BIOS :**
 - Phoenix-Award Flash BIOS for plug & play function.
 - Easy update 256KB flash EEPROM.
 - Support Green Function.
 - Support S/IO Setup.

- **KEYBOARD/MOUSE CONNECTOR :**
 - One mini DIN connector, selectable for Keyboard, PS/2 Mouse, or Y-cable.
 - One additional 5-pin external keyboard connector.

- **BUS SUPPORT :**
 - Internal PCI Bus for LAN
 - External ISA Bus and PC104 Bus.

● **LAN INTERFACE :**

Realtek RTL8139 PCI Fast Ethernet.
10/100 Base-T PCI Bus.
RJ-45 jack on board

● **VGA DISPLAY :**

Built-in NS Geode CS5530, up to 4MB system shared memory.
Support 18-bit TFT LCD panel with resolution up to 1024 x 768 x 16bpp.
Support CRT Monitor with resolution up to 1280 x 1024 x 8bpp.
Support simultaneous display of CRT & LCD flat panel.
Interface: 15-pin CRT Connector and
41-pin LCD connector.

● **WATCHDOG :**

I / O port 0443H to Enable watchdog.
I / O port 0441H to Disable watchdog.
Time-out timing select 0 / 8 / 16 / 24 / 32 / 40 / 48 / 56 / 64 / 72 / 80 / 88 / 96 /
104 / 112 / 120 sec $\pm 25\%$.

● **IDE INTERFACE :**

One IDE port, support Ultra DMA-33.
Support up to two Enhanced IDE devices.

● **FLOPPY DISK DRIVE INTERFACE :**

Supports up to two Floppy Disk Drives, 3.5" and 5.25" (360K / 720K / 1.2M /
1.44M / 2.88M).

● **SSD SOCKET :**

A 32-pin SSD socket on-board.
Supports up to 144MB Disk-on-chip.

● **USB CONNECTOR :**

Universal Serial Bus Connector on-board.
Supports up to two USB ports.

● **IRDA :**

5-pin IrDA connector.
Support IrDA v1.0 SIR protocol.

● **SERIAL PORT :**

Two high speed 16550 Compatible UARTs with Send / Receive 16 Byte FIFOs. COM1: RS-232; COM2: RS-232/422/485
Programmable Baud Rate Generator.

● **PARALLEL PORT :**

SPP, ECP, EPP Function.
Bi-directional parallel port.

● **PC-104 BUS EXPANSION & SPEED :**

ISA 8MHz
PC-104 8MHz
PCI 33MHz
USB 12Mbit/sec

● **GREEN FUNCTION :**

Software supported by BIOS setup.
Hardware supported by switch control.

● **LED INDICATOR :**

System power.
Hard Disk access.
LAN Led indicator.

● **DMA CONTROLLER :**

82C37 x 2

● **DMA CHANNELS :**

7

● **INTERRUPT CONTROLLERS :**

82C59 x 2

● **INTERRUPT LEVELS :**

15

● **OPERATING TEMPERATURE :**

0 to 60°C.

● **SYSTEM POWER REQUIREMENT :**

DC Voltage: +5V, minimum +4.75V, maximum +5.25V.
DC Ampere: 3A.

● **BOARD DIMENSION :**

185mm x 122mm

● **BOARD NET WEIGHT :**

205 grams

1-3. SAFETY PRECAUTIONS

Follow the messages below to protect your systems and yourself from damages:

1. Avoid your system from any static electricity on all occasions.
2. Prevent electric shock. Don't touch any components of this card when the card is on. Always disconnect power when the system is not in use.
3. Disconnect power when you change any hardware devices. For instance, if you connect a jumper or install any cards with computer on, a surge of power may damage the electronic components or the whole system.

HARDWARE CONFIGURATION

CHAPTER

2

***** QUICK START *****

Helpful information details you the jumper & connector settings, and component's location.


Sections include:

- Jumper & Connector Quick Reference Table
- Component's Location
- Configuration and Jumper settings
- Connector Pin Assignments

2-1 JUMPER & CONNECTOR QUICK REFERENCE TABLE

COM Port Connector	COM1, COM2
RS232/422/485 (COM2) Selection	JP2
Keyboard or PS/2 Mouse Connector	DIN
Keyboard or PS/2 Mouse Selection	JP11
External Keyboard Connector	EXKB
Reset Connector	RST1
Hard Disk Drive LED Connector	HDL1
Floppy Disk Drive Connector	FDD
Hard Disk Drive Connector	IDE1
LAN Connector	LAN
LAN enable/disable Selection	JP4
VGA CRT Connector	VGA
LCD Connector	LCD1
Panel Power Connector	J5
Panel VCC Selection	JP5
Universal Serial Bus Connector	USB
IrDA Connector	IR1
Fan Connector	J6
Power LED & KeyLock Connector	KBL1
RTC Function Selection	JP1
External Speaker Connector	J9
Watchdog Selection – Reset	JP10
Power Connector	J4
ATX Power	J3
Button	
ATX Signal Connector	J2
Printer Connector	PRT
Solid-State Disk Socket	SSD
SSD Memory Mapping Selection	JP8
Memory Installation	DIMM1

2-2 COMPONENT LOCATIONS

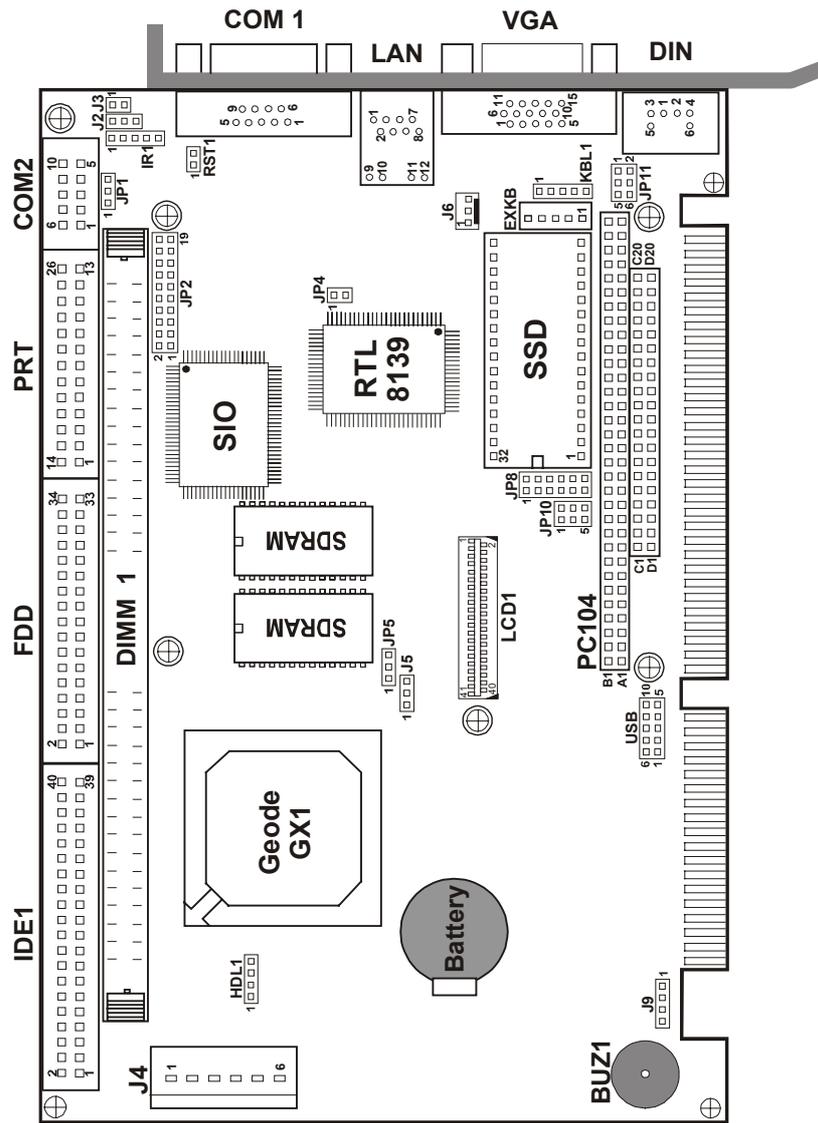


Prox-1510 Connector, Jumper, and Component locations

2-3 HOW TO SET THE JUMPERS

You can configure your board by setting the jumpers. A jumper consists of two or three metal pins with a plastic base mounted on the card. By using a small plastic “cap” (with a metal contact inside), you may connect the pins. So you can set up your hardware configuration by “opening” or “closing” the pins.

The jumper can be combined into sets, which are called the jumper blocks. When the jumpers are all in the block, you have to put them together to set up the hardware configuration. The figure below shows how this looks.

JUMPERS AND CAPS

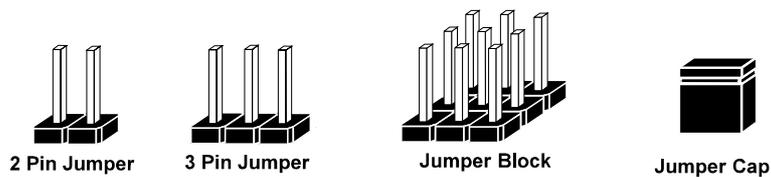


If a jumper has three pins, for example: labelled PIN1, PIN2, and PIN3. You can connect PIN1 & PIN2 to create one setting and shorting. Or you may also connect PIN2 & PIN3 to create another setting. The same jumper diagrams are applied all through this manual. The figure below shows what the manual diagram looks like and what they represent.


JUMPER DIAGRAMS




Jumper Cap
looks like this




2 pin Jumper
looks like this



3 pin Jumper
looks like this

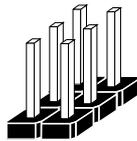


Jumper Block
looks like this




JUMPER SETTINGS




2 pin Jumper close(enabled)
looks like this



3 pin Jumper
2-3 pin close(enabled)
looks like this




Jumper Block
1-2 pin close(enabled)
looks like this



2-4. COM PORT CONNECTOR


COM1 : COM1 Connector, DB9 male connector
 The pin assignment are as follows :

PIN	ASSIGNMENT
1	DCD
2	RX
3	TX
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

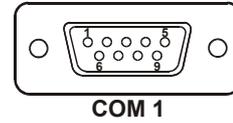

COM2 : COM2 Connector
 The pin assignments are as follows :

PIN	ASSIGNMENT		
	RS-232	RS-422	RS-485
1	DCD	TX-	TX-
2	RX	TX+	TX+
3	TX	RX+	RX+
4	DTR	RX-	RX-
5	GND	GND	GND
6	DSR	RTS-	NC
7	RTS	RTS+	NC
8	CTS	CTS+	NC
9	RI	CTS-	NC
10	NC	NC	NC

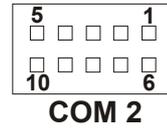

2-5. RS232/422/485 (COM2) SELECTION

JP2 : RS-232/422/485 Selection

COM1 is fixed for RS-232 function only.

COM2 is selectable for RS-232, 422, 485 function.

The jumper settings are as follows :

COM 2 Function	Jumper Setting (pin closed)	Jumper Illustration
RS-232	Open	
RS-422	1-2, 5-6, 7-8, 9-10 11-12, 13-14, 15-16 17-18, 19-20	
RS-485	1-3, 4-6, 7-8, 9-10 11-12, 13-14, 15-16 17-18, 19-20	


*** Manufactory default --- RS-232.

2-6. KEYBOARD OR PS/2 MOUSE CONNECTOR

DIN : Keyboard or PS/2 Mouse Connector

DIN connector can support Keyboard, Y-cable, or PS/2 Mouse by jumper selection, user may select the right device to used on “Keyboard or PS/2 Mouse Selection”. The pin assignments are as follows :

PIN	ASSIGNMENT	
	Keyboard	PS/2 Mouse
1	KBDATA	MSDATA
2	MSDATA	MSDATA
3	GND	GND
4	VCC	VCC
5	KBCLK	MSCLK
6	MSCLK	MSCLK

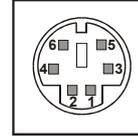

DIN

2-7. KEYBOARD OR PS/2 MOUSE SELECTION

JP11 : Keyboard or PS/2 Mouse Selection.

If User select to use Y-Cable, please set the jumper same as AT Keyboard. The jumper settings are as follows:


DEVICE TYPE	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
AT KEYBOARD	3-5 4-6	JP11
PS/2 MOUSE	1-3 2-4	JP11

*** Manufactory default -- AT Keyboard

2-8. EXTERNAL KEYBOARD CONNECTOR

EXKB : External Keyboard Connector
The pin assignment is as follows:

PIN	ASSIGNMENT
1	KBCLK
2	KBDATA
3	NC
4	GND
5	VCC



2-9. RESET CONNECTOR

RST : Reset Connector
The pin assignment is as follows:

PIN	ASSIGNMENT
1	RESET
2	GND



2-10. HARD DISK DRIVE LED CONNECTOR

HDL1 : Hard Disk Driver LED Connector
The pin assignments is as follows:

PIN	ASSIGNMENT
1	VCC
2	HDD Active Signal
3	HDD Active Signal
4	HDD Active Signal



2-11. FLOPPY DISK DRIVE CONNECTOR

FDD : Floppy Disk Drive Connector

You can use a 34-pin daisy-chain cable to connect two FDDs. On one end of this cable is a 34-pin flat cable attaches to the FDD on the board, and the other side is attaches to two FDDs.

The pin assignments are as follows :



FDD

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	2	RWC#
3	GND	4	NC
5	GND	6	NC
7	GND	8	INDEX#
9	GND	10	M0A
11	GND	12	DSB#
13	GND	14	DSA#
15	GND	16	M0B
17	GND	18	DIR
19	GND	20	STEP
21	GND	22	WDATA
23	GND	24	WGATE
25	GND	26	TRAK0
27	GND	28	WP
29	NC	30	RDATA
31	GND	32	HEAD
33	NC	34	DSKCHG

2-12. HARD DISK DRIVE CONNECTOR

IDE1: Hard Disk Drive Connector

The pin assignments are as follows:



IDE1


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	RESET	21	PDRQ
2	GND	22	GND
3	PDD7	23	PDIOW
4	PDD8	24	GND
5	PDD6	25	PDIOR
6	PDD9	26	GND
7	PDD5	27	IOCHRDY
8	PDD10	28	PULL LOW
9	PDD4	29	PDACKJ
10	PDD11	30	GND
11	PDD3	31	IRQ14
12	PDD12	32	NC
13	PDD2	33	A1
14	PDD13	34	NC
15	PDD1	35	A0
16	PDD14	36	A2
17	PDD0	37	CS0
18	PDD15	38	CS1
19	GND	39	HDDLED
20	N.C.	40	GND

2-13. LAN CONNECTOR

LAN: LAN Connector

You will find two LAN LED indicator on LAN connector, the green LED is used to detect the 100Mbps speed, while the yellow LED is used to detect “LINK” and “ACTIVE” signal. The pin assignments are as follows:

PIN	ASSIGNMENT
1	TX+
2	TX-
3	RX+
4	ISOLATED GND
5	ISOLATED GND
6	RX-
7	ISOLATED GND
8	ISOLATED GND
9	Pull Hi
10	LED – Green
11	Pull Hi
12	LED – Yellow

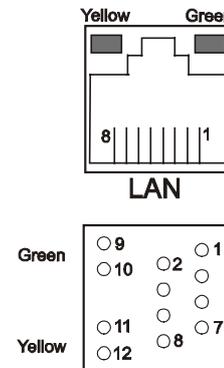

2-14. LAN ENABLE/DISABLE SELECTION

JP4 : LAN enable/disable Selection


The selections are as follows:

SELECTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
Enabled	Closed	
Disabled	Open	

2-15. VGA CRT CONNECTOR

VGA : VGA CRT Connector

The pin assignments are as follows:

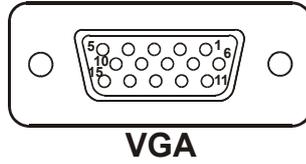


PIN	ASSIGNMENT
1	RED
2	GREEN
3	BLUE
4	NC
5	GND
6	GND
7	GND
8	GND
9	VCC
10	GND
11	DDCSDA
12	NC
13	HSYNC
14	VSYNC
15	DDCSCL

2-16. LCD CONNECTOR

LCD1: LCD Connector

The connector LCD is a 41-pin, dual-in-line header used for LCD display.

The pin assignments are as follows:



LCD1


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	P20	2	GND
3	P16	4	VCC
5	P21	6	P0
7	P17	8	P8
9	P22	10	P1
11	P18	12	P9
13	P23	14	P2
15	P19	16	P10
17	VCC	18	P3
19	FLM	20	P11
21	MDE	22	P4
23	LP	24	P12
25	SHFCLK	26	P5
27	3.3V	28	P13
29	3.3V	30	P6
31	ENABKL	32	P14
33	LCDVDD	34	P7
35	ENVEE	36	P15
37	GND	38	+12V
39	GND	40	+12V
41	NC		

2-17. PANEL POWER CONNECTOR

J5 : Panel Power Connector

The pin assignments is as follows:

PIN	ASSIGNMENT
1	+12V SAFE
2	GND
3	VDD SAFE (+5V/3.3V)



Note: Before using this connector, make sure that you set the JP5 jumper at the same time. Pin #3 can be +5V or +3.3V depending on the jumper set on “Panel VCC Selection”.

2-18. PANEL VCC SELECTION

JP5 : Panel VCC Selection

The pin assignments is as follows:

VCC SELECTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
VCC +5V	1-2	JP5
VCC +3.3V	2-3	JP5


2-19. UNIVERSAL SERIAL BUS CONNECTOR

USB1: Universal Serial Bus Connector

This connector can connect up to two USB port.

The pin assignments are as follows:

PIN	ASSIGNMENT
1	VCC
2	DATA0-
3	DATA0+
4	GND
5	GND
6	VCC
7	DATA1-
8	DATA1+
9	GND
10	GND




2-20. IRDA CONNECTOR

IR1: IrDA (Infrared) Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	VCC
2	NC
3	IRRXD
4	GND
5	IRTXD




2-21. FAN CONNECTOR

J6 : Fan Connector

The pin assignments is as follows:

PIN	ASSIGNMENT
1	GROUND
2	+12V
3	NC




2-22. POWER LED & KEYLOCK CONNECTOR

KBL1 : Power LED & Keylock Connector

The pin assignments is as follows:

PIN	ASSIGNMENT
1	POWER LED
2	NC
3	GROUND
4	KEYLOCK
5	GROUND



2-23. RTC FUNCTION SELECTION

JP1 : RTC Function Selection
The selections are as follows:


FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
NORMAL	1-2	 JP1
CLEAR RTC	2-3	 JP1

***Manufacturing Default is set as Normal.

2-24. EXTERNAL SPEAKER CONNECTOR



J9 : External Speaker Connector
The pin assignments is as follows:

PIN	ASSIGNMENT
1	VCC
2	ACTIVE SIGNAL
3	ACTIVE SIGNAL
4	ACTIVE SIGNAL



2-25. WATCHDOG SELECTION – RESET

JP10 : Watchdog Selection - Reset
 The selections are as follows:

FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
RESET	1-2	 JP10
DISABLE	5-6	 JP10

2-26. POWER CONNECTOR

J4 : Power Connector
 The pin assignments is as follows:

PIN	ASSIGNMENT
1	NC
2	+5V
3	+12V
4	-12V
5	GND
6	GND




2-27. ATX POWER BUTTON

J3 : ATX Power Button

The pin assignments are as follows:

PIN	ASSIGNMENT
1	GROUND
2	PWR BTN



2-28. ATX SIGNAL CONNECTOR

J2 : ATX Signal Connector

The pin assignments are as follows:


PIN	ASSIGNMENT
1	PWR ON
2	GND
3	+5VSB



2-29. PRINTER CONNECTOR

PRT : Printer Connector

As to link the Printer to the card, you need a cable to connect both DB25 connector and parallel port. The pin assignments are as follows:



PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	STB	14	AFD
2	PD0	15	ERROR
3	PD1	16	INIT
4	PD2	17	SLIN
5	PD3	18	GND
6	PD4	19	GND
7	PD5	20	GND
8	PD6	21	GND
9	PD7	22	GND
10	ACK	23	GND
11	BUSY	24	GND
12	PE	25	GND
13	SLCT	26	NC

2-30. SOLID-STATE DISK SOCKET

SSD: 32pin Disk-on-chip Socket
 The pin assignments are as follows:








PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	NC	17	SD3
2	NC	18	SD4
3	NC	19	SD5
4	SA12	20	SD6
5	SA7	21	SD7
6	SA6	22	CE
7	SA5	23	SA10
8	SA4	24	OE
9	SA3	25	SA11
10	SA2	26	SA9
11	SA1	27	SA8
12	SA0	28	SA14
13	SD0	29	SA13
14	SD1	30	NC
15	SD2	31	WE
16	GND	32	VCC

2-31. SSD MEMORY MAPPING SELECTION

JP8 : SSD Memory Mapping Selection.

A 32-pin SSD socket supports an SSD up to 144MB. This PnP flash ROM SSD can be installed as one of user's hard disks. And if set as Drive C, it can be used to boot up the computer with MS-DOS installed.

The SSD Memory Mapping selection are listed as follows :

SSD Memory Map	Jumper Setting (Pin closed)	JUMPER ILLUSTRATION
CC000h-CDFFFh	1-2 11-12	
D0000h-D1FFFh	3-4 9-10	
D4000h-D5FFFh	3-4 11-12	
D8000h-D9FFFh	5-6 9-10	
DC000h-DDFFFh	5-6 11-12	

***Manufactory default --- CC000h-CDFFFh

2-32. MEMORY INSTALLATION

Onboard 32MB (optional) plus one DIMM Bank

DRAM BANK CONFIGURATION

ONBOARD	DIMM1	TOTAL MEMORY
	32M	32MB
	64M	64MB
	128M	128MB
	256M	256MB
32M		32MB
32M	32M	64MB
32M	64M	96MB
32M	128M	160MB
32M	256M	288MB

SOFTWARE UTILITIES

CHAPTER

3

This chapter comprises the detailed information of VGA driver, LAN driver and Flash BIOS update. It also describes how to install the watchdog timer configuration.

Sections include:

- VGA Driver Utility
- Flash BIOS Update
- LAN Driver Utility
- Watchdog Timer Configuration


3-1. INTRODUCTION

Enclosed with our Prox-1510 package is our driver utility, which may come in a form of a CD ROM disc or floppy diskettes. For CD ROM disc user, you will only need some of the files contained in the CD ROM disc, please kindly refer to the following chart:

File name (Assume that CD ROM drive is D:)	Purpose
D:\VGA\GX1\	For VGA driver installation
D:\Flash\V7.96 or V7.72	For BIOS update
D:\Lan\RTL8139	For LAN Driver installation
D:\GX1\Utility	For PCI Bridge Utility

3-2. VGA DRIVER UTILITY

The VGA interface embedded with our Prox-1510 can support a wide range of display mode, such as SVGA, STN, TFT....etc. You can display CRT and LCD Panel simultaneously on this board, but make sure that the modes for CRT and LCD Panel are the same. If not, only one of them can be displayed.

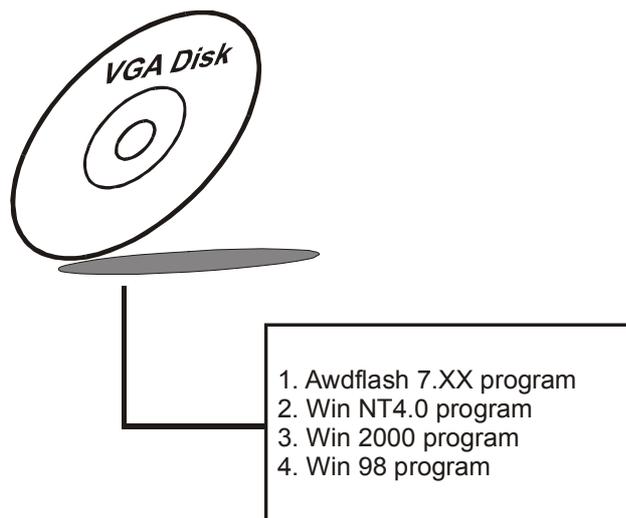

3-2-1. Installation of VGA Driver

1. Install VGA driver to Windows NT 4.0

- (1). To install VGA drivers to Windows 4.0 is as you normally would. Click START, then SETTINGS, then CONTROL PANEL of the operating system.
- (2). Select the DISPLAY icon to start the DISPLAY PROPERTIES window, then choose the SETTING tab, then DISPLAY TYPE.
- (3). In the CHANGE DISPLAY TYPE window, click on the CHANGE button in the ADAPTER TYPE, this will bring up the SELECT DEVICE window.
- (4). In the CHANGE DISPLAY window, click on Have Disk. Follow the instructions appearing on the screen until you complete the whole installation.
- (5). Once installation is completed, the system must be shut down and restarted for the new drivers to take effect.

2. Install VGA driver to Windows 98

- (1). Click MY COMPUTER, then CONTROL PANEL of the operating system.
- (2). Select SYSTEM icon to bring up the SYSTEM PROPERTIES window.
- (3). Select DEVICE MANAGER, then look for STANDARD PCI GRAPHIC ADAPTER (VGA), which is found under the DISPLAY ADAPTERS.
- (4). Double click the STANDARD PCI GRAPHIC ADAPTER (VGA) icon to bring up the STANDARD PCI GRAPHIC ADAPTER (VGA) PROPERTIES window, Select DRIVER, and then UPDATE DRIVER.
- (5). Upon selecting the UPDATE DRIVER, the UPDATE DEVICE DRIVER WIZARD window will show up.
- (6). Select the pathname where the driver is located and follow the remaining instructions appearing on the screen.
- (7). Once installation is completed, the system must be shut down and restarted for the new drivers to take effect.

3-3. FLASH BIOS UPDATE

3-3-1. System BIOS Update:

Users of Prox-1510 can use the program "Awdflash.exe" contained in the Utility Disk for system BIOS update.

3-3-2. To update System BIOS:

As a Prox-1510 user, you can update the system BIOS through the following steps:

1. Install "Awdflash.exe" from Utility Disk to Drive C.
2. Type the path to Awdflash.exe with file F10xxxxx.bin
C:\UTIL\AWDFLASH>AWDFLASH F10xxxxx.bin
3. The screen will display the table below:

FLASH MEMORY WRITER v7.XX (C) Award Software 1999 All Rights Reserved
For GXm-Cx5530-2A434P69C-0 DATE: 03/27/2002 Flash Type: MXIC 29F002T/5V File Name to Program: F10xxxxx.bin Checksum: XXXXX
Error Message : Do You Want To Save BIOS (Y/N)

If you want to save up the original BIOS, enter "Y" and press < Enter > .
If you choose "N", the following table will appear on screen.

FLASH MEMORY WRITER v7.XX (C) Award Software 1999 All Rights Reserved
For GXm-Cx5530-2A434P69C-0 DATE: 03/27/2002 Flash Type: MXIC 29F002T/5V File Name to Program: F10xxxxx.bin Checksum: XXXXX
Error Message : Are You Sure To Program (Y/N)

Select "Y", and the BIOS will be renewed. When you are refreshing the BIOS, do not turn off or reset the system, or you will damage the BIOS. After you have completed all the programming, the screen displays the table below:


FLASH MEMORY WRITER v7.XX (C) Award Software 1999 All Rights Reserved
For GXm-Cx5530-2A434P69C-0 DATE: 03/27/2002 Flash Type: MXIC 29F002T/5V File Name to Program: F10xxxxx.bin Checksum: XXXXX Reset System or Power off to accomplish update process!
F1: Reset F10: Exit

Please reset or power off the system, then the Flash BIOS is fully implemented.

3-4. LAN DRIVER UTILITY

3-4-1. Introduction

Prox-1510 CPU Card is enhanced with LAN function can support various network adapters. Installation programs for LAN drivers are listed as follows:

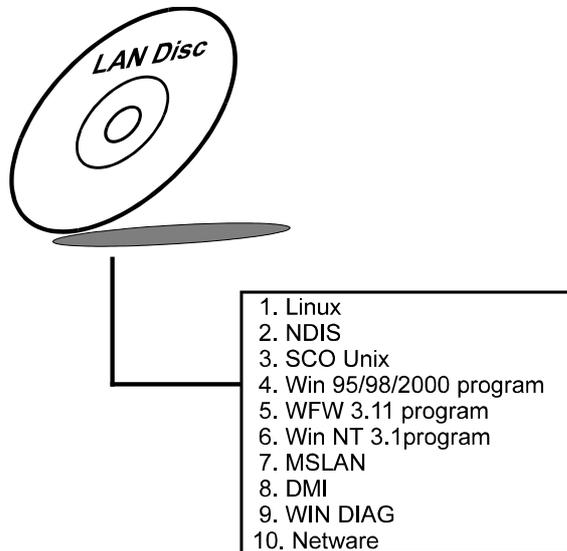

3-4-2. Installing Procedure on Microsoft Windows 95

Executing Windows 95, it will auto-detect your system configuration and find the adapter hardware.

1. Insert the LAN Driver disk into Drive A or CD ROM drive and specify the setup file pathname A:\.
2. Windows 95 will appear some messages to insert Windows 95 system disk to complete setup.
3. Windows 95 will finish the other installation procedure automatically, then restart the system.

3-4-3. Installing Procedure on Microsoft Windows NT

1. In the Main group to NT, select the "Control Panel" icon.
2. In the Control Panel window, choose the "Network" icon.
3. In the Network Settings dialog box, choose the "Add adapter" button.
The Add Network Adapter dialog box appears.
4. In the list of network cards, select "<Other> requires disk from manufacturer", and then press <Enter> button.
5. Insert the LAN Driver disk in Drive A, and key-in A:\ (pathname) where the setup file OEMSETUP.INF is located, and then choose OK button.
6. The screen will appear "Select Line Speed" dialog box, which is provided by RTL8139.SYS driver. The default value is "auto" so that the line speed can be auto detected as 10Mb or 100Mb, while the RTL8139.SYS is loading.
7. The screen will appear "Input Ethernet ID" dialog box, which is provided by RTL8139.SYS driver. This option is only required when you have more than one RTL8139 PCI Fast Ethernet adapters on this computer. Select "SKIP" if only one adapter is installed on this computer.
8. "Bus Location" display in next screen. If your system contains more than one hardware bus, please select the Bus Type and Bus number on which your network adapter card is installed.
9. NT will then perform the binding process. If any additional network software options were installed, you may be prompted for specific information for these packages.
10. Re-boot your system to complete the installation process.

*** Note: Installing Multiple LAN Adapters:

Enter Windows NT and follow above setup procedure step 2, in the "Network Setting" dialog box, choose the "Configure.." button. The "Input Ethernet ID" dialog box appears and input adapter's Ethernet ID. Last step to select OK and close NETWORK SETUP. Select SKIP if only one adapter is installed on this computer.

For more details on Installation procedure, please refer to TXT directory found on LAN DRIVER UTILITY.

3-5. WATCHDOG TIMER CONFIGURATION

This board has watchdog timer function for monitoring whether the system is still work or not after a period of time. This is defined at I/O port **443H**. When you want to enable the watchdog timer, please write I/O port **443H**, then the system will either reset itself. Likewise, when you want to disable the function, write I/O port **441H**, the system will run the command to stop the Watchdog function.

In Prox-1510 watchdog function, You must write your program so when it writes I/O port address 443 for enable watchdog and write I/O port address 441 for disable watchdog. The timer's intervals have a tolerance of 25% so you should program an instruction that will refresh the timer about every second.

The following program shows you how to program the watch timer in your program.

Watchdog enable program:

```
MOVAX, 000FH(choose the values you need; start from 0)
MOVDX, 443H
OUTDX, AX
```


Watchdog disable program:

```
MOVAX, 000FH(this value can be ignored)
MOVDX, 441H
OUTDX, AX
```

The Watchdog Timer control table is as follows:

Level	Value	Time/sec	Level	Value	Time/sec
1	F	0	9	7	64
2	E	8	10	6	72
3	D	16	11	5	80
4	C	24	12	4	88
5	B	32	13	3	96
6	A	40	14	2	104
7	9	48	15	1	112
8	8	56	16	0	120

AWARD BIOS SETUP

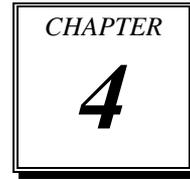

This chapter states out how to set up the Award BIOS.

Section includes:

- Introduction
- Entering Setup
- The Standard CMOS Setup
- The BIOS Features Setup
- The Chipset Features Setup
- Power Management Setup
- PNP/PCI Configuration
- Load BIOS/Setup Defaults
- Integrated Peripherals
- IDE HDD Auto Detection
- Save and Exit Setup
- Exit Without Saving


4-1. INTRODUCTION

This chapter will show you the function of the BIOS in managing the features of your system. The Prox-1510 NS-Geode CPU Card is equipped with the BIOS for system chipset from Award Software Inc. This page briefly explains the function of the BIOS in managing the special features of your system. The following pages describe how to use the BIOS for system chipset Setup menu.

Your application programs (such as word processing, spreadsheets, and games) rely on an operating system such as DOS or OS/2 to manage such things as keyboard, monitor, disk drives, and memory.

The operating system relies on the BIOS (Basic Input and Output system), a program stored on a ROM (Read-only Memory) chip to initialize and configure your computer's hardware. As the interface between the hardware and the operating system, the BIOS Enables you to make basic changes to your system's hardware without having to write a new operating system.

The following diagram illustrates the interlocking relationships between the system hardware, BIOS, operating system, and application program:

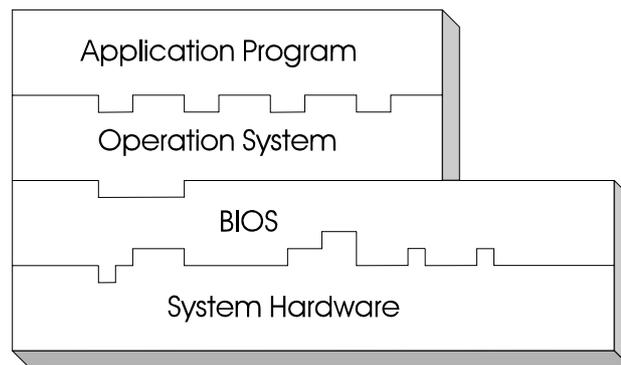

4-2. ENTERING SETUP

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines and following messages will appear on the lower screen:

PRESS TO ENTER SETUP, ESC TO SKIP MEMORY TEST

As long as this message is present on the screen you may press the key (the one that shares the decimal point at bottom of the number keypad) to access the Setup program. In a moment, the main menu of the Award SETUP program will appear on the screen:

ROM PCI / ISA BIOS (2A434P69) CMOS SETUP UTILITY AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	PASSWORD SETTING
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURATION	SAVE & EXIT SETUP
LOAD BIOS DEFAULTS	EXIT WITHOUT SAVING
LOAD SETUP DEFAULTS	
Esc : Quit	↑↓→← : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color
Time, Date, Hard Disk Type.....	

Setup program initial screen

You may use the cursor up/down keys to highlight the individual menu items. As you highlight each item, a brief description of that item's function will appear in the lower window. If you have a color monitor you can use the Shift F2 keys to scroll through the various color combinations available.

4-3. THE STANDARD CMOS SETUP

Highlight "STANDARD CMOS SETUP" and press < ENTER > and the screen will display the following table:

ROM PCI / ISA BIOS (2A434P69)						
STANDARD CMOS SETUP						
AWARD SOFTWARE, INC.						
Date (mm:dd:yy)	:	Mon,	Apr	1	2002	
Time (hh:mm:ss)	:	13	:	20	:	33
		CYLS	HEADS	PRECOMP	LANDZONE	SECTORS
Drive C : Auto (0Mb)		0	0	0	0	0
Drive D : Auto (0Mb)		0	0	0	0	0
Drive A : 1.44M, 3.5 in.						
Drive B : None						
Video : EGA/VGA						
Halt On : All, But Keyboard						
					Base Memory:	640K
					Extended Memory:	94720K
					Other Memory:	384K

					Total Memory:	95744K
Esc : Quit		↑↓→← : Select Item			Pu/Pd/+/- : Modify	
F1 : Help		(Shift) F2 : Change Color				

CMOS Setup Screen

In the above table the base memory size and the extended memory size are displayed. This is automatically read from your systems, and you do not need to set these parameters.

Information on each items are as follows:

DATE:

The BIOS determines the day of the week from the other date information. This field is for information only.

Press the left or right arrow key to move to the desired field (date, month, year). Press the PgUp or PgDn key to increment the setting, or type the desired value into the field.

TIME:

The time format is based on the 24-hour military time clock. For example, 4:00pm is entered as 13:00:00.

PRIMARY MASTER/SLAVE:

The categories identify the types of hard disk drive C or drive D that had been installed in the computer. There are 45 predefined types and 2 user definable types are for Normal BIOS. Type 1 to Type 45 are predefined. Type User is user-definable.

Press PgUp / <+> or PgDn / <-> to select a numbered hard disk type or type the number and press < Enter >. Note that the specifications of your drive must match with the drive table. The hard disk will not work properly if you enter improper information for this category. If your hard disk drive type is not matched or listed, you can use Type User to define your own drive type manually.

If you select Type User, related information is asked to be entered to the following items. Enter the information directly from the keyboard and press < Enter >. This information should be provided in the documentation from your hard disk vendor or the system manufacturer.

If the controller of HDD interface is ESDI, the selection shall be "Type 1".

If the controller of HDD interface is SCSI, the selection shall be "None"

If the controller of HDD interface is CD-ROM, the selection shall be "None"

CYLS:

This refers to the number of cylinders found in the specified drive type.

HEADS:

This refers to the number of heads found in the specified drive type.

PRECOMP:

Precomp is the read delay circuitry, which takes into account the timing differences between the inner and outer edges of the surface of the disk platter. The number designates the starting cylinder of the signal.

LANDZONE:

Landz is the landing zone of the heads. This number determines the cylinder location where the heads will normally park when the system is shut down.

SECTOR:

This is the number of sector found in a specified drive type.

DRIVE A:

DRIVE B:

This category identifies the type of floppy disk drive A or B that have been installed in the computer.

VIDEO:

The category determines the type of video adapter used for the primary system monitor. Although secondary monitors are supported, you do not have to select the type in Setup.

HALT ON:

The category determines whether the computer will stop if an error is detected during power up. The options are as follows:

No errors	Whenever the BIOS detect a non-fatal error the system will be stopped and you will be prompted.
All errors	The system boot will not be stopped for any error that may be detected.
All, but keyboard	The system boot will stop for all other errors, except keyboard error.
All, but diskette	The system boot will stop for all other errors, except keyboard error.
All, but disk/key	The system boot will stop for all other errors, except for keyboard error and/or disk error.

BASE MEMORY:

The POST will determine the amount of base (or conventional) memory installed in the system. The value of the base memory is typically 512K for systems with 512K memory installed on the motherboard, or 640K for systems with 640K or more memory installed on the motherboard.

EXTENDED MEMORY:

The BIOS determine how much extended memory is present during the POST. This is the amount of memory located above 1MB in the CPU's memory address map.

OTHER MEMORY:

This refers to the memory located in the 640K to 1024K address space. This is memory that can be used for different applications. DOS uses this area to load device drivers in an effort to keep as much base memory free for application programs. The BIOS is the most frequent user of this RAM area since this is where it shadows RAM.

TOTAL MEMORY:

Displays the total memory available in the system.

HARD DISK ATTRIBUTES:

Type	Cylinders	Heads	V-P comp	LZone	Sect	Capacity
1	306	4	128	305	17	10
2	615	4	300	615	17	20
3	615	6	300	615	17	30
4	940	8	512	940	17	62
5	940	6	512	940	17	46
6	615	4	65535	615	17	20
7	642	8	256	511	17	30
8	733	5	65535	733	17	30
9	900	15	65535	901	17	112
10	820	3	65535	820	17	20
11	855	5	65535	855	17	35
12	855	7	65535	855	17	49
13	306	8	128	319	17	20
14	733	7	65535	733	17	42
15	000	0	0000	000	00	00
16	612	4	0000	663	17	20
17	977	5	300	977	17	40
18	977	7	65535	977	17	56
19	1024	7	512	1023	17	59
20	733	5	300	732	17	30
21	733	7	300	732	17	42
22	733	5	300	733	17	30
23	306	4	0000	336	17	10
24	977	5	65535	976	17	40
25	1024	9	65535	1023	17	76
26	1224	7	65535	1223	17	71
27	1224	11	65535	1223	17	111
28	1224	15	65535	1223	17	152
29	1024	8	65535	1023	17	68
30	1024	11	65535	1023	17	93
31	918	11	65535	1023	17	83
32	925	9	65535	926	17	69
33	1024	10	65535	1023	17	85
34	1024	12	65535	1023	17	102
35	1024	13	65535	1023	17	110
36	1024	14	65535	1023	17	119
37	1024	2	65535	1023	17	17
38	1024	16	65535	1023	17	136
39	918	15	65535	1023	17	114
40	820	6	65535	820	17	40
41	1024	5	65535	1023	17	42
42	1024	5	65535	1023	26	65
43	809	6	65535	852	17	40
44	809	6	65535	852	26	61
45	776	8	65335	775	33	100
47			AUTO			

Award Hard Disk Type Table

4-4. THE BIOS FEATURES SETUP

Choose the "BIOS FEATURES SETUP" in the main menu and the following screen will be shown:

ROM PCI/ISA BIOS (2A434P69) BIOS FEATURES SETUP AWARD SOFTWARE, INC.			
Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
Quick Power On Self Test	: Disabled	CC000-CFFFF Shadow	: Disabled
Boot Sequence	: A,C, SCSI	D0000-D3FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D4000-D7FFF Shadow	: Disabled
Boot Up Floppy Seek	: Enabled	D8000-DBFFF Shadow	: Disabled
Boot Up NumLock Status	: On	DC000-DFFFF Shadow	: Disabled
Boot Up System Speed	: High	Cyrix 6x86/MII CPUID	: Enabled
Gate A20 Option	: Fast		
Memory Parity Check	: Enabled		
Typematic Rate Setting	: Disabled		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250	Esc : Quit	↑↓→← : Select Item
Security Option	: Setup	F1 : Help	Pu/Pd/+/- : Modify
PCI/VGA Palette Snoop	: Disabled	F5 : Old Values	(Shift)F2 : Color
OS Select For DRAM > 64MB	: Non-OS2	F6 : Load BIOS Defaults	
Report No FDD for WIN 95	: Yes	F7 : Load Setup Defaults	

BIOS Features Setup Screen

This setup menu allows you to configure your system for basic operation. The user has the opportunity to select the system's default speed, boot-up sequence, keyboard operation, shadowing and security.

To get help on each item, highlight the relevant item and press the F1 key. A Windows will appear on your screen detailing the various options available for each item.

A brief introduction of each setting in the BIOS FEATURES SETUP program is found on the next following pages.

VIRUS WARNING:

When enabled, the BIOS will supervise the boot sector and partition table of the hard disk drive for any attempt for modification. If an attempt is made, the BIOS will halt the system and an error message will appear. Afterwards, if necessary, you will be able to run an anti-virus program to locate and remove the problem before any damage is done.

CPU INTERNAL CACHE:

This category speed up memory access. However, it depends on CPU/chipset design.

QUICK POWER ON SELF TEST:

You can Enabled or Disabled this item to speed up Power On Self Test (POST) after you power up the computer. If it is set to Enabled, BIOS will shorten or skip some check items during POST.

BOOT SEQUENCE:

This category determines the sequence of which drive to search first for the disk operating system such as DOS.

SWAP FLOPPY DRIVE:

This item allows you to choose whether enable the swap floppy drive or not.

BOOT UP FLOPPY SEEK:

You may Enabled / Disabled this item to define whether the system will look for a floppy disk drive to boot at power-on, or directly to the hard disk drive.

BOOT UP NUMLOCK STATUS:

This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on.

BOOT UP SYSTEM SPEED:

Select High to configure your system in the turbo speed mode at boot up, or select Low to configure your system in normal speed mode. Whichever setting you choose you will still be able to use the turbo switch to toggle between the two modes during use.

GATE 20A OPTION:

This entry allows you to select how the gate A20 is handled. The gate A20 is a device used to address memory above 1Mbytes. Initially, the gate A20 was handled via a pin on the keyboard. Today, while keyboards still provide this support, it is more common and much faster for the system chipset to provide support for gate A20.

MEMORY PARITY CHECK:

This entry allows to detect the memory parity.

TYPEMATIC RATE SETTING:

Enabled this item if you wish to be able to configure the characteristics of your keyboard. "Typematic" refers to the way in which characters are entered repeatedly if a key is held down. For example, if you press and hold down the "A" key, the letter "a" will repeatedly appear on your screen until you release the key.

TYPEMATIC RATE (CHARS-SEC):

You can use this item to define the typematic rate delay of your keyboard, i.e. the rate at which characters will be repeated when a key held down.

TYPEMATIC DELAY (MSEC):

You can use this item to define the period after which the typematic function become active i.e. how long after you press a key the characters will be repeated.

SECURITY OPTION:

This category allows you to limit access to the system and Setup, or just to Setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

 To Disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is Disable, the system will boot and you can enter Setup freely.

PCI/VGA PALETTE SNOOP:

This entry enables or disables the system to work with MPEG ISA/VESA VGA Card.

OS SELECT FOR DRAM > 64MB:

This item allows you to access the memory that over 64MB in OS/2.

REPORT NO FDD FOR WIN 95:

Select Yes to release IRQ6 when the system contains no floppy drive, for compatibility with Windows 95 logo certification. In the Integrated Peripherals screen, select Disabled for the Onboard FDC Controller field.

VIDEO BIOS SHADOW:

Determines whether video BIOS will be copied to RAM. However, it is optional depending on chipset design. Video Shadow will increase the video speed.

C8000-CBFFF ~ DC000-DFFFF SHADOW:

These categories determine whether option ROMs will be copied to RAM. An example of such option ROM would be support of onboard SCSI.

4-5. CHIPSET FEATURES SETUP

Choose the "CHIPSET FEATURES SETUP" from the main menu, the screen shown as below.

ROM PCI/ISA BIOS (2A434P69) CHIPSET FEATURES SETUP AWARD SOFTWARE, INC.	
SDRAM CAS latency Time : 3 T	Esc : Quit ↑↓→← : Select Item F1 : Help Pu/Pd/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults
SDRAM Clock Ratio Div By : 4	
16-bit I/O Recovery (CLK) : 5	
8-bit I/O Recovery (CLK) : 5	
USB Controller : Disabled	
Video Memory Size : 4.0M	
Display status : CRT	
Flat Panel Resolution : 640x480	
Power Type Select : AT	

Chipset Features Setup Screen

The parameters in this setup menu are for system designers, service personnel, and technically competent users only. Do not reset these values unless you understand the consequences of your changes.

SDRAM TIMING SETUP:

The value in this field depends on performance parameters of the installed memory chips (DRAM). Do not change the value from the factory setting unless you install new memory that has a different performance rating than the original DRAMs.

16-BIT I/O RECOVERY (CLK):

The recovery time is the length of time, measured in CPU clocks, which the system will delay after the completion of an input/output request. This delay takes place because the CPU is operating so much faster than the input/output bus that the CPU must be delayed to allow for the completion of the I/O. This item allows you to determine the recovery time allowed for 16bit I/O.

8-BIT I/O RECOVERY (CLK):

The recovery time is the length of time, measured in CPU clocks, which the system will delay after the completion of an input/output request. This delay takes place because the CPU is operating so much faster than the input/output bus that the CPU must be delayed to allow for the completion of the I/O. This item allows you to determine the recovery time allowed for 8bit I/O.

USB CONTROLLER:

Set to Enable when your system contains Universal Serial Bus controller and you have a USB keyboard.

VIDEO MEMORY SIZE:

This item allows you to set the memory size of Video.

FLAT PANEL STATUS:

This item allows you to select the option of the built-in flat panel controller. When this item is Enabled, User will be able to set flat panel resolution.

4-6. POWER MANAGEMENT SETUP

Choose "POWER MANAGEMENT SETUP" option on the main menu, a display will be shown on screen as below :

ROM PCI/ISA BIOS (2A434P69) POWER MANAGEMENT SETUP AWARD SOFTWARE, INC.			
Power Management	: Disabled	IRQ1 (Keyboard)	: ON
		IRQ3 (COM 2)	: OFF
** PM Timers	**	IRQ4 (COM 1)	: OFF
Standby Mode	: Disabled	IRQ5 (LPT 2)	: OFF
HDD Power Down	: Disabled	IRQ6 (Floppy Disk)	: OFF
		IRQ7 (LPT 1)	: OFF
		IRQ9 (IRQ2 Redir)	: OFF
		IRQ10 (Reserved)	: OFF
		IRQ11 (Reserved)	: OFF
		IRQ12 (PS/2 Mouse)	: OFF
		IRQ13 (Coprocessor)	: OFF
		IRQ14 (Hard Disk)	: OFF
		IRQ15 (Reserved)	: OFF
		Esc : Quit	↑↓→← : Select Item
		F1 : Help	Pu/Pd/+/- : Modify
		F5 : Old Values	(Shift)F2 : Color
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

Power Management Setup Screen

This setup menu allows you to configure your system to the most effectively save energy while operating in a manner consistent with your own style of computer use.

POWER MANAGEMENT:

This category allows you to select the type or degree of power saving and is directly related to Standby Mode, and HDD Power Down.

STANDBY MODE:

This is one of the Green PC power saving function, which is only user configurable when *User Define* Power Management has been selected. When enabled and after the set time of system inactivity, the fixed disk drive and the video would be shut off while all other devices still operate at full speed.

HDD POWER DOWN:

This is one of the Green PC power saving function, which is only user configurable when *User Define* Power Management has been selected. When enabled and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

4-7. PNP/PCI CONFIGURATION

Choose "PNP/PCI CONFIGURATION " from the main setup menu, a display screen will be shown as below:

ROM PCI/ISA BIOS (2A434P69) PNP/PCI CONFIGURATION AWARD SOFTWARE, INC.	
PNP OS Installed : No	PCI IRQ Activated By : Level
Resources Controlled by : Auto	
Reset Configuration Data : Disabled	
Esc : Quit ↑↓→← : Select Item F1 : Help Pu/Pd/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults	

PNP/PCI Configuration Setup Screen

This setup menu describes configuring the PCI bus system. PCI, also known as Personal Computer Interconnect, is a system, which allows I/O devices to operate at speed near the speed of the CPU itself uses when communicating with its own special components. It covers some technical items, which is strongly recommended only for experienced users.

PNP OS INSTALLED:

This item allows you to determine install PnP OS or not.

RESOURCE CONTROLLED BY:

The BIOS can automatically configure all of the boot and Plug and Play compatible devices. If you select Auto, all the interrupt request (IRQ) and DMA assignment fields disappear, as the BIOS automatically assign them.

PCI IRQ ACTIVATED BY:

This sets the method by which the PCI bus recognizes that an IRQ service is being requested by a device. Under all circumstances, you should retain the default configuration unless advised otherwise by your system's manufacturer.

4-8. LOAD BIOS DEFAULTS

AUTO CONFIGURATION WITH BIOS DEFAULTS

"LOAD BIOS DEFAULTS" loads the default BIOS values. When the diagnostic aid of your system becomes unusable, choose this option and the following message appears:

Load BIOS Default (Y / N) ? Y

To use the BIOS defaults, change the prompt to "Y" and press <Enter>, the CMOS is loaded automatically when you power on the Prox-1510.

4-9. LOAD SETUP DEFAULTS

AUTO CONFIGURATION WITH SETUP DEFAULTS

This Main Menu item uses the default SETUP values. Use this option as a diagnostic aid of your system behaves erratically. Choose this item and the following message appears:

Load SETUP Default (Y / N) ? Y

To use the SETUP defaults, change the prompt to "Y" and press <Enter>. The CMOS is loaded automatically from SETUP default values:

4-10. INTEGRATED PERIPHERALS

Choose "INTEGRATED PERIPHERALS" from the main menu, a display will be shown on screen as below:

ROM PCI/ISA BIOS (2A434P69)	
INTEGRATED PERIPHERALS	
AWARD SOFTWARE, INC.	
IDE HDD Block Mode	: Enabled
Primary IDE Channel	: Enabled
Master Drive PIO Mode	: Auto
Slave Drive PIO Mode	: Auto
IDE Primary Master UDMA	: Auto
IDE Primary Slave UDMA	: Auto
KBC input clock	: 8 MHz
Onboard FDC Controller	: Enabled
Onboard Serial Port 1	: 3F8/IRQ4
Onboard Serial Port 2	: 2F8/IRQ3
Onboard IR Controller	: Disabled
Onboard Parallel Port	: 378/IRQ7
Parallel Port Mode	: SPP
Esc : Quit ↑↓→← : Select Item F1 : Help Pu/Pd/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults	

INTEGRATED PERIPHERALS

By moving cursor to the desired selection and pressing <F1> key, the all options for the desired selection will be displayed for choice. User has to use select the desired option. Having made all the setting according to your selections, press <Esc> to return to the Main Menu.

ON-CHIP PRIMARY IDE:

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select enable to activate each channel separately.

IDE HDD BLOCK MODE:

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support.

ON-CHIP USB CONTROLLER:

If your system contains a Universal Serial Bus (USB) controller, select enable.

ON-BOARD FDC CONTROLLER:

Select Enable if your system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install and-in FDC or the system has no floppy drive, select Disabled in this field.

ON-BOARD PARALLEL PORT:

This option allows you to determine access onboard parallel port controller with I/O address.

PARALLEL PORT MODE:

Select an operating mode for the onboard parallel (printer) port. Select Normal unless your hardware and software require one of the other modes offered in this field.

4-11. PASSWORD SETTINGS

You may choose to select to set either supervisor or user password, or both of them. The difference is that the supervisor password can enter and change options of the setup menus while user password can only enter setup menu but does not have any rights to change any settings.

TO SET A PASSWORD

If you want to enable this item you should choose the "PASSWORD SETTING" option from the main menu, the following message will appear at the center of the screen to assist you in creating a password.

Enter Password:

Type the password, up to eight characters, and press < Enter >. You will be asked to confirm the password. Type the password again and press < Enter >. You may also press < Esc > to abort the selection and not enter a password.

To change the original password, enter CMOS setup Menu again and you will be asked to enter the original password, then select "PASSWORD SETTING" and press enter. The system will ask you to enter a password, then you may enter new password and re-type new password for confirmation.

 User should bear in mind that when a password is set, you will be asked to enter the password whenever you enter CMOS setup Menu. This can prevent an unauthorized person from changing any part of your system configuration.

You may determine when the password is required within the BIOS Features Setup Menu and its Security Option. If the Security Option is set to "System", the password will be required both at boot and at entry to Setup. If set as "Setup", prompting only occurs when trying to enter Setup.

TO DISABLE THE PASSWORD

Upon entering the CMOS setup Menu, the system will ask you to enter the original password, after entering the original password, press "PASSWORD SETTING" a message will appear at the center.

Password Disabled!!!
Press any key to continue...

Press <Enter> and the password will be disabled. Once the password is disabled, you can enter Setup freely.

4-12. IDE HDD AUTO DETECTION

Choose the "IDE HDD AUTO DETECTION" option . The screen will be shown as below.

ROM PCI / ISA BIOS (2A434P69)								
STANDARD CMOS SETUP								
AWARD SOFTWARE, INC.								
Drive C	:	(850Mb)	CYLS.	HEADS	PRECOMP	LANDZONE	SECTORS	MODE
Drive D	:	(Mb)	824	32	0	1647	63	LBA

Select Drive D Option (N=Skip) : N							
Option	Size	Cyls	Heads	Precomp	Landzone	Sectors	Mode
1 (Y)	0	0	0	0	0	0	Normal

Note: Some Oses (like SCO-UNIX) must use "Normal" for installation
Esc : Skip

IDE HDD AUTO DETECTION Screen

This setup menu allows you to save time in finding the Hard Disk Drive information, just follow the following steps:

1. Select the "IDE HDD AUTO DETECTION" from the Main Menu.
2. After a couple of seconds, the screen will appear the Hard Disk information and following message:

"SELECT PRIMARY MASTER OPTION (N=SKIP):N"

3. Enter Y or N to confirm the acceptance of the parameter reported by BIOS, then press the <ENTER> key.

🔔 The process will repeat again form Primary Slave, Secondary Master and Secondary Slave Hard Disks.


4-13. SAVE & EXIT SETUP

When you have completed adjusting all the settings as required, you should enter these setting into the CMOS RAM. Select "SAVE & EXIT SETUP" and press<Enter>, as the display shown below:

ROM PCI / ISA BIOS (2A434P69) CMOS SETUP UTILITY AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	PASSWORD SETTING
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP / PCI CONFIGU	SETUP
LOAD BIOS DEFAULT	SAVING
LOAD SETUP DEFAULTS	
SAVE to CMOS and EXIT (Y/N)? N	
Esc : Quit	↑↓→← :Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color
Save Data to CMOS & Exit SETUP	

When you confirm that you wish to save the settings your machine will be automatically rebooted and the changes you have made will be implemented. You may call up the setup program at any time to adjust any of the individual items by pressing the key during boot up.

EXPANSION BUS

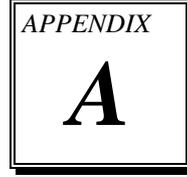


This appendix indicates you the pin assignments.

Section includes:

- PC104 BUS Pin Assignment
- ISA BUS Pin Assignment

PC-104 CONNECTOR PIN ASSIGNMENT

104AB, 104CD : PC-104 Connector



The PC-104 can support multi-pieces of PC-104 modules. This card has two connectors : one (104AB) consists of 64 pin; the other one (104CD) consists of 40 pin, both of them are dual-in-line headers


The pin assignments for connector 104AB & 104CD are as follow:

104AB				104CD			
PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT
A1	IOCHK	B1	GND	C1	GND	D1	GND
A2	D7	B2	REST	C2	SBHE	D2	MEMCS16
A3	D6	B3	VCC	C3	LA23	D3	IOCS16
A4	D5	B4	IRQ9	C4	LA22	D4	IRQ10
A5	D4	B5	-5V	C5	LA21	D5	IRQ11
A6	D3	B6	DRQ2	C6	LA20	D6	IRQ12
A7	D2	B7	-12V	C7	LA19	D7	IRQ15
A8	D1	B8	OWS	C8	LA18	D8	IRQ14
A9	D0	B9	+12V	C9	LA17	D9	DACK0
A10	IOCHRDY	B10	GND	C10	MEMR	D10	DRQ0
A11	AEN	B11	SMEMW	C11	MEMW	D11	DACK5
A12	A19	B12	SMEMR	C12	D8	D12	DRQ5
A13	A18	B13	IOW	C13	D9	D13	DACK6
A14	A17	B14	IOR	C14	D10	D14	DRQ6
A15	A16	B15	DACK3	C15	D11	D15	DACK7
A16	A15	B16	DRQ3	C16	D12	D16	DRQ7
A17	A14	B17	DACK1	C17	D13	D17	VCC
A18	A13	B18	DRQ1	C18	D14	D18	MASTER
A19	A12	B19	REFRESH	C19	D15	D19	GND
A20	A11	B20	CLK	C20	KEY PIN	D20	GND
A21	A10	B21	IRQ7				
A22	A9	B22	IRQ6				
A23	A8	B23	IRQ5				
A24	A7	B24	IRQ4				
A25	A6	B25	IRQ3				
A26	A5	B26	DACK2				
A27	A4	B27	TC				
A28	A3	B28	BALE				
A29	A2	B29	VCC				
A30	A1	B30	OSC				
A31	A0	B31	GND				
A32	GND	B32	GND				

ISA BUS PIN ASSIGNMENT


The ISA Bus for this card is called “ Gold Fingers ”. It is divided into two sets: One consist of 62 pins, while the other consists of 36 pins.

The pin assignments are as follows :



B		A		D		C	
PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	GND	A1	-I/O CH CHK	D1	-MEMCS16	C1	SBHE
B2	RESET	A2	SD07	D2	-I/OCS16	C2	LA23
B3	+5V	A3	SD06	D3	IRQ10	C3	LA22
B4	IRQ9	A4	SD05	D4	IRQ11	C4	LA21
B5	-5V	A5	SD04	D5	IRQ12	C5	LA20
B6	DRQ2	A6	SD03	D6	IRQ15	C6	LA19
B7	-12V	A7	SD02	D7	IRQ14	C7	LA18
B8	OWS	A8	SD01	D8	-DACK0	C8	LA17
B9	+12V	A9	SD00	D9	DRQ0	C9	-MEMR
B10	GND	A10	-I/O CH RDY	D10	-DACK5	C10	-MEMW
B11	-SMEMW	A11	AEN	D11	DRQ5	C11	SD08
B12	-SMEMR	A12	SA19	D12	-DACK6	C12	SD09
B13	-IOW	A13	SA18	D13	DRQ6	C13	SD10
B14	-IOR	A14	SA17	D14	-DACK7	C14	SD11
B15	-DACK3	A15	SA16	D15	DRQ7	C15	SD12
B16	-DRQ3	A16	SA15	D16	+5V	C16	SD13
B17	-DACK1	A17	SA14	D17	-MASTER	C17	SD14
B18	-DRQ1	A18	SA13	D18	GND	C18	SD15
B19	-REFRESH	A19	SA12				
B20	BCLK	A20	SA11				
B21	IRQ7	A21	SA10				
B22	IRQ6	A22	SA09				
B23	IRQ5	A23	SA08				
B24	IRQ4	A24	SA07				
B25	IRQ3	A25	SA06				
B26	-DACK2	A26	SA05				
B27	T/C	A27	SA04				
B28	BALE	A28	SA03				
B29	+5V	A29	SA02				
B30	OSC	A30	SA01				
B31	GND	A31	SA00				

TECHNICAL SUMMARY

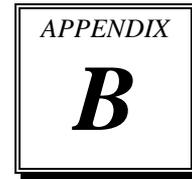


This section introduces you the maps concisely.

Section includes:

- Block Diagram
- Interrupt Map
- RTC & CMOS RAM Map
- Timer & DMA Channels Map
- I / O & Memory Map

BLOCK DIAGRAM

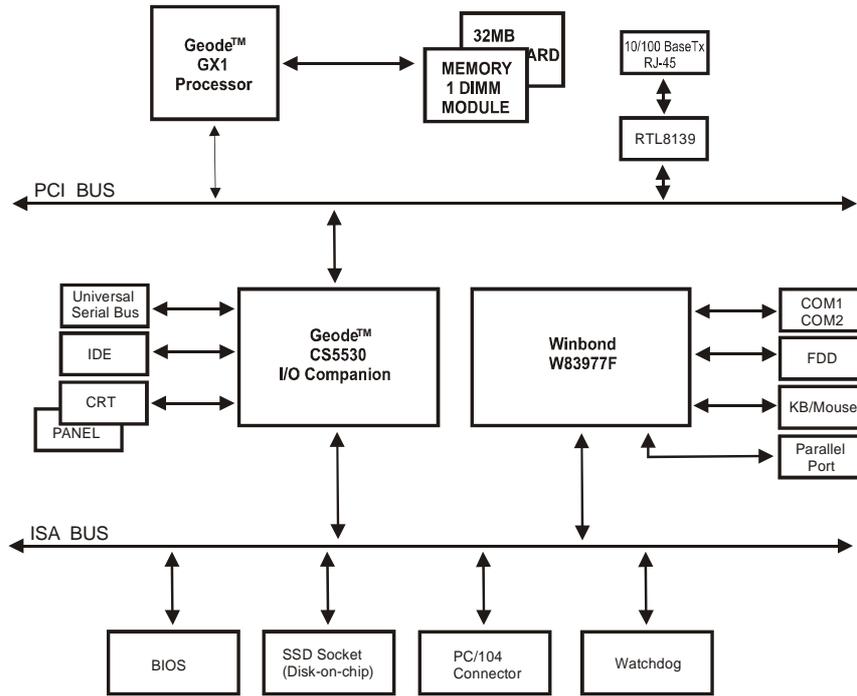

INTERRUPT MAP

IRQ	ASSIGNMENT
0	System TIMER interrupt from TIMER-0
1	Keyboard output buffer full
2	Cascade for IRQ 8-15
3	Serial port 2
4	Serial port 1
5	Available
6	Floppy Disk adapter
7	Parallel port 1
8	RTC clock
9	Available
10	Available
11	Available
12	PS/2 Mouse
13	Math coprocessor
14	Hard Disk adapter
15	Available

RTC & CMOS RAM MAP

CODE	ASSIGNMENT
00	Seconds
01	Second alarm
02	Minutes
03	Minutes alarm
04	Hours
05	Hours alarm
06	Day of week
07	Day of month
08	Month
09	Year
0A	Status register A
0B	Status register B
0C	Status register C
0D	Status register D
0E	Diagnostic status byte
0F	Shutdown byte
10	Floppy Disk drive type byte
11	Reserve
12	Hard Disk type byte
13	Reserve
14	Equipment byte
15	Base memory low byte
16	Base memory high byte
17	Extension memory low byte
18	Extension memory high byte
30	Reserved for extension memory low byte
31	Reserved for extension memory high byte
32	Date Century byte
33	Information Flag
34-3F	Reserve
40-7f	Reserved for Chipset Setting Data

TIMER & DMA CHANNELS MAP

Timer Channel Map :

Timer Channel	Assignment
0	System timer interrupt
1	DRAM Refresh request
2	Speaker tone generator

DMA Channel Map :

DMA Channel	Assignment
0	Available
1	Available
2	Floppy Disk adapter
3	Available
4	Cascade for DMA controller 1
5	Available
6	Available
7	Available

I/O & MEMORY MAP


Memory Map :

MEMORY MAP	ASSIGNMENT
0000000-009FFFF	System memory used by DOS and application
00A0000-00BFFFF	Display buffer memory for VGA/ EGA / CGA / MONOCHROME adapter
00C0000-00DFFFF	Reserved for I/O device BIOS ROM or RAM buffer.
00E0000-00EFFFF	Reserved for ISA device ROM
00F0000-00FFFFFF	System BIOS ROM
0100000-FFFFFFF	System extension memory

I/O Map :

I/O MAP	ASSIGNMENT
000-01F	DMA controller (Master)
020-021	Interrupt controller (Master)
022-023	Chipset controller registers I/O ports.
040-05F	Timer control registers.
060-06F	Keyboard interface controller (8042)
070-07F	RTC ports & CMOS I/O ports
080-09F	DMA register
0A0-0BF	Interrupt controller (Slave)
0C0-0DF	DMA controller (Slave)
0F0-0FF	Math coprocessor
1F0-1F8	Hard Disk controller
278-27F	Parallel port-2
2B0-2DF	Graphics adapter controller
2F8-2FF	Serial port-2
360-36F	Net work ports
378-37F	Parallel port-1
3B0-3BF	Monochrome & Printer adapter
3C0-3CF	EGA adapter
3D0-3DF	CGA adapter
3F0-3F7	Floppy disk controller
3F8-3FF	Serial port-1

TROUBLE- SHOOTING

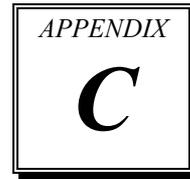

This section outlines the error messages that may occur when you operate the system. It also gives you some tips on how to solve the problems.

Section includes:

- Troubleshooting for Error Messages
- Troubleshooting for POST Code

TROUBLESHOOTING FOR ERROR MESSAGE

The following information inform you the error messages and the trouble shooting. Please adjust your systems according to the messages below. And make sure all the components and connectors are in proper position and firmly attached. If the errors still encountered, please contact with your distributor for maintenance.

POST BEEP :

Currently there are two kind of beep codes in BIOS. The one code indicates that a video error has occurred and the BIOS cannot initialize the video screen to display any additional information. This beep code consists of a single long beep followed by three short beeps. The other one code indicates that your DRAM error has occurred. This beep code consists of a single long beep repeatedly.

CMOS BATTERY FAILURE :

When the CMOS battery is out of work or has run out, the user has to replace the whole unit.

CMOS CHECKSUM ERROR :

This error inform you that the CMOS is corrupted. When the battery runs weak, this situation might happen. Please check the battery and change a new one when necessary.

DISPLAY SWITCH IS SET INCORRECTLY :

Display switch on the motherboard can be set to either monochrome or color. This indicates the switch is set to a different setting than indicated in Setup. Determine which setting is correct, and then either turn off the system and change the jumper, or enter Setup and change the video selection.

DISK BOOT FAILURE:

When you can't find the boot device, insert a system disk into Drive A and press < Enter >. Make sure both the controller and cables are all in proper positions, also make sure the disk is formatted correct device. Then reboot the system.

DISKETTE DRIVES OR TYPES MISMATCH ERROR :

When the diskette drive type is different from CMOS, please run setup or configure the drive again.

ERROR ENCOUNTERED INITIALIZING HARD DRIVE :

When you can't initialize the hard drive. Assure the adapter is installed correctly and all cables are correctly and firmly attached. Also be sure the correct hard drive type is selected in Setup.

ERROR INITIALIZING HARD DISK CONTROLLER :

When this error occurs. Be sure the cord is exactly installed in the bus. Make sure the correct hard drive type is selected in Setup. Also check whether all of the jumpers are set correctly in the hard drive.

**FLOPPY DISK CONTROLLER ERROR OR
NO CONTROLLER PRESENT :**

When you cannot find or initialize the floppy drive controller, please check the controller whether in proper Setup. If there are no floppy drive installed, Ensure the Diskette Drive selection in Setup is set to NONE.

KEYBOARD ERROR OR NO KEYBOARD PRESENT :

When this situation happens, please check keyboard attachment and no keys being pressed during the boot. If you are purposely configuring the system without a keyboard, set the error halt condition in Setup to HALT ON ALL, BUT KEYBOARD. This will cause the BIOS to ignore the missing keyboard and continue the boot.

MEMORY ADDRESS ERROR :

When the memory address indicates error. You can use this location along with the memory map for your system to find and replace the bad memory chips.

MEMORY SIZE HAS CHANGED :

Memory has been added or removed since the last boot. In EISA mode use Configuration Utility to re-configure the memory configuration. In ISA mode enter Setup and enter the new memory size in the memory fields.

MEMORY VERIFYING ERROR :

It indicates an error verifying a value already written to memory. Use the location along with your system's memory map to locate the bad chip.

OFFENDING ADDRESS MISSING :

This message is used in connection with the I/O CHANNEL CHECK and RAM PARITY ERROR messages when the segment that has caused the problem cannot be isolated.

REBOOT ERROR :

When this error occurs that requires you to reboot.. Press any key and the system will reboot.

SYSTEM HALTED :

Indicates the present boot attempt has been aborted and the system must be rebooted. Press and hold down the CTRL and ALT keys and press DEL.

TROUBLESHOOTING FOR POST CODES

When you power on your PC, and the screen display nothing. You have to insert the POST Card for test. The address for ISA POST port is 80h. Make sure the card is in correct slot. The lists below indicate you the error messages. Please follow the instruction to adjust your system. If the error still occurred, please contact with your distributor for maintenance.

C0 : Turn off OEM specific cache, shadow.....

03 : Initialize all the standard devices with default values Standard devices includes :
DMA controller (8237).
Programmable Interrupt Controller (8259).
Programmable Interval Timer (8254).
RTC chip.

05 : 1.Keyboard Controller Self-Test.
2.Enable Keyboard Interface.

07 : Verifies CMOS's basic R/W functionality.

BE : Program defaults values into chipset according to the MODBINable Chipset Default Table.

C1 : Auto-detection of onboard DRAM & Cache.

C5 : Copy the BIOS from ROM into E0000-FFFFF shadow RAM so that POST will go faster.

08 : Test the first 256K DRAM.

09 : 1. Program the configuration register of Cyrix CPU according to the MODBINable Cyrix Register Table.
2. OEM specific cache initialization (if needed).

- 0A :** 1. Initialize the first 32 interrupt vectors with corresponding Interrupt handlers Initialize INT no from 33-120 with Dummy(Spurious) Interrupt Handler.
2. Issue CPUID instruction to identify CPU type.
3. Early Power Management initialization (OEM specific).

- 0B :** 1. Verify the RTC time is valid or not.
2. Detect bad battery.
3. Read CMOS data into BIOS stack area.
4. PnP initializations including (PnP BIOS only).
 -Assign CSN to PnP ISA card.
 -Create resource map from ESCD.
5. Assign I/O & Memory for PCI devices (PCI BIOS only).

0C : Initialization of the BIOS Data Area (40 : 0N-40:FF).

- 0D :** 1. Program some of the Chipset's value according to Setup. (Early Setup Value Program).
2. Measure CPU speed for display & decide the system clock speed.
3. Video initialization including Monochrome ,CGA, EGA/VGA. If no display device found, the speaker will beep.

- 0E :** 1. Initialize the APIC (Multi-Processor BIOS only).
2. Test video RAM (If Monochrome display device found).
3. Show messages including :
 -Award Logo, Copyright string, BIOS Date code & Part No.
 -OEM specific sign on messages.
 -Energy Star Logo (Green BIOS only).
 -CPU brand, type & speed.
 -Test system BIOS checksum (Non-compress Version only).

0F : DMA channel 0 test.

10 : DMA channel 1 test.

11 : DMA page registers test.

14 : Test 8254 Timer 0 Counter2.

- 15** : Test 8259 interrupt mask bits for channel 1.
- 16** : Test 8259 interrupt mask bits for channel 2.
- 19** : Test 8259 functionality.
- 30** : Detect Base Memory & Extended Memory Size.
- 31** : 1. Test Base Memory from 256K to 640K.
2. Test Extended Memory from 1M to the top of memory.
- 32** : 1. Display the Award Plug & Play BIOS Extension message (PnP BIOS only).
2. Program all onboard super I/O chips (if any) including COM ports, LPT ports, FDD port....according to setup value.
- 3C** : Set flag to allow users to enter CMOS Setup Utility.
- 3D** : 1 Initialize Keyboard.
2 Install PS2 mouse.
- 3E** : Try to turn on Level 2 cache.
Note : Some chipset may need to turn on the L2 cache in this stage. But usually, the cache is turn on later in POST 61h.
- BF** : 1. Program the rest of the Chipset's value according to Setup. (Later Setup Value Program).
2. If auto-configuration is enabled, programmed the chipset with pre-defined value in the MODBINable Auto-Table.
- 41** : Initialize floppy disk drive controller.
- 42** : Initialize Hard drive controller.
- 43** : If it is a PnP BIOS, initialize serial & parallel ports.
- 45** : Initialize math coprocessor.

4E : If there is any error detected (such as video, kb....), show all the error messages the screen & wait for user to press <F1> key.

4F : 1. If password is needed, ask for password.
2. Clear the Energy Star Logo (Green BIOS only).

50 : Write all CMOS values currently in the BIOS stack area back into the CMOS.

52 : 1. Initialize all ISA ROMs.
2. Later PCI initializations (PCI BIOS only).
 -assign IRQ to PCI devices.
 -initialize all PCI ROMs.
3. PnP Initializations (PnP BIOS only).
 -assign I/O, Memory, IRQ & DMA TO PnP ISA devices.
 -initialize all PnP ISA ROMs.
4. Program shadows RAM according to Setup settings.
5. Program parity according to Setup setting.
6. Power Management Initialization.
 -Enable/Disable global PM.
 -APM interface initialization.

53 : 1. If it is NOT a PnP BIOS, initialize serial & parallel ports.
2. Initialize time value in BIOS data area by translate the RTC time value into a timer tick value.

60 : Setup Virus Protection (Boot Sector Protection) functionality according to Setup setting.

61 : 1. Try to turn on Level 2 cache.
 Note : if L2 cache is already turned on in POST 3D, this part will be skipped.
2. Set the boot up speed according to Setup setting.
3. Last chance for Chipset initialization.
4. Last chance for Power Management initialization (Green BIOS only).
5. Show the system configuration table.

- 62** : 1. Setup daylight saving according to Setup value.
2. Program the NumLock, typematic rate & typematic speed according to Setup setting.
- 63** : 1. If there is any changes in the hardware configuration, update the ESCD information (PnP BIOS only).
2. Clear memory that have been used.
3. Boot system via INT 19H.
- FF** : System Booting. this means that the BIOS already pass the control right to the operating system.

PRINTED IN TAIWAN