

# PCVB815EL Series

## Motherboard

### User's Manual

**Product Name: P3SAE, PCVB815EL, P3SAE-P  
370SAE, 370SAE-L or 370SAE-P  
Manual Revision: English, 1.2**

#### Trademarks

Intel, Celeron, Socket 370, Pentium II and Pentium III are trademarks of Intel Corporation  
VIA is a registered trademark of VIA Technologies, Incorporated  
Award is a trademark of Award Software International Inc.  
MS-DOS, Windows 95, Windows 98, Windows ME, Windows 2000 and Windows NT are registered trademarks of Microsoft Corporation  
Novell is a trademark of Novell Corporation  
Sound Blaster SB16 is a trademark of Creative Technology  
ADI is a trademark of Analog Devices Inc.,  
All other brand and product names are trademarks or registered trademarks of their respective companies.

#### Table of Contents

##### Chapter 1. Introduction

- 1.1 Product Overview
- 1.2 Features
- 1.3 Specifications
- 1.4 Content
- 1.5 System Board Layout

##### Chapter 2. Hardware Setup

- 2.1 Installation Procedure
  - 2.1.1 Jumper Settings
  - 2.1.2 On Board LAN Setting
  - 2.1.3 Keyboard Voltage Setting
  - 2.1.4 Clearing the CMOS
  - 2.1.5 CPU Voltage Setting
  - 2.1.6 CPU FSB Frequency Selection
- 2.2 Installation of CPU
  - 2.2.1 For Slot 1
  - 2.2.2 For Socket 370 CPU
- 2.3 Installation of Memory
  - 2.3.1 Installation of 168-pin DIMM
  - 2.3.2 Removal of 168-pin DIMM
  - 2.3.3 Memory Configuration
- 2.4 I/O Connections/Panel Connections
  - 2.4.1 ATX Power Connector
  - 2.4.2 Chassis and CPU Fan Connector
  - 2.4.3 Infrared Connector
  - 2.4.4 Creative's SB\_LINK Sound Connector
  - 2.4.5 Wake-up on LAN Connector
  - 2.4.6 Floppy Disk Drive Connector
  - 2.4.7 Primary/Secondary IDE Connector
  - 2.4.8 PS/2 Mouse Port

- 2.4.9 PS/2 Keyboard Connector
- 2.4.10 VGA Output Connector
- 2.4.11 Serial Port
- 2.4.12 Printer Port
- 2.4.13 USB Connectors
- 2.4.14 LAN Connector
- 2.4.15 ACT/LNK LED
- 2.4.16 Speed LED
- 2.4.17 Line Out Connector
- 2.4.18 Line In Connector
- 2.4.19 Microphone In Connector
- 2.4.20 ATAPI IDE/SONY Audio
- 2.4.21 Mitsumi Audio
- 2.4.22 Game/MIDI Port
- 2.4.23 Panel Connection

## Chapter 3. BIOS Setup

- 3.1 CMOS Setup Utility
- 3.2 Standard CMOS Setup
- 3.3 Advanced BIOS Features Setup
- 3.4 Advanced Chipset Features Setup
- 3.5 Integrated Peripherals
- 3.6 Power Management Setup
- 3.7 PNP/PCI Configuration Setup
- 3.8 PC Health Status
- 3.9 Frequency Control
- 3.10 Load Fail-Safe Defaults
- 3.11 Load Optimized Defaults
- 3.12 Set Supervisor/User Password
- 3.13 Save & Exit Setup
- 3.14 Exit Without Saving

## Chapter 4. Software Installation

- 4.1 INF Update for Windows 95/98/ME/2000
  - 4.1.1 For Windows 95/98 Gold Edition
  - 4.1.2 For Windows 98 SE
  - 4.1.3 For Windows 2000/ME
- 4.2 Installing the Graphics Driver
  - 4.2.1 For Windows 95/98/ME
  - 4.2.2 For Windows 2000
  - 4.2.3 For Windows NT 4.0
  - 4.2.4 For Windows 3.11, NT 3.51 & OS/2
- 4.3 Installing the Sound Driver
- 4.4 Installing the LAN Driver
- 4.5 Installing the Intel Security Driver
- 4.6 Installing Ultra ATA Storage Driver
- 4.7 Installing Hardware Doctor Utility

## Appendix A Using the Suspend to RAM Function

### Chapter 1. Introduction

#### 1.1 Product Overview

Thank you for purchasing the **P3SAE** or **370SAE** series motherboard. This motherboard utilizes **Intel's** latest Accelerated Hub Architecture technology. It uses **FW82815** or **FW82815EP** and **FW82801BA** controller Hub. We have conducted a motherboard compatibility test with a variety of hardware and software, such as CPUs, memory, display cards, CD ROMs, Novell, MS Office... etc and compliance with Year 2000.

We have set high standards on our quality control, with absolute confidence, we believe this product is the wisest choice.

This manual is composed of four sections. The first section is the introduction of this motherboard, and the second section explains the proper procedure to setup the motherboard, the third section provides information on how to setup the CMOS. The last section is the installation of the device drivers & utilities.

### Ordering Codes

**P3SAE** Uses Intel FW82815 and FW82801BA chipset. Integrated 2D/3D graphics accelerator. Supports Socket 370 & Slot 1 CPU.

**PCVB815EL** Uses Intel FW82815 and FW82801BA chipset. Integrated 2D/3D graphics accelerator. With Fast Ethernet. Supports Socket 370 & Slot 1 CPU.

**P3SAE-P** Uses Intel FW82815EP and FW82801BA chipset. Supports Socket 370 & Slot 1 CPU.

**370SAE** Uses Intel FW82815 and FW82801BA chipset. Integrated 2D/3D graphics accelerator. Supports Socket 370 CPU.

**370SAE-L** Uses Intel FW82815 and FW82801BA chipset. Integrated 2D/3D graphics accelerator. With Fast Ethernet. Supports Socket 370 CPU.

**370SAE-P** Uses Intel FW82815EP and FW82801BA chipset. Supports Socket 370 CPU.

### 1.2 Features

- Wake up on LAN.
- Wake on Keyboard.
- Modem Remote Ring On.
- Support NCR SCSI BIOS.
- Support Suspend to RAM.
- Support Ultra DMA 33/66/100.
- Support Hardware Monitor function.
- ADI AD1885 Audio CODEC on board.
- Support 66/100/133MHz FSB frequency.
- Allows CPU settings and easy overclocking of frequency.
- Support Advanced Configuration Power Interface (ACPI).
- Support Desktop Management Interface (DMI) through BIOS.
- Low-power sleep modes, and 4Mbits "Plug & Play" Flash ROM.
- RTC Wake up Alarm: Program the date/time to wake up your system.
- Integrated 2D/3D graphics accelerator (for P3SAE, PCVB815EL, 370SAE or 370SAE-L only)
- Support AGP slot for external AGP (2X/4X) graphics card upgrade.
- Both the BIOS and hardware levels of the motherboard meet PC '99 compliant.

### 1.3 Specifications

#### CPU :

- P3SAE, PCVB815EL or P3SAE-P support Intel Socket 370, Celeron, Pentium II, Pentium III and VIA Cyrix III Processors with 66/100/133MHz Front Side Bus.
- 370SAE, 370SAE-L or 370SAE-P support Intel Socket 370, Celeron, Pentium III and VIA Cyrix III Processors with 66/100/133MHz Front Side Bus.

#### Chipset :

- Intel FW82815 and FW82801BA for P3SAE, PCVB815EL, 370SAE or 370SAE-L.
- Intel FW82815EP and FW82801BA for P3SAE-P or 370SAE-P.

**VGA :**

- For P3SAE, PCVB815EL , 370SAE or 370SAE-L only
- Competitive internal graphics can be scaled via an AGP card interface.
- The local graphics memory can up to 4MB display cache with **AGP Inline Memory Module (AIMM)** and install it to the AGP slot. The components populating the AIMM must be at least PC100 compliant and rated to operate at 133MHz.
- Integrated 24-bit 230MHz RAMDAC graphics controller.
- Full 2D/3D/DirectX acceleration.
- Hardware Motion Compensation assist for software MPEG/DVD decode.
- Shared System Memory Area 1MB. 60MB Dynamic Video Memory Allocation.

**DIMM :**

- Supports 3.3V PC100/133-compliant SDRAM in 3 168-pin banks, each bank consists of 1x168-pin 64-bit DIMM socket, which can support memory sizes of 32/64/128/256/512 MB modules.
- Supports 32 MB to 512 MB system memory

**IDE :**

- Dual channel PIO and PCI Bus Master IDE ports support up to 4 EIDE devices for HDD or CD-ROM
- Supports PIO Mode 4 with data transfer rate up to 14 MB/Sec
- Supports Multiword DMA Mode 0, 1, 2.
- Supports Ultra DMA 33/66/100.

**Expansion Slots:**

- Five 32-bit PCI expansion slots (Rev. 2.2)
- One 32-bit AGP expansion slot
- One Communication and Networking Riser (CNR) slot

**BIOS :**

- Award BIOS v6.00PG with built-in Anti-Virus, DMI, ACPI support, and green function (Plug-and-Play BIOS)
- Supports CD-ROM/HD/SCSI/Floppy/LS120/ZIP and LAN boot up
- Supports NCR SCSI BIOS.

**USB Ports :**

- Four Universal Serial Bus (USB) ports support up to 127 peripheral devices.

**Sound :**

- ADI AD1885 Audio Codec
- AC '97 Rev 2.1 compliant
- 16-bit Stereo Full-Duplex Codex
- Full Duplex Variable Sample Rates from 7kHz to 48kHz with 1Hz Resolution
- Take advantage of CPU to implement audio synthesis and 3D effects processing
- Stereo Headphone Amplifier
- Four Analog Line-Level Stereo Inputs for LINE-IN, CD, VIDEO and AUX
- Two Analog Line-Level Mono Inputs for Speakerphone and PC BEEP
- Inside Phat™ Stereo 3D sound enhancement technology
- Power Management support
- Extended 6-bit Master and Headphone Volume Control

**LAN :** (for PCVB815EL or 370SAE-L only)

- IEEE 802.3 10BASE-T/100BASE-TX compliant physical layer interface.
- IEEE 802.3u Auto-Negotiation support and IEEE 802.3x Full Duplex Flow Control standard.
- Digital Adaptive Equalization control.
- Link status interrupt capability.
- Baseline Wander correction.
- 10BASE-T auto-polarity correction.
- Automatic detection of "unplugged mode"
- Reduced power in "unplugged mode" (less than 50mW).

**I/O Devices :**

- One FDD control port supports two of the 5.25" or 3.5" floppy drives up to 2.88 MB.
- Two high-speed 16550 UART compatible serial ports
- One parallel ports with ECP/ EPP compatibility.
- One PS/2 mouse port
- One PS/2 Keyboard connector

**IR Port :**

- One IrDA/ASKIR compatible Infrared interface port. (Cable optional)

**ATX Power :**

- Supports Modem remote Ring-On function
- Supports software power off function
- Supports RTC Wake-Up.
- Supports Wake up on LAN.
- Supports Keyboard Wake-Up.

**Others :**

- Supports Creative's Sound Blaster 16 compatibility for real-mode DOS games.

**Operating System :**

- Supports Windows 3.x/95/98/ME/2000, Windows NT, MS-DOS V6.22, OS/2, Novell, Unix, SCO UNIX.....

**Dimension :**


- 305 mm x 210 mm ATX Form factor

**1.4 Content**

The motherboard box contains the following items:

- One Motherboard
- One IDE Ribbon Cable
- One Floppy Ribbon Cable
- One Serial Ribbon Cable (for P3SAE, PCVB815EL , 370SAE or 370SAE-L only)
- One Retention mechanism (for P3SAE, PCVB815EL or P3SAE-P only)
- One Driver CD
- User's Manual

## 1.5 MotherBoard Layout

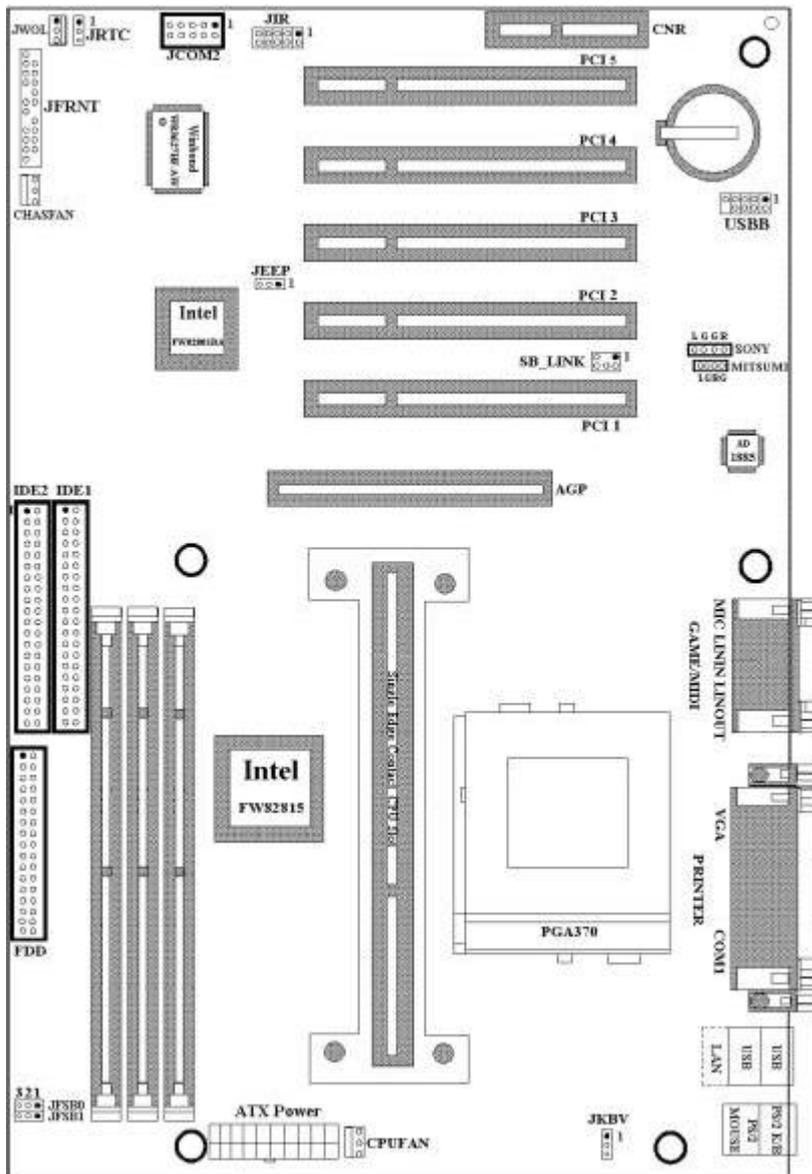

### Notice:

P3SAE, P3SAE-P, 370SAE or 370SAE-P do not have the LAN connector and JEEP jumper.

P3SAE-P or 370SAE-P do not have the JCOM2 connector.

370SAE, 370SAE-L or 370SAE-P do not have the Slot 1 slot.

## Chapter 2. Hardware Setup

### 2.1 Installation Procedure

1. Jumper settings
2. Installation of CPU
3. Installation of Memory
4. I/O Connections & Panel Connections

#### 2.1.1 Jumper Settings

In this manual, **(1-2)** represents the first and second pins of the jumper. **(2-3)** represents the second and third pins of the jumper. On the motherboard, you will see two sets of jumpers with different color jumper caps:




### 2.1.5 CPU Voltage Setting

The motherboard supports CPU VID function. It can automatically detect CPU VID signal and generates proper CPU core voltage.

### 2.1.6 CPU FSB Frequency Setting (Red Jumper Caps)

The JFSB jumper provides FSB frequency settings for the CPU. Auto Detect, 66MHz, 100MHz or 133MHz FSB frequency can be selected with this jumper. The over specification operation is not recommended.

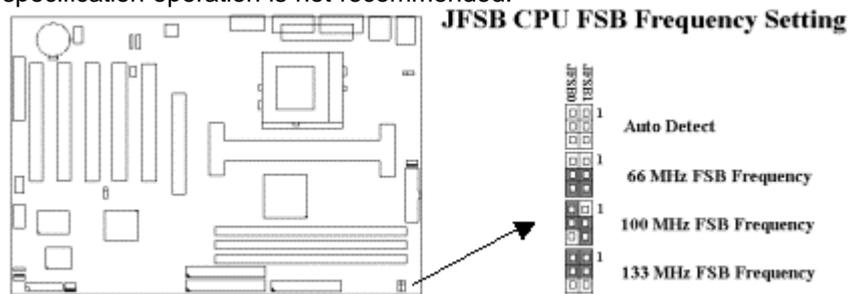


## 2.2 Installation of CPU

### 2.2.1 For Slot 1 CPU ( For P3SAE, PCVB815EL or P3SAE-P only )

The motherboard provides a Single Edge Contact (SEC) slot for processor packaged in an SEC cartridge. Follow these steps to install CPU:

**Mount the Universal Retention Mechanism (URM) & Insert the CPU:** ( The illustration is just for reference )

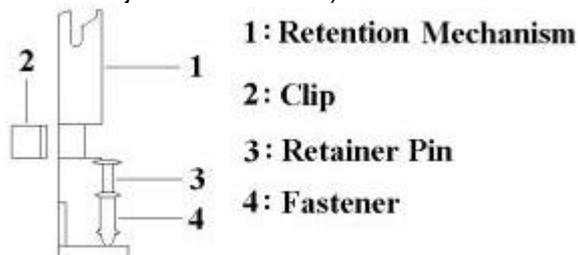

This URM was designed to accommodate 3 types of CPU Form Factor. ( SECC, SECCII & SEPP ). For example: Pentium II/ III & Celeron family.

**Note : Please put a soft pad under M/B before the installation of URM.**

Installation for SECC CPU :

1. Leave space below each mounting hole for the fastener to protrude through the hole.
2. Position URM on the M/B next to the slot1 connector.
3. Push down retainer pin into respective fastener to secure URM onto the M/B.
4. Push CPU into URM to contact with slot1.
5. Make sure latching portion of CPU engaged with windows ledge of URM.

Installation for SECC II or SEPP CPU :

1. Same as step (1) of SECC.
2. Same as step (2) of SECC.
3. Same as step (3) of SECC.
4. Same as step (4) of SECC.
5. Snap in 2 clips into side windows of URM to secure SEPP CPU.

If there is a fan on the CPU, Please plug in the fan cable to the three pin fan connector

on the motherboard ( CPUFAN ).

### 2.2.2 For Socket 370 CPU

Before installing CPU, make sure the power is off. Locate the level bar on the PGA370 ZIF socket. Push level bar away from the socket and pull upward 90 degrees. Insert the CPU into the socket. Be careful of CPU orientation. Make sure the notch of the CPU corresponds with the white dot on the ZIF socket (the corner without pin socket). Do not push in the CPU. Make sure all pins are aligned with the CPU socket. ON the level bar.

## 2.3 Installation of Memory

This motherboard has 3x168-pin 64-bit Dual Inline Memory Module (DIMM) sockets divided into 3 banks. You can install 3.3V Unbuffered PC100/133-compliant Synchronous DRAM (SDRAM) memory.


**Some DIMM memory have SPD ( Serial Presence Detect ) 8-pin IC on module. It is not recommended the SPD ( Serial Presence Detect ) DIMM blends and non-SPD DIMM.**

### 2.3.1 Installation of 168-pin DIMM (Dual Inline Memory Module)

1. Before inserting the DIMM, make sure the pin1 of the DIMM matches with the pin1 on the DIMM socket.
2. Insert DIMM into the DIMM sockets at a 90-degree angle and press down.

### 2.3.2 Removal of 168-pin DIMM

1. Press the holding clips on both sides of the socket outward to release the DIMM.
2. Gently pull the DIMM out of the socket.

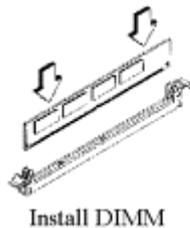

### 2.3.3 Memory Configuration

There is no jumper setting required for the memory size or type. It is automatically detected by the system BIOS, and the total memory size is to add them together.

<i>DIMM Socket</i>	<i>DIMM Modules</i>
<b>DIMM1</b>	PC100/133 SDRAM 32, 64, 128, 256, 512MB
<b>DIMM2</b>	PC100/133 SDRAM 32, 64, 128, 256, 512MB
<b>DIMM3</b>	PC100/133 SDRAM 32, 64, 128, 256, 512MB

## 2.4 I/O Connections/Panel Connections


### I/O Connections

J1	ATX Power Connector
CPUFAN	CPU fan connector
CHASFAN	Chassis fan connector
JIR	Infrared Connector ( Cable optional )
JWOL	Wake up on LAN connector
SB_LINK	for link with Creative's Sound Blaster 16

FLOPPY	Floppy Disk Drive Connector
IDE1, 2	Primary/ Secondary IDE Connectors
MS	PS/2 Mouse Port
KB	PS/2 Keyboard Connector
VGA only)	VGA output Connector (for P3SAE, PCVB815EL , 370SAE or 370SAE-L
COM1,JCOM2	Serial Ports 1 & 2 (JCOM2 is for P3SAE, PCVB815EL , 370SAE or 370SAE-L only)
COM2	Serial Port 2 (for P3SAE-P or 370SAE-P only)
PRINTER	Printer Port
USB	USB Connector
LAN	LAN Connector
GAME	Game/MIDI Connectors
LINE_OUT	Line out Connector
LINE_IN	Line in Connector
MIC	Microphone in Connector
MITSUMI	The Connector is for Mitsumi CD-ROM audio cable
SONY	The Connector is for IDE/Sony CD-ROM audio cable


**2.4.1 ATX Power Connector (20-pin J1)**

Make sure that the power supply is off before connecting or disconnecting the power cable.

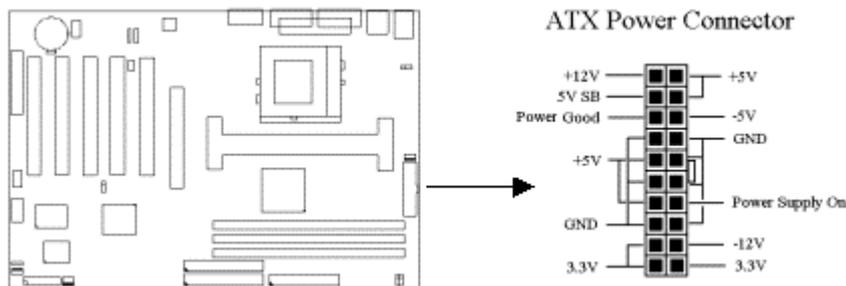


**2.4.2 CPU, Chassis Fan Connector (3-pin CPUFAN,CHASFAN)**

Connect the fan's plug to the board taking into consideration the polarity of the connector.

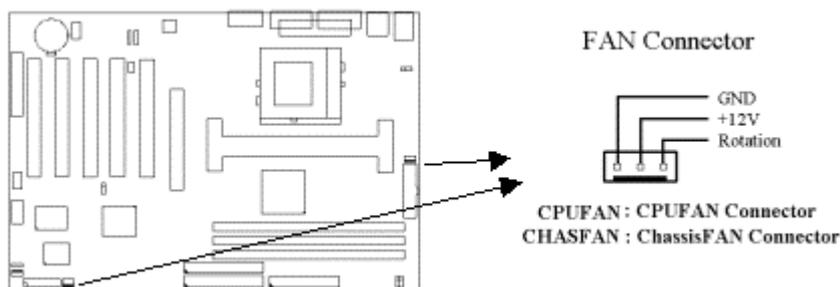


**2.4.3 Infrared Connector (10-pin JIR)**

This connector supports the optional wireless transmitting and receiving infrared module, with this module and application software such as Laplink or Win95 Direct Cable Connection, user can transfer files to or from their laptops, notebooks, PDA, PCs and printers. The connector supports IrDA (115.2Kbps, 2 meters) and ASK-IR (56Kbps). An optional consumer infrared (CIR) set connects to the CIR and SIR connectors simultaneously for both wireless transmitting and remote control functions through one external infrared module. Install infrared module onto Infrared connector and configure the setting through "UART Mode Select" in **Integrated Peripherals** to select whether UART is directed for use with COM2 or Infrared.

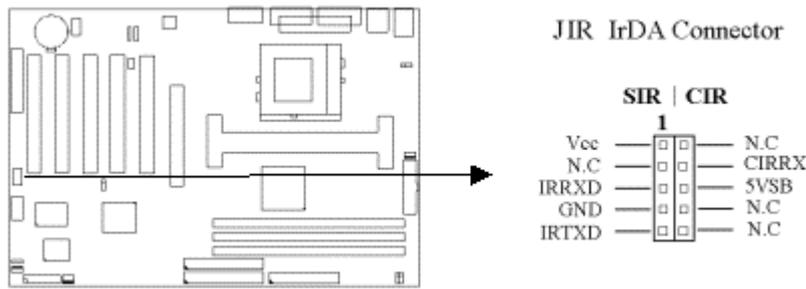

**2.4.4 Creative's SB\_LINK Sound Connector (6-pin SB\_LINK)**

The SB\_LINK serves as a bridge between the mainboard and Creative's 4s PCI sound card. This connector delivers Sound Blaster 16 compatibility for real-mode DOS games.

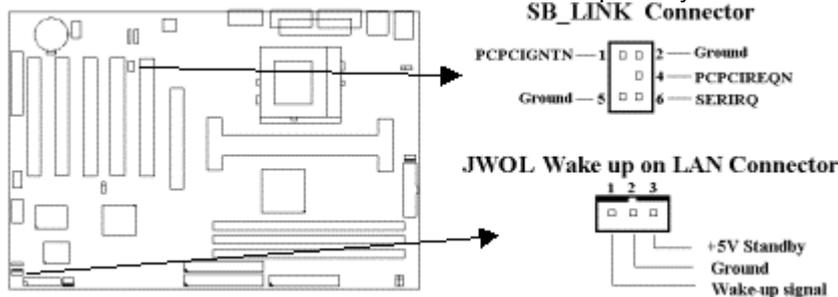


**2.4.5 Wake on LAN Connector (3-pin JWOL)**

The JWOL connector powers up the system when a wakeup packet or signal is received from the network. This feature requires the **Wake up on LAN** function in BIOS is set to Enabled and that your system has an ATX power supply with at least 720mA +5V standby power.

**2.4.6 Floppy Disk Drive Connector (34-pin FLOPPY)**


This connector supports the provided floppy disk drive ribbon cable. Orient the red stripe to pin 1

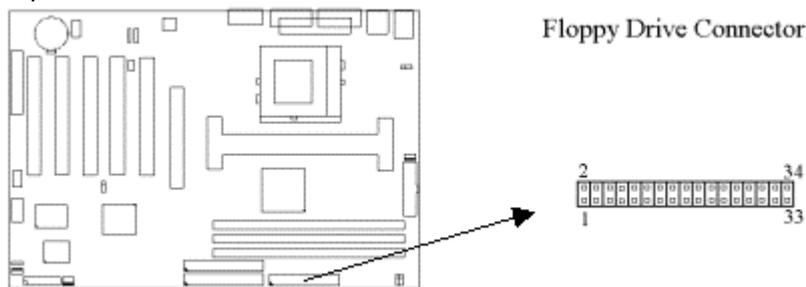

**2.4.7 Primary/Secondary IDE Connector (Two 40-pin IDE)**

These connectors support the provided IDE hard disk ribbon cable. Connect your first IDE hard disk to master mode of the primary channel. If you have second IDE device to install in your system, connect it as slave mode on the same channel, and the third and fourth device can be connected on secondary channel as master and slave mode respectively.

There are three connectors on the 80-pin IDE ribbon cable. **The blue connector must connect with motherboard's IDE connector** and the other connectors must connect with HDD. In order to get the better performance the Ultra DMA 66/100 HDD must connect with 80-pin IDE ribbon cable.

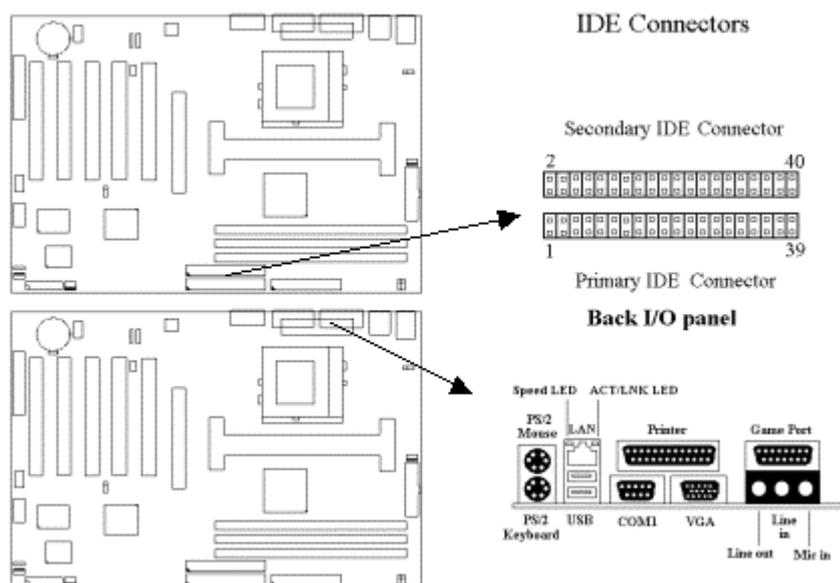

#### 2.4.8 PS/2 Mouse Port (6-pin Mini-Din MS)

The system will direct IRQ12 to the PS/2 mouse.

#### 2.4.9 PS/2 Keyboard Connector (6-pin Mini-Din KB)


This connection is for a standard keyboard using a PS/2 plug. You may use a Din to Mini-Din adapter on standard AT keyboards.

#### 2.4.10 VGA Output Connector (15-pin female) (For P3SAE, PCVB815EL , 370SAE or 370SAE-L only)

This connector is for output to a VGA-compatible device.

#### 2.4.11 Serial Port (9-pin D-type COM1, COM2 or 10-pin JCOM2)

If your motherboard is P3SAE, PCVB815EL , 370SAE or 370SAE-L, it has the COM1 and JCOM2 on board. If your motherboard is P3SAE-P or 370SAE-P, it has COM1 and COM2 on board.

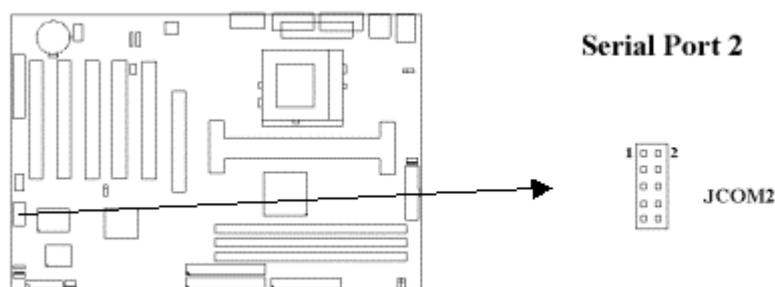


#### 2.4.12 Printer Port (25-pin D-type PRINTER)

You can enable the parallel port and choose the IRQ through the "Onboard Parallel Port" setting in Integrated Peripherals of the CMOS SETUP UTILITY.

#### 2.4.13 USB Connectors (USB & USBB)

You can attach USB devices to the USB or USBB connector.

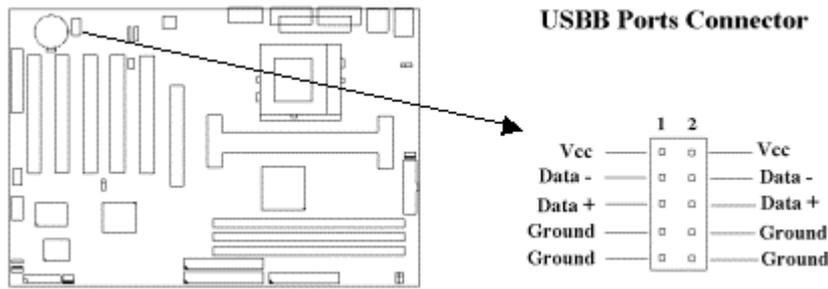

**2.4.14 LAN Connector (for PCVB815EL or 370SAE-L only)**

The LAN Connector is used to attach RJ-45 cable. For 100Base-TX, your network cable must be category 5, twisted-pair wiring with RJ-45 connectors. If you plan on running the adapter at 100Mbps, it must be connected to a 100Base-TX hub. For 10Base-T, use category 3, 4 or 5 twisted-pair wiring.

**2.4.15 ACT/LNK LED (Green color, for PCVB815EL or 370SAE-L only)**

This LED lights when there is network packets sent or received through the RJ45 port. It also lights to indicate a successful network connection and remains steady if the connection is stable. The rate of flashing is proportional to the amount of network traffic.

**2.4.16 Speed LED (Orange color, for PCVB815EL or 370SAE-L only)**

This LED lights when connection is made to a 100Base-TX or 10Base-T host.

**2.4.17 Line Out Connector**

The Line Out phonejack provides the audio outputs for the left and right stereo channels.

**2.4.18 Line In Connector**


The Line In phonejack is used to attach monaural or stereo devices such as a cassette, Digital Audio Tape, or Minidisc players for playback, mixing, or recording.

**2.4.19 Microphone In Connector**

The Microphone In phonejack is used to attach a monaural microphone for live audio input for playback, mixing, or recording.

**2.4.20 ATAPI IDE/Sony CD-ROM Audio (4-pin SONY)**

The ATAPI IDE/Sony CD-ROM Audio connector is used to connect the audio cable from either an ATAPI IDE or Sony CD-ROM drive for playback, mixing, and recording.

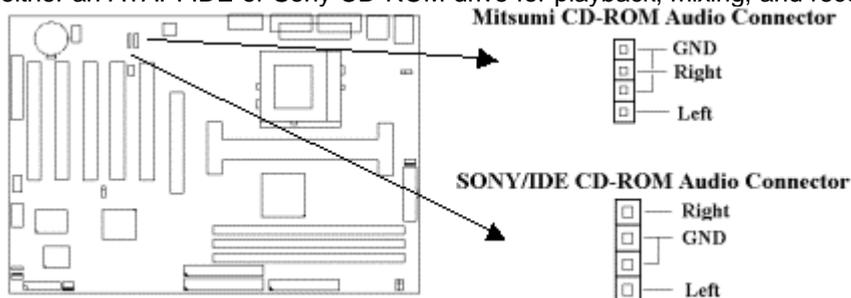

**2.4.21 Mitsumi CD-ROM Audio (4-pin MITSUMI)**

The Mitsumi CD-ROM Audio connector is used to connect the audio cable from a Mitsumi CD-ROM drive for playback, mixing, or recording. Only one of the two CD-ROM audio connectors may be used at a time.


**2.4.22 Game/MIDI Port**

The Game/MIDI Port connector is used to attach a joystick for game interaction or to attach an external MIDI device for playback, mixing, or recording.

**2.4.23 Panel Connection (24-pin JFRNT)**

JFRNT Connector	Function
GREENLED	Suspend Mode LED
PWRLED	Power LED
KEYLK	Keylock Switch
SPKR	Speaker
RESET	Reset Switch
IDELED	HDD LED
PWRBNT	ATX Power Button Connector

**WARNING:** To avoid the system from failing, turn off the power before connecting any devices to the system.

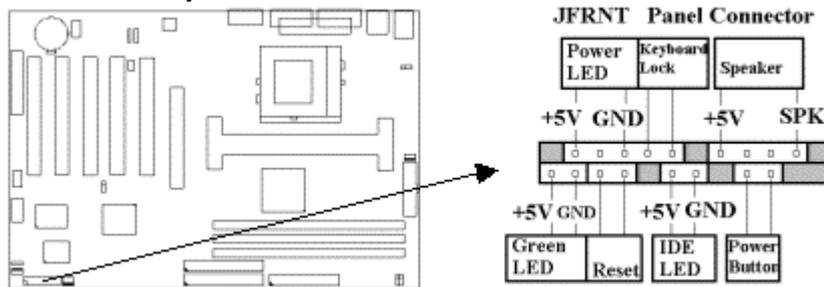


**Chapter 3. BIOS Setup**

**3.1 CMOS Setup Utility**

To activate CMOS Setup, press <DEL> key immediately after you turn on the system. The following message "Press DEL to enter SETUP" should appear in the lower left hand corner of your screen.

When you enter the CMOS Setup Utility, the Main Menu will be displayed (**Figure 3-1**). You can use arrow keys to select your function, press <Enter> key to accept the selection and enter the sub-menu.

**Figure 3-1.** CMOS Setup Utility Main Screen  
 CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software

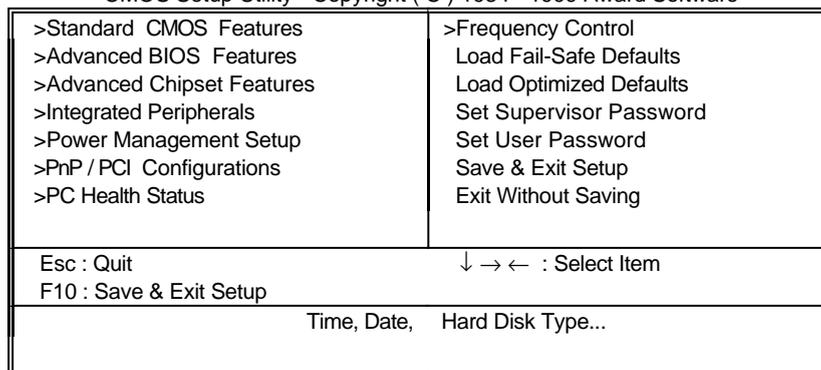

**Sub-Menu**

Note that a right pointer symbol appears to the left of certain fields. This pointer indicates that a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. To call up a sub-menu, simply move the highlight to the field and press <Enter>. The sub-menu will then immediately appear. Use the legend keys to enter values and move from field within a sub-menu just as you would within a menu. Use the <Esc> key to return to the main menu.

### 3.2 Standard CMOS Features

With the sub-menu (**Figure 3-2**), you can setup the; system date, system time, hard and floppy drive type, and display adapter type. Please refer to your equipment specification when changing the setup. Use arrow keys to highlight items, and use <PageUp>, <PageDown>, <+>, or <-> keys to scroll through the available options.

**Figure 3-2.** Standard CMOS Features Screen  
 CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software  
 Standard CMOS Features

Date ( mm : dd : yy )	Fri, Jan 1 1999	Item Help
Time ( hh : mm : ss )	1 : 28 : 42	
>IDE Primary Master	Press Enter 4403 MB	Menu Level >
>IDE Primary Slave	Press Enter None	Change the day, month, year and century
>IDE Secondary Master	Press Enter None	
>IDE Secondary Slave	Press Enter None	
Drive A	1.44M, 3.5 in.	
Drive B	None	
Floppy 3 Mode Support	Disabled	
Video	EGA/VGA	
Halt On	All Errors	
Base Memory	640K	
Extended Memory	14336K	
Total Memory	15360K	

↓ → ← : Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help  
 F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults

#### 3.2.1 Date

To assign the system date, the format is "mm.dd.yy". The input range for the Month is 1-12. Range for Date is 1-31. Range for Year is 1994-2079. System BIOS will calculate the day of the week automatically.

#### 3.2.2 Time

To assign the system time, the format is "hh:mm:ss". The setting is in military time. When entering 2:34pm enter "14:34:00".

#### 3.2.3 Hard Disks Setting

The BIOS supports Dual-Channel PIO and PCI Bus Master IDE ports. Each port supports one master and one slave hard drive. You can use <Enter> or <PageUp> or <PageDown> key to change hard drive type. Incorrect setting may result in boot up error or system hang.

If your hard disk drive is not listed, you can select "Manual" mode to define your own drive manually. We recommend that you select Type "AUTO" for all drives. The BIOS

will auto-detect the hard disk drive and CD-ROM drive at the POST stage.  
If your hard disk drive is a SCSI device, please select "None" for your hard drive setting.

CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software  
IDE Primary Master

IDE HDD Auto-Detection	Press Enter	Item Help
		Menu Level >>
IDE Primary Master	Auto	
Access Mode	Auto	To auto-detect the HDD's size, head... on
Capacity	4303 MB	This channel
Cylinder	8894	
Head	15	
Precomp	0	
Landing Zone	8893	
Sector	63	

↓ → ←: Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help  
 F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults

### 3.2.4 Floppy Drives A&B Setting

Select your floppy disk drive type. Options are 360KB (5.25"), 720KB (3.5"), 1.2MB (5.25"), 1.44MB (3.5"), 2.88MB (3.5").

### 3.2.5 Floppy 3 Mode Support

This is required to support older Japanese floppy drives. Floppy 3 Mode support will allow reading and writing of 1.2MB (as opposed to 1.44MB) on a 3.5-inch diskette.

### 3.2.6 Video Display Adapter Setting

Select the display adapter type for your system. Options are EGA/VGA, MONO, CGA40 and CGA80.

### 3.2.7 Halt On

This function allows the system to halt when an error is detected during Power-On Self-Test.

## 3.3 Advanced BIOS Features Setup

The sub-menu (**Figure 3-3**) includes all AWARD enhanced functions. The correct setting can enhance boot up efficiency. You can assign system speed, setup sequence, typematic and system password setting. You can enter <F1> key for help on highlighted topics. If you want to restore values before the changes you just made, press <F5> key. If you want to restore default value, press <F6> or <F7> key.

**Figure 3-3.** Advanced BIOS Features Screen  
CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software  
Advanced BIOS Features

Virus Warning	Disabled	Item Help
CPU Internal Cache	Enabled	
External Cache	Enabled	Menu Level >
CPU L2 Cache ECC Checking	Enabled	
Processor Number Feature	Disabled	
Quick Power On Self Test	Enabled	
First Boot Device	IDE-0	
Second Boot Device	Floppy	
Third Boot Device	SCSI	

Fourth Boot Device	Disabled
Swap Floppy Drive	Disabled
Boot Up Floppy Seek	Disabled
Boot Up NumLock Status	On
Gate A20 Option	Fast
Typematic Rate Setting	Disabled
X Typematic Rate (Chars/Sec)	6
X Typematic Delay (Msec)	250
Security Option	Setup
OS Select For DRAM > 64MB	Non-OS2
HDD S.M.A.R.T. Capability	Disabled
Report No FDD For WIN 95	Yes

↓ → ←: Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help  
F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults  
( Scroll down to see more items , as shown here )

### 3.3.1 Virus Warning

When enabled, the BIOS will monitor the boot sector and the partition table on the hard drive for any attempt to modify. If an attempt is detected, the BIOS will halt the system and prompt the warning message. Select "Disabled" if you are installing a new operating system.

### 3.3.2 CPU Internal/External Cache

These options are to enable or disable CPU Internal (L1) Cache, or External (L2) Cache.

### 3.3.3 CPU L2 Cache ECC Checking

Select "Enabled" to enable CPU L2 Cache ECC Checking.  
Select "Disabled" to disable CPU L2 Cache ECC Checking.

### 3.3.4 Processor Number Feature

This field will appear only when you are using a Pentium III processor. Each Pentium III processor comes with an individual "processor serial number" which by default is activated. Therefore, when connected to the internet, Pentium III processor transmits the serial number online making it possible to track your online activity. The field provides you the option of disabling this function.

### 3.3.5 Quick Power On Self Test

Select "Enabled" to speed up time required to complete Power-On Self-Test.

### 3.3.6 First/Second/Third Boot Device & Boot Other Device

This option allows user to assign boot sequence of the system. Available options are Floppy, HDD, CD-ROM, SCSI, LAN, LS120 and ZIP100. Set " Boot Other Device" to Enabled if you wish to boot from another device.

### 3.3.7 Swap Floppy Drive

When enabled, physical drive A will be assigned to logical drive B, and physical drive B will be assigned to logical drive A.

### 3.3.8 Boot Up Floppy Seek

The system will detect and verify operation of the floppy drive type.

### 3.3.9 Boot Up Numlock Status

The option allows the <NumLock> key to be activated after system boot up.

### 3.3.10 Gate A20 Option

This entry allows you to select how the gate A20 is handled. The gate A20 is a device used to address memory above 1 Mbytes. Initially, the gate A20 was handled via a pin on the keyboard (Normal). Today, while keyboards still provide this support, it is more common, and much faster, for the system chipset (Fast; default) to provide support for gate A20.

### 3.3.11 Typematic Rate Setting

Select "Enabled" to configure "Typematic Rate" and "Typematic Delay" functions.

### 3.3.12 Typematic Rate

Use this option to set the rate at which a character keeps repeating while you hold down a key.

### 3.3.13 Typematic Delay

Select "Enabled" to set the length of delay before key strokes to repeat. Available options are "250", "500", "750", and "1000".

### 3.3.14 Security Option

You can select whether the password is required every time the system boots or only when you enter the Setup. You can assign "Supervisor Password" and "User Password" in the main CMOS Setup Utility Screen.

### 3.3.15 OS Select for DRAM > 64MB

If you are using OS/2 operating system and installed memory is larger than 64MB. You need to have the setting in the enable mode.

### 3.3.16 HDD S.M.A.R.T. Capability

The item allows you to set HDD S.M.A.R.T. (Self Monitoring Analysis Reporting Technology) Capability function. Please check with the HDD manufacturer or vendor for the S.M.A.R.T. information. Configuration options: Enabled and Disabled.

### 3.3.17 Report No FDD For WIN 95

While the FDD in " STANDARD CMOS SETUP " is set to NONE, set this option to No to release IRQ6 for passing Win95 logo. This option is irrelevant under normal operation.

## 3.4 Advanced Chipset Features Setup

These settings are intended for the Advanced Chipset function on the motherboard. Fine tuning these options, enhances the performance of the system.

**Figure 3.4** Advanced Chipset Features Screen  
CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software  
Advanced Chipset Features

SDRAM CAS Latency Time	3	Item Help
SDRAM Cycle Time Tras/Trc	6/8	Menu Level >
SDRAM RAS-to-CAS Delay	3	
SDRAM RAS Precharge Time	3	
System BIOS Cacheable	Enabled	
Video BIOS Cacheable	Enabled	
Memory Hole At 15M-16M	Disabled	
CPU Latency Timer	Enabled	
Delayed Transaction	Disabled	
AGP Graphics Aperture Size	64MB	
On-Chip Video Windows Size	64MB	

↓ → ←: Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help  
 F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults

### 3.4.1 SDRAM CAS Latency Time

This controls the latency between the SDRAM read command and the time that the data actually becomes available.

### 3.4.2 SDRAM Cycle Time Tras/Trc

This feature controls the number of SDRAM clocks used per access cycle.

### 3.4.3 SDRAM RAS-to-CAS Delay

These are timing of SDRAM CAS Latency and RAS to CAS Delay, calculated by clocks. They are important parameters affects SDRAM performance.

### 3.4.4 SDRAM RAS Precharge Time

The RAS Recharge means the timing to inactive RAS and the timing for DRAM to do Recharge before next RAS can be issued.

### 3.4.5 System BIOS Cacheable

Allows the system BIOS to be cached for faster system performance.

### 3.4.6 Video BIOS Cacheable

Allows the video BIOS to be cached for faster video performance.

### 3.4.7 Memory Hole At 15M-16M

Enabling this feature reserves 15MB to 16MB memory address space to ISA expansion cards that specifically require this setting. This makes the memory from 15MB and up unavailable to the system. Expansion cards can only access memory up to 16MB.

### 3.4.8 Delayed Transaction

This function is used to meet the latency of PCI cycles to from ISA bus. Try to enable or disable it, if you have ISA card compatibility problem.

### 3.4.9 AGP Graphics Aperture Size (MB)

Choose 32, 64MB. Memory-mapped, graphics data structures can reside in the Graphics Aperture.

**3.4.10 Display Cache Frequency (for P3SAE, PCVB815EL , 370SAE or 370SAE-L only)**

Te item can be found only when AIMM is installed. This option allows you to define the display cache frequency on the motherboard, which will affect the graphics performance.

**3.4.11 System Memory Frequency**

This field used to select the system memory frequency. The item can be detected only when 133MHz FSB CPU is installed on board.

**3.4.10 On-Chip Video Windows Size (for P3SAE, PCVB815EL , 370SAE or 370SAE-L only)**

This feature allows you to select the size of mapped memory for AGP graphic data.

**3.5 Integrated Peripherals**

You can control Input and Output functions from this screen.

**Figure 3-5 Integrated Peripherals**  
 CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software  
 Integrated Peripherals

		Item Help
On-Chip Primary PCI IDE	Enabled	
On-Chip Secondary PCI IDE	Enabled	Menu Level >
IDE Primary Master PIO	Auto	
IDE Primary Slave PIO	Auto	
IDE Secondary Master PIO	Auto	
IDE Secondary Slave PIO	Auto	
IDE Primary Master UDMA	Auto	
IDE Primary Slave UDMA	Auto	
IDE Secondary Master UDMA	Auto	
IDE Secondary Slave UDMA	Auto	
USB Controller	Disabled	
X USB Keyboard Support	Disabled	
Init Display First	PCI Slot	
AC97 Audio	Auto	
AC97 Modem	Auto	
Onboard SoundChip control	Enabled	
IDE HDD Block Mode	Enabled	
POWER ON Function	Any Key	
X KB Power ON Password	Enter	
X Hot Key Power ON		
Onboard FDC Controller	Ctrl-F1	
Onboard Serial Port 1	Enabled	
Onboard Serial Port 2	3F8 / IRQ4	
UART Mode Select	2F8 / IRQ3	
X RxD , TxD Active	Normal	
X IR Transmission Delay	Hi , Lo	
X UR2 Duplex Mode	Enabled	
Onboard Parallel Port	Full	
Parallel Port Mode	378 / IR7	
X EPP Mode Select	SPP	
X ECP Mode Use DMA	Epp1.7	
PWRON After PWR-Fail	3	
Game Port Address	Off	
Midi Port Address	201	

Midi Port IRQ	290	
	5	

↓ → ←: Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help  
 F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults  
 ( Scroll down to see more items , as shown here )

### 3.5.1 On-Chip primary/Secondary PCI IDE

Select "Enabled" to activate each on-board IDE channel separately, Select "Disabled", if you install an add-on IDE Control card

### 3.5.2 IDE Primary & Secondary Master/Slave PIO

These four PIO fields let you set a PIO mode (0-4) for each of four IDE devices. When under "Auto" mode, the system automatically set the best mode for each device

### 3.5.3 IDE Primary & Secondary Master/Slave UDMA

When set to "Auto" mode, the system will detect if the hard drive supports Ultra DMA mode.

### 3.5.4 USB Controller

Select Enabled if your system contains a Universal Serial Bus (USB) controller.

### 3.5.5 USB Keyboard Support

This item lets you enable or disable the USB keyboard driver within the onboard BIOS.

### 3.5.6 Init Display First

Select "AGP" or "PCI Slot" for system to detect first when boot-up.

### 3.5.7 AC97 Audio

Allows the motherboard's BIOS to detect whether you are using any audio device. If a audio device is detected, the onboard audio Codec will be enabled; if no audio is detected, the onboard audio Codec will be disabled. If you want to use different audio controller cards, set these fields to Disabled.

### 3.5.8 Onboard SoundChip Control

The CNR slot can work with Primary port or Secondary port. If the item is set as Enabled, the CNR slot work with Secondary port. If the item is set as Disabled, the on board audio Codec will be disabled and CNR slot can work with Primary port or Secondary port.

### 3.5.9 IDE HDD Block Mode

This feature enhances disk performance by allowing multi-sector data transfers and eliminates the interrupt handling time for each sector.

### 3.5.10 POWER ON Function

This field allows you to use the keyboard to power-on the system. To use this function, make sure JKBV jumper is set to 2-3 pin short, please refer to " Keyboard Voltage Setting " in Chapter 2 for more information.

Any Key: Press any key to power-on the system.

Button Only: System can be power on with Power Button.

Keyboard 98: When this option is selected, press the "wake up" key of the Windows 98 compatible keyboard to power-on the system.

Password: When this option is selected, move the cursor to the "KB Power On Password" field and press <Enter>. Enter your password. You can enter up to 5 characters. Type in exactly the same password to confirm, then press <Enter>.

Hot Key: When this option is selected, move the cursor to the " Hot Key Power On " field to select a function key you would like to use to power-on the system. The options are from Ctrl-F1 to Ctrl-F12.

Mouse Left: When this option is selected, double-click the left button of the mouse to power-on the system.

Mouse Right: When this option is selected, double-click the right button of the mouse to power-on the system.

### 3.5.11 Onboard FDC Controller

Select "Enabled" to activate the on-board FDC

Select "Disabled" to activate an add-on FDC

### 3.5.12 Onboard Serial Port 1 & 2

Select an address and corresponding interrupt for the first/second serial port. The default value for the first serial port is "3F8/IRQ4" and the second serial port is "2F8/IRQ3".

### 3.5.13 UART Mode Select

Select to activate the Infrared transfer function.

### 3.5.14 RxD , TxD Active

This option are Hi, Lo; Lo, Hi; Lo, Lo ; Hi, Hi.

### 3.5.15 IR Transmission Delay

If this option is enabled, transmission of data will be slower. This is recommended when you encounter transmission problem with your device. .

### 3.5.16 Onboard Parallel Port

Select address and interrupt for the Parallel port.

### 3.5.17 Parallel Port Mode

Select an operating mode for the parallel port. Mode options are SPP, EPP, ECP and ECP+EPP.

### 3.5.18 EPP Mode Select

Set parallel port as EPP1.7 or EPP1.9.

### 3.5.19 ECP Mode Use DMA

Select a DMA channel if parallel port is set as ECP or ECP+EPP.

### 3.5.20 PWRON After PWR-Fail

- Off: When power returns after an AC power failure, the system's power is off. You must press the Power button to power-on the system.
- On: When power returns after an AC power failure, the system will automatically power-on.
- Former-Sts: When power returns after an AC power failure, the system will return to the state where you left off before power failure occurs. If the system's power is off when AC power failure occurs, it will remain off when power returns. If the system's power is on when AC power failure occurs, the system will power-on when power returns.

### 3.5.21 Game Port Address

This field sets the address of the onboard game port connector.

### 3.5.22 Midi Port Address

This field is used to select the midi port's address. If you have selected the midi port's address, you may select its IRQ in the " Midi Port IRQ ".

### 3.5.23 Midi Port IRQ

This field is used to select the midi port's IRQ.

## 3.6 Power Management Setup

Power management decreases power usage under the pre-defined standby time range.

**Figure 3-6. Power Management Setup Screen**  
 CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software  
 Power Management Setup

		Item Help
ACPI function	Disabled	Menu Level >
ACPI Suspend Type	S1 (POS)	
Power Management	User Define	
Video Off Method	V/H SYNC+Blank	
Video Off In Suspend	Yes	
Suspend Type	Stop Grant	
MODEM Use IRQ	3	
Suspend Mode	Disabled	
HDD Power Down	Disabled	
Soft-Off by PWR-BTTN	Instant-off	
Power On by Ring	Disabled	
Wake Up On LAN	Disabled	
CPU Thermal-Throttling	50.0%	
Resume by Alarm	Disabled	
x Date ( of Month ) Alarm	0	
x Time ( hh:mm:ss ) Alarm	0 0 0	
Primary IDE 0	Disabled	
Primary IDE 1		
Secondary IDE 0	Disabled	
Secondary IDE 1	Disabled	
FDD, COM, LPT Port	Disabled	
PCI PIRQ [A-D] #	Disabled	
	Disabled	

↓ → ←: Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC: Exit    F1 : General Help  
 F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults

( Scroll down to see more items , as shown here )

### 3.6.1 ACPI Function

This item allows you to enable or disable the function of Advanced Configuration and Power Interface which offers improved power management .

### 3.6.2 ACPI Suspend Type

This field is used to select the type of Suspend function.

S1 (POS): Enables the Power On Suspend function.

S3 (STR): Enables the Suspend to RAM function. Refer to Appendix A.

### 3.6.3 Power Management

Mini Saving	System starts power saving function when the inactivity period exceeds 1 hour.
Max Saving	System starts power saving function when the inactivity period exceeds 1 min.
User Defined	Allows user to define the inactivity period before power saving function activates,

### 3.6.4 Video Off Method

This field defines the video off features. The following options are available: DPMS OFF, DPMS Reduce ON, Blank Screen, V/H SYNC+Blank, DPMS Standby, and DPMS Suspend. The DPMS (Display Power Management System) features allow the BIOS to control the video display card if it supports the DPMS feature.

### 3.6.5 Video Off In Suspend

This option is used to activate the video off feature when the system enters the suspend mode.

### 3.6.6 MODEM Use IRQ

This item tells the Power Management BIOS which IRQ is assigned to the installed MODEM. Option are NA, 3, 4, 5, 7, 9, 10 and 11.

### 3.6.7 Suspend Mode

System further shuts down all devices except for CPU itself. This is the third level of Power Management.

### 3.6.8 HDD Power Down

This instructs hard drives to shut off while in the Power Management modes.

### 3.6.9 Soft-Off by PWR-BTTN

When set to "Delay 4 Sec.", the power button has a dual function where pressing less than 4 seconds will place the system in sleep mode and shut down the system when the button is held more than 4 seconds. "Instant-Off", the system will be shut down right away when the power button is pressed.

### 3.6.10 Wake-Up by PCI card

If your PCI card supports PME (Power Management Event) signal and this item is set as Enabled, PCI peripherals drive PME signal to wake the system from low-power states S1-S5.

**3.6.11 Power On by Ring**

The option lets you specify enable or disable external Modem Wake Up function. It powers up the computer when the modem receives a call while the computer is in Soft-off mode.

**Note:** The computer cannot receive or transmit data until the computer and application are fully running. After the item is set as Enabled system must enter to Operation System once before system is turned off.

**3.6.12 Wake up on LAN**

This allows you to remotely power up your system through your network by sending a wake-up frame or signal. With this feature, you can remotely upload/download data to/from systems during off-peak hours. Set to Enabled to set this feature. Please refer to session 2.4.5 for more information.

**3.6.13 CPU Thermal-Throttling**

Set the percent of power consumption when CPU over heat.

**3.6.14 Resume by Alarm**

Set this option to enable or disable the RTC Alarm to Wake Up the system which is set at soft Off.

**3.6.15 Date (of Month) Alarm, Time (hh:mm:ss) Alarm**

Set these options to specify the RTC Alarm time on Date / Hour / Minute / Second.

**3.6.16 Primary/Secondary IDE 0/1, FDD, COM, LPT Port & PCI PIRQ [A-D] #**

These items enable or disable the detection of IDE, floppy, serial, parallel port and PCI PIRQ [A-D] activities for power down state transition. Actually it detects the read/write to/from I/O port.

**3.7 PNP/PCI Configurations Setup**

**Figure 3.7 PNP/PCI CONFIGURATIONS SETUP**  
 CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software  
 PnP / PCI Configurations

Reset Configuration Data	Disabled	Item Help
Resources Controlled By	Auto (ESCD)	Menu Level >
x IRQ Resources	Press Enter	
PCI/VGA Palette Snoop	Disabled	
INT Pin 1 Assignment	Auto	
INT Pin 2 Assignment	Auto	
INT Pin 3 Assignment	Auto	
INT Pin 4 Assignment	Auto	

↓ → ←: Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help

F5 : Previous Value

F6 : Fail-Safe Defaults

F7 : Optimized Defaults

### 3.7.1 Reset Configuration Data

In case a conflict occurs after you assign the IRQs or after you configure your system, you can enable this function to allow your system to automatically reset your configuration and reassign the IRQs, DMAs, and I/O address.

### 3.7.2 Resources Controlled By

Default setting is "Auto (ESCD)". This setting allows the BIOS to self detect setting and Plug-and-Play devices during start up. The user can select and configure IRQs under "Manual" mode.

### 3.7.3 IRQ Resources

CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software

#### IRQ Resources

IRQ-3	assigned to	PCI Device	Item Help
IRQ-4	assigned to	PCI Devic	Menu Level >
IRQ-5	assigned to	PCI Device	
IRQ-7	assigned to	PCI Device	Legacy ISA for devices
IRQ-9	assigned to	PCI Device	compliant with the
IRQ-10	assigned to	PCI Device	original PC AT bus
IRQ-11	assigned to	PCI Device	Specification, PCI/ISA
IRQ-12	assigned to	PCI Device	PnP for devices
IRQ-14	assigned to	PCI Device	Compliant with the
IRQ-15	assigned to	PCI Device	Plug and Play standard
			Whether designed for
			PCI OR ISA bus
			architecture

↓ → ←: Move Enter : Select +/-/PU/PD : Value F10 : Save ESC : Exit F1 : General Help

F5 : Previous Value

F6 : Fail-Safe Defaults

F7 : Optimized Defaults

### 3.7.4 IRQ-xx assigned to

If your ISA card is not PnP compatible and requires a special IRQ to support its function, set the selected IRQ-x assigned to "Reserved". This setting informs the PnP BIOS to reserve the selected IRQ for the installed legacy ISA card.

### 3.7.5 PCI/VGA Palette Snoop

Enable this option to correct screen color shifts, when there is a combination of VGA cards, accelerator cards, or MPEG cards present.

### 3.7.6 INT Pin 1/2/3/4 Assignment

In case conflict occurs in AUTO mode, you can reassign the IRQ with the setting.

## 3.8 PC Health Status

**Figure 3.8 PC Health Status**

CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software

#### PC Health Status

CPU Warning Temperature	50 °C/122 °F	Item Help
Current System Temp.	26 °C/78 °F	Menu Level >
Current CPU Temperature	36 °C/96 °F	
Current CPUFAN Speed	4017 RPM	
Current CHASFAN Speed	0 RPM	
Vcore(V)	1.98 V	
Vcc3 (V)	3.24 V	
+ 5 V	5.02 V	
+12V	11.73 V	
-12V	-11.78 V	
VBAT (V)	2.96 V	
5VSB (V)	5.29 V	

↓ → ←: Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help  
 F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults

### 3.8.1 Current System & CPU Temperature (xx°C/xx°F)

The onboard hardware monitor is able to detect the temperatures of motherboard and CPU. These values refresh upon any key entry. The function is optional.

### 3.8.2 Current CPUFAN & CHASFAN Speed (xxxxRPM)

The onboard hardware monitor is able to detect chassis fan speed, CPU fan speed in Rotations Per Minute (RPM). These values refresh upon any key entry in the BIOS setup screen. The function is optional.

### 3.8.3 Vcore, Vcc3, +5V, +12V, -12V, VBAT & 5VSB (xx.xxV)

The onboard hardware monitor is able to detect the voltage output by the voltage regulators. These values refresh upon any key entry. The function is optional.

## 3.9 Frequency Control

**Figure 3.9** Frequency Control

CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software

### Frequency Control

Auto Detect DIMM/PCI Clk	Enabled	Item Help
Spread Spectrum	Disabled	Menu Level >
CPU Host/PCI Clock/PC133	Default	
CPU Clock Ratio	X 3	

↓ → ←: Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help  
 F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults

### 3.9.1 Auto Detect DIMM/PCI CLK

If you have the EMI issue, set the option as Enabled, it keeps its interference under control.

### 3.9.2 CPU Host/PCI Clock/PC133

Choose Default, 66, 75, 83, 100, 103, 105, 114, 120, 124, 133, 140, 150 or 166 MHz for the external frequency of your CPU.

You can select Default, 66, 75 or 83Mhz if your CPU is 66Mhz FSB and select Default, 100, 103, 105, 114, 120, 124 or 133 MHz if the CPU is 100Mhz FSB. If you have

133MHz FSB CPU, you can select Default, 133, 140, 150 or 166MHz.

The 75, 83, 103, 105, 114, 120, 124, 133, 130, 150 or 166 MHz frequency are optional and over specification.

You must install 8ns or faster DIMM on board if you set 103, 105, 114, 120 or 124 MHz as external frequency and must install 7ns or faster DIMM on board if you set 133 or 140 MHz as external frequency. If the external frequency is 150 or 166 MHz, you must have installed 6ns or faster DIMM on board.

**Warning:** Over specification operations are not recommended.

The frequency mapping table of the elements:

Ext. frequency	PCI
67 MHz	33 MHz
68 MHz	35 MHz
70 MHz	35 MHz
75 MHz	38 MHz
80 MHz	40 MHz
83 MHz	42 MHz
100 MHz	33 MHz
103 MHz	34 MHz
105 MHz	35 MHz
110 MHz	37 MHz
115 MHz	38 MHz
133 MHz	33 MHz
137 MHz	34 MHz
140 MHz	35 MHz
145 MHz	36 MHz
150 MHz	37 MHz
160 MHz	38 MHz
166 MHz	42 MHz

### 3.9.3 CPU Clock Ratio

The Ratio of some latest CPUs are fixed by Intel Corporation and VIA so the Ratio can not be changed with the setting. If it did not fix by CPU manufacturer, it may be changed with the setting. Over specification operations are not recommended.

### 3.10 Load Fail-Safe Defaults

This loads the troubleshooting default values permanently stored in the ROM chips. These settings are not optimal and turn off all high performance features. You should use these values only if you have hardware problems. Highlight this option in the main menu and press <Enter>. The message below will appear.

Load Fail-Safe Defaults (Y/N)?N

If you want to process, type <Y> and press <Enter>. The default settings will be loaded.

### 3.11 Load Optimized Defaults

This feature loads optimized setting from the BIOS ROM. Use the default values as standard values for your system. Highlight this option in the main menu and press <Enter>. The message below will appear.

Load Optimized Defaults (Y/N)?N

Type <Y> and press <Enter> to load the Setup default values.

### 3.12 Set Supervisor/User Password

You can assign, modify, or cancel password settings. To modify, highlight "Set Supervisor Password" or "Set User Password" and press the <Enter> key. The screen will prompt you ("Enter Password:"). Enter your password. The maximum size of the password is 8 characters. System will prompt you to reenter the password to verify. Remember the

passwords are case sensitive.

If you want to remove the passwords, either delete passwords or press <Enter> when prompting for new password.

If you want it to require password upon initial system startup and upon entering the CMOS Setup Utility, you will need to change the selection of the (Security Option) under (Advanced BIOS Features ) to "System".

If the setting is "Setup", the system will only require the password you activate CMOS Setup Utility.

### 3.13 Save & Exit Setup

When all the changes have been made, highlight "Save & Exit Setup" and press <Enter>. The message below will appear:

Save to CMOS and Exit (Y/N)? N

Type "Y" and press <Enter>. The modifications you have made will be written into the CMOS memory, and the system will reboot.

### 3.14 Exit Without Saving

When you do not want to save the changes you have made, highlight "Exit Without Saving" and press <Enter>, The message below will appear:

Quit Without Saving (Y/N)? N

Type "Y" and press <Enter>. The system will reboot.

## Chapter 4. Software installation

### 4.1 INF Update for Windows 95/98/ME/2000

**\*\*\* Because some controllers that in Intel 82815xx/82801BA Chipset are not recognized by Windows 95/98/ME/2000. You need to setup INF files to your system in order to enable these controllers. If your Operation System is Windows 95/98/ME/2000, you must setup INF files from \INTEL\WINDOWS\INF and \INTEL\WINDOWS\INF\_INSTALL\_UTILITY sub-directory first. Please follow installation below to setup INF files.**

#### 4.1.1 For Windows 95/98 Gold Edition Installation

1. Start up Windows 95 or Windows 98 gold edition. [ If your Windows 95 is older version, please install the USB supplement service pack ( usbsupp.exe ) files first. You can get this file from <http://www.microsoft.com> ]
2. Insert the CD Driver into the CD drive-enter the \INTEL\WINDOWS\INF directory on the CD-ROM and double-click **SETUP.EXE**.
3. Follow the prompts to complete the installation and restart your computer.
4. Then enter the \INTEL\WINDOWS\INF\_INSTALL\_UTILITY directory on the CD-ROM and double-click **SETUP.EXE**.
5. Follow the prompts to complete the installation and restart your computer.
6. Add New Hardware Wizard will search for some devices.
7. If Insert Disk dialog is displayed, please insert the **Windows 95 or 98 CD-ROM** into the CD drive, then click "OK" button.
8. Click "Yes" button to restart your computer.

#### 4.1.2 For Windows 98 SE

1. Insert the CD Driver into the CD drive-enter the \INTEL\WINDOWS\INF directory on the CD-ROM and double-click **SETUP.EXE**.
2. Follow the prompts to complete the installation and restart your computer.
3. Then enter the \INTEL\WINDOWS\INF\_INSTALL\_UTILITY directory on the CD-ROM and double-click **SETUP.EXE**.
4. Follow the prompts to complete the installation and restart your computer.

#### 4.1.3 For Windows 2000/ME

1. Insert the CD Driver into the CD drive-enter the **\INTEL\WINDOWS\INF** directory on the CD-ROM and double-click **SETUP.EXE**.
2. Follow the prompts to continue the installation and restart your computer.

#### 4.2 Installing the Graphics Driver

(For P3SAE, PCVB815EL , 370SAE or 370SAE-L only. If your motherboard is P3SAE-P or 370SAE-P, please load your VGA driver from your OEM VGA disk.)

##### 4.2.1 For Windows 95/98/ME

1. If your Operation System is Windows 95, please load **DCOM95.EXE** file from **\INTEL\VGA\WIN9X\GRAPHICS** directory first.
2. Insert the CD Driver into CD drive - enter the **\INTEL\VGA\WIN9X\GRAPHICS** directory on the CD Driver and double-click **SETUP.EXE**.
3. Click "**Next**" at the Welcome screen.
4. Follow the prompts to complete the installation.
5. You must restart your computer for the installation to complete.

##### 4.2.2 For Windows 2000

1. Insert the CD Driver into CD drive - enter the **\INTEL\VGA\WIN2000** directory on the CD Driver and double-click **SETUP.EXE**.
2. Click "**Next**" at the Welcome screen.
3. Follow the prompts to complete the installation.
4. You must restart your computer for the installation to complete.

##### 4.2.3 For Windows NT 4.0

1. Start up Windows NT4.0 with service pack 4 or later version.
2. Insert the CD Driver into CD drive - enter the **\INTEL\VGA\WINNT4\GRAPHICS** directory on the CD Driver and double-click **SETUP.EXE**.
3. Click "**Next**" at the Welcome screen.
4. Follow the prompts to complete the installation.
5. You must restart your computer for the installation to complete.

##### 4.2.4 For Windows NT 3.51, Windows 3.11 & OS/2

Please refer to the **readme.txt** file that in sub-directory to load the graphics driver.

#### 4.3 Installing the Sound Driver

Please refer to the **readme.txt** file that in **\AD\188X** directory first before installing the sound driver.

#### 4.4 Installing the LAN Driver (for PCVB815EL or 370SAE-L only)

Please refer to the **readme.txt** file that in **\INTEL\LAN** directory first before installing the LAN driver.

#### 4.5 Installing the Intel Security Driver

1. Start up Windows 95/98/ME or NT 4.0
2. Insert the CD-ROM into the drive -enter the **\INTEL\SecurityDRV** directory on the CD-ROM and double-click **SETUP.EXE**
3. Follow the prompts to complete the installation and restart your system.
4. Please refer to the **IntelSecurityDriver\_Readme.txt** file for more information.

#### 4.6 Installing Ultra ATA Storage Driver

1. Start up Windows 98/98SE/ME/2000 or NT 4.0
2. Insert the CD-ROM into the drive -enter the **INTEL\ULTRAATA** directory on the CD-ROM and double-click **ULTRAATA.EXE**
3. Follow the prompts to complete the installation and restart your system.

#### 4.7 Installing Hardware Doctor Utility

Insert the CD Driver into the CD drive. Install **SETUP.EXE** from **MONITOR\W83627\WIN9598ME** directory for Windows 95/98/ME or **MONITOR\W83627\W2K-NT40** directory for Windows 2000/NT4.0 then follow the prompts to complete the installation.

### Appendix A. Using the Suspend to RAM Function

1. Select "**Power Management Setup**" in the main menu screen and press <Enter>.
2. In the "**ACPI Function**" field, select "**Enabled**".
3. In the "**ACPI Suspend Type**" field, select "**S3(STR)**".

CMOS Setup Utility - Copyright ( C ) 1984 - 1999 Award Software

#### Power Management Setup

ACPI function	Enabled	Item Help
ACPI Suspend Type	S3 (STR)	Menu Level >
Power Management	User Define	
Video Off Method	V/H SYNC+Blank	
Video Off In Suspend	Yes	
Suspend Type	Stop Grant	
MODEM Use IRQ	3	
Suspend Mode	Disabled	
HDD Power Down	Disabled	
Soft-Off by PWR-BTTN	Instant-off	
Wake on LAN/Modem	Disabled	
CPU Thermal-Throttling	50.0%	
Resume by Alarm	Disabled	
x Date ( of Month ) Alarm	0	
** Reload Global Timer Events		
**		
Primary IDE 0	Disabled	
Primary IDE 1	Disabled	

↓ → ← : Move    Enter : Select    +/-/PU/PD : Value    F10 : Save    ESC : Exit    F1 : General Help  
F5 : Previous Value    F6 : Fail-Safe Defaults    F7 : Optimized Defaults

4. Press <Esc> to return to the main menu.
5. Select "**Save & Exit Setup**" and press <Enter>. Type <Y> and press <Enter>.
6. Install Windows 98 by typing the following parameter. This is to ensure that the ACPI function is supported. There is a space between the P and the J.

**[drive]:>setup /p j**

If you have previously installed Windows 98, you need to upgrade the system in order to support ACPI. Please contact Microsoft for upgrade information.


7. Boot Windows 98. In the Windows 98 desktop, click the Start button. Move the cursor to Setting, then click Control Panel. To check whether ACPI was properly installed, double-click the System icon. In the System Properties dialog box, click the "**Device Manager**" tab. In "**View devices by type**", click "**System devices**".



8. Double-click the System icon. In the System Properties dialog box, click the **Performance** tab.



9. Click File System. In the "**Typical role of this computer**" field, select "**Mobile or docking system**". Click **Apply**, then click **OK**. Restart the computer.

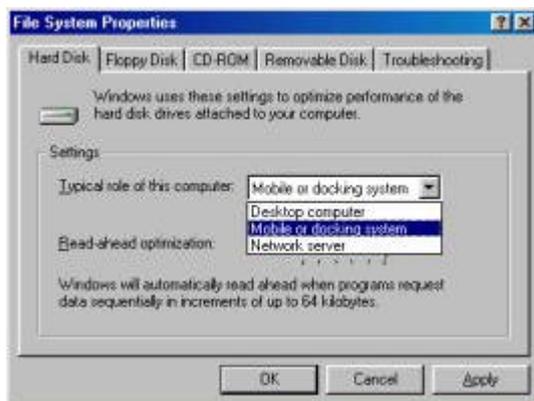

10. Repeat step 7 to open the **Control Panel** dialog box. Double-click the **Power Management icon**.
11. Click the **Advanced** tab. In the "**When I press the power button on my computer**" field, select "**Standby**".



12. After completing the steps above and you want to power-off the computer, you do not need to go through the process of closing files, applications and operation system. You can power off the computer at once by pressing the power button or selecting "**Standby**" when you shut down Windows 98.

To power-on the computer, just press the power button. The operating session where you left off when you power-off the computer will resume in not more than 8 seconds. However, the power button will not function if a keyboard password has been set in the "**KB Power ON Password**" field of the Integrated Peripherals submenu. You must type the password to power-on the computer. If you have changed the color or resolution (in the Display Properties dialog box), do not apply the settings without restarting. You must restart the computer.

