


# User's Manual

- J27 :** HDD LED    Speaker  
 Power On/Off    Consumer IR  
 Reset    IR  
 Keylock & Power LED
- JP3 :** Ex. Debug display connector
- JP4 :** Short=On board debug display  
 Open=Ex. Debug display

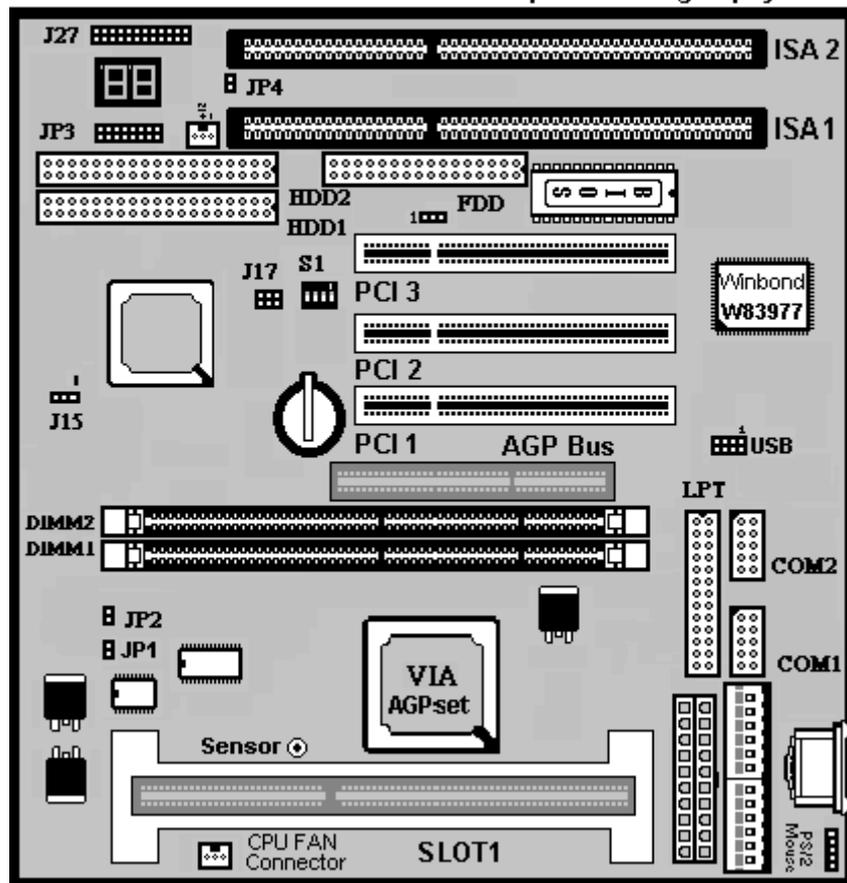

**J15 :** 1-2 Short=Normal  
 2-3 Short=Clear CMOS

**J17 =** Creative SB-link  
**J19 =** Wake on Lan

**JP3:**External Debug display connector.

**JP4:**

<b>JP4</b>	
<b>Open</b>	<b>External Debug Display</b>
<b>Short</b>	<b>On Board Debug Display</b>

### **S1:Clock Ratio Table**

In case the CPU you use is belonged old style - Multiplier type, you may refer to following set up. All the new frequency-fixed CPU are Auto-Detect so that don't need to set up S1.

S1

1-2	3-4	5-6	7-8	Ratio
On	On	On	On	X2
On	On	On	Off	X2.5
On	On	Off	On	X3
On	On	Off	Off	X3.5
On	Off	On	On	X4
On	Off	On	Off	X4.5
On	Off	Off	On	X5
On	Off	Off	Off	X5.5
Off	On	On	On	X6
Off	On	On	Off	X6.5
Off	On	Off	On	X7
Off	On	Off	Off	X7.5
Off	Off	On	On	X8
Off	Off	On	Off	X8.5
Off	Off	Off	On	X9

**J15:Clear CMOS**

<b>J15</b>	
<b>1-2</b>	<b>Normal Operation(Default)</b>
<b>2-3</b>	<b>For Clearing CMOS Data</b>

**CPU Host Clock Setting:**

<b>JP1</b>	<b>JP2</b>	<b>Speed</b>
<b>On</b>	<b>On</b>	<b>66MHz</b>
<b>On</b>	<b>Off</b>	<b>100MHz</b>
<b>Off</b>	<b>On</b>	<b>105MHz</b>
<b>Off</b>	<b>Off</b>	<b>133MHz</b>

**J12: USB Header**

