

Statement:

This manual is the intellectual property of Foxconn, Inc. Although the information in this manual may be changed or modified at any time, Foxconn does not obligate itself to inform the user of these changes.

Trademark:

All trademarks are the property of their respective owners.

Version:

User's Manual V1.1 for 45CMX/45GMX Series motherboard.

Symbol description:

-  **Note:** refers to important information that can help you to use motherboard better.
-  **Attention:** indicates that it may damage hardware or cause data loss, and tells you how to avoid such problems.
-  **Warning:** means that a potential risk of property damage or physical injury exists.

More information:

If you want more information about our products, please visit Foxconn's website: <http://www.foxconnchannel.com>



WEEE: The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Declaration of conformity



HON HAI PRECISION INDUSTRY COMPANY LTD
66 , CHUNG SHAN RD., TU-CHENG INDUSTRIAL DISTRICT,
TAIPEI HSIEN, TAIWAN, R.O.C.

declares that the product
Motherboard
45CMX/45CMX-K/45GMX

is in conformity with
(reference to the specification under which conformity is declared in
accordance with 89/336 EEC-EMC Directive)

- EN 55022: 1998/A2: 2003 Limits and methods of measurements of radio disturbance characteristics of information technology equipment
- EN 61000-3-2:2000 Electromagnetic compatibility (EMC)
Part 3: Limits
Section 2: Limits for harmonic current emissions
(equipment input current \leq 16A per phase)
- EN 61000-3-3/A1:2001 Electromagnetic compatibility (EMC)
Part 3: Limits
Section 2: Limits of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current \leq 16A
- EN 55024/A2:2003 Information technology equipment-Immunity characteristics limits and methods of measurement

Signature :

Place / Date : TAIPEI/2007

Printed Name : James Liang

Position/ Title : Assistant President

Declaration of conformity



Trade Name: FOXCONN
Model Name: 45CMX/45CMX-K/45GMX
Responsible Party: PCE Industry Inc.
Address: 458 E. Lambert Rd.
Fullerton, CA 92835
Telephone: 714-738-8868
Facsimile: 714-738-8838

Equipment Classification: FCC Class B Subassembly
Type of Product: Motherboard
**Manufacturer: HON HAI PRECISION INDUSTRY
COMPANY LTD**
Address: 66 , CHUNG SHAN RD., TU-CHENG
INDUSTRIAL DISTRICT, TAIPEI HSIEN,
TAIWAN, R.O.C.

Supplementary Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tested to comply with FCC standards.

Signature :

A handwritten signature in black ink, appearing to read 'James Liang'.

Date : 2007

Table of Contents

Chapter 1 Main Features

| | |
|---------------------|----|
| Specifications..... | 2 |
| Jumpers | 18 |

Chapter 2 BIOS Description

| | |
|-----------------------------------|----|
| Enter BIOS Setup | 20 |
| Main menu | 20 |
| 1. Standard CMOS Features..... | 21 |
| 2. FOX Central Control Unit..... | 23 |
| 3. Advanced BIOS Features | 25 |
| 4. Advanced Chipset Features..... | 26 |
| 5. Integrated Peripherals | 28 |
| 6. Power Management Setup | 28 |
| 7. PC Health Status | 29 |
| 8. Load Optimized Defaults | 31 |
| 9. Set Supervise Password | 31 |
| 10. Set User Password | 31 |
| 11. Save & Exit Setup | 32 |
| 12. Exit Without Saving | 32 |

Chapter 3 Directions for Bundled Software

| | |
|----------------------|----|
| FOX ONE..... | 34 |
| FOX LiveUpdate | 38 |
| FOX LOGO | 40 |
| FOX DMI | 41 |

i Attention:

1. Attach the CPU and heatsink using silica gel to ensure full contact.
2. It is suggested to select high-quality, certified fans in order to avoid damaging the motherboard and CPU due to high temperature.
3. Never turn on the computer if the CPU fan is not properly installed.
4. Ensure that the DC power supply is turned off before inserting or removing expansion cards or other peripherals, especially when you insert or remove a memory module. Failure to switch off the DC power supply may result in serious damage to your system or memory module.

i Attention:

We cannot guarantee that your system will operate normally while overclock. Normal operation depends on the overclock capacity of your device.

i Attention:

Since BIOS programs are upgraded from time to time, the BIOS description in this manual is just for reference. We do not guarantee that the content of this manual will remain consistent with the actual BIOS version at any given time in the future.

i Attention:

The pictures of objects used in this manual are just for your reference. Please refer to the physical motherboard.

i Attention:

Please visit the Foxconn global English website (<http://www.foxconnchannel.com>) to download the latest BIOS file and drivers for this motherboard.



Chapter 1

Thank you for buying Foxconn's 45CMX/45GMX Series motherboard. This series of motherboard is one of our new products, and offers superior performance, reliability and quality, at a reasonable price. This motherboard adopts the advanced Intel® 945GC/945G + ICH7 chipset, providing a computer platform with high integration, powerful compatibility and high performance-price ratio for users.

This chapter includes the following information:

- ❖ Specifications
- ❖ Jumpers

Chapter 1 Main Features

Specifications - - English

| | |
|------------------------|---|
| Size | <ul style="list-style-type: none">• Micro ATX form factor : 244mm x 203mm |
| CPU | <ul style="list-style-type: none">• LGA775 socket for Intel® Core™ 2 Duo, Pentium® 4 Extreme Edition, Pentium® D, Pentium® 4, Celeron®, Celeron® D processors |
| Chipset | <ul style="list-style-type: none">• Northbridge: Intel® 945GC/945G• Southbridge: Intel® ICH7 |
| Front Side Bus | <ul style="list-style-type: none">• 1333(OverClock)/1066/800/533 MHz |
| Memory | <ul style="list-style-type: none">• 2 x 240-pin DIMM slots• Supports Dual-Channel DDR2 667/533/400• Supports up to 4GB |
| Expansion Slots | <ul style="list-style-type: none">• 1 x PCI Express x16 slot• 1 x PCI Express x1 slot• 2 x PCI slots |
| Audio | <ul style="list-style-type: none">• Realtek 6-channel Audio CODEC• Supports S/PDIF output, Jack-Sensing function, Intel® High Definition Audio |
| LAN | <ul style="list-style-type: none">• Realtek 10/100 Mb/s LAN Controller / Realtek Gigabit LAN Controller |
| Storage | <ul style="list-style-type: none">• 2 x Ultra DMA 100/66/33 devices• 4 x SATA 300MB/s devices |
| Rear Panel I/O | <ul style="list-style-type: none">• 1 x PS/2 Mouse Port• 1 x PS/2 Keyboard Port• 1 x Serial Port• 1 x Parallel Port• 1 x VGA Port• 4 x USB 2.0 Ports• 1 x RJ45 LAN Port• 6-channel Audio Ports |

(continued on the next page)

| | |
|--------------------------------|--|
| Internal I/O Connectors | <ul style="list-style-type: none">• 2 x USB 2.0 headers (supports 4 USB 2.0 ports)• 4 x SATA connectors• 1 x Floppy connector• 1 x IDE connector• 1 x Chassis intruder header (INTR)• 1 x CD_IN header• 1 x Speaker header (optional)• 1 x S/PDIF_OUT header• 1 x COM2 header (optional)• 1 x Front Audio connector• 1 x 24-pin ATX Power Connector• 1 x 4-pin ATX_12V Power Connector• 1 x IrDA header• 1 x CPU Fan connector• 1 x System Fan connector• 1 x NB Fan connector (optional)• Front panel connector |
| Support CD | <ul style="list-style-type: none">• Driver• Utility |

- Specifications are subject to change without notice

第一章 主要性能

产品规格- -简体中文

| | |
|---------|---|
| 尺寸 | • uATX 结构: 244mm x 203mm |
| 中央处理器 | • 支持采用 LGA775 封装的 Intel® Core™ 2 Duo, Pentium® 4 Extreme Edition, Pentium® D, Pentium® 4, Celeron®, Celeron® D 处理器 |
| 芯片组 | • 北桥: Intel® 945GC/945G • 南桥: Intel® ICH7 |
| 系统总线 | • 1333(OverClock)/1066/800/533 MHz |
| 内存 | • 2 个 240针脚内存插槽 • 支持双通道 DDR2 667/533/400 • 内存总容量最大可达 4GB |
| 扩展槽 | • 1 个 PCI Express x16 插槽 • 1 个 PCI Express x1 插槽 • 2 个 PCI 插槽 |
| 音频 | • Realtek 6 声道音频编解码器 • 支持 S/PDIF 输出, Jack-Sensing 功能, Intel® High Definition Audio |
| LAN | • Realtek 10/100 Mb/s LAN Controller/ Realtek Gigabit LAN Controller |
| 存储 | • 2 个 Ultra DMA 100/66/33 设备 • 4 个 SATA 300MB/s 设备 |
| 后面板 I/O | • 1 个 PS/2 鼠标接口 • 1 个 PS/2 键盘接口 • 1 个 串行接口 • 1 个 并行接口 • 1 个 VGA 接口 • 4 个 USB 2.0 接口 • 1 个 RJ45 网络接口 • 6 声道音频接口 |

(下页继续)

| | |
|---------------|---|
| 内置连接器 | <ul style="list-style-type: none">• 2 个 USB 2.0 接头 (提供 4 USB 2.0 接口)• 4 个 SATA 接头• 1 个 软驱接口• 1 个 IDE 接口• 1 个 机箱开启侦测接头 (INTR)• 1 个 CD_IN 接头• 1 个 Speaker 接头 (选配)• 1 个 S/PDIF_OUT 接头• 1 个 COM2 接头 (选配)• 1 个 前置音频接头• 1 个 24 针 ATX 电源接口• 1 个 4 针 ATX_12V 电源接口• 1 个 红外线通讯接头• 1 个 CPU 风扇接头• 1 个 系统风扇接头• 1 个 北桥风扇接头 (选配)• 前端面板接头 |
| 实用程序光盘 | <ul style="list-style-type: none">• 驱动程序• 应用程序 |

• 规格若有任何更改, 恕不另行通知

Kapitel 1 Hauptmerkmale

Technische Daten--Deutsch

| | |
|--|---|
| Größe | <ul style="list-style-type: none">• Micro ATX-Formfaktor: 244 mm x 203 mm |
| CPU | <ul style="list-style-type: none">• LGA775-Sockel für Intel®_CoreTM 2 Duo-, Pentium®_4 Extreme Edition-, Pentium®_D-, Pentium®_4-, Celeron®-Celeron®_D-Prozessoren |
| Chipsatz | <ul style="list-style-type: none">• Northbridge: Intel 945GC/945G• Southbridge: Intel ICH7 |
| Front Side Bus | <ul style="list-style-type: none">• 1333(Übertaktung)/1066/800/533 MHz |
| Speicher | <ul style="list-style-type: none">• 2 x 240-polige DIMM-Steckplätze• Unterstützt Dual-Channel DDR2 667/533/400• Unterstützt bis 4GB |
| Erweiterungssteckplätze | <ul style="list-style-type: none">• 1 x PCI Express x16-Steckplatz• 1 x PCI Express x1-Steckplatz• 2 x PCI-Steckplätze |
| Audio | <ul style="list-style-type: none">• Realtek 6-Kanal-Audio CODEC• Unterstützt S/PDIF-Ausgang, Anschlusserkennung, Intel® High Definition Audio |
| LAN | <ul style="list-style-type: none">• Realtek 10/100 Mb/s LAN / Realtek Gigabit LAN |
| Speichergeräte | <ul style="list-style-type: none">• 2 x Ultra DMA 100/66/33-Geräte• 4 x SATA-Geräte, 300 MB/s |
| I/O-Anschlüsse an der Rückseite | <ul style="list-style-type: none">• 1 x PS/2-Mausanschluss• 1 x PS/2-Tastaturanschluss• 1 x Seriellanschluss• 1 x Parallelanschluss• 1 x VGA-Port• 4 x USB 2.0-Ports• 1 x RJ45-LAN-Port• 6-Kanal-Audio-Ports |

(Fortsetzung auf der nächsten Seite)

| | |
|-------------------------------|--|
| Interne I/O-Anschlüsse | <ul style="list-style-type: none">• 2 x USB 2.0-Anschlussleisten (Unterstützung für 4 USB 2.0-Ports)• 4 x SATA-Anschlüsse• 1 x Diskettenlaufwerkanschluss• 1 x IDE-Anschluss• 1 x Gehäuse-offen-Anschluss (INTR)• 1 x CD_IN-Anschluss• 1 x Lautsprecher-Anschluss (optional)• 1 x S/PDIF_OUT-Anschluss• 1 x COM2-Anschluss (optional)• 1 x Front-Audio-Anschluss• 1 x ATX Power, 24-polig-Anschluss• 1 x ATX_12V Power, 4-polig-Anschluss• 1 x IrDA-Anschluss• 1 x CPU-Lüfter-Anschluss• 1 x Systemlüfter-Anschluss• 1 x NB-Lüfter-Anschluss (optional)• Frontbedienfeld-Anschluss |
| Support-CD | <ul style="list-style-type: none">• Treibe• Dienstprogramme |

- Angaben können sich ohne Vorankündigung ändern.

Capítulo 1 Principales funciones

Características- -Español

| | |
|-----------------------------|---|
| Tamaño | <ul style="list-style-type: none">• Micro ATX factor de forma: 244mm x 203mm |
| CPU | <ul style="list-style-type: none">• Conector LGA775 para procesadores Intel® Core™ 2 Duo, Pentium® 4 Extreme Edition, Pentium® D, Pentium® 4, Celeron®, Celeron® D |
| Conjunto de chips | <ul style="list-style-type: none">• Northbridge: Intel 945GC/945G• Southbridge: Intel ICH7 |
| Bus frontal | <ul style="list-style-type: none">• 1333(OverClock)/1066 /800/533 MHz |
| Memoria | <ul style="list-style-type: none">• 2 x ranuras DIMM de 240-pin• Compatible DDR 2 de doble canal 667/533/400• Compatible con hasta 4GB |
| Ranuras de expansión | <ul style="list-style-type: none">• 1 x ranura PCI Express x16• 1 x ranura PCI Express x1• 2 x ranuras PCI |
| Audio | <ul style="list-style-type: none">• Realtek 6 canales Audio CODEC• Compatible salida S/PDIF, sensible a conexión, sonido Intel® de Alta Definición |
| LAN | <ul style="list-style-type: none">• Realtek 10/100 Mb/s LAN / Realtek Gigabit LAN |
| Almacenamiento | <ul style="list-style-type: none">• 2 x dispositivos Ultra DMA 100/66/33• 4 x dispositivos SATA 300MB/s |
| Panel de E/S trasero | <ul style="list-style-type: none">• 1 x Puerto de ratón PS/2• 1 x Puerto de teclado PS/2• 1 x Puerto Serie• 1 x Puerto Paralelo• 1 x Puerto de VGA• 4 x Puertos USB 2.0• 1 x Puerto LAN RJ45• Puertos de 6 canales Audio |

(continúa en la página siguiente)

Capítulo 1 Principales funciones

| | |
|-----------------------------------|--|
| Conectores internos de E/S | <ul style="list-style-type: none">• 2 x Cabeceras USB 2.0 (admite 4 puertos USB 2.0)• 4 x Conectores SATA• 1 x Conector de disco flexible• 1 x Conector de IDE• 1 x Cabecera de intrusos en bastidor (INTR)• 1 x Cabecera de CD_IN• 1 x Cabecera de altavoz (opcional)• 1 x Cabecera S/PDIF_OUT• 1 x Conector de COM2(opcional)• 1 x Conector de Audio frontal• 1 x Conector de 24-pin ATX Power• 1 x Conector de 4-pin ATX_12V Power• 1 x Cabecera de IrDA• 1 x Conector de ventilador de CPU• 1 x Conector de ventilador de Sistema• 1 x Conector de ventilador NB (opcional)• Conector de panel frontal |
| CD de soporte | <ul style="list-style-type: none">• Controlador• Utilidades |

- Las características se encuentran sujetas a cambios sin aviso previo.

Capítulo 1 Principais características

Especificações--Portugués

| | |
|---|--|
| Tamanho | <ul style="list-style-type: none">• Factor de forma Micro ATX de 244 x 203 mm |
| CPU | <ul style="list-style-type: none">• Socket LGA775 para processadores Intel®_CoreTM 2 Duo, Pentium®_4 Extreme Edition, Pentium®_D, Pentium®_4, Celeron®, Celeron®_D |
| Chipset | <ul style="list-style-type: none">• Northbridge: Intel 945GC/945G• Southbridge: Intel ICH7 |
| FSB(FrontSide Bus) | <ul style="list-style-type: none">• 1333(OverClock)/1066 /800/533 MHz |
| Memória | <ul style="list-style-type: none">• 2 ranhuras DIMM de 240 pinos• Suporta módulos de memória DDR2 667/533/400 de canal duplo• Suporta até 4 GB |
| Ranhuras de expansão | <ul style="list-style-type: none">• 1 ranhura PCI Express x16• 1 ranhura PCI Express x1• 2 ranhuras PCI |
| Áudio | <ul style="list-style-type: none">• Realtek com 6 canais, codec de áudio• Suporta saída S/PDIF, função Jack-Sensing, áudio de alta definição da Intel® |
| LAN | <ul style="list-style-type: none">• Realtek 10/100 Mb/s LAN / Realtek Gigabit LAN |
| Armazenamento | <ul style="list-style-type: none">• 2 dispositivos Ultra DMA 100/66/33• 4 dispositivos SATA de 300 MB/s |
| Entrada/Saída pelo painel traseiro | <ul style="list-style-type: none">• 1 x Porta para rato PS/2• 1 x Porta para Teclado PS/2• 1 x Porta série• 1 x Porta paralela• 1 x Porta VGA• 4 x Portas USB 2.0• 1 x Porta LAN RJ45• Portas 6 canais, áudio |

(continua na página seguinte)

Capítulo 1 Principais características

| | |
|---|--|
| Conectores internos de entrada/saída | <ul style="list-style-type: none">• 2 x Conectores USB 2.0 (para 4 portas USB 2.0)• 4 x Conectores SATA• 1 x Conector da unidade de disquetes• 1 x Conector IDE• 1 x Conector para detecção de intrusão no chassis(INTR)• 1 x Conector CD_IN• 1 x Conector de altifalante (opcional)• 1 x Conector S/PDIF_OUT• 1 x Conector COM2 (opcional)• 1 x Conector Áudio frontal• 1 x Conector de alimentação ATX de 24 pinos• 1 x Conector de alimentação ATX de 4 pinos e de 12 V• 1 x Conector IrDA• 1 x Conector da ventoinha da CPU• 1 x Conector da ventoinha do sistema• 1 x Conector da ventoinha NB (opcional)• Conector de painel frontal |
| CD de suporte | <ul style="list-style-type: none">• Controlador• Utilitários |

- As especificações estão sujeitas a alteração sem aviso prévio.

Capitolo 1 Caratteristiche principali

Specifiche- -Italiano

| | |
|--------------------------------|--|
| Dimensioni | <ul style="list-style-type: none">• Formato micro ATX: 244 mm x 203 mm |
| CPU | <ul style="list-style-type: none">• Socket LGA775 per processori Intel® Core™ 2 Duo, Pentium® 4 Extreme Edition, Pentium® D, Pentium® 4, Celeron®, Celeron® D |
| Chipset | <ul style="list-style-type: none">• Northbridge: Intel 945GC/945G• Southbridge: Intel ICH7 |
| FSB(Front Side Bus) | <ul style="list-style-type: none">• 1333(OverClock)/1066 /800/533 MHz |
| Memoria | <ul style="list-style-type: none">• 2 alloggi DIMM 240 pin• Supporto DDR2 667/533/400 Dual-Channel• Supporto fino a 4GB |
| Alloggi d'espansione | <ul style="list-style-type: none">• 1 Alloggio PCI Express x16• 1 Alloggio PCI Express• 2 Alloggi PCI |
| Audio | <ul style="list-style-type: none">• Realtek 6-canali audio CODEC• Supporto output S/PDIF, funzione di rilevamento connettori, Intel® High Definition Audio |
| LAN | <ul style="list-style-type: none">• Realtek 10/100 Mb/s LAN / Realtek Gigabit LAN |
| Archivio | <ul style="list-style-type: none">• 2 dispositivi Ultra DMA 100/66/33• 4 dispositivi SATA 300MB/s |
| Pannello posteriore I/O | <ul style="list-style-type: none">• 1 x Porta mouse PS/2• 1 x Porta tastiera PS/2• 1 x Porta Seriale• 1 x Porta Parallela• 1 x Porta VGA• 4 x Porta USB 2.0• 1 x Porta LAN RJ45• Porta 6-canali audio |

(segue alla pagina successiva)

Capitolo 1 Caratteristiche principali

| | |
|-------------------------------|--|
| Connettori I/O interni | <ul style="list-style-type: none">• 2 x Collettori USB 2.0 (supportano 4 porte USB 2.0)• 4 x Connettori SATA• 1 x Connettore Floppy• 1 x Connettore IDE• 1 x Collettore intrusione telaio (INTR)• 1 x Collettore CD_IN• 1 x Collettore altoparlante(optional)• 1 x Collettore S/PDIF_OUT• 1 x Collettore COM2 (optional)• 1 x Connettore Audio frontale• 1 x Connettore potenza ATX 24 pin• 1 x Connettore potenza ATX_12V 4 pin• 1 x Connettore IrDA• 1 x Connettore ventolina CPU• 1 x Connettore ventolina di sistema• 1 x Connettore ventolina NB (optional)• Connettore pannello frontale |
| CD di supporto | <ul style="list-style-type: none">• Driver• Utilità |

- Le specifiche tecniche sono soggette a cambiamenti senza preavviso.

Глава 1 Основные характеристики

Технические характеристики- -Русский

| | |
|--|--|
| Размер | <ul style="list-style-type: none">• Форм-фактор микро-ATX размером 244 x 203 мм |
| Процессор | <ul style="list-style-type: none">• Гнездо LGA775 для процессоров Intel®_ CoreTM 2 Duo, Pentium®_4 Extreme Edition, Pentium®_D, Pentium®_4, Celeron®, Celeron®_D |
| Набор микросхем | <ul style="list-style-type: none">• Северный мост: Intel 945GC/945G• Южный мост: Intel ICH7 |
| Частота системной шины | <ul style="list-style-type: none">• 1333(разгон), 1066, 800, 533 МГц |
| Память | <ul style="list-style-type: none">• 2 240-контактных гнезда DIMM• Поддержка Двухканальная память DDR2 667, 533, 400• Поддержка до 4 Гб |
| Слоты расширения | <ul style="list-style-type: none">• 1 слот PCI Express x16• 1 слот PCI Express x1• 2 слота PCI |
| Звук | <ul style="list-style-type: none">• Realtek 6 каналов, звуковой КОДЕК• Поддержка Выход S/PDIF, функция определения разъема, поддержка технологии Intel® High Definition Audio |
| ЛВС | <ul style="list-style-type: none">• Realtek 10/100 Мбит/с ЛВС , Realtek Gigabit ЛВС |
| Устройство хранения | <ul style="list-style-type: none">• 2 устройств с интерфейсом Ultra DMA 100, 66, 33• 4 устройств с интерфейсом SATA и скоростью передачи данных 300 Мб/с |
| Входы и выходы на задней панели | <ul style="list-style-type: none">• 1 Порт мыши PS/2• 1 Порт Клавиатура PS/2• 1 Последовательный порт• 1 Параллельный порт• 1 Порт VGA• 4 Порты USB 2.0• 1 Разъем ЛВС RJ45• Порты 6 каналов, звуковой |

(продолжение на следующей странице)

Глава 1 Основные характеристики

| | |
|----------------------------------|---|
| Встроенные входы и выходы | <ul style="list-style-type: none">• 2 Разъемы USB 2.0 (поддержка 4 портов USB 2.0)• 4 Разъемы SATA• 1 Разъем дисковод гибких дисков• 1 Разъем IDE• 1 Разъем датчика открывания корпуса (INTR)• 1 Разъем CD_IN• 1 Разъем динамик (дополнительный)• 1 Разъем выход S/PDIF• 1 Разъем COM2 (дополнительный)• 1 Передний звуковой разъем• 1 Разъем 24-контактный ATX• 1 Разъем 4-контактный ATX_12V• 1 Разъем ИК-порт• 1 Разъем вентилятор процессора• 1 Разъем системный вентилятор• 1 Разъем вентилятор северного моста (дополнительный)• Передняя панель разъем |
| Поддержка компакт-дисков | <ul style="list-style-type: none">• Драйвер• Служебная программа |

- Технические характеристики могут изменяться без уведомления.

الفصل 1 الخصائص الرئيسية

مواصفات - عربية

| | |
|--|---|
| • حاوية من نوع ATX مقاس 244×208مم | الحجم |
| • مقبس LGA775 لمعالجات Intel® Core™ 2 Duo و Pentium® 4 و Pentium® D و Pentium® 4 Extreme Edition و Celeron® و Celeron® D. | وحدة المعالجة المركزية |
| • الجسر الشمالي (Northbridge): Intel 945GC/945G • الجسر الجنوبي (Southbridge): Intel ICH7 | الرقائق |
| • 1333 (حلليصري) / 1066 / 800 / 533 ميجا هرتز | نقل الجلب الأممي |
| • عدد 2 قحت DIMM × 240 ديويسا • دعم التصميم ثنائي القناة 667/533/400 Dual-Channel DDR2 • دعم يصل إلى 4 جيجا بايت | الذاكرة |
| • عدد 1 قحة PCI Express x16 • عدد 1 قحة PCI Express x1 • عدد 2 فتحات PCI | فتحات التوسعة |
| • ترميز صوتي بست قنوات بتقنية Realtek • دعم خرج S/PDIF، وظيفة المشغل المقيس، تقنية Intel® High Definition Audio | الصوت |
| • Realtek 10/100 Mb/s LAN / Realtek Gigabit LAN | شبكة الاتصال المحلية |
| • عدد 2 أجهزة Ultra DMA 100/66/33 • عدد 4 أجهزة SATA 300MB/s | التخزين |
| • عدد 1 منفذ ملوس PS/2 • عدد 1 منفذ لوحة مفاتيح PS/2 • عدد 1 منفذ تسلسلي • عدد 1 منفذ متوازي • عدد 1 منفذ VGA • عدد 4 منافذ USB 2.0 • عدد 1 منفذ شبكة اتصال محلية RJ45 • منفذ صوتي بست قنوات بتقنية | منافذ الدخل/الخروج للوحة الخلفية |

تتابع الصفحة التالية

الفصل 1 الخصائص الرئيسية

| | |
|---|---|
| <ul style="list-style-type: none"> • عدد 2 أطراف توصيل USB 2.0 (تدعم 4 منفذ USB 2.0) • عدد 4 منفذ توصيل SATA • عدد 1 منفذ توصيل محرك الأقراص المرنة • عدد 1 منفذ توصيل IDE • عدد 1 طرف توصيل Intruder للبيك (INTR) • عدد 1 طرف توصيل السماعة (اختياري) • عدد 1 طرف توصيل CD_IN • عدد 1 طرف توصيل خرج S/PDIF • عدد 1 طرف توصيل COM2 (اختياري) • موصل الصوت الأممي • عدد 1 موصل طاقة ATX، 24 دبوس • عدد 1 موصل طاقة ATX_12V × 4 دبوس • عدد 1 طرف توصيل IrDA • عدد 1 مروحة لوحدة المعالجة المركزية • عدد 1 مروحة لمروحة النظام • عدد 1 مروحة NB (اختياري) • موصل اللوحة الأممية | <p>منفذ توصيل الدخل للخرج الداخلية</p> |
| <ul style="list-style-type: none"> • برنامج التشغيل • الأدوات | <p>دعم القرص المدمم</p> |

• قد تتغير المواصفات بدون إخطار مسبق.

Chapter 1 Main Features

Jumpers

This section explains how to setup jumpers. You should read the following content carefully prior to modifying any jumper settings.


i Attention:

The jumpers on the motherboard, pin 1 can be identified by the bold silkscreen next to it. And in this manual, pin 1 is simply labeled as “1”.

Clear CMOS Jumper: CLR_CMOS


The CLR_CMOS jumper allows you to clear the data in CMOS. The data includes system setup information such as system password, data, time, and system setup parameters. To clear and reset the system parameters to default setup, please do as follows:

1. Turn off the computer and unplug the power cord from the power supply.
2. Move the jumper cap from pins 2-3 (default) to pins 1-2. Keep the cap on pins 1-2 for several seconds, then move the cap back to pins 2-3.
3. Plug the power cord and turn on the computer.

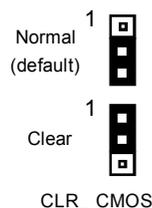

USB device wake-up Jumper: USBPWR1/USBPWR2

1. Set the jumper to pins 1-2 (+5V) to wake up the computer from S1 sleep mode using the connected USB devices.
2. Set the jumper to pins 2-3 (+5VSB) to wake up the computer from S3 and S4 sleep modes using the connected USB devices. At the same time, a corresponding setting must be set in BIOS as below:
Set “CMOS Setup” -> “Power Management Setup” -> “Power Management Events” -> “USB KB Wake-Up From S3” to “Enabled”.

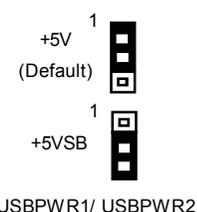

Note:

1. USBPWR1 is for the internal USB connectors, USBPWR2 is for the rear USB ports.
2. The USB device wake-up feature requires a power supply that can provide 500mA on +5VSB lead for each USB port; otherwise, the system will not power up.
3. The total current consumed must not exceed the power supply capability (+5VSB) whether under normal condition or in sleep mode.

Chapter 2

This chapter introduces how to change system settings through the BIOS Setup menus. Detailed descriptions of the BIOS parameters are also provided.

You have to run the Setup Program when the following cases occur:

1. An error message appears on the screen during the system POST process.
2. You want to change the default CMOS settings.

This chapter includes the following information:

- ❖ Enter BIOS Setup
- ❖ Main Menu
 - ❖ Standard CMOS Features
 - ❖ FOX Central Control Unit
 - ❖ Advanced BIOS Features
 - ❖ Advanced Chipset Features
 - ❖ Integrated Peripherals
 - ❖ Power Management Setup
 - ❖ PC Health Status
 - ❖ Load Optimized Defaults
 - ❖ Set Supervise Password
 - ❖ Set User Password
 - ❖ Save & Exit Setup
 - ❖ Exit Without Saving

Chapter 2 BIOS Description

Enter BIOS Setup

The BIOS is the communication bridge between hardware and software. Correctly setting up the BIOS parameters is critical to maintain optimal system performance. Power on the computer, when the following message briefly appears at the bottom of the screen during the POST (Power On Self Test), press key to enter the BIOS CMOS Setup Utility.


Press TAB to show POST screen, DEL to enter SETUP, ESC to enter Boot Menu.

Note:

We do not suggest that you change the default parameters in the BIOS Setup, and we shall not be responsible for any damage that results from any changes that you make.

Main Menu

The main menu displays a list of options that are available. Use the arrow keys to highlight an item, and execute the item by pressing <Enter>.

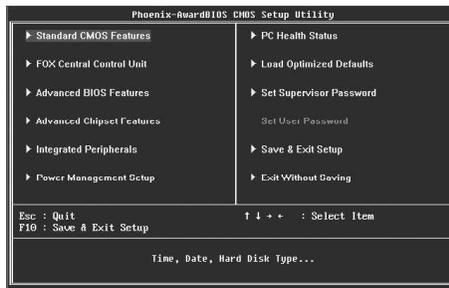

Main Menu

The items in the main menu are explained as below:

1. Standard CMOS Features

The basic system configuration can be set up through this menu.

2. FOX Central Control Unit

The special features can be set up by this menu.

3. Advanced BIOS Features

The advanced system features can be set up through this menu.

4. Advanced Chipset Features

The values for the chipset can be changed through this menu, and the system performance can be optimized.

5. Integrated Peripherals

All onboard peripherals can be set up through this menu.

6. Power Management Setup

Through this menu you can set up all the items of Green function features.

7. PC Health Status

This menu will display the current status of your PC.

8. Load Optimized Defaults

You can load the optimal performance settings by this menu; however, the stable default values may be affected.

9. Set Supervisor Password

The supervisor password can be set up through this menu.

10. Set User Password

The user password can be set up through this menu.

11. Save & Exit Setup


Save CMOS value settings to CMOS and exit setup.

12. Exit Without Saving

Abandon all CMOS value changes and exit setup.

1. Standard CMOS Features

This sub-menu is used to set up the standard CMOS parameters, such as the date, time, floppy drive and so on. Select the item by the arrow keys, and then use the <+> or <-> keys to choose the setting values.

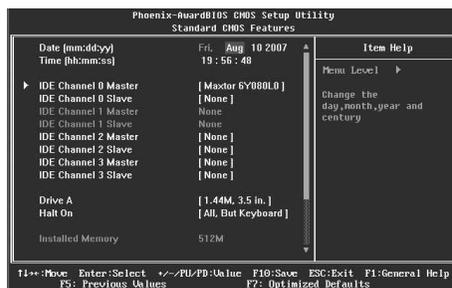

Standard CMOS Features Menu

1.1 Date/Time

This item allows you to set up the desired time and date (usually as the current date and time) with <day><month><date><year> / <hour><minute><second> format.

Day—weekday from Sun. to Sat.

Month—month from 1 to 12

Date—date from 1st to 31st

Year—year, set up by users.

Chapter 2 BIOS Description

Use <ENTER>, <TAB> to select a field. Use <+> or <-> to configure system time and date.

1.2 IDE Channel 0/1/2/3 Master/Slave

These categories identify the HDD types of 1 IDE channel installed in the computer system. There are three choices provided for the Enhanced IDE BIOS: None, Auto, and Manual. "None" means no HDD is installed or set; "Auto" means the system can detect the hard disk and select the HDD mode automatically when booting up; by choosing "Manual" and changing Access Mode to "CHS", the related information should be entered manually. Enter the information directly from the keyboard and press < Enter>:

| | | | |
|----------|------------------------|--------------|-----------------|
| Cylinder | number of cylinders | Head | number of heads |
| Precomp | write pre-compensation | Landing Zone | landing zone |
| Sector | number of sectors | | |

Award (Phoenix) BIOS can support 3 HDD modes: CHS, LBA and Large.

| | |
|-------|---|
| CHS | For HDD<528MB |
| LBA | For HDD>528MB & supporting LBA (Logical Block Addressing) |
| Large | For HDD>528MB but not supporting LBA |

 **Note:** Set to [Auto], the system can detect the hard disk and select the HDD mode automatically when booting up. Suggest you select this option.

1.3 Drive A

This option allows you to select the kind of FDD to be installed, including [None], [360K, 5.25 in], [1.2M, 5.25 in], [720K, 3.5 in], [1.44M, 3.5 in] and [2.88 M, 3.5 in].

1.4 Halt On

This category determines whether or not the computer will stop if an error is detected during powering up.

| | |
|-------------------|--|
| All Errors | Whenever the BIOS detects a nonfatal error, the system will stop and you will be prompted. |
| No Errors | The system boot will not stop for any errors that may be detected. |
| All, But Keyboard | The system boot will not stop for a keyboard error; but it will stop for all other errors. |
| All, But Diskette | The system boot will not stop for a diskette error; but it will stop for all other errors. |
| All, But Disk/Key | The system boot will not stop for a keyboard or disk error; but it will stop for other errors. |


1.5 Installed Memory

This is a Display-Only Category, showing the capacity of your installed memory.

1.6 BIOS ID

This option displays the information about BIOS ID.

2.FOX Central Control Unit

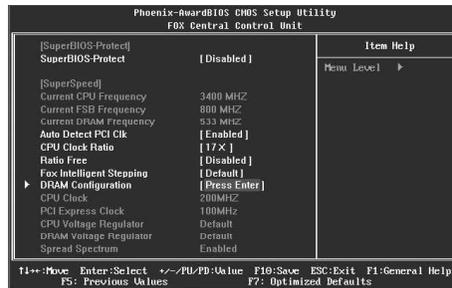

FOX Central Control Unit Menu

2.1 SuperBIOS Protect

SuperBIOS Protect function protects your BIOS from being affected by viruses, e.g.CIH.

2.2 Current CPU Frequency

This option shows the current frequency of CPU.

2.3 Current FSB Frequency

This option shows the current frequency of FSB.

2.4 Current DRAM Frequency

This option shows the current frequency of DRAM.

2.5 Auto Detect PCI Clk

This option is used to auto detect PCI slots. When enabled, the system will move (turn off) the empty PCI slot clock to reduce EMI (Electromagnetic Interference).

2.6 CPU Clock Ratio

This option is used to set the ratio of an unlocked CPU. Using different CPU, the setting values are different.

2.7 Ratio Free


This option is only used to CPU whose frequency is more than 3.4 GHz. When you use this type CPU, "CPU Clock Ratio" value is fixed at 14X.

2.8 FOX Intelligent Stepping

You can select different overclock option by this item. The available setting values are: Default, Manual, Step1, Step2, Step 3.

Chapter 2 BIOS Description

2.9 DRAM Configuration

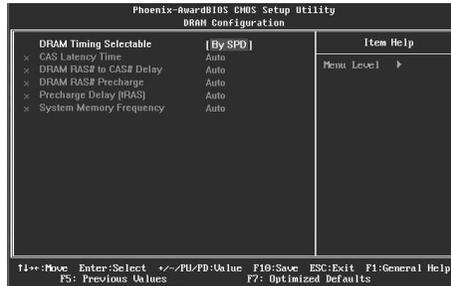

DRAM Configuration Menu

DRAM Timing Selectable

This item determines DRAM clock/ timing using SPD or manual configuration.

CAS Latency Time

This item determines CAS Latency. The available setting values are: 5, 4, 3, 6 and Auto.

DRAM RAS# to CAS# Delay

This item allows you to select a delay time between the CAS and RAS strobe signals. The available setting values are: 2, 3, 4, 5, 6 and Auto.

DRAM RAS# Precharge

This item allows you to select the DRAM RAS# precharge time. The available setting values are: 2, 3, 4, 5, 6 and Auto.

Precharge Delay(tRAS)

This item allows you to set the precharge delay time. The available setting values are: Auto, 4 -15.

System Memory Frequency

This item is used to set the memory frequency of your system. The available setting values are: Auto, 400 MHz, 533 MHz, 667 MHz.

i Attention: When you use the CPU that FSB is 1333 MHz, the available setting values are: Auto, 500 MHz, 667 MHz, 834 MHz.

2.10 CPU Clock

When “FOX Intelligent Stepping” is set to “Manual”, this option is used to set the CPU clock.

2.11 PCI Express Clock

When “FOX Intelligent Stepping” is set to “Manual”, this option is used to set the PCI Express clock.

2.12 CPU Voltage Regulator

When “FOX Intelligent Stepping” is set to “Manual”, this option is used to regulate the CPU voltage.


2.13 DRAM Voltage Regulator

When “FOX Intelligent Stepping” is set to “Manual”, this option is used to regulate the DRAM voltage.

2.14 Spread Spectrum

When “FOX Intelligent Stepping” is set to “Manual”, If you enable this option, it can significantly reduce the EMI (Electromagnetic Interference) generated by the system.

3. Advanced BIOS Features

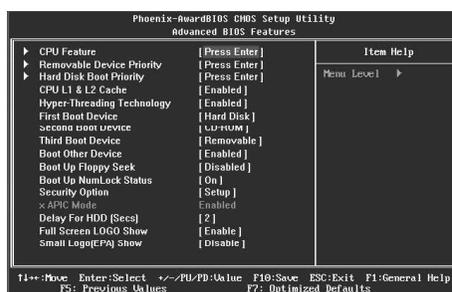

Advanced BIOS Features Menu

3.1 CPU Feature

You can press <Enter> to set the items of CPU feature.

3.2 Removable Device Priority

This option is used to select the priority for removable devices, e.g. floppy.

3.3 Hard Disk Boot Priority

This option is used to select the priority for HDD startup. After pressing <Enter>, you can select the HDD using the Up / Down arrow keys, and change the HDD priority using <PageUp> / <PageDn> or <+> / <->; you can exit this menu by pressing <Esc>.

3.4 CPU L1 & L2 Cache

This option is used to turn on or off the L1 and L2 CPU cache.

3.5 Hyper-Threading Technology

This option is used to enable or disable Hyper-Threading technology.

3.6 First/Second/Third Boot Device

This option allows you to set the boot device's sequence.

Chapter 2 BIOS Description

3.7 Boot Other Device

When enabled, the system will boot from some other devices if the first/second/third boot devices failed.

3.8 Boot Up Floppy Seek

This option controls whether the BIOS checks for a floppy drive while booting up. If it cannot detect one (either due to improper configuration or physical unavailability), it will appear an error message.

3.9 Boot Up NumLock Status

This item allows you to select the power-on status for the NumLock. The available setting values are: On and Off.

3.10 Security Option

When it is set to “Setup”, a password is required to enter the CMOS Setup screen; When it is set to “System”, a password is required not only to enter CMOS Setup, but also to start up your PC.

3.11 APIC Mode

This option is used to enable or disable APIC function.

3.12 Delay For HDD (Secs)

This option is used to set the delay time of selecting the HDD controller.


3.13 Full Screen LOGO Show

This option allows you to enable or disable the full screen logo.

3.14 Small Logo (EPA) Show

This item allows you to enable or disable the EPA logo.

4. Advanced Chipset Features

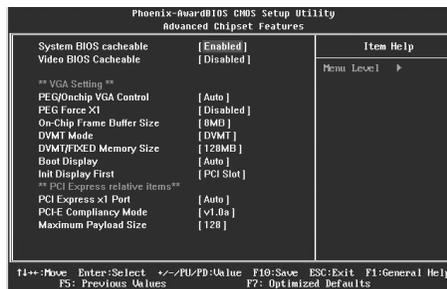

Advanced Chipset Features Menu

4.1 System/ Video BIOS Cacheable

Select "Enabled" to allow caching of the system/video BIOS which may improve performance. If any other program writes to this memory area, a system error may result.

4.2 PEG/Onchip VGA Control

This item is used to enable or disable PEG and onboard VGA.

4.3 PEG Force X1

When enabled, the PCI-E x16 slot will be forced to work in the PCI-E x1 mode.
When disabled, the PCI-E x16 slot will be allowed to work in the PCI-E x16 mode.

 **Note:** This item is only available when external display card is installed.

4.4 On-Chip Frame Buffer Size

This item is used to set the VGA frame buffer size.

 **Note:** This item is only available when onboard VGA is used.

4.5 DVMT Mode

This item is used to set the DVMT mode.

 **Note:** This item is only available when onboard VGA is used.

4.6 DVMT/FIXED Memory Size

This item is used to set the DVMT/FIXED memory size.

 **Note:** This item is only available when onboard VGA is used.

4.7 Boot Display

This item is used to select the display type used when your PC starts up. The available setting values are: Auto, CRT, TV and EFP.

 **Note:** This item is only available when onboard VGA is used.

4.8 Init Display First

This item is used to select the initial display device used when your PC starts up.

4.9 PCI Express x1 Port

This option is used to enable or disable PCI Express x1 slot .

4.10 PCI-E Compliancy Mode


This option is used to select PCI-E compliancy mode.

4.11 Maximum Payload Size

This option is used to set maximum TLP payload size for PCI Express devices.
The unit is byte.

Chapter 2 BIOS Description

5. Integrated Peripherals

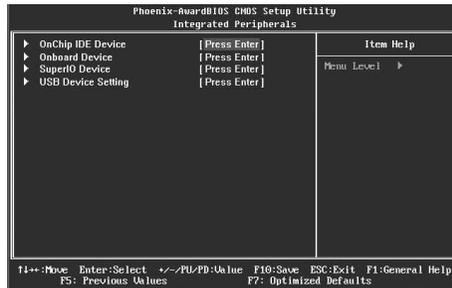

Integrated Peripherals Menu

5.1 OnChip IDE Device

This sub-menu is used for the configuration of IDE devices. You can press <Enter> to set the available values of items.

5.2 Onboard Device

This sub-menu is used for the configuration of onboard devices.


5.3 SuperIO Device

This sub-menu is used for the configuration of I/O devices, such as serial port, parallel port and so on.

5.4 USB Device Setting

This sub-menu is used for the configuration of USB devices.

6. Power Management Setup

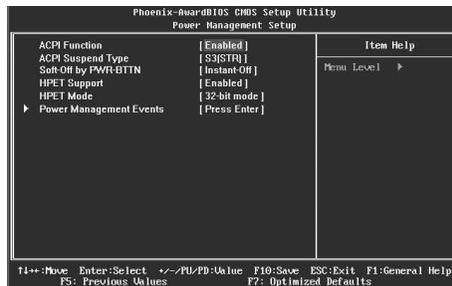

Power Management Setup Menu

6.1 ACPI Function

ACPI (Advanced Configuration and Power Interface) is a standard that defines power and configuration management interfaces between an operating system and the BIOS. In other words, it is a standard that describes how

computer components work together to manage system hardware. In order to use this function the ACPI specification must be supported by the OS (for example, Windows2000 or WindowsXP).

6.2 ACPI Suspend Type

This option is used to set the energy saving mode of the ACPI function. When you select “S1 (POS)” mode, the power will not shut off and the supply status will remain as it is, in S1 mode the computer can be resumed at any time. When you select “S3 (STR)” mode, the power will be cut off after a delay period. The status of the computer before it enters STR will be saved in memory, and the computer can quickly return to previous status when the STR function wakes.

6.3 Soft-Off by PWR-BTTN

This option is used to set the power status after you press power button. When select “Instant-off”, once press power button, the power will turn off immediately; When select “Delay 4 sec”, the power will be off after the power button is pressed more than 4 seconds.

6.4 HPET Support

This option allows you to enable or disable High Precision Event Timer function. If you use windows vista processing system, we intensively suggest that you set this option to “Enabled”.


6.5 HPET Mode

This option is used to set the High Precision Event Timer mode. The available setting values are: 32-bit mode, 64-bit mode. It can be available only when “HPET” is enabled.

6.6 Power Management Events

You can press <Enter> to set the parameters of power management events.

7. PC Health Status

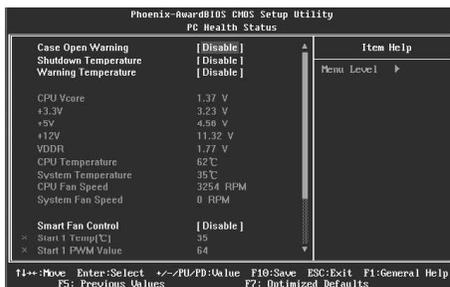

PC Health Status Menu

7.1 Case Open Warning

This option is used to enable or disable case open warning function.

Chapter 2 BIOS Description

7.2 Shutdown Temperature

This option is used to set the high limit system temperature. When the temperature exceeds the setting value, the motherboard will automatically cut off power to the computer.

7.3 Warning Temperature

This option is used to set the warning temperature for the system. When the temperature of CPU is higher than setting value, the motherboard will send off warning information.

7.4 CPU Vcore/+ 3.3V/+5V/+12V/VDDR

The current voltages will be automatically detected by the system.

7.5 CPU/System Temperature


The current CPU/System temperature will be automatically detected by the system.

7.6 CPU Fan/System Fan Speed

The current CPU fan/System fan speed automatically detected by the system.

7.7 Smart Fan Control

This option is used to enable or disable smart fan function. Only when this option is enabled, you can set some correlative parameters. “Smart Fan Automatic Mode” is the principle figure of CPU smart fan for your reference.

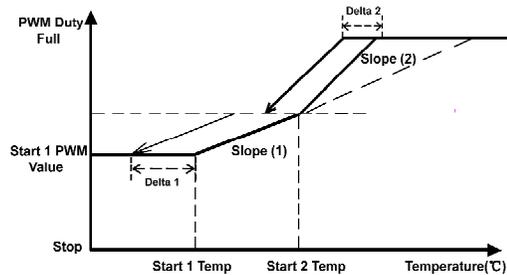

Smart Fan Automatic Mode

“**Start 1 Temp (°C)**” allows you set the start 1 temperature which is initial temperature of smart fan.

“**Start 1 PWM Value**” allows you to set the initial PWM value of smart fan.

“**Slope 1 Integer Fraction**” is used to set the integer fraction of slope 1 of smart fan curve.

“**Slope 1 Decimal Fraction**” is used to set the decimal fraction of slope 1 of smart fan curve.

“Delta 1 Temp (°C)” is used to set the temperature delta. When the change amplitude of temperature achieves the value, the PWM value will increase or decrease by slope 1.

“Start 2 Temp (°C)”, “Slope 2 Integer Fraction”, “Slope 2 Decimal Fraction”, “Delta 2 Temp (°C)” is the same with slope 1 curve. The only one difference is that the value of slope 2 is different from slope 1.

For example, slope 1 = 2.500, slope 2 integer fraction = 1, slope 2 decimal fraction = 0.125, slope 2 = $2.500 + 1 + 0.125 = 3.625$.

In the automatic mode, the PWM value is subject to the temperature inputs by linear changing. When the temperature reading is between start 1 temperature and full limit, the PWM value changes depending on the temperature reading if the reading exceeds the delta. If the temperature increase X°C, the PWM value will increase X*slope.

“Sys Start 1 Temp (°C)”, “Sys Start 1 PWM Value”, “Sys Slope 1 Integer Fraction”, “Sys Slope 1 Decimal Fraction”, “Sys Delta 1 Temp (°C)”, “Sys Start 2 Temp (°C)”, “Sys Slope 2 Integer Fraction”, “Sys Slope 2 Decimal Fraction”, “Sys Delta 2 Temp (°C)” is a group of parameters of system smart fan. Its principle is the same with CPU smart fan.

8. Load Optimized Defaults

This menu can let you load the optimized defaults set by BIOS, which have set the optimized performance parameters of system to improve the performances of system components. You can select <Y> or <N> and then press <Enter> to load or not load the optimized defaults.

9-10. Set Supervisor/User Password

The access rights and permissions associated with the Supervisor password are higher than those of a regular User password. The Supervisor password can be used to start the system or modify the CMOS settings. The User password can also start the system. While the User password can be used to view the current CMOS settings, these settings cannot be modified using the User password. When you select the Set Supervisor/User Password option, the following message will appear in the center of the screen, which will help you to set the password:

Enter Password:

Enter your password, not exceeding 8 characters, then press <Enter>. The password you enter will replace any previous password. When prompted, key in the new password and press <Enter>.

If you do not want to set a password, just press <Enter> when prompted to enter a password, and in the screen the following message will appear. If no password

Chapter 2 BIOS Description

is keyed in, any user can enter the system and view/modify the CMOS settings.

Password Disabled!!!

Press any key to continue ...

Under the menu “Advanced BIOS Features”, if you select “System” from the Security Option, you will be prompted to enter a password once the system is started or whenever you want to enter the CMOS setting program. If the incorrect password is entered, you will not be permitted to continue.

Under the menu “Advanced BIOS Features”, if you select “Setup” from the Security Option, you will be prompted to enter a password only when you enter the CMOS setting program.

11. Save and Exit Setup

When you select this option and press <Enter>, the following message will appear in the center of the screen:

SAVE to CMOS and EXIT (Y/N)?Y

Press <Y> to save your changes in CMOS and exit the program; press <N> or <ESC> to return to the main menu.

12. Exit Without Saving

If you select this option and press <Enter>, the following message will appear in the center of the screen:

Quit Without Saving (Y/N)?Y

Press <Y> to exit CMOS without saving your modifications; press <N> or <ESC> to return to the main menu.

Chapter 3

This chapter will introduce how to use attached software.

This chapter provides the following information:

- ❖ FOX ONE
- ❖ FOX LiveUpdate
- ❖ FOX LOGO
- ❖ FOX DMI

FOX ONE

FOX ONE is a powerful utility for easily modifying system settings. It also allows users to monitor various temperature values, voltage values, frequency and fan speed at any time.

Supported Operating Systems:

- Windows 2000
- Windows XP (32-bit and 64-bit)
- Windows 2003 (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)


Using FOX ONE:

The very first time you run FOX ONE, F.I.S. Calibration function (FOX Intelligent Stepping) will require you to calibrate the CPU's loading. Click "OK" to process and start the Utility.



Note: Only when your computer supports F.I.S. Calibration function(FOX Intelligent Stepping), the calibration process will appear, or you can start FOX ONE directly.

1. Main Page

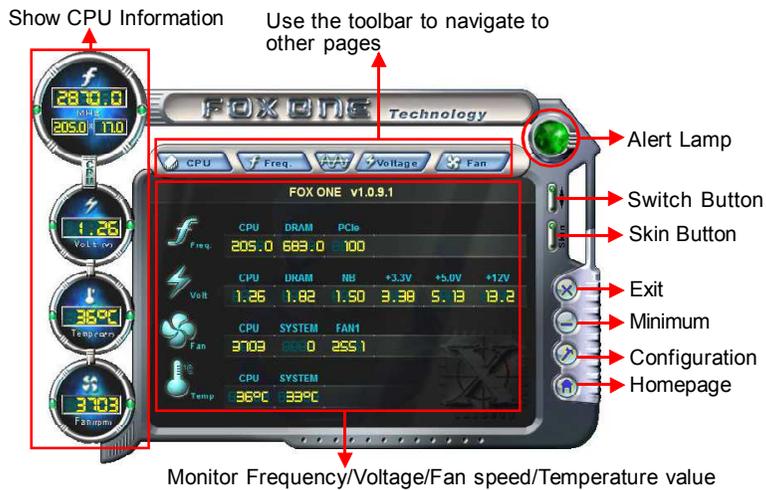

Chapter3 Directions for Bundled Software

Alert Lamp

When the system is in healthy status, the alert lamp color is green. When in abnormal status, the color will turn red.

Switch Button

Click this button, it will simplify the window to HW monitor information bar as the below figure shows. The bar could help you to monitor whether your system is in the healthy status or not at any time.




Skin Button

Click this button, you will see the additive figures, such as "Crystal" and "Rock". You may select your favorite skin.

Configuration

This page allows you to select monitor interval time (ms) and temperature unit. It also provides "Auto start up" function. Besides, click "Selection" to determine which items will be shown in simple mode. In "F.I.S. Calibration" section, we recommend you re-calibrate the CPU's loading by clicking "calibration" button after changing the CPU or memory modules, then restart the computer to apply new setting. **Attention:** F.I.S. calibration function is optional.

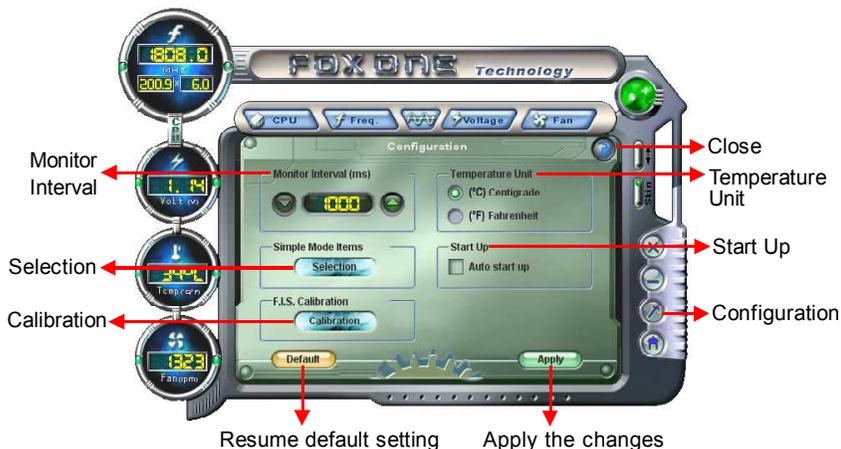


Homepage

Click this button to visit Foxconn global English website.

Chapter 3 Directions for Bundled Software

2. CPU Page - CPU Control


This page is used to select and run the CPU frequency to determine the current performance level of the system. You can adjust the CPU frequency manually or select "Auto Overclock". Besides, it also provides "FOX Intelligent Stepping", but this function is optional.

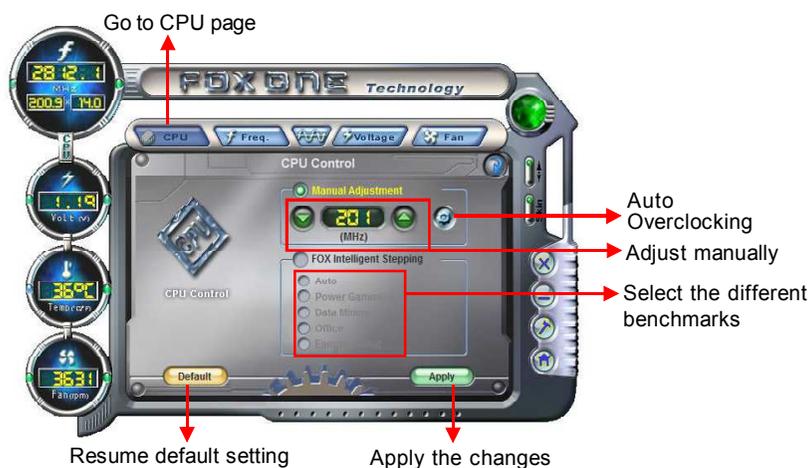

3. Freq. Page - Frequency Control


In this page, you can set memory and PCIe frequency manually.

 **Note:** The function of PCIe Frequency is optional.

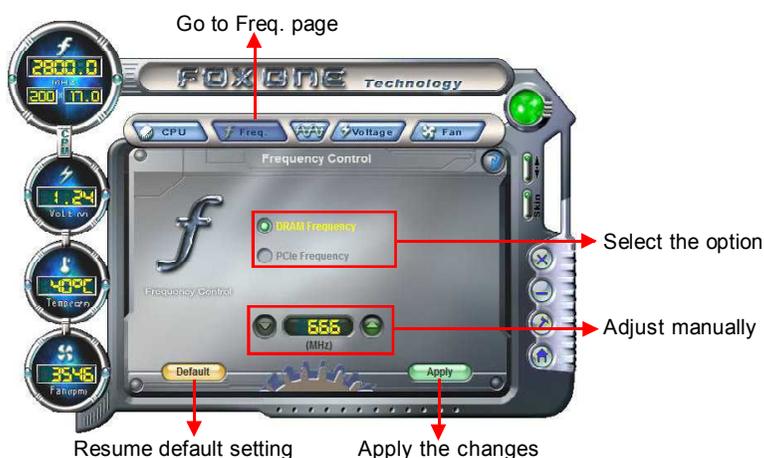


4. Limit Setting page

This page includes five different sections. "CPU Temp." and "Sys. Temp." will help you to set high limit temperature. "CPU Fan", "Sys. Fan" and "FAN1 fan" are used to set low limit rpm. All of them have alert function.

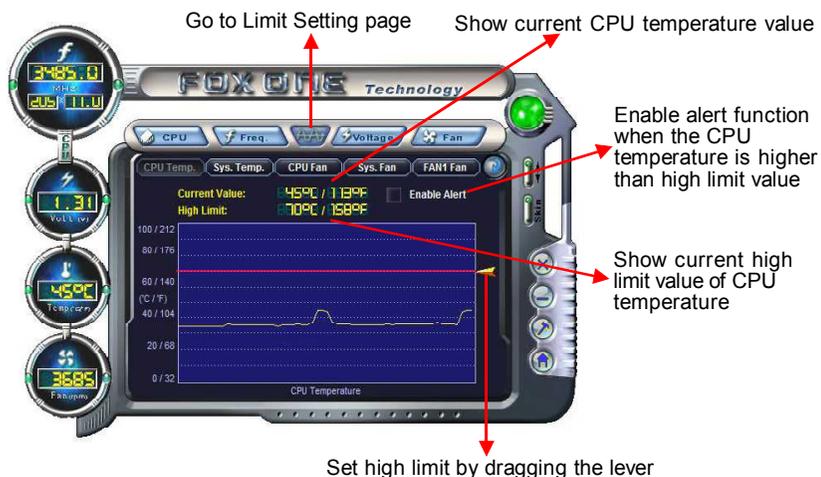

5. Voltage Page - Voltage Control (Optional)


This page allows you to set CPU, memory and North Bridge voltage manually.

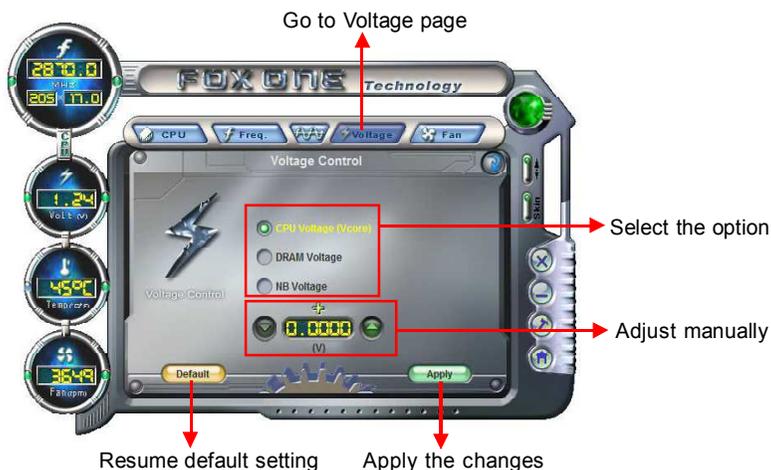

6. Fan Page - Fan Control

This page allows you to enable Smart Fan function and set fan speed manually.

Chapter 3 Directions for Bundled Software

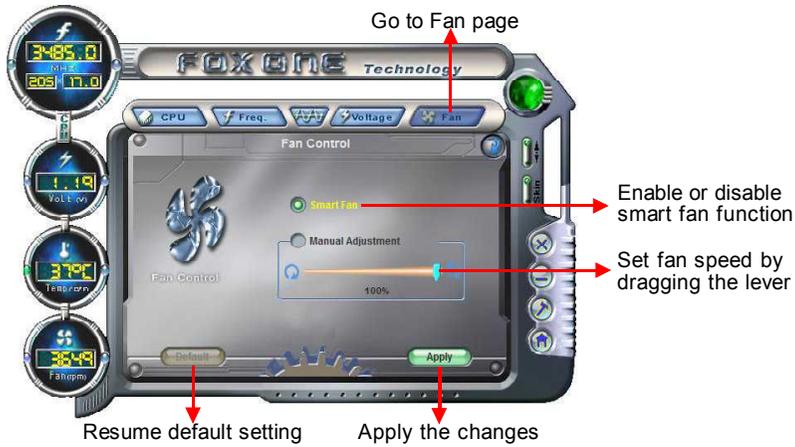

FOX LiveUpdate

FOX LiveUpdate is a useful utility to backup and update the system BIOS online or locally. Drivers and utilities also can be updated online.

Supported Operating Systems:

-Windows 2000

-Windows 2003 (32-bit and 64-bit)


-Windows XP (32-bit and 64-bit)

-Windows Vista (32-bit and 64-bit)

Using FOX LiveUpdate:

1. Local Update


"**BIOS Info**" tells you the system BIOS information; "**Backup BIOS**" could backup your system BIOS, click this button, then input a BIOS name and save it; "**Update BIOS**" helps to update your system BIOS from local BIOS files, please follow the request to finish the operation.

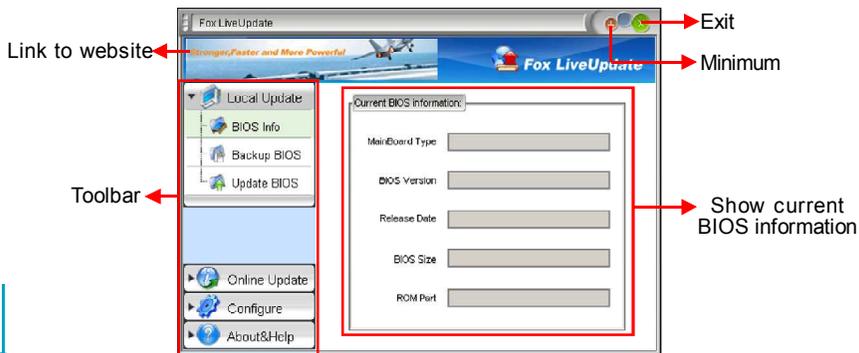

Chapter3 Directions for Bundled Software


2. Online Update

This function enables you to update your system BIOS, Drivers, Utilities and all of them from Internet. Click “start”, it will search for the new BIOS, Drivers and Utilities from Internet. Then follow the request to finish the update operation.

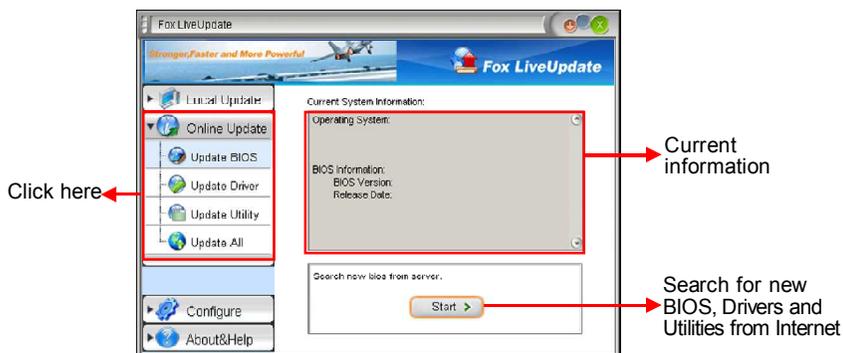

3. Configure


“Option” provides “auto search options”, “auto search Fox LiveUpdate” and “version filter”. After setting “auto search options” and “auto search Fox LiveUpdate”, the utility will work in the background and the related information will show in a pop balloon notification and a dialogue box; click the “System” button, you can set the backup BIOS location and select different kinds of skin for the utility; “Advance” helps you to flash BIOS, boot Block and clear CMOS, and we recommend you keep the default setting unchanged to avoid damage.

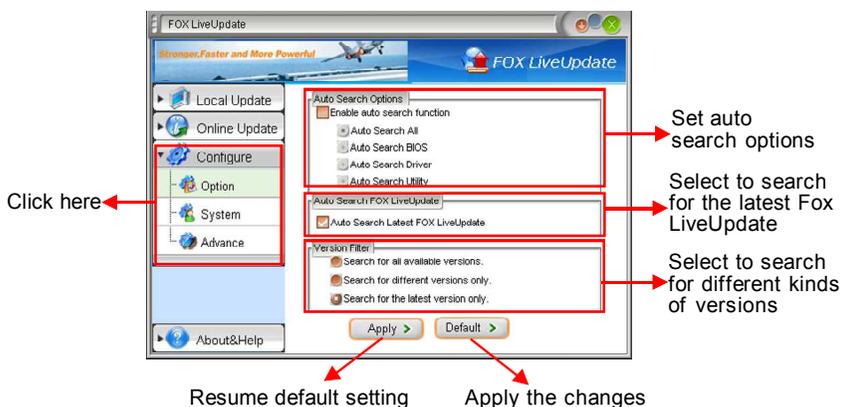

Chapter 3 Directions for Bundled Software

4. About & Help

This page shows some information about FOX LiveUpdate.

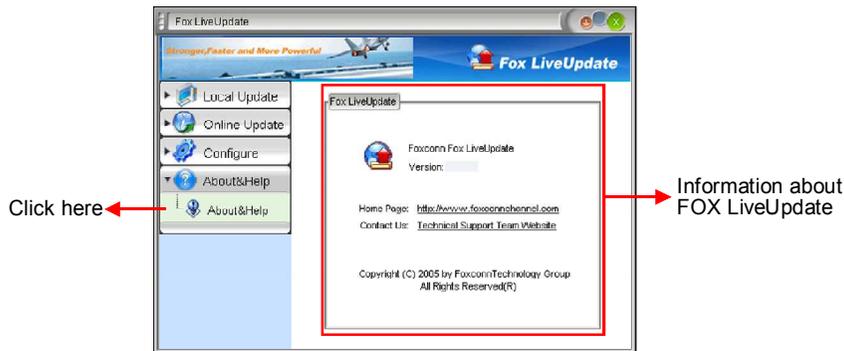

FOX LOGO

FOX LOGO is a simple and useful utility to backup, change and delete the boot Logo. The boot Logo is the image that appears on screen during the Power-On Self-Tests (POST).

Supported Operating Systems:

-Windows 2000

-Windows 2003 (32-bit and 64-bit)

-Windows XP (32-bit and 64-bit)

-Windows Vista (32-bit and 64-bit)

Using FOX LOGO:

Main Page



Warning:

When you change Logo or delete current Logo, the system will flash BIOS file automatically. During this time, DO NOT shut down the system and the application, or the motherboard would be damaged seriously.

