

## Appendix

### Introduction

This appendix is created for the purpose of providing supplemental information to **MS-6309** ATX mainboard. The overall contents of this appendix will basically introduce **MS-6309** mainboard which supports VIA® 694X and **VT82C686B** chipset.

The **MS-6309** is a high performance ATX computer mainboard based on VIA® 694X chipset. The mainboard supports **VT82C686B** PCI to ISA bridge (352 pin BGA). The **VT82C686B** integrates all system control functions such as ACPI (Advanced Configuration and Power Interface). The ACPI provides more Energy Saving Features for the OSPM (OS Direct Power Management) function. The **VT82C686B** chipset also improves the IDE transfer rate by supporting **Ultra DMA-33/66/100** IDE which transfers data at the rate of **33/66/100MB sec**.

This mainboard which supports VIA® 694X and **VT82C686B** is ideal for high performance and high quality desktop AGP/PCI/ISA computer systems.

## Mainboard Features

### CPU

- Socket 370 for Intel® Celeron™/ Coppermine processor.
- Supports 233MHz, 266MHz, 300MHz, 333MHz, 350MHz, 400MHz, 450MHz, 500MHz, 533MHz...1GHz or faster processor.

### Chipset

- VIA® 694X chipset. (510 BGA)
  - P-II FSB @ 133MHz
  - AGP 4x and PCI plus Advanced ECC Memory Controller
  - Support PC100/133 SDRAM, VCM technology
- VIA® VT686B chipset. (352 BGA)
  - Enhanced Power Management Features
  - Integrated Super I/O (FDC, LPT, COM 1/2, and IR)
  - Dual bus Master IDE Ultra DMA33/66/100
  - Integrated Hardware Soundblaster
  - Direct Sound AC97 Audio
  - ACPI

### Clock Generator

- 66.6MHz, 100MHz and 133MHz clocks are supported.

### Main Memory

- Support six memory banks using three 168-pin unbuffered DIMM.
- Support a maximum memory size of 1.5GB (32M x 8).
- Support ECC (1-bit Error Code Correct) function.
- Support 3.3v SDRAM DIMM.

**Slots**

- One AGP (Accelerated Graphics Port) slot.
  - AGP specification compliant
  - AGP 66MHz 3.3v/1.5v for 2x/4x device support
- One AMR (Audio Modem Riser) slot.
- Five 32-bit Master PCI Bus slots.
- Supports 3.3v/5v PCI bus Interface.

**On-Board IDE**

- An IDE controller on the VIA® VT686B Chipset provides IDE HDD/CD-ROM with PIO, Bus Master and Ultra DMA 33/66/100 operation modes.
- Can connect up to four IDE devices.

**On-Board Peripherals**

- On-Board Peripherals include:
  - 1 floppy port supports 2 FDD with 360K, 720K, 1.2M, 1.44M and 2.88Mbytes.
  - 2 serial ports (COMA + COMB)
  - 1 parallel port supports SPP/EPP/ECP mode
  - 2 USB ports

**Audio**

- Chip Integrated (Software Audio)
  - AC'97 Compliant

**BIOS**

- The mainboard BIOS provides “Plug & Play” BIOS which detects the peripheral devices and expansion cards of the board automatically.
- The mainboard provides a Desktop Management Interface(DMI) function which records your mainboard specifications.


**Dimension**

- ATX Form Factor : 30.5cm(L) x 19.2cm(W) x 4 layers PCB

**Mounting**

- 6 mounting holes.


**Mainboard Layout**

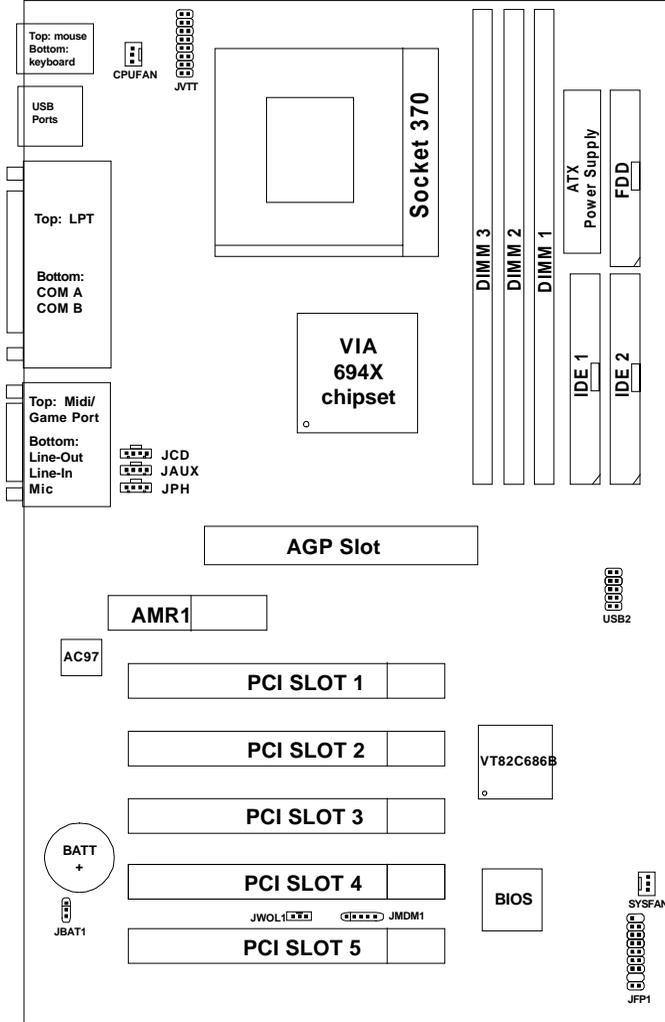


**MS-6309 ATX VA5 Mainboard**

## Chipset Location

The layout below shows how to identify which chipset is used.

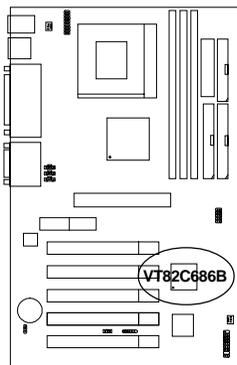

**A. MS-6309 supporting VT82C686B chipset**

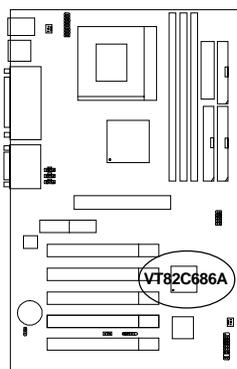


**B. MS-6309 supporting VT82C686A chipset**

## Hardware Installation

### Hard Disk Connectors: IDE1 & IDE2

The mainboard has a 32-bit Enhanced PCI IDE and **Ultra DMA/33/66/100** Controller that provides PIO mode 0~4, Bus Master, and **Ultra DMA/33/66/100 function**. It has two HDD connectors IDE1 (primary) and IDE2 (secondary). You can connect up to four hard disk drives, CD-ROM, 120MB Floppy (reserved for future BIOS) and other devices to IDE1 and IDE2.

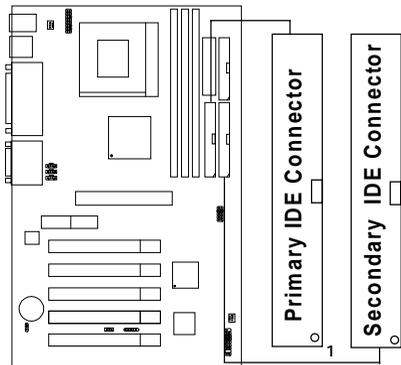

#### **IDE1** (Primary IDE Connector)

The first hard drive should always be connected to IDE1. IDE1 can connect a Master and a Slave drive. You must configure second hard drive to Slave mode by setting the jumper accordingly.

#### **IDE2** (Secondary IDE Connector)

IDE2 can also connect a Master and a Slave drive.

## VIA Chipset Driver

The MS-6309 is paired with the VIA VT82C686B south bridge. Highly advanced, the south bridge combines an integrated 2D/3D engine with DVD hardware acceleration, AC-97 audio support for SoundBlaster Pro and FM synthesis legacy audio.

### Audio Features

- AC'97 audio support for SoundBlaster Pro
- FM synthesis legacy audio

### System Requirements

This section describes system requirements for the VIA Chipset Driver installation and Usage.

<b>Computer</b>	Intel® Celeron™/Coppermine FC-PGA
<b>Monitor</b>	VGA Support, minimum 640x480 resolution
<b>Operating system</b>	DOS 5.0 or higher, Windows® 95/98SE, Windows® NT 3.51 or 4.0, Windows® ME, Windows® 2000 or OS/2®
<b>CD-ROM Chipset</b>	Double Speed or Higher VIA® 694X/VT82C686B chipset

**Note:** For the driver installation procedure, please refer to Chapter 4 “Via Chipset Driver” and follow the installation guide provided. Mainboard with southbridge chipset either **686A** or **686B** will not affect the installation procedure.

## Chapter 1

### INTRODUCTION

The MS-6309 ATX VA5 mainboard is a high-performance computer mainboard based on VIA® VT82C694X chipset. The MS-6309 is designed for the Intel® Celeron™ or Coppermine (FC-PGA) processor for inexpensive business/personal desktop markets.

The Apollo Pro133A (VT82C694X) is a Socket-370 system logic north bridge with the addition of 133 MHz capability for both the CPU and SDRAM interfaces. Apollo Pro133A may be used to implement both desktop and notebook personal computer systems from 66MHz to 133MHz based on Socket-370. The primary features of the Apollo Pro133A-North Bridge are: Slot-1 or Socket-370 CPU (Front Side Bus) Interface (66 / 100 / 133MHz), DRAM Memory Interface (66 / 100 / 133MHz), AGP Bus Interface (66MHz), PCI Bus Interface (33MHz), Mobile Power Management.

The VT82C686A PSIPC (PCI Super-I/O Integrated Peripheral Controller) is a high integration, high performance, power-efficient, and high compatibility device that supports Intel® and non-Intel based processor to PCI bus bridge functionality to make a complete Microsoft PC99-compliant PCI/ISA system.

## **Mainboard Features**

### **CPU**

- Socket 370 for Intel® Celeron™/ Coppermine processor.
- Supports 233MHz, 266MHz, 300MHz, 333MHz, 350MHz, 400MHz, 450MHz, 500MHz, 533MHz...1GHz or faster processor.

### **Chipset**

- VIA® 694X chipset. (510 BGA)
  - P-II FSB @ 133MHz
  - AGP 4x and PCI plus Advanced ECC Memory Controller
  - Support PC100/133 SDRAM, VCM technology
- VIA® VT82C686A chipset. (352 BGA)
  - Advanced Power Management Features
  - Integrated Super I/O (FDC, LPT, COM 1/2, and IR)
  - DirectSound AC97 Audio
  - Dual bus Master IDE Ultra DMA33/66
  - ACPI

### **Clock Generator**

- 66.6MHz, 100MHz and 133MHz clocks are supported.

### **MainMemory**

- Support six memory banks using three 168-pin unbuffered DIMM.
- Support a maximum memory size of 1.5GB (32M x 8).
- Support ECC(1-bit Error Code Correct) function.
- Support 3.3v SDRAM DIMM.

### **Slots**

- One AGP(Accelerated Graphics Port) slot.
    - AGP specification compliant
    - AGP 66MHz 3.3v/1.5v for 2x/4x device support
  - One AMR (Audio Modem Riser) slot.
  - Five 32-bit Master PCI Bus slots.
  - Supports 3.3v/5v PCI bus Interface.
-

**On-Board IDE**

- An IDE controller on the VIA® VT82C686A Chipset provides IDE HDD/CD-ROM with PIO, Bus Master and Ultra DMA 33/66 operation modes.
- Can connect up to four IDE devices.

**On-Board Peripherals**

- On-Board Peripherals include:
  - 1 floppy port supporting 2 FDD with 360K, 720K, 1.2M, 1.44M and 2.88Mbytes.
  - 2 serial ports (COMA + COMB)
  - 1 parallel port supporting SPP/EPP/ECP mode
  - 2 USB ports

**Audio**

- Chip Integrated (Software Audio)
  - AC'97 Compliant

**BIOS**

- The mainboard BIOS provides “Plug & Play” BIOS which detects the peripheral devices and expansion cards of the board automatically.
- The mainboard provides a Desktop Management Interface(DMI) function which records your mainboard specifications.


**Dimension**

- ATX Form Factor : 30.5cm(L) x 19.2cm(W) x 4 layers PCB

**Mounting**

- 6 mounting holes.

# Mainboard Layout

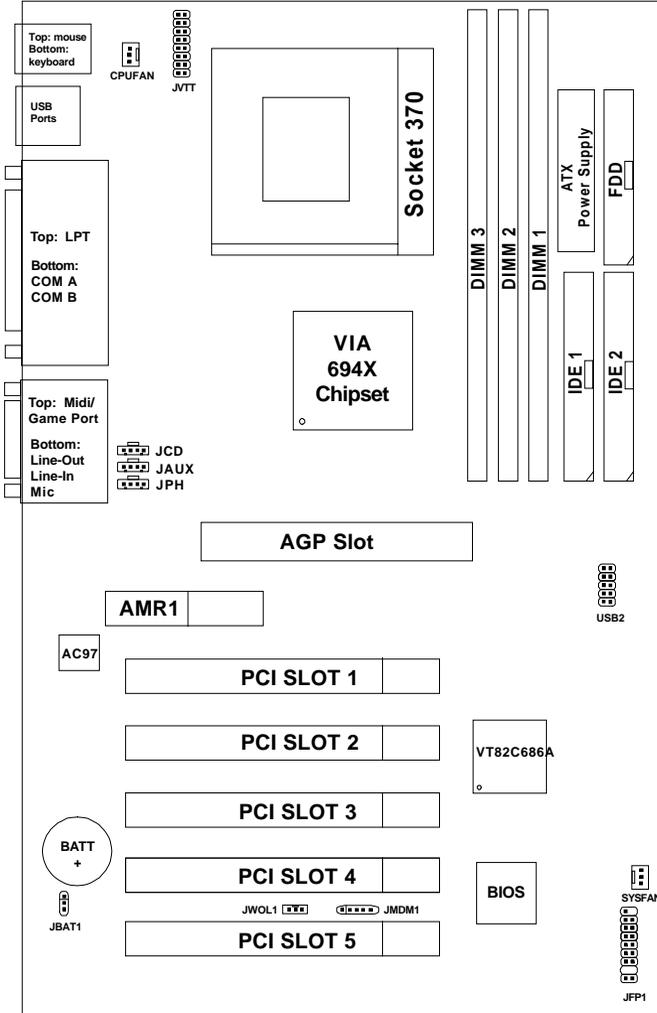

MS-6309 ATX VA5 Mainboard

## Chapter 2




### HARDWARE INSTALLATION

#### Central Processing Unit: CPU

The mainboard operates with **Intel® Celeron™/Coppermine processor**. The mainboard uses a CPU socket called Socket 370 for easy CPU installation. The CPU should always have a Heat Sink and a cooling fan attached to prevent overheating.

##### • CPU Installation Procedures

1. Pull the lever sideways away from the socket. Then, raise the lever up to a 90-degree angle.
2. Locate Pin 1 in the socket and look for the white dot or cut edge in the CPU. Match Pin 1 with the white dot/cut edge. Then, insert the CPU. It should insert easily.
3. Press the lever down to complete the installation.

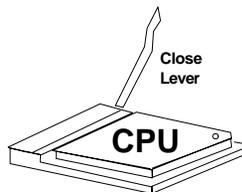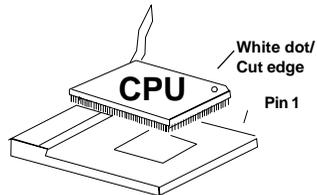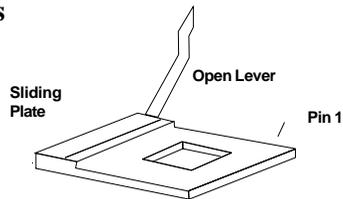


- **CPU Core Speed Derivation Procedure**

The BIOS can be used to set the CPU Host Bus Frequency Clock.

$$\begin{array}{llll} \textbf{If} & \text{CPU Clock} & = & 66\text{MHz} \\ & \text{Core/Bus ratio} & = & 3.5 \\ \textbf{then} & \text{CPU core speed} & = & \text{Host Clock} \times \text{Core/Bus ratio} \\ & & = & 66\text{MHz} \times 3.5 \\ & & = & 233\text{MHz} \end{array}$$

### • Fan Power Connectors: CPUFAN & SYSFAN

These connectors support system cooling fan with +12V. It supports three pin head connector. When connecting the wire to the connector, always take note that the red wire is the positive and should be connected to the +12V, the black wire is Ground and should be connected to GND. If your mainboard has System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of this function.

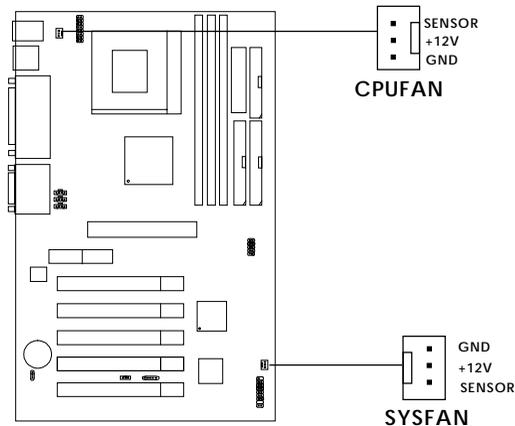

**CPUFAN:** Processor Fan



**SYSFAN:** System Fan

For fans with fan speed sensor, every rotation of the fan will send out 2 pulses. System Hardware Monitor will count and report the fan rotation speed.


- Note:**
1. Always consult vendor for proper CPU cooling fan.
  2. CPU FAN supports the FAN control. You can install PC Alert utility. This will automatically control the CPU FAN Speed according to the actual CPU temperature.

## Clear CMOS Jumper: JBAT1

A battery must be used to retain the mainboard configuration in CMOS RAM. Short 1-2 pins of JBAT1 to store the CMOS data.

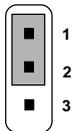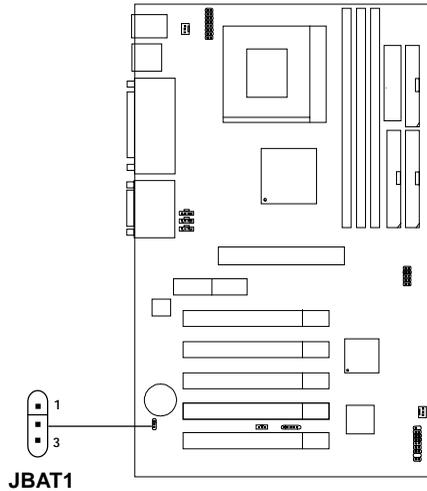

**Keep Data**

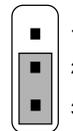


**Clear Data**



**Note:** You can clear CMOS by shorting 2-3 pin, while the system is off. Then, return to 1-2 pin position. Avoid clearing the CMOS while the system is on, it will damage the mainboard. Always unplug the power cord from the wall socket.

## Memory Installation


- **Memory Bank Configuration**

The mainboard supports a maximum memory size of 1.5GB (256-bit technology) SDRAM: It provides three 168-pin **unbuffered** DIMMs (Double In-Line Memory Module) sockets. It supports 8 MB to 512 Mbytes DIMM memory module.

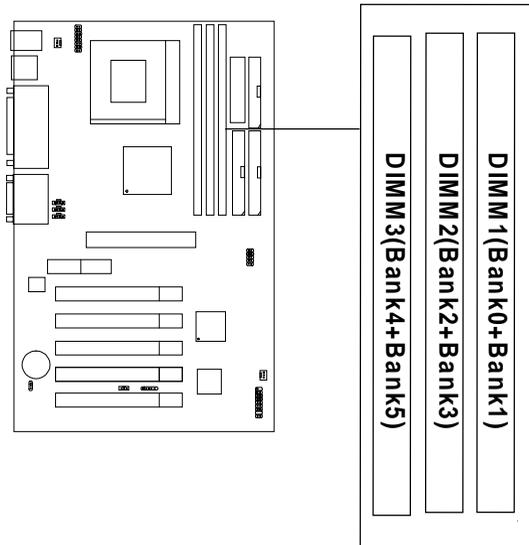

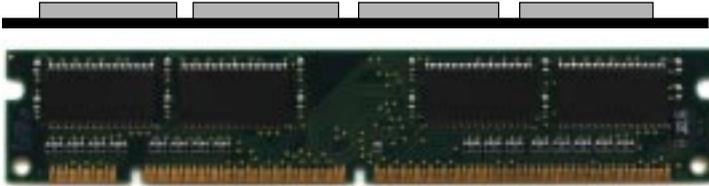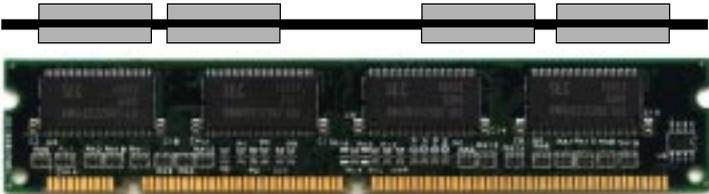**• Memory Installation Procedures****A. How to install a DIMM Module****Single Sided DIMM****Double Sided DIMM**

1. The DIMM slot has 2 Notch Keys “VOLT and DRAM”, so the DIMM memory module can only fit in one direction.
2. Insert the DIMM memory module vertically into the DIMM slot. Then push it in.

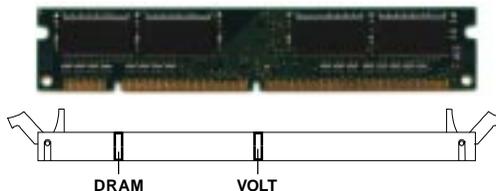

3. The plastic clip at the side of the DIMM slot will automatically close.

**• Memory Population Rules**


1. Supports only SDRAM DIMM.
2. To operate properly, at least one 168-pin DIMM module must be installed.
3. This mainboard supports Table Free memory, so memory can be installed on DIMM1, DIMM 2 or DIMM 3 in any order.
4. Supports 3.3 volt DIMM.
5. The DRAM addressing and the size supported by the mainboard is shown below:

**SDRAM Memory Addressing**

DRAM Tech.	DRAM Density & Width	DRAM Addressing	Address Size		MB/DIMM	
			Row	Column	Single no. Side(S) pcs.	Double no. Side(D) pcs.
16M	1Mx16	ASYM	11	8	8MBx4	16MBx8
	2Mx8	ASYM	11	9	16MBx8	32MBx16
64M	2Mx32	ASYM	11	9	32MBx2	64MBx4
	2Mx32	ASYM	12	8	16MBx2	32MBx4
	4Mx16	ASYM	11	10	32MB	64MB
	4Mx16	ASYM	13	8	32MB	64MB
	8Mx8	ASYM	13	9	64MB	128MB
64M	2Mx32	ASYM	11	8	16MB	32MB
	4Mx16	ASYM	12	8	---	---
	8Mx8	ASYM	12	9	---	---

**Case Connector: JFP1**

The Keylock (reserved), Power Switch, Reset Switch, Power LED, Speaker, and HDD LED are all connected to the JFP1 connector block.

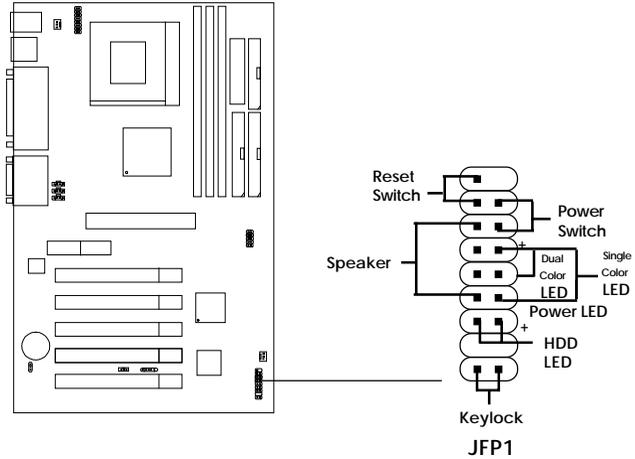

**Power Switch**

Connect to a 2-pin push button switch. This switch has the same feature with JRMS1.

**Reset Switch**

Reset switch is used to reboot the system rather than turning the power ON/OFF. Avoid rebooting while the HDD LED is lit. You can connect the Reset switch from the system case to this pin.

**Power LED**

The Power LED is lit while the system power is on. Connect the Power LED from the system case to this pin. There are two types of LED that you can use: 3-pin single color LED or 2-pin dual color LED(ACPI request).

- a. 3 pin single color LED connect to pin 4, 5, & 6. This LED will lit when the system is on.
- b. 2 pin dual color LED connect to pin 5 & 6.

**GREEN**Color:           Indicate the system is in full on mode.

**ORANGE**Color:        Indicate the system is in suspend mode.

**Speaker**


Speaker from the system case is connected to this pin.

**HDD LED**

HDD LED shows the activity of a hard disk drive. Avoid turning the power off while the HDD led is lit. You can connect the HDD LED from the system case to this pin.


## Floppy Disk Connector: FDD1

The mainboard also provides a standard floppy disk connector FDD1 that supports 360K, 720K, 1.2M, 1.44M and 2.88M floppy disk types. This connector supports the provided floppy drive ribbon cables.

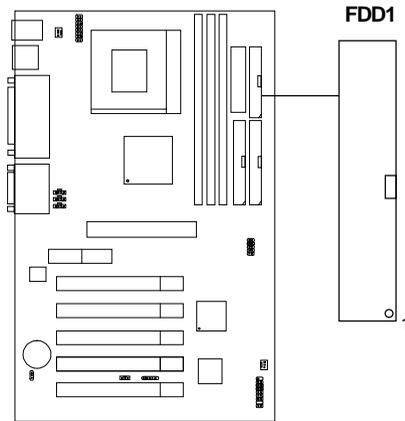

## Hard Disk Connectors: IDE1 & IDE2

The mainboard has a 32-bit Enhanced PCI IDE and Ultra DMA/66/Ultra DMA/33 Controller that provides PIO mode 0~4, Bus Master, and Ultra DMA/33/66 function. It has two HDD connectors IDE1 (primary) and IDE2 (secondary). You can connect up to four hard disk drives, CD-ROM, 120MB Floppy (reserved for future BIOS) and other devices to IDE1 and IDE2. These connectors support the provided IDE hard disk cable.

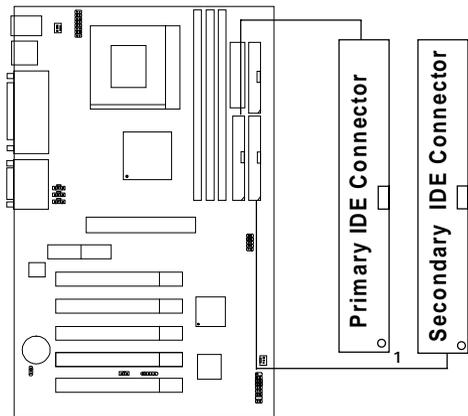

### **IDE1**(Primary IDE Connector)

The first hard drive should always be connected to IDE1. IDE1 can connect a Master and a Slave drive. You must configure second hard drive to Slave mode by setting the jumper accordingly.

### **IDE2**(Secondary IDE Connector)


IDE2 can also connect a Master and a Slave drive.

---

**Power Supply**

• **ATX 20-pin Power Connector: JWR1**

This connector supports the power button on-board. Using the ATX power supply, functions such as Modem Ring Wake-Up and Soft Power Off are supported by this mainboard. This power connector supports instant power on function which means that system will boot up instantly when the power connector is inserted on the board.

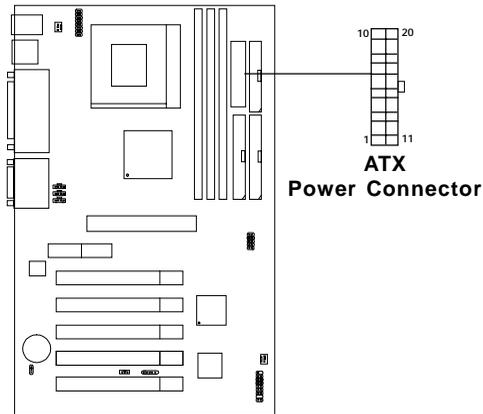


**PIN DEFINITION**

PIN	SIGNAL	PIN	SIGNAL
1	3.3V	11	3.3V
2	3.3V	12	-12V
3	GND	13	GND
4	5V	14	PS_ON
5	GND	15	GND
6	5V	16	GND
7	GND	17	GND
8	PW_OK	18	-5V
9	5V_SB	19	5V
10	12V	20	5V

**Warning:** Since the mainboard has the instant power on function, make sure that all components are installed properly before inserting the power connector to ensure that no damage will be done.

**Serial Port Connectors: COM A and COM B**

The mainboard provides two 9-pin male DIN connectors for serial port COM A & COM B. These port are 16550A high speed communication port that send/receive 16 bytes FIFOs. You can attach a mouse or a modem cable directly into this connector.

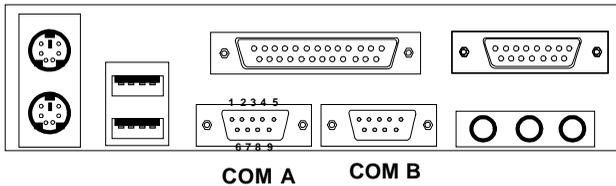

**Serial Port (9-pin Male)**

**PIN DEFINITION**


PIN	SIGNAL
1	<b>DCD</b> (Data Carry Detect)
2	<b>SIN</b> (Serial In or Receive Data)
3	<b>SOUT</b> (Serial Out or Transmit Data)
4	<b>DTR</b> (Data Terminal Ready)
5	<b>GND</b>
6	<b>DSR</b> (Data Set Ready)
7	<b>RTS</b> (Request To Send)
8	<b>CTS</b> (Clear To Send)
9	<b>RI</b> (Ring Indicate)

**Parallel Port Connector: LPT1**

The mainboard provides a 25 pin female centronic connector for LPT. A parallel port is a standard printer port that also supports Enhanced Parallel Port (EPP) and Extended capabilities Parallel Port (ECP). See connector and pin definition below:

**Parallel Port (25-pin Female)**

**LPT 1**

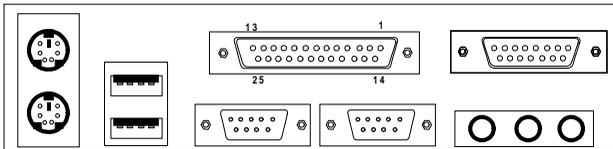


**PIN DEFINITION**

<b>PIN</b>	<b>SIGNAL</b>	<b>PIN</b>	<b>SIGNAL</b>
1	STROBE	14	AUTO FEED#
2	DATA0	15	ERR#
3	DATA1	16	INIT#
4	DATA2	17	SLIN#
5	DATA3	18	GND
6	DATA4	19	GND
7	DATA5	20	GND
8	DATA6	21	GND
9	DATA7	22	GND
10	ACK#	23	GND
11	BUSY	24	GND
12	PE	25	GND
13	SELECT		

## Mouse Connector: JKBMS1


The mainboard provides a standard PS/2<sup>®</sup> mouse mini DIN connector for attaching a PS/2<sup>®</sup> mouse. You can plug a PS/2<sup>®</sup> mouse directly into this connector. The connector location and pin definition are shown below:

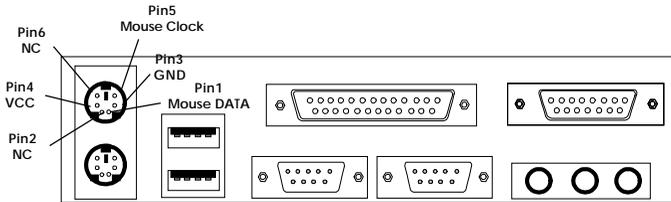

**PS/2 Mouse (6-pin Female)**

## Keyboard Connector: JKBMS1


The mainboard provides a standard PS/2<sup>®</sup> keyboard mini DIN connector for attaching a keyboard. You can plug a keyboard cable directly to this connector.

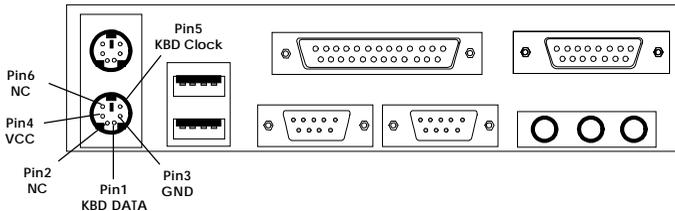

**PS/2 Keyboard (6-pin Female)**


## Joystick/Midi Connectors

You can connect joystick or game pad to this connector.

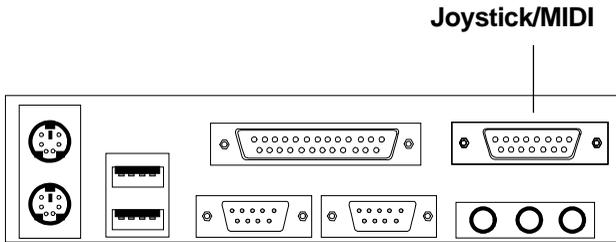

## Audio Port Connectors


**Line Out** is a connector for Speakers or Headphones. **Line In** is used for external CD player, Tape player, or other audio devices. **Mic** is a connector for the microphones.

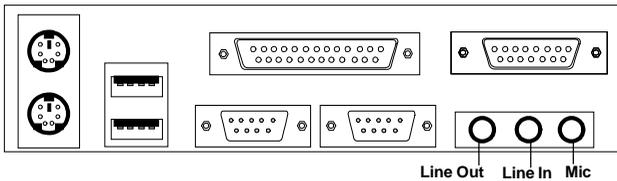

## 1/8" Stereo Audio Connectors

## USB Connectors


The mainboard provides a **UHCI (Universal Host Controller Interface) Universal Serial Bus root** for attaching USB devices like: keyboard, mouse and other USB devices. You can plug the USB device directly to this connector.

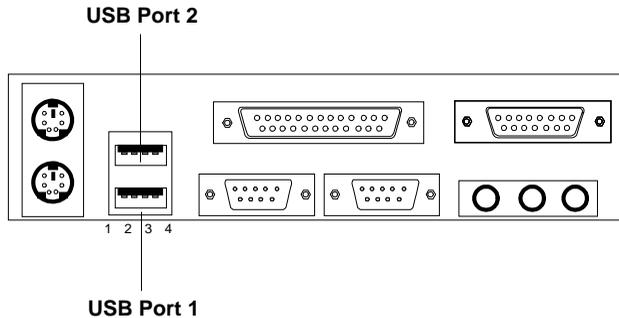

PIN	SIGNAL
1	VCC
2	-Data
3	+Data
4	GND

## Wake-Up on LAN Connector: JWOL1

The JWOL1 connector is for use with LAN add-on cards that supports Wake Up on LAN function. To use this function, you need to set the “Wake-Up on LAN” to enable at the BIOS Power Management Setup.

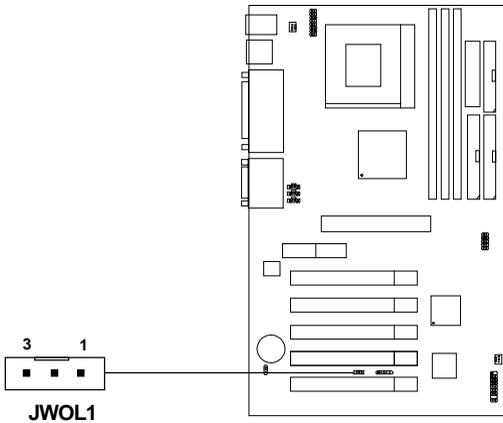


PIN	SIGNAL
1	5VSB
2	GND
3	MP_WAKEUP

**Note:** LAN wake-up signal is active “high”.

**Note:** To be able to use this function, you need a power supply that provide enough power for this feature. (Power supply with 750mA 5V Stand-by)

## Modem Wake Up Connector: JMDM1

The JMDM1 connector is for use with Modem add-on card that supports the Modem Wake Up function.

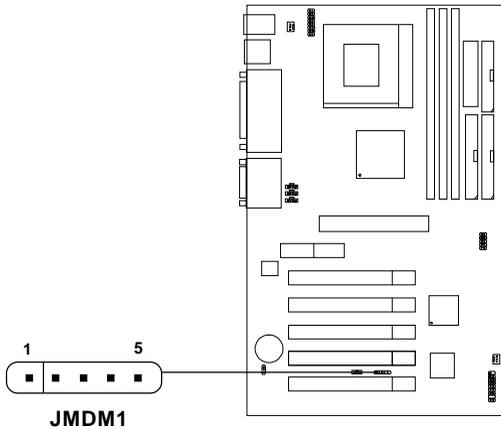

PIN	SIGNAL
1	NC
2	GND
3	MDM_WAKEUP
4	NC
5	5VSB


**Note:** Modem wake-up signal is active “low”.



**Note:** To be able to use this function, you need a power supply that provide enough power for this feature. (Power supply with 750mA 5V Stand-by)

---

## **CPU Termination Voltage Jumper: JVTT (reserved)**


This jumper is a reserved function for future Coppermine CPU.

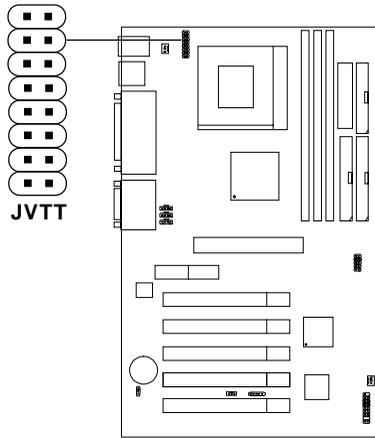

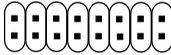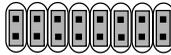JVTT	Function
	<p><b>For Celeron</b></p>
	<p><b>For Coppermine</b></p>


## **AMR1 (Audio Modem Riser)**

The Audio/Modem Riser specification is an open industry-standard specification that defines a hardware scalable Original Equipment Manufacturer (OEM) mainboard riser board and interface, which supports both audio and modem.

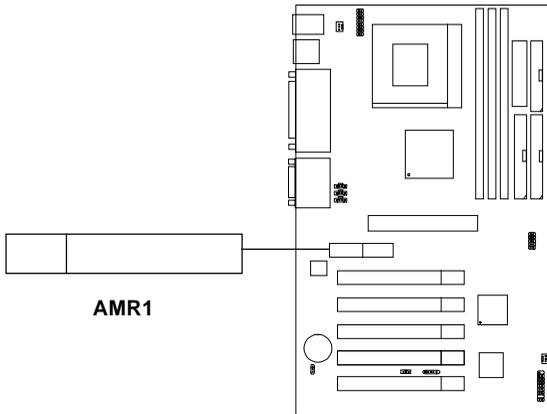


**CD-In Connector: JCD**

This connector is for CD-ROM audio connector.

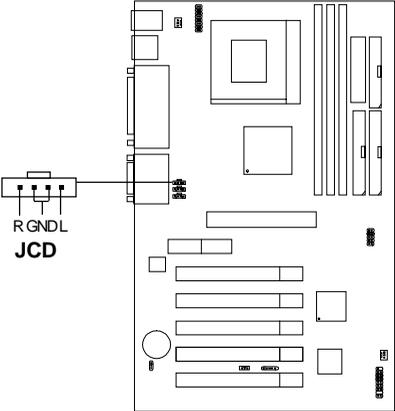


**AUX Line In Connector: JAUX**

This connector is used for DVD Add on Card with Line In connector.

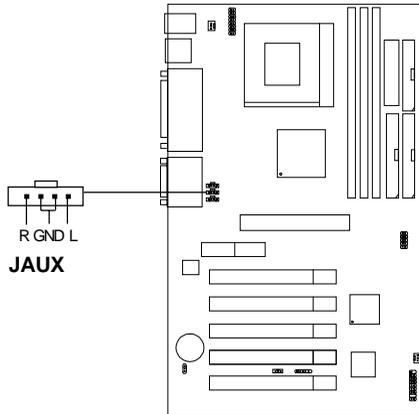

## Modem-In: JPH


The connector is for Modem with internal voice connector.

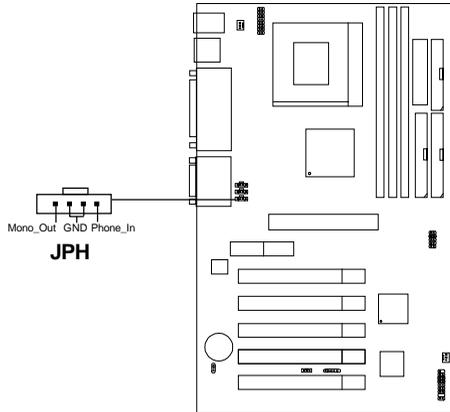

Mono\_Out is connected to the Modem Speaker Out connector.  
Phone\_In is connected to the Modem Microphone In connector.

**USB Front Connector: USB2**

The mainboard provides a **front Universal Serial Bus connector**. This is an optional USB connector for Front Panel.

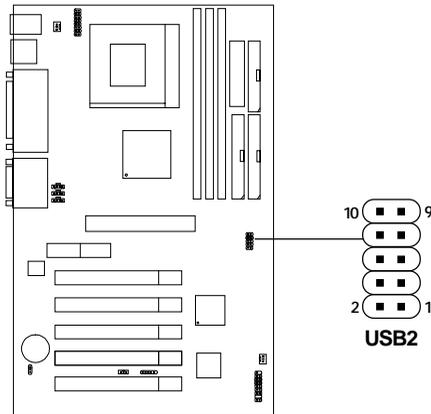

Pin	Description	Pin	Description
1	VCC	6	USB2+
2	GND	7	GND
3	USB3-	8	USB2-
4	GND	9	GND
5	USB3+	10	VCC

## Chapter 3

### AMI® BIOS USER'S GUIDE

The system configuration information and chipset register information is stored in the CMOS RAM. This information is retained by a battery when the power is off. Enter the BIOS setup (if needed) to modify this information.

The following pages will describe how to enter BIOS setup, and all about options.

## Enter BIOS Setup

Enter the AMI® setup Program's Main Menu as follows:

1. Turn on or reboot the system. The following screen appears with a series of diagnostic check.

```
AMIBIOS (C) 1999 American Megatrends Inc.  
A6309 VXXX XXXXXX
```

```
Hit <DEL> if you want to run setup
```

```
(C) American Megatrends Inc.  
61-XXXX-001169-00111111-071592-i82440FX-H
```

2. When the "Hit <DEL>" message appears, press <DEL> key to enter the BIOS setup screen.
3. After pressing <DEL> key, the BIOS setup screen will appear.

**Note:** *If you don't want to modify CMOS original setting, then don't press any key during the system boot.*



**Standard CMOS Setup**

1. Press <ENTER> on “Standard CMOS Setup” of the main menu screen .

```

      AMIBIOS SETUP - STANDARD CMOS SETUP
(C)1999 American Megatrends, Inc. All Rights Reserved
-----
Date (mm/dd/yyyy):   Fri Oct 29, 1999
Time (hh/mm/ss):    17:09:25

      Type  Size  Cyln  Head  Wpcom  Sec   LBA  Blk  PIO  32Bit
      Mode  Mode  Mode  Mode
Pri Master :Auto          On   On  AUTO Off
Pri Slave  :Auto          On   On  AUTO Off
Sec Master :Auto          On   On  AUTO Off
Sec Slave  :Auto          On   On  AUTO Off

Floppy Drive A:      1.44 MB 3 1/2
Floppy Drive B:      Not Installed

      Base Memory : 0 Kb
      Other Memory : 384 Kb
      Extended Memory : 0 Mb
      Total Memory : 1 Mb

Boot Sector Virus Protection: Disabled

Available Options:
Disabled
Enabled
      ESC:Exit
      ↑↓:Select Item
      PU/PD/+/-:Modify
      (Shift)F2:Color
    
```

2. Use <Up> and <Down> to choose the item and <PgUp> and <PgDn> keys to modify the highlighted item.
3. After you have finished with the Standard CMOS Setup, press <ESC> to go back to the main menu.

**BIOS Features Setup**

1. Press <ENTER> on “BIOS Features Setup” of the main menu screen.

AMIBIOS SETUP - BIOS FEATURES SETUP			
(C) 1999 American Megatrends, Inc. All Rights Reserved			
Quick Boot	:Enabled	D800, 16K Shadow	:Disabled
1st Boot Device	:Floppy	DC00, 16K Shadow	:Disabled
2nd Boot Device	:IDE-0		
3rd Boot Device	:CDROM		
Initial Display Mode	:BIOS		
S.M.A.R.T. for Hard Disks	:Disabled		
BootUp Num-Lock	:On		
Floppy Drive Swap	:Disabled		
Floppy Drive Seek	:Disabled		
Password Check	:Setup		
Boot To OS/2 > 64M	:No		
CPU Serial Number	:Enabled		
L2 Cache	:WriteBack		
Cache Bus ECC	:Disabled		
System BIOS Cacheable	:Enabled	ESC:Exit	↑↓←→:Select Item
C000, 32k Shadow	:Enabled	F1 :Help	PU/PD/+/-:Modify
C800, 16K Shadow	:Disabled	F5 :Old Values (Shift)	F2:Color
CC00, 16K Shadow	:Disabled	F6 :Load BIOS Defaults	
D000, 16K Shadow	:Disabled	F7 :Load Setup Defaults	
D400, 16K Shadow	:Disabled		

2. Use <Up> and <Down> to choose the item and <PgUp> and <PgDn> keys to modify the highlighted item.
3. After you have finished with the BIOS Features Setup, press <ESC> to go back to the main menu.

**Description of the item on screen follows:****Quick Boot**

Set this option to Enabled to permit AMI® BIOS to boot within 5 seconds. This option replaces the old ABOVE 1 MB Memory Test option. The Setup default setting is Enabled.

**1st Boot Device/2nd Boot Device/3rd Boot Device**

This option sets the sequence of boot drives.

The settings are:

Disabled	Disable this sequence
IDE-0	The system will boot from the first HDD.
IDE-1	The system will boot from the Second HDD.
IDE-2	The system will boot from the Third HDD.
IDE-3	The system will boot from the Fourth HDD.
Floppy	The system will boot from Floppy.
ZIP A:/LS120	The system will boot from LS-120 (120M Floppy).
Atapi ZIP C:	The system will boot from the ZIP.
CDROM	The system will boot from the CD-ROM
SCSI	The system will boot from the SCSI.
Network	The system will boot from the Network drive.

**Initial Display Mode**

This option sets the device boot, if all the Four Boot Devices failed.

**S.M.A.R.T. for Hard Disks**

This option sets the SMART (Self-Monitoring Analysis & Reporting Technology) function for the hard disk. The hard disk needs to have SMART function for this feature to work.

**BootUp Num-Lock**

When this option is set to Off, AMI® BIOS turns off the Num Lock key when the system is powered on. The end user can then use the arrow keys on both the numeric keypad and the keyboard. The settings are On or Off. The Setup default setting is On.

**Floppy Drive Swap**

Set this option to Enabled to specify that floppy drives A: and B: are swapped. The settings are Enabled and Disabled. The Setup default setting is Disabled.

**Floppy Drive Seek**

When this option is set to Enabled, AMI® BIOS performs a Seek command on floppy drive A: before booting the system. The settings are Enabled and Disabled. The Setup default setting is Disabled.

**Password Check**

This option specifies the type of AMI® BIOS password protection that is implemented. The Setup default setting is Setup.

<b>Option</b>	<b>Description</b>
Setup (default)	The password prompt appears only when end users try to run Setup.
Always	A password prompt appears every time when the computer is powered on or when end users try to run Setup.

**Boot To OS/2® > 64MB**

This allows you to run the OS/2® operating system with DRAM larger than 64MB. When you choose the default value No, you cannot run the OS/2® operating system with DRAM larger than 64MB. But it is possible if you choose Yes. The Setup default value is No.

### **CPU Serial Number**

This feature is for Pentium® !!! only. When set to Enabled, the system will check CPU Serial Number. Set to Disabled if you don't want the system to know the CPU Serial Number.

### **L2 Cache**

This sets the type of caching algorithm used by BIOS and the CPU for L2 cache memory. Setting options are:

<b>WriteBack</b>	A write-back algorithm is used.
<b>WriteThru</b>	A write-through algorithm is used.
<b>Disabled</b>	AMIBIOS does not specify the type of caching algorithm. The algorithm is set by the CPU.

### **Cache Bus ECC**

This option enables the Level 2 Cache memory ECC (Error Check Correction) function.

### **System BIOS Cacheable**

AMI® BIOS always copies the system BIOS from ROM to RAM for faster execution. Set this option to Enabled to permit the contents of the F0000h RAM memory segment to be written to and read from cache memory. The settings are Enabled or Disabled. The Setup default setting is Enabled.

### **C000/C800/CC00/D000/D400/D800/DC00, 32K/16K Shadow**

These options specify how the contents of the video ROM are handled. The settings are:

- Disabled** - the Video ROM is not copied to RAM.
- Cached** - the contents of the video ROM from C0000h - C7FFFh are not only copied from ROM to RAM; it can also be written to or read from cache memory.
- Enabled** - the Contents of the video ROM from C0000h - C7FFFh are copied(shadowed) from ROM to RAM for faster execution.

The Setup default setting for all these options is Disabled except for "C000, 32K Shadow".

## Chipset Features Setup

1. Press <ENTER> on “Chipset Features Setup” of the main menu screen.

AMIBIOS SETUP - CHIPSET FEATURES SETUP	
(C) 1999 American Megatrends, Inc. All Rights Reserved	
Set SDRAM Timing by SPD	:Disabled
DRAM Frequency	:100Mhz
SDRAM CAS# Latency	:3
DRAM Integrity Mode	:Disabled
CPU In Order Queue	:4-Level
Memory Hole	:Disabled
AGP Mode	:Auto
AGP Comp. Driving	:Auto
Manual AGP Comp. Driving	:CB
AGP Aperture Size	:64MB
USB Controller	:USB Port 0x1
USB KB/Mouse Legacy	:Disabled
USB 60/64 Port Emulation	:Disabled
ESC:Exit           ↑↓→←:Select Item F1 :Help            PU/PD/+/-:Modify F5 :Old Values (Shift)F2:Color F6 :Load BIOS Defaults F7 :Load Setup Defaults	

2. Use <Up> and <Down> to choose the item and <PgUp> and <PgDn> keys to modify the highlighted item.
3. After you have finished with the Chipset Features Setup, press <ESC> to go back to the main menu.

## **Description of the item on screen follows:**

### **Set SDRAM Timing By SPD**

Choose Enabled and BIOS will automatically configure the DRAM Timing depending on the configurations on the SPD (Serial Presence Detect) device. Choose Disabled to customize the setup.

### **DRAM Frequency**

This item specifies the DRAM frequency of the system.

The settings are:

<b>66MHz FSB Processor</b>	66/100MHz DRAM Frequency
<b>100MHz FSB Processor</b>	66/100/133MHz DRAM Frequency
<b>133MHz FSB Processor</b>	100/133MHz DRAM Frequency

### **SDRAM CAS# Latency**

When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing. The settings are: 2 and 3.

### **DRAM Integrity Mode**

This item will automatically detect your DIMM for ECC. The Setup default is Disabled.

### **Memory Hole**

This option allows the end user to specify the location of a memory hole (15MB-16MB). The cycle matching the selected memory hole will be passed to the ISA bus.

**AGP Aperture Size**

This option determines the effective size of the graphics aperture used in the particular MCM configuration. The AGP aperture is memory - mapped, while graphics data structure can reside in a graphics aperture. The aperture range should be programmed as not cacheable in the processor cache, accesses with the aperture range are forwarded to the main memory, then MCM will translate the original issued address via a translation table that is maintained on the main memory. The option allows the selection of an aperture size of 4MB, 8MB, 16MB, 32MB, 64MB, 128MB and 256MB.

**USB Controller**

Set this option to enable or disable the on-chip USB controller. The settings are USB Port 0 & 1, USB Port 2 & 3 or All USB Port. The Setup default setting is USB Port 0 & 1.

**USB KB/Mouse Legacy**

This option enables or disables support for USB Mouse & keyboard. The default setting is Disabled.

## Power Management Setup

1. Press <ENTER> on “Power Management Setup” of the main menu screen.

AMIBIOS SETUP - POWER MANAGEMENT SETUP (C) 1999 American Megatrends, Inc. All Rights Reserved			
Compliance With O/S	:Yes	Thermal Slow Clock Ratio	:50%-56.25%
Power Management/APM	:Enabled	Power Button Function	:On/Off
Green FC LED Status	:Dual Color	Restore on AC/Power Loss	:Power Off
Video Power Down Mode	:Suspend	Resume On Ring/LAN	:Enabled
Hard Disk Power Down Mode	:StandBy	Resume On PME#	:Disabled
Standby Time Out (Minute)	:Disabled	Resume On RTC Alarm	:Disabled
Suspend Time Out (Minute)	:Disabled	RTC Alarm Date	:15
Throttle Slow Clock Ratio	:50%-56.25%	RTC Alarm Hour	:12
Display Activity	:Ignore	RTC Alarm Minute	:30
IRQ3	:Monitor	RTC Alarm Second	:30
IRQ4	:Monitor		
IRQ5	:Ignore		
IRQ7	:Monitor		
IRQ9	:Ignore		
IRQ10	:Ignore		
IRQ11	:Ignore		
IRQ13	:Ignore		
IRQ14	:Monitor		
IRQ15	:Ignore		
System Thermal	:Ignore		
		ESC:Exit	↑↓→←:Select Item
		F1 :Help	PU/PD/+/-:Modify
		F5 :Old Values (Shift)F2:Color	
		F6 :Load BIOS Defaults	
		F7 :Load Setup Defaults	

2. Use <Up> and <Down> to choose the item and <PgUp> and <PgDn> keys to modify the highlighted item.
3. After you have finished with the Power Management Setup, press <ESC> to go back to the main menu.

## **Description of the item on screen follows:**

### **Compliance With O/S**

Set this option to Yes if the operating system supports ACPI. If the setting is No, the operating system supports APM.

### **Power Management/APM**

Set this option to enable the chipset's power management features and APM (Advanced Power Management). The settings are Enabled, Inst-On (instant-on) or Disabled. The Setup default setting is Enabled.

### **Green PC LED Status**

This item sets how the system uses Green PC LED to indicate the power saving state. Available options are:

**Blinking** The LED blinks to indicate the power saving state.

**Single Color** The LED remains the same color.

**Dual Color** The LED changes its color to indicate the power saving state.

### **Video Power Down Mode**

This option specifies the power conserving state that the VESA VGA video subsystem enters after the specified period of display inactivity has expired. The settings are Disabled, StandBy or Suspend. The default setting is Suspend.

### **Hard Disk Power Down Mode**

This option specifies the power conserving state that the hard disk drive enters after the specified period of hard drive inactivity has expired. The settings are Disabled, StandBy or Suspend. The Setup default setting is StandBy.

**Standby TimeOut (Minute)**

This option defines the continuous idle time before the system enters STANDBY mode. If any item defined in the options of “Power Down and Resume events” is enabled & active, STANDBY timer will be reloaded. When the system has entered Standby mode, any of the items that are enabled in “Wake Up Events of Doze and Standby” will trigger the system to wake up. The settings are Disabled, 1 min, 2 min, 3 min, 4 min, 5 min, 6 min, 7 min, 8 min, 9 min, 10 min, 11 min, 12 min, 13 min, 14 min or 15 min. The default settings is Disabled.

**Suspend Time Out (Minute)**

This option specifies the length of a period of system inactivity before the system enters the Suspend state. When this length of time expires, the computer enters Suspend mode. The settings are Disabled, 1 min, 2 min, 4 min, 8 min, 10 min, 20 min, 30 min, 40 min, 50 min or 60 min. The default setting is Disabled.

**Throttle Slow Clock Ratio**

This option specifies the speed at which the system clock runs in power saving states. The settings are expressed as ratio between the normal CPU clock speed and the CPU clock speed when the computer is in the power-conserving state.

**Display Activity/IRQ 3/IRQ 4/IRQ 5/IRQ 7/IRQ 9/IRQ1 0/  
IRQ 11/IRQ 13/IRQ 14/IRQ 15/System Thermal**

When set to Monitor, these options enable event monitoring on the specified hardware interrupt request line. If set to Monitor and the computer is in a power saving state, AMI® BIOS watches for activity on the specified IRQ line. The computer enters the full on power state if any activity occurs.

AMI® BIOS reloads the Standby and Suspend timeout timers if activity occurs on the specified IRQ line.

**Thermal Slow Clock Ratio**

When **System Thermal** is set to Monitor, then you can choose the throttle ratio. This option is connected with the **System Thermal** Option.

---

### **Power Button Function**

During Suspend, if you push the switch once, the system goes into suspend mode and if you push it more than 4 seconds, the system will be turned off. During On/Off, the system will be turned off once you push the switch.

### **Restore on AC/Power Loss**

The settings are Power On, Power Off or Last State. During Power On, after every AC power loss, the system will be turned on. During Last State, after every AC power loss, the system status will be the same as the last state before power loss when the AC power returns. During Power Off, after every AC power loss, the system will remain shut down.

### **Resume On Ring/LAN**

During Disabled, the system will ignore any incoming call from the modem/LAN network card. During Enabled, the system will boot up if there's an incoming call from the modem/LAN network card.

**Note:** If you have changed the setting, you must let the system boot up until it goes to the operating system. Then, power off the system. This function will work the next time you power on.

### **Resume On PME#**

During Disabled, the system will ignore any event on PME (Power Management Event). During Enabled, the system will boot up if there's an event on PME. The default setting is Disabled.

**Resume On RTC Alarm**

This function is for setting the Date, Hour, Minute, and Second for your computer to boot up. During Disabled, you cannot use this function. During Enabled, set the Date, Hour, Minute, and Second:

- |                         |  |
|-------------------------|--|
| <b>RTC Alarm Date</b>   | Choose which day the system will boot up.    |
| <b>RTC Alarm Hour</b>   | Choose which hour the system will boot up.   |
| <b>RTC Alarm Minute</b> | Choose which minute the system will boot up. |
| <b>RTC Alarm Second</b> | Choose which second the system will boot up. |

**Note:** If you have changed the setting, you must let the system boot up until it goes to the operating system. Then, power off the system. This function will work the next time you power on the computer.

**PNP/PCI Configuration**

1. Press <ENTER> on “PNP/PCI Configuration” of the main menu screen.

AMIBIOS SETUP - PNP/PCI CONFIGURATION		
(C) 1999 American Megatrends, Inc. All Rights Reserved		
PnP Aware O/S	:No	
Clear NVRAM	:No	
PCI Latency Timer	:64	
Primary Graphics Adapter	:PCI	
PCI VGA Palette Snoop	:Disabled	
DMA Channel 0	:PnP	
DMA Channel 1	:PnP	
DMA Channel 3	:PnP	
DMA Channel 5	:PnP	
DMA Channel 6	:PnP	
DMA Channel 7	:PnP	
IRQ3	:PCI/PnP	
IRQ4	:PCI/PnP	
IRQ5	:PCI/PnP	
IRQ7	:PCI/PnP	ESC:Exit      ↑↓→←:Select Item
IRQ9	:PCI/PnP	F1 :Help      PU/PD/+/-:Modify
IRQ10	:PCI/PnP	F5 :Old Values (Shift)F2:Color
IRQ11	:PCI/PnP	F6 :Load BIOS Defaults
IRQ14	:PCI/PnP	F7 :Load Setup Defaults
IRQ15	:PCI/PnP	

2. Use <Up> and <Down> to choose the item and <PgUp> and <PgDn> keys to modify the highlighted item.
3. After you have finished with the PNP/PCI Configuration, press <ESC> to go back to the main menu.

### **Description of the item on screen follows:**

#### **Plug and Play Aware O/S**

Set this option to Yes if the operating system in this computer is aware of and follows the Plug and Play specification. The settings are Yes or No. The default setting is No.

#### **Clear NVRAM**

During Yes, this will clear NVRAM data on every boot.

#### **PCI Latency Timer**

This option specifies the latency timings (in PCI clocks) for all PCI devices on the PCI bus. The settings are 32, 64, 96, 128, 160, 192, 224 or 248. The Setup default settings is 64.

#### **Primary Graphics Adapter**

This option is for selecting which VGA card is to be your primary display graphics adapter.

#### **PCI VGA Palette Snoop**

When this option is set to Enabled, multiple VGA devices operating on different buses can handle data from the CPU on each set of palette registers on every video device. Bit 5 of the command register in the PCI device configuration space is the VGA Palette Snoop bit (0 is disabled). For example, if there are two VGA devices in the computer (one PCI and ISA) and the Bit settings are:

**Disabled** - Data read and written by the CPU is only directed to the PCI VGA device's palette registers.

**Enabled** - Data read and written by the CPU is directed to both the PCI VGA device's palette registers and the ISA VGA device palette registers, permitting the palette registers of both devices to be identical.

This option must be set to Enabled if an ISA adapter card requires VGA palette snooping. The settings are Enabled or Disabled. The default setting is Disabled.

**DMA Channel 0/1/3/5/6/7**

These options specify the bus that the specified DMA channel is used. These options allow you to reserve DMAs for legacy ISA adapter cards.

These options determine if AMI® BIOS should remove a DMA from the available DMAs passed to devices that are configurable by the system BIOS. The available DMA pool is determined by reading the ESCD NVRAM. If more DMAs must be removed from the pool, the end user can use these options to reserve the DMA by assigning an ISA/EISA setting to it.

**IRQ3/IRQ4/IRQ5/RQ7/IRQ9/IRQ10/IRQ11/IRQ14/IRQ15**

These options specify the bus that the specified IRQ line is used on. These options allow you to reserve IRQs for legacy ISA adapter cards.

These options determine if AMI® BIOS should remove an IRQ from the pool of available IRQs passed to devices that are configurable by the system BIOS. The available IRQ pool is determined by reading the ESCD NVRAM. If more IRQs must be removed from the pool, the end user can use these options to reserve the IRQ by assigning an ISA/EISA setting to it. Onboard I/O is configured by AMI® BIOS. All IRQs used by onboard I/O are configured as PCI/PnP. If all IRQs are set to ISA/EISA and IRQ14 and 15 are allocated to the onboard PCI IDE, IRQ9 will still be available for PCI and PnP devices, because at least one IRQ must be available for PCI and PnP devices. The settings are ISA/EISA or PCI/PnP. The default setting is PCI/PnP.

## Integrated Peripherals

1. Press <ENTER> on "Integrated Peripherals" of the main menu screen.

AMIBIOS SETUP - INTEGRATED PERIPHERALS	
(C) 1999 American Megatrends, Inc. All Rights Reserved	
Onboard IDE	:Both
Onboard FDC	:Auto
Onboard Serial Port 1	:Auto
Onboard Serial Port 2	:Auto
Serial Port 2 Mode	:Normal
Duplex Mode	:N/A
Onboard Parallel Port	:Auto
Parallel Port Mode	:ECP
EPP Version	:N/A
Parallel Port DMA	:Auto
Parallel Port IRQ	:Auto
Onboard AC'97 Audio	:Auto
Onboard MC'97 Modem	:Auto
ESC:Exit           ↑↓→←:Select Item F1 :Help            PU/PD/+/-:Modify F5 :Old Values (Shift)F2:Color F6 :Load BIOS Defaults F7 :Load Setup Defaults	

2. Use <up> and <down> to choose the item and <PgUp> and <PgDn> keys to modify the highlighted item.
3. After you have finished with the Integrated Peripherals, press <ESC> to go back to the main menu.

**Description of the item on screen follows:**

**Onboard FDC**

Choose Auto, for the BIOS to automatically detect the device

If the ISA add-on card has	Onboard FDC to be set at
FDC exist	Disabled
none FDC exist	Enabled

Choose Enabled, Enabling onboard FDC.

Choose Disabled, Disabling onboard FDC.

The Setup default setting is Auto.

**Onboard Serial Port 1/Onboard Serial Port 2**

Choose 3F8, for the BIOS to automatically detect the device.

If the ISA add-on card has				Onboard Serial port to be set at			
COM1 (I/O:3F8H)	COM2 (I/O:3F8H)	COM3 (I/O:3E8H)	COM4 (I/O:2E8H)	PORT1	IRQ ASSIGNED	PORT2	IRQ ASSIGNED
✓	✓	✓	✓	DISABLED	X	DISABLED	X
✓	✓	X	X	COM3	4	COM4	3
X	X	✓	✓	COM1	4	COM2	3
✓	X	X	✓	COM2	3	COM3	4
X	✓	✓	X	COM1	4	COM4	3
✓	✓	✓	X	COM4	3	DISABLED	X
✓	✓	X	✓	COM3	4	DISABLED	X
✓	X	✓	✓	COM2	3	DISABLED	X
X	✓	✓	✓	COM1	4	DISABLED	X
X	X	X	X	COM1	4	COM2	3
✓	X	X	X	COM2	3	COM3	4
X	✓	X	X	COM1	4	COM3	4
X	X	✓	X	COM1	4	COM2	3
X	X	X	✓	COM1	4	COM2	3

**Note:** *If the onboard serial port interrupt and ISA add-on card interrupt are in conflict, the serial port will not work properly. Please disable one of the devices.*

**Serial Port2 Mode**

This item allows the user to determine the operation modes for Serial Port -- COM B. The settings are Normal, IRDA and ASK IR. (*The last two settings are operation modes for IR feature.*) The default setting is Normal.

**Duplex Mode**

When **Serial Port2 Mode** is set to any IR mode, you can use this option to set full duplex or half duplex transmission mode for IR.

**Onboard Parallel Port**

Choose Auto, the BIOS automatically assigned onboard parallel port to the available parallel port or disabled.

If the ISA add-on card has			Onboard parallel port to be set as	
LPT1 I/O:378H	LPT2 I/O:278H	LPT3 I/O:3BCH	PORT ASSIGNED	IRQ ASSIGNED
✓	✓	✓	Disabled	X
✓	✓	X	LPT3	5
✓	X	✓	LPT2	5
X	✓	✓	LPT1	7
✓	X	X	LPT2	5
X	✓	X	LPT1	7
X	X	✓	LPT1	7
X	X	X	LPT1	7

**Note:** *If the onboard parallel port interrupt and ISA add-on card interrupt are in conflict, the parallel port will not work properly. Please disable one of the devices.*

**Parallel Port Mode**

This option allows user to choose the operating mode of the onboard parallel port. The settings are Normal, SPP/EPP or ECP mode.

**EPP Version**

This option is for setting which EPP version will be used. The settings are 1.7 and 1.9.

**Parallel Port IRQ**

If the onboard parallel mode is not on auto mode, the user can select the interrupt line for onboard parallel port. We suggest that the user select the interrupt for the onboard parallel port as shown below:

Onboard parallel port set at	Parallel Port IRQ
LPT1(378H)	7
LPT2(278H)	5
LPT3(3BCH)	5

**Parallel Port DMA**

This option allows user to choose DMA channel 1 to 3 for the onboard parallel port on ECP mode.

**Onboard IDE**

Set this option to enable or disable the onboard IDE controller.

**Onboard AC'97 Audio**

This item allows you to decide to enable/disable the VIA chipset family to support AC'97 Audio. The settings are Enabled and Disabled.

**Onboard MC'97 Modem**

This item allows you to decide to enable/disable the VIA chipset family to support MC'97 Modem. The settings are Enabled and Disabled.

## Hardware Monitor Setup

1. Press <ENTER> on “Hardware Monitor Setup” of the main menu screen.

AMIBIOS SETUP - Hardware Monitor Setup	
(C) 1999 American Megatrends, Inc. All Rights Reserved	
ClkGen Spread Spectrum	:Enabled
CPU Host/PCI Clock (Mhz)	:Auto
-- System Monitor --	
Current CPU Temperature	:45°C/113°F
Current System Temperature	:32°C/89°F
Current CPU Fan Speed	:5200 RPM
Current System Fan Speed	:0 RPM
Vcore	:2.112V
+2.5V	:2.575V
+3.3V	:3.373V
+5.0V	:4.946V
+12.0V	:11.986V
ESC:Exit           ↑↓→←:Select Item	
F1 :Help            PU/PD/+/-:Modify	
F5 :Old Values (Shift)F2:Color	
F6 :Load BIOS Defaults	
F7 :Load Setup Defaults	

2. Use <up> and <down> to choose the item and <PgUp> and <PgDn> keys to modify the highlighted item.
3. After you have finished with the Peripheral Setup, press <ESC> to go back to the main menu.

**Description of the item on screen follows:****ClkGen Spread Spectrum**

This item allows you to select the clock generator Spread Spectrum function. The default setting is Enabled.

**CPU Host/PCI Clock (Mhz)**

BIOS will check the processor and set this function optimal.

## IDE HDD Auto Detection

You can use this utility to automatically detect the characteristics of most hard drives.

AMIBIOS SETUP - STANDARD CMOS SETUP										
(C)1999 American Megatrends, Inc. All Rights Reserved										
Date (mm/dd/yyyy):		Fri Oct 29, 1999								
Time (hh/mm/ss):		17:09:25								
	Type	Size	Cyln	Head	WPcom	Sec	LBA Mode	Blk Mode	PIO Mode	32Bit Mode
Pri Master	:Auto						On	On	AUTO	Off
Pri Slave	:Auto						On	On	AUTO	Off
Sec Master	:Auto						On	On	AUTO	Off
Sec Slave	:Auto						On	On	AUTO	Off
Floppy Drive A:		1.44 MB 3 1/2								
Floppy Drive B:		Not Installed								
Boot Section Virus Protection:		Disabled								
Available Options:		ESC:Exit								
Disabled		↑↓:Select Item								
Enabled		PU/PD/+/-:Modify								
		(Shift)F2:Color								

## Supervisor/User Password

This Main Menu item lets you configure the system so that a password is required each time the system boots or an attempt to enter the Setup program is made. Supervisor Password allows you to change all CMOS settings but the User Password setting doesn't have this function. The way to set up the passwords for both Supervisor and User are as follows:

1. Choose "Supervisor/User Password" in the Main Menu and press <Enter>. The following message appears:

"Enter New Supervisor/User Password:"

2. The first time you run this option, enter your password up to 6 characters only and press <Enter>. The screen will not display the entered characters. For no password, just press <Enter>.
3. After you enter the password, the following message appears prompting you to confirm the password:

"Retype New Supervisor/User Password:"

4. Enter exactly the same password you just typed in to confirm the password and press <Enter>.
  5. Move the cursor to Save and Exit Setup to save the password.
  6. If you need to delete the password you entered before, choose the Supervisor/User Password and press <Enter>. It will delete the password that you had before.
  7. Move the cursor to Save and Exit Setup to save the change you made. Otherwise, the old password will still be there when you turn on your machine next time.
-

## Chapter 4

### VIA CHIPSET DRIVER

#### Overview

The MS-6309 is paired with the VIA VT82C686A south bridge. Highly advanced, the south bridge combines an integrated 2D/3D engine with DVD hardware acceleration, AC-97 audio support for SoundBlaster Pro and FM synthesis legacy audio.

#### Audio Features

- AC'97 audio support for SoundBlaster Pro
- FM synthesis legacy audio

#### System Requirements

This section describes system requirements for the VGA Driver installation and Usage.

<b>Computer</b>	Intel® Celeron™/Coppermine FC-PGA
<b>Monitor</b>	VGA Support, minimum 640x480 resolution
<b>Operating system</b>	DOS 5.0 or higher, Windows® 95/98SE, Windows® NT 3.51 or 4.0, Windows® ME, Windows® 2000 or OS/2®
<b>CD-ROM</b>	Double Speed or Higher
<b>Chipset</b>	VIA® 694X/VT82C686A chipset

## **Driver Setup & Usage Procedures for Windows® 98SE**

Insert the CD-title into your CD-ROM drive. The CD will auto-run and will display the four icons in the monitor “VIA Chipset Drivers”, “VIA AC97 PCI Sound Drivers” and “Download VIA Drivers”. In order to install the drivers correctly, you must install the “Via Chipset Drivers” first, and then install the “VIA AC97 PCI Sound Drivers”.

### **VIA Chipset Drivers installation procedure:**

- Step 1:** Insert the provided CD\_ROM disk into the CD-ROM drive.
- Step 2:** Look for the CD\_ROM drive, double click on the CD\_ROM icon. This will show the setup screen.
- Step 3:** Click on “Via Chipset Drivers” icon and the screen will show “VIA Service Pack 4.XX”.
- Step 4:** Click “Next” and the screen will show four drivers “VIA Atapi Vendor Support Driver”, “AGP VxD Driver”, “VIA Chipset Function’s Registry” and “IRQ Routing Miniport Driver”. Select all four drivers and click on “Next”.
- Step 5:** The setup program will request you to choose “Install VIA Atapi Vendor Support Driver”. Please select “Install” and click “Next” to continue.
- Step 6:** Click to enabled DMA Mode, Please select “Install” and click “Next” to continue.
- Step 7:** The setup program will request you to choose “Install VIA AGP VxD in turbo mode”, “Install VIA AGP VxD in normal mode” or “Uninstall VIA AGP VxD”. Please select “Install VIA AGP VxD in turbo mode” and click on “Next”.

- Step 8:** The setup program will let you choose between “Install VIA Chipset Functions Registry” or “Uninstall VIA Chipset Functions Registry”. Please select “Install VIA Chipset Functions Registry” and then click “Next”.
- Step 9:** The setup program will let you choose between “Install VIA IRQ Routing Miniport Driver” or “Uninstall VIA IRQ Routing Miniport Driver”. Please select “Install VIA IRQ Routing Miniport Driver”.
- Step 10:** The setup program will request you to choose whether to restart the computer or not. Please select “Yes, I want to restart my computer now” and click Finish. The computer will restart and finish the VIA Chipset Drivers installation.

**VIA AC97 PCI Sound Drivers installation procedure:**

- Step 1:** Insert the provided CD\_ROM disk into the CD-ROM drive.
- Step 2:** Look for the CD\_ROM drive, double click on the CD\_ROM icon. This will show the setup screen.
- Step 3:** Click on “VIA AC97 PCI Sound Drivers” icon and the screen will show “VIA AC97 PCI Sound Drivers”.
- Step 4:** Click “Next” to proceed and the screen will show “Install”, or “Uninstall”. Select “Install” and then click on “Next”.
- Step 5:** Click “Finish” to complete the AC97 Audio Driver Installation.

## **Driver Setup & Usage Procedures for Windows® ME & 2000**

### **VIA Chipset Drivers installation procedure:**

- Step 1:** Insert the provided CD\_ROM disk into the CD-ROM drive.
- Step 2:** Look for the CD\_ROM drive, double click on the CD\_ROM icon. This will show the setup screen.
- Step 3:** Click on “Via Chipset Drivers” icon and the screen will show “VIA Service Pack 4.XX”.
- Step 4:** Click “Next” and the screen will show VIA Service Pack (VIA 4 in 1) Readme.TXT
- Step 5:** Click “Yes” and the screen will show two drives “AGP VxD Driver” and “VIA INF Driver 1.0x.” Select all and click “Next” to proceed to next step.
- Step 6:** The setup program will request you to choose “Install AGP 4X/133 Driver”. Select “Install” and then click on “Next”.
- Step 7:** The setup program will request you to choose whether to restart the computer or not. Please select “Yes, I want to restart my computer now” and click Finish. The computer will restart and finish the VIA Chipset Drivers installation.

### **VIA AC97 PCI Sound Drivers installation procedure:**

- Step 1:** Insert the provided CD\_ROM disk into the CD-ROM drive.
- Step 2:** Look for the CD\_ROM drive, double click on the CD\_ROM icon. This will show the setup screen.
- Step 3:** Click on “VIA AC97 PCI Sound Drivers” icon and the screen will show “VIA AC97 PCI Sound Drivers”.
- Step 4:** Click “Next” to proceed and the screen will show “Install”, or “Uninstall”. Select “Install” and then click on “Next”.

**Step 5:** A window “Digital Signature Not Found” will appear and will request “Do you want to continue the installation of the VIA AC’97 Audio Controller (WDM) Driver?” Please click “Yes” to proceed.

**Step 6:** Click “Finish” to complete setup.

## **Windows® NT 4.0**

Install Windows® NT 4.0 Service Pack 3 or the latest version before installing the VIA drivers.

Insert the CD-title in the CD-ROM drive. The CD will auto-run and will display four icons on the screen “VIA Chipset Drivers”, “VIA AC97 PCI Sound Drivers” and “Download VIA Drivers”. In order to install the drivers properly, install the “VIA Chip Drivers” first and then install the “VIA AC97 PCI Sound Drivers”.

### **VIA Chipset Drivers Installation Procedure:**

- Step 1:** Insert the provided CD\_ROM disk into the CD-ROM drive.
- Step 2:** Look for the CD\_ROM drive, double click on the CD\_ROM icon. This will show the setup screen.
- Step 3:** Click on “VIA Chipset Drivers” icon and the screen will show “VIA Service Pack 4.XX”.
- Step 4:** Click “Next” to proceed and the screen will show “Install”, “Uninstall” or “Enable/Disable Ultra DMA for IDE Driver”. Select “Install” and then click on “Next”.
- Step 5:** Please click on “Yes, I want to restart my computer” to complete setup.

**VIA AC97 PCI Sound Drivers Installation Procedure:**

- Step 1:** Insert the provided CD\_ROM disk into the CD-ROM drive.
- Step 2:** Look for the CD\_ROM drive, double click on the CD\_ROM icon. This will show the setup screen.
- Step 3:** Click on “VIA AC97 PCI Sound Drivers” icon and the screen will show the “VIA PCI Audio Drivers” setup screen. Click “Next” to continue
- Step 4:** The setup program will show “Install” or “Uninstall” in the screen. Select “Install” and click “Next”
- Step 5:** The setup program will show the following on the screen:

Please choose “Add” from the next window  
and add the following device:  
VIA AC97 PCI Audio Device  
VIA MIDI External Port

Then click “OK”.

- Step 6:** Follow the steps shown in **Step 5** to finish the VIA AC97 PCI Audio Drivers Installation.
- Step 7:** A window will appear asking “Do you want to install the joystick driver for the Microsoft Sidewinder 3D Pro Joystick?” Please click “No” to continue.
- Step 8:** Please click “Finish” to complete setup.