

AmazePc[®] Inc.,

**AM-810DS
ATX Form Factor
Main Board
User's Manual**

For instant technical support and latest information, please visit
www.amazepc.com and talk to us at www.amazepc.com/chat or
ICQ56257071

Copyleft

Copyleft ©1999 by Amazepc[®] Inc,. Any part of this document may be reproduced, transmitted, transcribed, stored in a retrievable system, or translated into any natural or computer language, in any form or by any means without prior written permission. This manual and the information contained herein are protected by copyleft. No rights reserved.

Manual version: 1.0
Ref. No: A3053201
Published in 1999

Warning and disclaimer

This manual is designed to provide information about the Pentium® II/III main board. Meticulous efforts have been made to make this manual as accurate as possible, but no warranty or fitness is implied. All the information is provided on an 'as is' basis. The author and his corresponding publishing company shall have neither liability nor responsibility to any person or entity with respect to any loss or damages arising from the information contained in this manual or from the use of the system board that accompanies it.

Information contained in this manual is subject to change without notice. The manufacturer of the system board will not be held responsible for technical or editorial omissions made herein, nor for the incidental or consequential damages resulting from its furnishing, performance, functionality or use. Subsequent changes to this manual will be incorporated into the next edition. We welcome any suggestion regarding this manual or our computer products.

Trademarks

- Intel® and Pentium® are registered trademarks of Intel® Corporation.
- IBM® is a registered trademark of International Business Machines Corporation.
- Microsoft is a registered trademark of Microsoft® Corporation.
- PCI is a registered trademark of PCI Special Interest Groups.
- AWARD® is a registered trademark of Award Software Inc.

All other trademarks are the property of their respective owners.

Table of Contents

■	Chapter 1 Introduction.....	1
1-1	Overview.....	1
1-2	Specifications.....	3
1-3	Notice of Hardware Installation.....	5
1-4	Notice of CD Driver Installation.....	6
1-5	Software Driver Installation.....	7
■	Chapter 2 Installation.....	9
2-1	Layout Reference.....	9
2-2	Jumper Setting.....	10
2-2-1	JP1 : Keyboard Wake Up Selector.....	10
2-2-2	JP2 : Flash ROM Function Selector.....	11
2-2-3	JP13 : CMOS Status.....	12
2-2-4	JP9/JP10 : AudioFunction Selector.....	13
2-2-5	S2 : CPU Frequency Selector.....	14
2-3	Connectors	15
2-3-1	Front Panel.....	15
2-3-2	Back Panel.....	17
	COM1/COM2.....	18
	KBD/PS2 MOUSE.....	18
	LPT.....	18
	USB1.....	18
	Midi/Game Port & External Audio Connectors.....	18
2-3-3	ATX Power Supply Connector.....	19
2-3-4	CPU Fan Connectors.....	20
2-3-5	I.R. Connector.....	21
2-3-6	Floppy Disk Connector.....	22
2-3-7	IDE1 & IDE2.....	23
2-3-8	TV-OUT Function & NTSC/PAL Connector(optional).....	24
2-3-9	JP5/JP6 : CD-IN.....	25

2-3-10	WOL1 : Wake up on LAN.....	26
2-4	DIMM Installation.....	27
■	Chapter 3 BIOS Setup.....	28
3-1	Award BIOS CMOS Setup.....	28
3-1-1	Standard CMOS Setup.....	29
3-1-2	Advanced BIOS Features	35
3-1-3	Chipset Features Setup.....	39
3-1-4	Integrated Peripherals.....	42
3-1-5	Power Management Setup.....	45
3-1-6	PNP/PCI Configuration Setup.....	49
3-1-7	Frequency/Voltage Control.....	51
3-1-8	PC Health Status.....	52
3-1-9	Supervisor/User Password.....	53
3-1-10	Load Fail-Safe Defaults.....	56
3-1-11	Load Optimized Defaults.....	57
3-1-12	Save and Exit Setup.....	58
3-1-13	Quit Without Saving.....	59
■	Chapter 4 Appendix.....	60
4-1	Memory Map.....	60
4-2	I/O Map.....	61
4-3	Time & DMA Channels Map.....	62
4-4	Interrupt Map.....	63
4-5	RTC & CMOS RAM Map.....	64
4-6	Award BIOS Hard Disk Type.....	65
4-7	ISA I/O Address Map.....	67
■	Chapter 5 Q & A.....	69
5-1	Error Messages During Power on Self Test.....	69

Chapter 1 Introduction

1-1 Overview

AmazePC[®] i810 series

The AmazePC[®] i810 DC-100 and i810 E model type main board utilizes Intel's latest i810 chipset integrated with new architects such as integrated graphic, sound, ULTRA DMA-66 (optional), USB & AMR is designed to fit INTEL PPGA type **Slot-1** PII/III CPUs.

Intel's i810 is a cost-effective yet high-performance chipset which has integrated graphics controller (i752) with a 24 Bit 230MHz RAMDAC & software MPEG2 DECODE. It supports UMA (unified memory architect) mode up to 64MB with main memory or 4MB 3D texture memory (or called display cache) that can accelerate its 3D graphics performance. The on board AD1881 AC-97 CODEC chip provides perfect 3D sound function.

The main board also employs ITE I/O LPC controller utilizing with fully Plug and Play device and keyboard password setup. It supports 2.88 MB Floppy, Dual 16550 compatible (with 16 bytes FIFO, up to 460K baud rate) serial Port, ECP (Enhanced Capabilities Port), EPP (Enhanced Parallel Port) parallel port, SPP (Standard Parallel Port), Infrared IrDA (HPSIR), and Amplitude Shift Keyed IR. (ASKIR) port and hardware monitor functions too.

The main board contains 5*PCI for highest performance I/O add-on adapter cards. The system board supports three Bus Mastering Slots for high-performance I/O add-on cards. It supports Matrix Independent PCI routing for optimal multiple PCI adapter operations and is PCI2.2 specification compliant. 133MB/s data transfer rate can be compared to 33MB/s on EISA bus or 8MB/s on ISA bus. It supports back to back sequential CPU to PCI Memory writes to PCI Burst Write for full PCI throughput. The new AMR Slot is designed to fit low cost A (Audio) M (Modem) R (Riser) or MR card.

The main board has 2 dual in-line memory modules (DIMM) which can be installed with PC-100 SDRAM memory. The memory subsystem supports up to 512 MB SDRAM of non-buffered 3.3V using standard 168-pin DIMM sockets.

The main board is strengthened with Power Management Wake up Event such as **“Modem ring on”** which is the new invention to enable PCs to be turned on via the network or modem. These are also key benefits in PC operation, asset management, and new system setup and power conservation.

In conclusion, the system chipset and design make the main board a high performance, cost-effective, and energy efficient main board which meets a variety of price/performance levels. The main board is an ideal platform for the increasing requirements of today’s and future’s desktop applications.

1-2 Specifications

- **Chipset:** There are 4 sets of i810 listed as below:

Type	810-L	810	810-DC100	810E-133
North	GMCH0	GMCH0	GMCH	GMCH-E
South	ICH0	ICH	ICH	ICH
FSB	100MHz	100MHz	100MHz	133MHz
Display Cache	NO	NO	Yes, 100MHz	Yes, 100MHz
ATA	ATA33	ATA66	ATA66	ATA66
PCI REQ/GNT	4	6	6	6

- **CPU :** Can take Slot-1 100MHz type PII/PIII CPUs.
- **Memory :** accepts 2 * DIMM in PC-100 specification memory
- **VGA :** On chip 3D graphics function with shared 4MB (i810DC -100/133) 3D texture memory (or called display cache)
- **Sound :** Provides sound function with AD1881 AC-97 3D sound CODEC.
- **Expansion Slot :** 5 x PCI slots, 1 x AMR(used for AMR card or MR card)
- **IDE :** support ULTRA DMA66(i810, i810DC-100/133) mode
- **PCB Board size :** 30.5cm x 22.0cm, ATX form factor
- **Optional Items:**
 - TV-out (Chrontal CH7007 chip is needed)



ion : System needs PC-100 memory & over 1 Ampere current power supply for this main board

● **Other features**

- Modem ring on
- Windows 95/98 power off
- Keyboard wake-up
- Mouse wake-up
- DMI, ACPI supported BIOS
- Suspend to memory (S3) function

1-3 Notice of Hardware Installation

Before installing the main board hardware, note the following things.

A. Check the package

If any of the below items is missing or damaged, contact the dealer from whom you purchase. Leave this main board in its original package until you are ready to install it. In the package, there are:

- the main board
- manual
- cables
- driver & utility / CD

B. Make sure power is off.


During hardware installation, be sure that there is no power connected in this period.

C. Avoid ESD (Electrical Static Discharge)

While working with this main board, always wear a grounded wristband or ankle strap to avoid ESD (Electrical Static Discharge).

1-4 Notice of CD Driver Installation

This CD contains the following drivers. The user must read “Index” (HTML format) before installing required drivers. Index offers all the information on all the drivers.

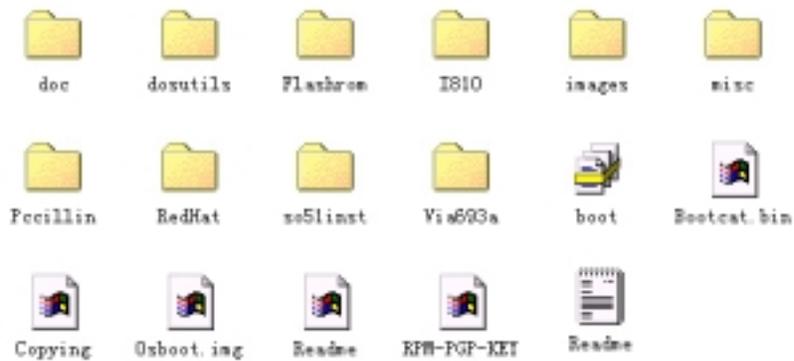

 *CD driver is always updated with the latest version, and thus the actual CD content may be different from the above picture.*

1. **Main boards:** VIA® , i810 - based main boards
2. **Sound:** ESS-solo-1 sound driver
3. **Hardware monitoring :** CPU voltage/temperature and fan speed detection software
4. **Pccillin :** anti-virus protection software

 *select i810 directory for this main board.*

 *to “CIH” virus will damage Bios completely, user needs to load PC-cillin anti-virus software when sets up system.*

1-5 Software Driver Installation

Unlike i440BX and i440LX, i810 chipset is not supported by the drivers in Windows-95 or Windows-98, **USERS NEED TO INSTALL DRIVERS VERY CAREFULLY OR SYSTEM WILL HANG UP UNEXPECTEDLY!**

Load drivers from attached CD & find sub-directories under i810 directory as:

INTELINE..... (Setup driver for i810 chipset)
INF -- |
INFINSTV1.0(Setup driver for i810 chipset)
VGAPV10..... (VGA Driver)
DX7.0..... (DIRECTx7 Driver)
AD1881..... (Drivers for sound function)

User needs to install drivers

INTELINE → **INFINSTV1.0** → **VGAPV10** → **DX7** → **AD1881** as below

1. FOR WINDOWS 95:

- (1) Install Intel INFV1.0 file:
 - A. Install Window 95 OSR2 V2.0 or higher version firstly.
 - B. Install “USBSUPP” driver.
 - C. Load attached CD & find “INF” directory. Then find sub-directory named “Intel INF V1.0” & execute “Setup” file, during the selection procedure, to select: “Windows-95 with USB supplement “for OSR2 or higher version, if not, select: “Windows-95 without USB supplement” don’t select “Windows-98”.
- (2) Install InfinstV1.0 file
 - A. Back to find InfinstV1.0 sub-directory and execute “Setup”, just answer Questions to complete it & restart system again (to update it to Win-95)

(3) VGA Driver Installation :

- A. Find directory VGAPV10 and Win9X sub-directory then execute SETUP and RESTART system.
- B. Find DX7 and execute DIRECTx7, then RESTART system to Complete VGA driver's installation.

(4) Audio Driver Installation

- A. Find "AD1881 DRI" sub-directory, then find Win-95 sub-directory, then find "DRIVER 0040" execute "SETUP" & restart system.

2. FOR WINDOWS 98:

The installation procedures are similar to Windows 95, below are the differences:

- A. No need to install "USBSUPP" driver.
- B. When installing INTELINF & execute SETUP, select "Window-98".
- C. When installing VGA and sound driver, select Win98 instead of Win95.

3. FOR LINUX


Automatic installation procedures are similar to Windows 95, below are the differences:

- D. No need to install "USBSUPP" driver.
- E. When installing INTELINF & execute SETUP, select "Window-98".
- F. When installing VGA and sound driver, select Win98 instead of Win95.

 *ions: When install Windows 95/98, don't change the default directory path called "windows" or Sound chip AD1881 can't find corrects path and causes users to be unable To be complete the installation.*

Chapter 2 Installation


2-1 Layout Reference

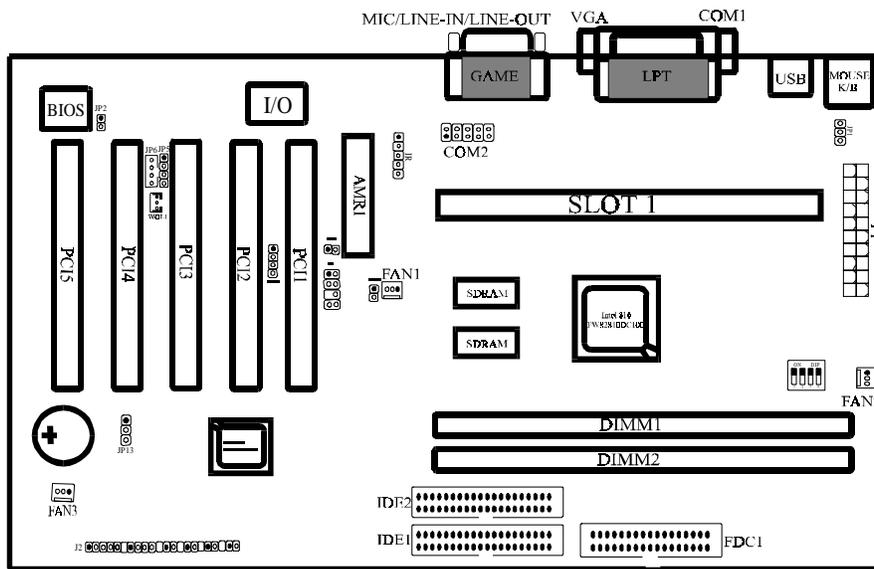

2-2 Jumper Setting


2-2-1 JP1 : Keyboard Wake Up Selector

Set “1-2” to disable and set “2-3” to enable keyboard wake up function.

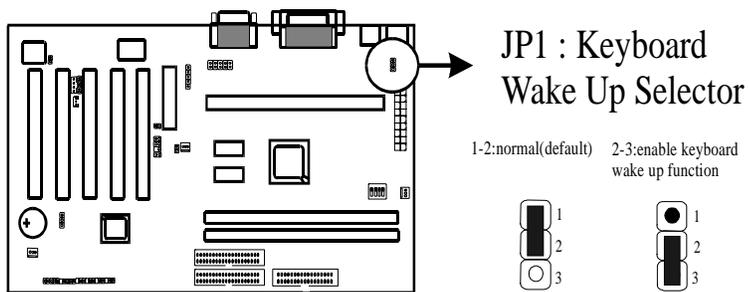


2-2-2 JP2 : Flash ROM Function Selector

JP2 is a 2-pin connector, which provides Flash ROM function.

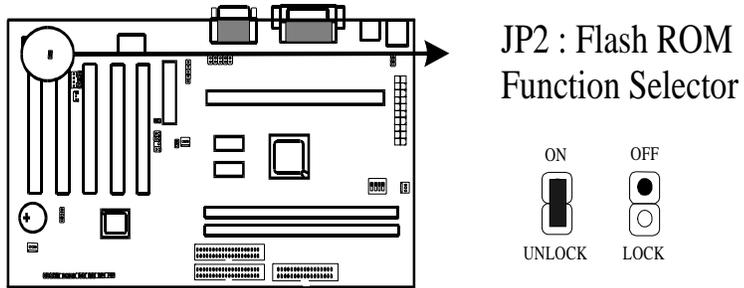

2-2-3 JP13 : CMOS Status

Please clear CMOS if password is forgotten. Below is the detail to clear CMOS.

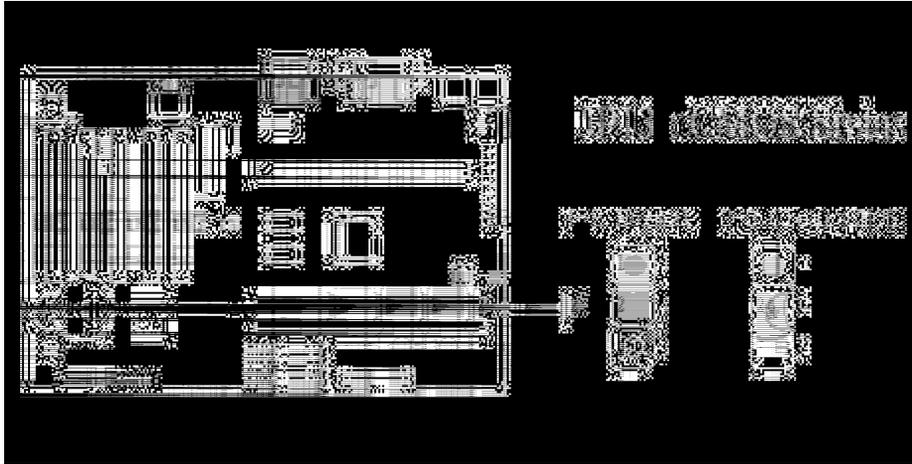

Procedure to clear CMOS:

Step 1: Shut down the system and disconnect the power supply from AC power.

Step 2: Pull out the power supply cable from the power connector.

Step 3: Short the CMOS jumper by putting jumper cap on Pin 2-3 for a few seconds.

Step 4: Return the cap to pin 1-2 at normal setup.


Step 5: Link the power cable to the connector & connect AC power to power supply.

Step 6: Turn on system power.

If you'd like to set password, press "Del" Key during system boot up to enter CMOS setup and Establish a new password.

2-2-4 JP9/JP10 : Audio Function Selector


JP9/JP10 are audio function selectors. Please select the right functions as following.

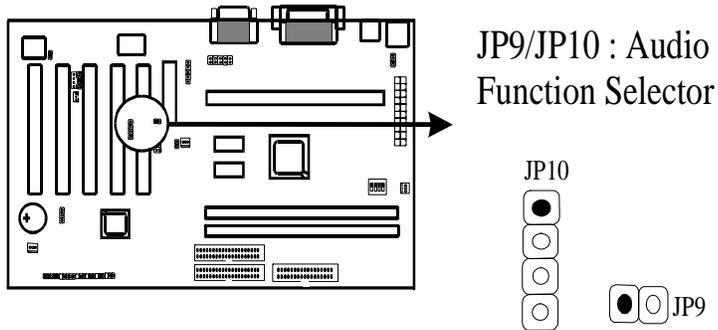

	JP9	JP10
AC97	1-2	3-4
MC97	OPEN	1-2
AC97+MC97	1-2	1-2, 3-4
AMR	OPEN	1-2

2-2-5 S2 : CPU Frequency Selector

S2 is a 4-pin DIP switch. Select the right frequency according to your CPU, and see details as following.

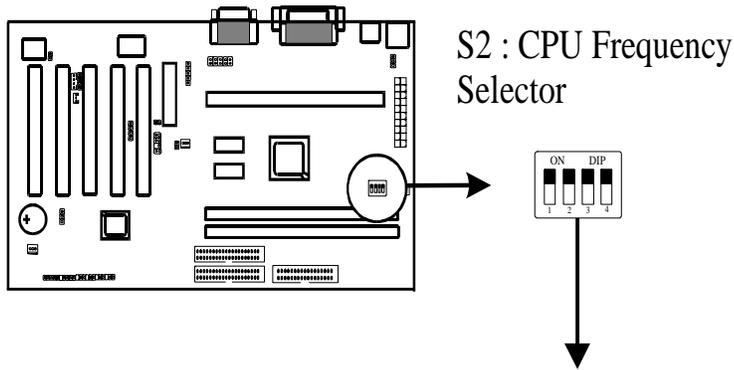


CPU FSB FREQ.	S2			
	1	2	3	4
66 MHz	ON	ON	ON	ON
100MHz	ON	ON	OFF	ON
133MHz	ON	OFF	OFF	ON

2-3 Connectors

2-3-1 Front Panel

Front panel has connectors such as “PW-LED,” “SPEAKER,” “RESET,” “HDD-LED,” “TB-LED,” “SOFT-PWR.” Please refer to the following further information.

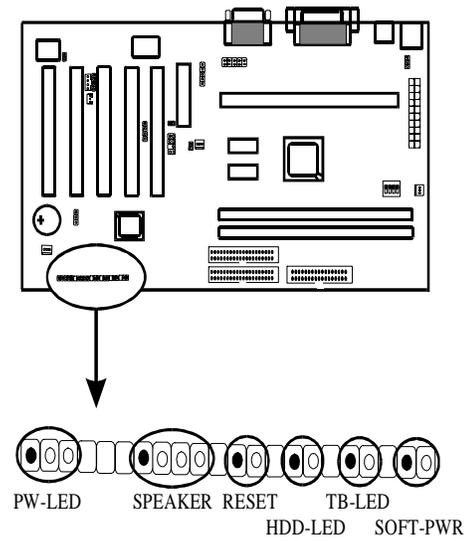

PW-LED is a 3-pin connector. It is used to connect to the LED on the case front panel. The LED shows the status of the power.

SPEAKER is a 4-pin keyed Berg strip. It is used to connect to the case speaker to the main board for sound purpose.

RESET is a 2-pin keyed Berg strip, connected to the push button reset switch on the case's front panel. Shorting both pin 1 & pin 2 can reset the system, which is similar to the power off and then on again.


HDD-LED (Hard Disk activity LED connector) is a 2-pin keyed Berg strip. It is used to connect to front panel Hard Disk LED.

TB-LED is a 2-pin Berg strip on case front panel indicates the current speed status of system.

SOFT-PWR is ATX Soft-PWR with 2 pins. SOFT-PWR is for ATX power supply only.

2-3-2 Back Panel

Back Panel Connectors are GAME Port, MIC, LINE-IN, LINE-OUT, COM1/COM2, VGA, LPT, USB, PS/2 keyboard, and PS/2 mouse on case back panel.

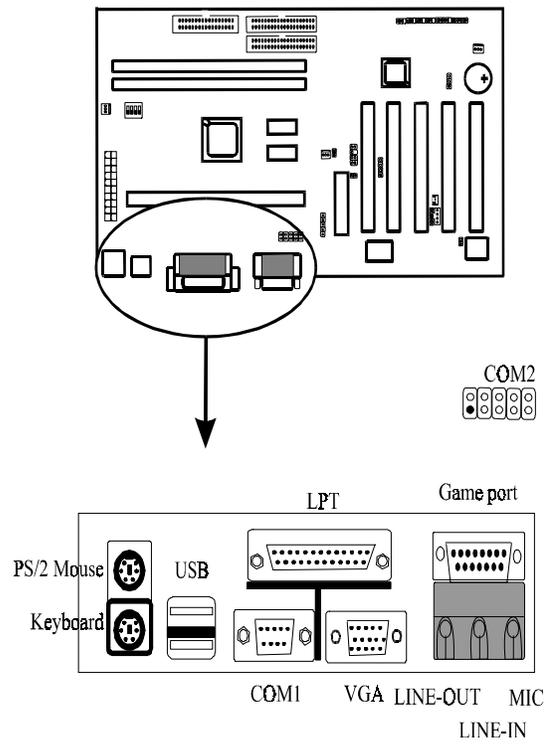

COM1 & COM2

The onboard serial port 1 and port 2 are the 9-pin D-subminiature male connector COM1 and COM2. COM1 and COM2 can be disabled in BIOS setup. Please refer to Chapter 3 “Integrated Peripherals” for more information.

KBD/PS2 MOUSE

LPT *the onboard PS/2 keyboard and mouse connectors* are 6-pin Mini-Din Connectors.

The onboard parallel port is a 25-pin female connector. It supports standard Printer port, Enhanced Parallel Port (EPP), Extended Capabilities Port (ECP), Standard Parallel Port (SPP).

USB1: USB (Universal Serial Bus) Connector


Universal Serial Bus connector, marked as “USB,” is used to connect USB devices. There are 2 USB connectors on this main board.

Midi/Game Port & External Audio Connectors

Midi/Game port has 15 pins connecting to the game joystick. External Audio connectors are “LINE-OUT, LINE-IN, MIC-IN” for audio functions.

2-3-3 ATX Power Supply Connector


ATX power connector has 20 pins, which is especially designed for ATX case. The ATX power supply supports the function of the “**Soft Power On Momentary Switch**” which connects the front panel switch to the 2-pin **SOFT-PWR** on the system board. While the power switch on the back of ATX power is turned on, the full power will not go into the system board until the front panel switch is momentarily pressed. Push the switch again to turn off the power to the system board.

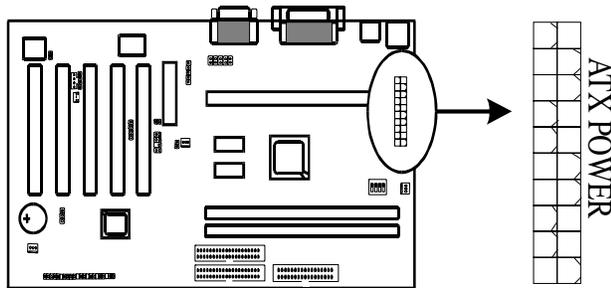

To support i810 chipset, we suggest that Pin 17 signal 5VSB on ATX Power supply should be able to offer at least 1A driving ability.

2-3-4 CPU & CHIPSET Fan Connectors


There are 3 fan connectors on this system board, and it is marked as “CPUFAN”. Each fan connector has three pins.

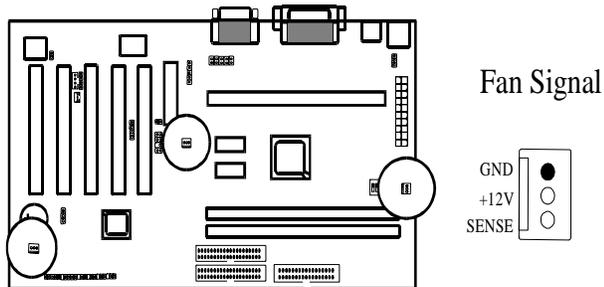

2-3-5 I.R. : IrDA Connector

IR connector supports wireless infrared module. With this module and application software like Laplink, or Win95 Direct Cable Connection, user can transfer data to or from laptops, notebooks, PDA and printers. This connector supports **HPSIR**, **ASKIR**, and **Fast IR**.


Attach Infrared module to IR connector. Be sure to put in the right direction during installation.

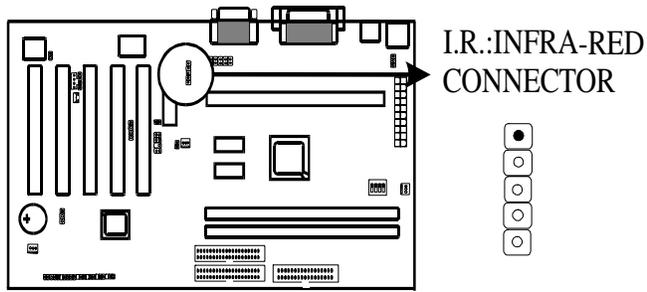

	IR
1	VCC
2	NONE
3	IRRX
4	IRTX
5	GND


2-3-6 Floppy Disk Connector

Floppy Disk Connector has 34 pins and is used to attach the floppy drive cable.

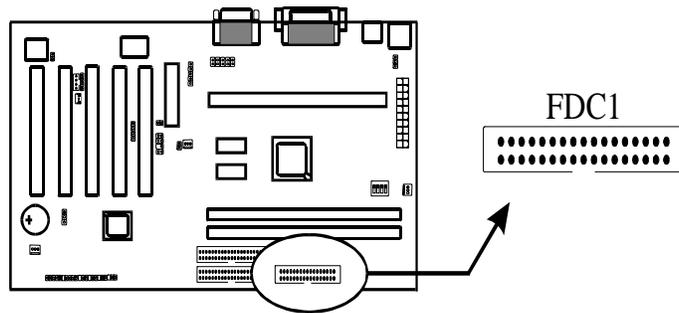


2-3-7 IDE1 & IDE2

IDE1 and IDE2 are 39-pin IDE connectors (Ultra 66). **IDE1** is primary channel, and **IDE2** is secondary channel. Each channel supports 2 IDE devices, and 4 devices in total for this main board.

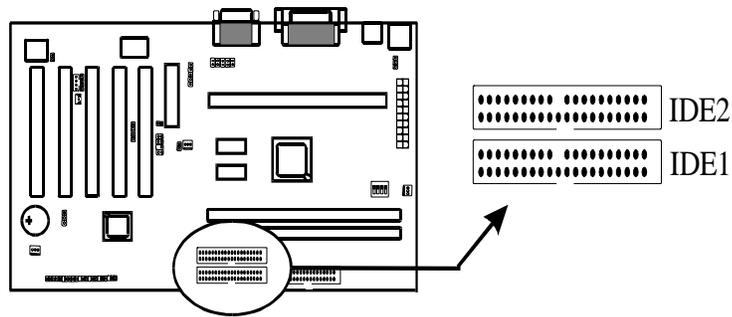


2-3-8 J1/JP11 : TV-OUT Function & NTSC/PAL Connector (Optional)

J1, a 7-pin connector provides TV-OUT function and JP11, a 2-pin connector provides to connect NTSC/PAL. (Optional item)

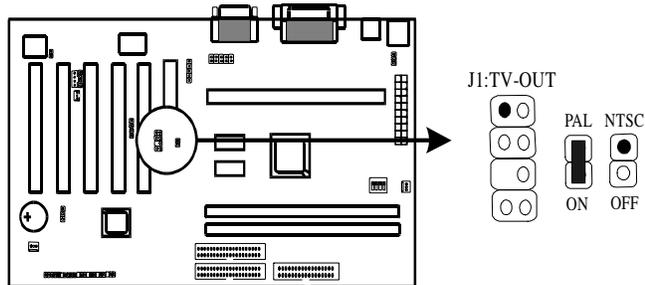


2-3-9 JP5/JP6 : CD-IN

CD-IN is a CD ROM external audio input signal to line-out (speaker) of the main board.

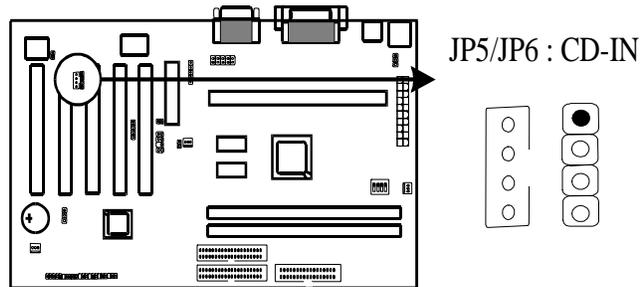

2-3-10 WOL1 : Wake up on LAN

Wake up on LAN, marked as “WOL,” is a 3-pin connector. To support this feature, a network card is required for the system and network management software must be installed too.

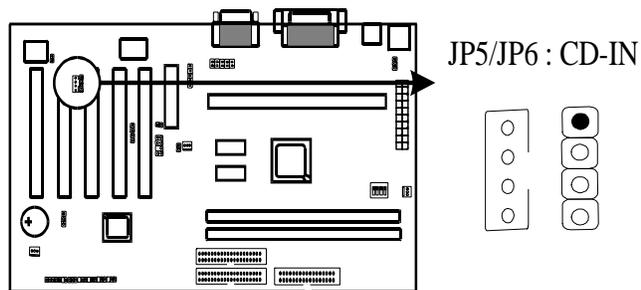


 *(Wake up on LAN) function requirement:*
Power supply should be able to offer at least 750 mA driving ability to the Signal “5V trickle voltage.”

2-4 DIMM Installation

Please make sure DIMM is 3.3V DIMM. Either DIMM1 or DIMM2 supports 8 MB, 16 MB, 32 MB, 64 MB, and 128MB. Maximum memory for **SDRAM** is up to **512 MB**. The user may insert DIMM modules in either DIMM1, or DIMM2.

Insert the module as shown. Due to different number of pins on either side of the breaks, the module will only fit in the direction as shown. SDRAM DIMM modules have different pin contacts on each side and therefore have a higher pin density.

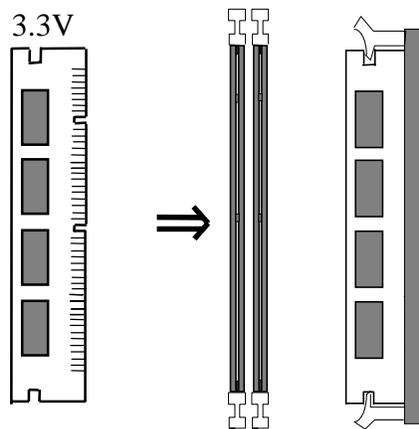

 RAM memory supports PC-100 DIMM.

Chapter 3 BIOS Setup

3-1 Award® BIOS CMOS Setup

CMOS Setup Utility - Copyright (C) 1984-1999

Standard CMOS Feature	Frequency/Voltage Control
Advanced BIOS Feature	Load Fail-Safe Defaults
Advanced Chipset Feature	Load Optimized Defaults
Integrated Peripherals	Set Supervisor Password
Power Management Setup	Set User Password
PnP/PCI Configurations	Save & Exit Setup
PC Health Status	Exit Without Saving
Esc : Quit F9 : Menu in BIOS ↑ ↓ ← → : Select Item	
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type	

The menu displays all the major selection items and allows user to select any of the shown item. The selection is made by moving cursor (press any direction key) to the item and press <Enter> key. An on-line help message is displayed at the bottom of the screen as cursor is moves to various items which provides user better understanding of each function. When a selection is made, the menu of the selected item will appear. So the user can modify associated configuration parameters.

3-1-1 Standard CMOS Setup

.CMOS Setup Utility – Copyright© 1984-1999 Award Software
Standard CMOS Features

Date:	Thu, Nov 4	Item Help
1999		
Time:	8:46:30	
➤ IDE Primary Master	Press Enter	Menu Level ➤
None		Change the day, month,
➤ IDE Primary Slave	Press Enter	year and century
None		
➤ IDE Secondary Master	Press Enter	
None		
➤ IDE Secondary Slave	Press Enter	
None		
Drive A	1.44M, 3.5 in.	
Drive B	None	
Video	EGA/VGA	
Halt On	All,But	
Keyboard		
Based Memory	640K	
Extended Memory	63488K	
Total Memory	64512K	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults		

The "Standard CMOS Setup" allows user to configure system setting such as **current date** and **time, type of hard disk drive** installed in the system, **floppy drive type**, and the type of **display monitor**. Memory size is auto detected by the BIOS and displayed for your reference. When a field is highlighted (direction keys to move cursor and <Enter> key to select). The entries in the field will be

changed by pressing <PageDown> or <PageUp> key or user can enter new data directly from the keyboard.

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software
 IDE Primary Master

IDE HDD Auto-Detection	Press Enter	Item Help
IDE Primary Master	Auto	
Access Mode	Auto	
Capacity	0 MB	Menu Level >
Cylinder	0	To auto-detect the HDD's size, head
Head	0on this channel.
Precomp	0	
Landing Zone	0	
Sector	0	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

Hard Disk Configurations

- 1. IDE HDD Auto-Detection:** press this item to Auto Detect the HDD type.
- 2. IDE Primary Master :** select "AUTO" to detect the mode type automatically. Select "NORMAL" users have to redefine the following 4-8 items according to HDD. "NONE" means this item disabled.
- 3. ACCESS MODE :** select "AUTO" to detect the mode type automatically. If your hard disk supports the **LBA** mode, select "**LBA**" or "**LARGE**". However, if your hard disk cylinder is more than 1024 and does not support the LBA function, you have to set at "**LARGE**." Select "**NORMAL**" if your hard disk supporting cylinder is below 1024.
- 4. CYLS :** the cylinder number of the hard disk.
- 5. HEAD :** the read/write head number of hard disk. The range is from "**1**" to "**16**".
- 6. PRECOMP:** the cylinder number at which the disk drive changes the write timing.
- 7. LANDZ :** the cylinder number that the disk drive heads (read/write) are seated when the disk drive is parked.
- 8. SECTOR :** the sector number of each track defined on the hard disk. The range is from "**1**" to "**64**".



Note1: if hard disk primary master/slave and secondary master/slave were set to "auto", the hard disk size and model will be auto detected on display during POST.



Note2: "halt on" is to determine when to halt the system by the BIOS if error occurred during POST.

The Award® BIOS supports 3 HDD modes: **NORMAL, LBA & LARGE.**

1. Normal mode

Generic access mode in which neither the BIOS nor the IDE controller will make any transformations during accessing.

The maximum number of cylinders, head & sectors for normal mode are **1024, 16 & 63.**

No. Cylinder	(1024)
X No. Head	(16)
X No. Sector	(63)
X No. Per Sector	(512)
	<hr/>
	528 MB

If user set this HDD to normal mode, the maximum accessible HDD size will be 528 MB even though its physical size may be greater than that!

2. LBA (Logical Block Addressing) Mode

A new HDD accessing method to overcome the 528 MB bottleneck. The number of cylinders, heads & sectors shown in setup may not be the number physically contained in the HDD. During HDD accessing, the IDE controller will transform the logical address described by sector, head & cylinder into its own physical address inside the HDD.

The maximum HDD size supported by LBA mode is 8.4 GB which is obtained by the following formula:

$$\begin{array}{r} \text{No. Cylinder} \quad (1024) \\ \text{X No. Head} \quad (255) \\ \text{X No. Sector} \quad (63) \\ \hline \text{X No. Bytes Per Sector} \quad (512) \\ \hline 8.4 \text{ GB} \end{array}$$

3. Large Mode

Extended HDD access mode supported by Award® software. Some IDE HDDs contain more than 1024 cylinder without LBA support (in some cases, users do not want LBA). The Award® BIOS provides another alternative to support these kinds of large mode:

<u>Cyls.</u>	<u>Head</u>	<u>Sector</u>	<u>Mode</u>
1120	16	59	NORMAL
560	32	59	LARGE

BIOS tricks DOS (or other OS) that the number of cylinders is less than 1024 by dividing it by 2. At the same time, the number of heads is multiplied by 2. A reverse transformation process will be made inside int 12h in order to access the right HDD address the right HDD address!

4. Maximum HDD Size:

	No. Cylinder	(1024)
X	No. Head	(32)
X	No. Sector	(63)
X	No. Bytes Per Sector	(512)

1 GB

 **To support LBA or large mode of HDDs**, there must be some softwares involved. All these softwares are located in the Award® HDD service routine (int 13h). It may be failed to access a HDD with LBA (large) mode selected if you are running under an operating system which replaces the whole int 13h. Unix operating systems do not support either LBA or large and must utility the standard mode. Unix can support drives larger than 528MB.

3-1-2 Advanced BIOS Features

Menu below shows all of the manufacturer's default values of this main board. Move the cursor by pressing <PageDown>/- or <PageUp>/+ key to modify the parameters, press [F1] key to display help message of the selected item. This setup program also provide 2 convenient ways to load the default parameter data from BIOS [F6] and [F7] area if shown data is corrupted. This provides the system a capability to recover from any possible error.

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software
Advanced BIOS Features

Virus Warning	Disabled	Item Help
CPU Internal Cache	Enabled	
External Cache	Enabled	
CPU L2 Cache ECC Checking	Enabled	
Processor Number Feature	Enabled	Menu Level >
Quick Power On Self Test	Enabled	Allows you to choose the VIRUS
First Boot device	Floppy	warning feature for IDE Hard Disk
Second Boot device	HDD-0	boot sector protection. If this
Third Boot device	LS/ZIP	function is enabled and someone
Boot other device	Enabled	attempt to write data into this
Swap Floppy Drive	Disabled	area, BIOS will show a warning
Boot Up Floppy Seek	Enabled	message on screen and alarm beep
Boot Up NumLock Status	Off	
Gate A20 Option	Fast	
Typematic Rate Setting	Disabled	
Typematic Rate (Chars/Sec)	6	
Typematic Delay (Msec)	250	
Security Option	Setup	
OS Select For DRAM > 64MB	Non-OS2	
Report No FDD For WIN95	Yes	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults		

Virus Warning

:Enabled

:Disabled (default)

CPU Internal Cache

Enabled : enable L1 cache (default)

Disabled: disable L1 cache

External Cache

Enabled (default): enable L2 cache

Disabled: disable L2 cache

CPU L2 Cache ECC Checking

Enabled (default): enable L2 cache ECC checking

Disabled: disable L2 cache ECC checking

Processor Number Feature

:Enabled(default)

:Disabled

Quick Power On Self Test

This category speeds up power on self test.

Enabled (default) : BIOS will shorten or skip some check items.

Disabled: normal speed

First Boot Device

This category determines which drive the system searches first. System will search in turn for floppy disk drive; second is hard disk drive, and finally Floppy drive. Default value is **“FLOPPY”**. Options are as below:

**FLOPPY; LS/ZIP; HDD-0; SCSI; CDROM; HDD-1; HDD-2; HDD-3; LAN;
Disable**

Second Boot Device

This category determines which drive the system searches first. System will search in turn for floppy disk drive; second is hard disk drive, and finally Floppy drive. Default value is "**HDD-0**". Options are as below:

**FLOPPY; LS/ZIP; HDD-0; SCSI; CDROM; HDD-1; HDD-2; HDD-3; LAN;
Disable**

Third Boot Device

This category determines which drive the system searches first. System will search in turn for floppy disk drive; second is hard disk drive, and finally Floppy drive. Default value is "**LS/ZIP**". Options are as below:

**FLOPPY; LS/ZIP; HDD-0; SCSI; CDROM; HDD-1; HDD-2; HDD-3; LAN;
Disable**

Swap Floppy Drive

Enabled: floppy A&B will be swapped.

Disabled(default): floppy A&B will not be swapped.

Boot Up Floppy Seek

BIOS will determine if the floppy disk drive is 40 or 80 tracks. 360k type is 40 tracks while 720K/ 1.2M and 1.44M are all 80 tracks. Default value is **enabled**.

Boot Up Numlock Status

:On

:Off (default)

Gate A20 Speed

:Normal

:Fast (default)

Typematic Rate Setting

This determines the typematic rate.

Enabled: enable typematic rate and typematic delay programming.

Disabled(default) : disable typematic rate and typematic delay programming. The system BIOS will use default value of this 2 items and the default is controlled by

Typematic Rate(Chars/Sec)

6 : 6 Characters Per Second (default)

8 : 8 Characters Per Second

10 :10 Characters Per Second

12 : 12 Characters Per Second

15 : 15 Characters Per Second

20 : 20 Characters Per Second

24 : 24 Characters Per Second

30 : 30 Characters Per Second



Typematic Delay (Msec)

This is the interval between the first and second character displayed.

250 : 250 msec (default)

500 : 500 msec

750 : 750 msec

1000 :1000 msec

Security Option

Item	Function	Note
Setup (default)	Security protection in CMOS setup menu	After setting password in BIOS CMOS “ Supervisor Password ” or User Password, ” it protects BIOS CMOS setup.
System	Security protection in system boot-up & BIOS setup	This function secures the system under system boot-up and BIOS setup after setting password.

OS Select For DRAM> 64MB

This option is especially set for OS2 operating system. Set “**Non-OS2**” for RAM memory over 64MB and set “**Non-OS2**” for other operating systems like Windows® 95/98 or NT.

:**Non-OS2** (default)

:**OS2**



3-1-3 Chipset Features Setup

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software

Advanced Chipset Features

		Item Help
SDRAM CAS Latency Time	Auto	
SDRAM Cycle Time Tras/Trc	6/8	
SDRAM RAS-to-CAS Delay	3	Menu Level >
SDRAM RAS Precharge Time	3	
System BIOS Cacheable	Enabled	
Video BIOS Cacheable	Enabled	
Memory Hole At 15M-16M	Disabled	
CPU Latency Timer	Enabled	
Delay Transaction	Enabled	
On-Chip Video Window Size	64MB	
Local Memory Frequency	100 MHz	
* Onboard Display Cache Setting *		
CAS# Latency	3	
Paging Mode Control	Open	
RAS-to-CAS Override	by CAS # LT	
RAS# Timing	Fast	
RAS# Precharge Timing	Fast	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

SDRAM RAS-to-CAS Delay

This controls the DRAM page miss and row miss leadoff timing.

- : 2
- : 3 (default)

SDRAM RAS Precharge Time

SDRAM precharge time by RAS.

- : 2
- : 3 (default)

System BIOS cacheable

It defines whether system BIOS area cacheable or not.

- : **Enabled** (default)
- : **Disabled**

Video BIOS cacheable

It defines whether video BIOS area cacheable or not.

- : **Enabled** (default)
- : **Disabled**

Memory Hole at 15M-16M: this field enables a memory hole in main memory space. CPU cycles matching an enabled hold are passed on to PCI note that a selection can not be changed while the L2 cache is enabled.

- : **Enabled**
- : **Disabled** (default)

CPU Latency Timer

- : **Enabled** (default)

:Disabled

Delay Transaction

:Enabled (default)

:Disabled

Onboard Display Cache Setting

CAS# Latency

:3 (default)

:2

Paging Mode Control

:Open

:Close (default)

RAS-to-CAS Override

:by CAS # LT(default)

:Override(2)

RAS# Timing

:Fast (default)

:Slow

RAS# Precharge Timing

:Fast (default)

:Slow

3-1-4 Integrated Peripherals

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software
 Integrated Peripherals

OnChip Primary	PCI IDE	Enabled	Item Help
OnChip Secondary	PCI IDE	Enabled	
IDE Primary Master	PIO	Auto	Menu Level > If your IDE hard drive supports block mode select Enabled for automatic detection of the optimal number of block read/write per sector the drive can support
IDE Primary Slave	PIO	Auto	
IDE Secondary Master	PIO	Auto	
IDE Secondary Slave	PIO	Auto	
IDE Primary Master	UDMA	Auto	
IDE Primary Slave	UDMA	Auto	
IDE Secondary Master	UDMA	Auto	
IDE Secondary Slave	UDMA	Auto	
USB Controller		Enabled	
USB Keyboard Support		Disabled	
Init Display First		Onboard	
AC97 Audio		Auto	
AC97 Modem		Auto	
IDE HDD Block Mode		Enabled	
POWER ON Function		BUTTON ONLY	
KB Power ON Password		Enter	
Hot Key Power ON		Ctrl-F1	
↑↓←→ Move Enter: Select +/-PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults			

OnChip Primary PCI IDE

:Enabled (default)

:Disabled

OnChip Secondary PCI IDE

:Enabled (default)

:Disabled

IDE Primary Master PIO

This feature detects your primary master hard disk device.

:Auto (default)

:Mode 0,1,2,3,4

IDE Primary Slave PIO

This feature detects your primary master hard disk device.

:Auto (default)

:Mode 0,1,2,3,4

IDE Secondary Master PIO

This feature detects your secondary master hard disk device.

:Auto (default)

:Mode 0,1,2,3,4

IDE Secondary Slave PIO

This feature detects your secondary master hard disk device.

:Auto (default)

:Mode 0,1,2,3,4

IDE Primary Master UDMA

:Auto(default)

:Disabled

IDE Primary Slave UDMA

:Auto(default)

:Disabled

IDE Secondary Master UDMA

:Auto(default)

:Disabled

IDE Secondary Slave UDMA

:Auto(default)

:Disabled

USB Controller

:Enabled(default)

:Disabled

USB Keyboard support

:Enabled

:Disabled(default)

Init Display First

:PCI Slot

:Onboard (default)

AC97 Audio

:Auto(default)

:Enabled

AC97 Modem

:Auto(default)

:Disabled

IDE HDD Block Mode

:Enabled(default)

:Disabled

3-1-5 Power Management Setup

CMOS Setup Utility – Copyright © 1984 – 1999 Award Software
Power Management Setup

		Item Help
ACPI Function	Enabled	
ACPI Suspend Type	S3(STR)	
Power Management	User Define	Menu Level >
Video Off Method	DPMS	
Video Off In Suspend	YES	
Suspend Type	Stop Grant	
MODEM Use IRQ	3	
Suspend Mode	Disabled	
HDD Power Down	Disabled	
Soft-Off by PWRBTN	Instant Off	
Wake-Up by PCI card	Disabled	
Power On by Ring	Disabled	
Wake Up On LAN	Enabled	
USB KB Wake-Up From S3	Disabled	
Resume by Alarm	Disabled	
Date(of Month) Alarm	0	
Time(hh:mm:ss) Alarm	0 0 0	
** Reload Global Timer Events **		
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe defaults F7:Optimized Defaults		

When using the function of Suspend to RAM, please follow the below procedures.

1. Choose "Power Management Setup" from the main menu, then press <Enter>.
2. Set the item of "ACPI Function" to "Enabled."
3. Choose "S3(STR)" on "ACPI Suspend Type."
4. Press <Esc> at anytime to return to the main menu.
5. Choose "Save & Exit Setup" then press <Enter>, type <Y> then press <Enter>.
6. Before installing Windows® 98, please key in below parameters:
[drive]:>setup /p

If you had installed Windows®98 already, you have to update your system to support ACPI. About updating information, please contact with Microsoft technical support.

7. Setup Windows® 98, click "start" on the Windows® 98 screen, please move cursor to "Settings", then to click "Control Panel".
8. On "Control Panel" screen, click "Power Management".
9. Click "Advanced", then choose "stand by" in "When I press the power button on my computer".
10. After completing above procedures, if you want to shut down system, please ignore the procedure of shut down file, application software. To press power button shut down system immediately or choose "stand by" on Windows® 98 system.

Note : If you want to start system, please press power button then your preserve properties will appear within 8 second. But if you had set "keyboard

password” on “KB Power On Password”, you have to start system by keying password.

ACPI Function

:Enabled (default)

:Disabled

ACPI Suspend Type

:S3(STR) (default)

:S1(POS)

Power Management

:User Define(default)--users can configure their own power management

:Min Saving

:Max Saving

Video Off Method

:DPMS (default)

:Blank Screen

:V/H Sync+Blank

Video Off In Suspend

:Yes (default)

:No

Suspend Type

:Stop Grant

:PwrOn Suspend (default)

MODEM Use IRQ

:3 (default)

:4, 5, 7, 9, 10, 11, NA

Suspend mode

:Disabled(default), 1min --- 2 min, 4 min, 8 min, 12 min, 20 min, 30 min, 40 min,
1 Hour

HDD Power Down

:Disabled(default), 1 min --- 15 min

Wake-Up by PCI card

:Enabled

:Disabled (default)

Power On by Ring

:Enabled

:Disabled (default)

Wake Up On LAN

:Enabled (default)

:Disabled

USB KB Wake-Up From S3

:Enabled

:Disabled (default)

Resume by Alarm

:Enabled

:Disabled (default)

3-1-6 PNP / PCI Configuration Setup

CMOS Setup Utility – Copyright © 1984-1999 Award Software
PnP/PCI Configurations

Reset Configuration Data		Item Help
Disabled		-----
Resources Controlled By	Auto(ESCD)	Menu Level ➤
➤ IRQ Resources	Press Enter	
➤ PCI/VGA Palette Snoop	Disabled	Default is Disabled. Select
INT Pin 1 Assignment	Auto	Enabled to reset Extended
INT Pin 2 Assignment	Auto	System Configuration Data(ESCD)
INT Pin 3 Assignment	Auto	when you exit Setup if you have
INT Pin 4 Assignment	Auto	installed a new add-on and the
		system reconfiguration has
		caused such a serious conflict
		that the OS cannot boot

↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help
F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults

Reset Configuration Data

:Disabled(default)

:Enabled--- to reset “**Extended System Configuration Data(ESCD)** when you exit setup if you have installed a new add-on card and the system reconfiguration has caused such a serious conflict that the operating system can not boot up.

Resources Controlled By

:Manual

The table will show the below items: “**Reset Configuration Data, IRQ-3 assigned to.**” The user can adjust the shown items as required.

:Auto (default)

The table will not show the above items, and the system will automatically assign the above setup.

PCI/VGA Palette Snoop

:Disabled (default)

:Enabled

INT Pin1-4 Assignment

:Auto (default)

:3-15

3-1-7 Frequency/Voltage Control

CMOS Setup Utility – Copyright © 1984-1999 Award Software
Frequency/Voltage Control

Auto Detect DIMM/PCI CIK	Disabled	Item Help
Spread Spectrum	Disabled	-----
Host CPU/DIMM/PCI Clock	Default	Menu Level ➤
CPU Clock Ratio	x 3.5	

↑↓←→Move Enter: Select +/-PU/PD: Value F10:Save ESC: Exit F1:General Help
F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults

Auto Detect DIMM/PCI CIK

- : Enabled
- : Disabled (default)

Spread Spectrum

- :Enabled

:Disabled (default)



selection is reserved for manufacturers to pass CE test only not available for users.

3-1-8 PC Health Status

CMOS Setup Utility – Copyright © 1984-1999 Award Software

PC Health Status

Shutdown Temperature	60°C/140°F	Item Help
Voltage 0	2.04V	-----
Voltage 1	1.80V	Menu Level >
Voltage 2	3.36V	
Voltage 3	5.05V	
Voltage 4	12.28V	
Voltage 5	(-)11.62V	
Voltage 6	(-) 5.10V	
Voltage 7	5.16V	
Voltage Battery	3.34V	
Fan 1 Speed	0 RPM	
Fan 2 Speed	0 RPM	
Fan 3 Speed	3901 RPM	
↑↓←→Move Enter: Select +/-/PU/PD: Value F10:Save ESC: Exit F1:General Help F5:Previous Values F6:Fail-safe Defaults F7:Optimized Defaults		

Current CPU Temperature, Current CPU Fan1 speed/Cchipset Fan speed/Current Vin3(V)/Vin1(V)/VIN(2)/Vdd(V):

System will automatically detect the above items and show the status.

3-1-9 Supervisor/User Password

The "Supervisor/User Password setting" utility sets the security protection. There are two kinds of password functions in the setup menu : one is "Supervisor Password," and the other is "User Password." Their difference is:

Supervisor Password: this function allows you the right to change the options of setup menu.

User Password: this function only allows you to enter the setup menu but not to change the options of the setup menu except "USER PASSWORD," "SAVE & EXIT SETUP," and "EXIT WITHOUT SAVING."

1. How to set "Supervisor Password" & "User Password"

The setup of "Supervisor Password" and "User Password" has the same steps.

Step 1: Enter Password --Press <Enter> after appointing the password.

CMOS Setup Utility - Copyright (C) 1984-1999

Standard CMOS Feature	Frequency/Voltage Control
Advanced BIOS Feature	Load Fail-Safe Defaults
Advanced Chipset Feature	Load Optimized Defaults
Integrated Peripherals	<u>Set Supervisor Password</u>
Power Management	Set User Password
PnP/PCI Config	Set Password for Setup

ENTER PASSWORD :

3-1-10 Load Fail-Safe Defaults

CMOS Setup Utility - Copyright (C) 1984-1999

Standard CMOS Feature	Frequency/Voltage Control
Advanced BIOS Feature	<u>Load Fail-Safe Defaults</u>
Advanced Chipset Feature	Load Optimized Defaults
Integrated Peripherals	Load Fail-Safe Defaults (Y/N)? N
Power Management	Password
PnP/PCI Configurations	rd
PC Health Status	Save & Exit Setup
	Exit Without Saving
Esc : Quit	↑ ↓ ← → : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type	

"Load Fail-Safe Defaults" loads optimized settings which are stored in the BIOS ROM. The auto-configured settings only affect **"BIOS Features Setup"** and **"Chipset Features Setup"** screens. There is no effect on the standard CMOS setup. To use this feature, highlight it on the main screen and press the **<Enter>** key. A line will appear on screen asking if you want to load the setup default values. Press the **<Y>** key and then press the **<Enter>** key. The setup defaults will then load. If not, enter **<N>**.

Chapter 4 Appendix

4-1 Memory Map

Address range	Size	Description
00000-7FFFF	512K	Conventional memory
80000-9FBFF	127K	Extended conventional memory
9FC00-9FFFF	1K	Extended BIOS data area if PS/2 mouse is installed
A0000-C7FFF	160K	Available for hi DOS memory
C8000-DFFFF	96K	Available for hi DOS memory and adapter ROMs
E0000-EEFFF	60K	Available for UMB
EF000-EFFFF	4K	Video service routine for monochrome & CGA adapter
F0000-F7FFF	32K	BIOS CMOS setup utility
F8000-FCFFF	20K	BIOS runtime service routine (2)
FD000-FDFFF	4K	Plug and play escd data area
FE000-FFFFF	8K	BIOS runtime service routine (1)

4-2 I/O Map

000-01F	DMA controller (master)
020-021	Interrupt controller (master)
022-023	Chipset control registers. I/O ports
040-05F	Timer control registers
060-06F	Keyboard interface controller (8042)
070-07F	RTC ports & CMOS I/O ports
080-09F	DMA register
0A0-0BF	Interrupt controller (slave)
0C0-0DF	DMA controller (slave)
0F0-0FF	Math coprocessor
1F0-1FB	Hard disk controller
278-27F	Parallel port 2
2B0-2DF	Graphics adapter controller
2F8-2FF	Serial port 2
360-36F	Network ports
378-37F	Parallel port 1
3B0-3BF	Monochrome & parallel port adapter
3C0-3CF	EGA adapter
3D0-CDF	CGA adapter
3F0-3F7	Floppy disk controller
3F8-3FF	Serial port-1

4-3 Time & DMA Channels Map

Time map:

- Timer channel 0 system timer interrupt
- Timer channel 1 DRAM refresh request
- Timer channel 2 speaker tone generator

Dma channels:

- DMA channel 0 available
- DMA channel 1 onboard ECP (option)
- DMA channel 2 floppy disk (ITE chip)
- DMA channel 3 onboard ECP (default)
- DMA channel 4 cascade for DMA controller 1
- DMA channel 5 available
- DMA channel 6 available
- DMA channel 7 available

4-4 Interrupt Map

A. NMI: non-maskable interrupt

B. IRQ(H/W):

- 0 system timer interrupt from timer 0
- 1. 1 keyboard output buffer full
- 2. cascade for IRQ 8-15
- 3. serial port2
- 4. serial port1
- 5. parallel port 2
- 6. floppy disk (ITE chip)
- 7. parallel port 1
- 8. RTC clock
- 9. available
- 10. available
- 11. available
- 12. PS/2 mouse
- 13. math coprocessor
- 14. onboard hard disk (IDE1) channel
- 15. onboard hard disk (IDE2) channel

4-5 RTC & CMOS RAM Map

00	Seconds
01	Seconds Alarm
02	Minutes
03	Minutes Alarm
04	Hours
05	Hours Alarm
06	Day of Week
07	Day of Month
08	Month
09	Year
0A	Status Register A
0B	Status Register B
0C	Status Register C
0D	Status Register D
0E	Diagnostic Status Byte
0F	Shutdown Byte
10	Floppy Disk Type Drive Type Byte
12	Hard Disk Type Byte
13	Reserved
14	Equipment Type
15	Base Memory Low Byte
16	Base Memory High Byte
17	Extension Memory Low Byte
18	Extension Memory High Byte
19-2D	
2E-2F	
30	Reserved for Extension Memory Low Byte
31	Reserved for Extension Memory High Byte

33	Information Flag
34-3F	Reserved
40-7F	Reserved for Chipset Setting Data

4-6 Award BIOS Hard Disk Type

Type	Cylinder	Heads	Write Pre-comp	Landing Zone	Sectors	Size
1	306	4	128	305	17	10MB
2	615	4	300	615	17	21MB
3	615	6	300	615	17	32MB
4	940	8	512	940	17	65MB
5	940	6	512	940	17	49MB
6	615	4	65535	615	17	21MB
7	462	8	256	511	17	32MB
8	733	5	65535	733	17	31MB
9	900	15	65535	901	17	117MB
10	820	3	65535	820	17	21MB
11	855	5	65535	855	17	37MB
12	855	7	65535	855	17	52MB
13	306	8	128	319	17	21MB
14	733	7	65535	733	17	44MB
16	612	4	0	663	17	21MB
17	977	5	300	977	17	42MB
18	977	7	65535	977	17	59MB
19	1024	7	512	1023	17	62MB
20	733	5	300	732	17	31MB
21	733	7	300	732	17	44MB
22	733	5	300	733	17	31MB
23	306	4	0	336	17	10MB
24	977	5	0	925	17	42MB

Type	Cylinder	Heads	Write Pre-comp	Landing Zone	Sectors	Size
25	1024	9	65535	925	17	80MB
26	1224	7	65535	754	17	74MB

Type	Cylinder	Heads	Write Pre-comp	Landing Zone	Sectors	Size
27	1224	11	65535	754	17	117MB
28	1224	15	65535	699	17	159MB
29	1024	8	65535	823	17	71MB
30	1024	11	65535	1023	17	98MB
31	918	11	65535	1023	17	87MB
32	925	9	65535	926	17	72MB
33	1024	10	65535	1023	17	89MB
34	1024	12	65535	1023	17	106MB
35	1024	13	65535	1023	17	115MB
36	1024	14	65535	1023	17	124MB
37	1024	2	65535	1023	17	17MB
38	1024	16	65535	1023	17	142MB
39	918	15	65535	1023	17	119MB
40	820	6	65535	820	17	42MB
41	1024	5	65535	1023	17	44MB
42	1024	8	65535	1023	17	68MB
43	809	6	65535	852	17	42MB
44	809	9	65535	852	17	64MB
45	776	8	65535	775	17	104MB
46	AUTO	0	0	0	0	
47	USER'S	TYPE				

4-7 ISA I/O Address Map

I/O Address (HEX)	I/O device
000 - 01F	DMA Controller 1, 8237A-5
020 - 03F	Interrupt Controller 1, 8259A
040 - 05F	System Timer, 8254-2
060 - 06F	8042 Keyboard Controller
070 - 07F	real-time Clock/CMOS and NMI Mask
080 - 09F	DMA Page Register, 74LS612
0A0 - 0BF	Interrupt Controller 2, 8259A
0C0 - 0DF	DMA Controller 2, 8237A-5
0F0 - 0FF	i486 Math Coprocessor
1F0 - 1F8	Fixed Disk Drive Adapter
200 - 207	Game I/O
20C - 20D	Reserved
21F	Reserved
278 - 27F	Parallel Printer Port 2
2B0 - 2DF	Alternate Enhanced Graphic Adapter
2E1	GPIB Adapter 0
2E2 - 2E3	Data Acquisition Adapter 0
2F8 - 2FF	Serial Port 2 (RS-232-C)
300 - 31F	Prototype Card
360 - 363	PC Network (Low Address)
364 - 367	Reserved
368 - 36B	PC Network (High Address)

I/O Address (HEX)	I/O device
36C - 36F	Reserved
378 - 37F	Parallel Printer Port 1

I/O Address (HEX)	I/O device
380 - 38F	SDLC, Bisynchronous 2
390 - 393	Cluster
3A0 - 3AF	Bisynchronous 1
3B0 - 3BF	Monochrome Display and Printer Adapter
3C0 - 3CF	Enhanced Graphics Adapter
3D0 - 3DF	Color/Graphics Monitor Adapter
3F0 - 3F7	Diskette Drive Controller
3F8 - 3FF	Serial Port 1 (RS-232-C)
6E2 - 6E3	Data Acquisition Adapter 1
790 - 793	Cluster Adapter 1
AE2 - AE3	Data Acquisition Adapter 2
B90 - B93	Cluster Adapter 2
EE2 - EE3	Data Acquisition Adapter 3
1390 - 1393	Cluster Adapter 3
22E1	GPIB Adapter 1
2390 - 2393	Cluster Adapter 4
42E1	GPIB Adapter 2
62E1	GPIB Adapter 3
82E1	GPIB Adapter 4
A2E1	GPIB Adapter 5
C2E1	GPIB Adapter 6
E2E1	GPIB Adapter 7

Chapter 5 Q & A

5-1 Error Messages During Power on Self Test

During **power on self test (post)**, BIOS will automatically detect the system devices. Below are the questions that users most often ask. The user may press “**Esc**” key to skip the full memory test.

1. *Beep sound*

While power on, the system makes beep sound to offer different messages. If the system is configured correctly, it prompts a short beep to show device configuration is done correctly. When VGA card and DIMM modules are not plugged well, the system makes longer and constant beep sounds.

2. *BIOS ROM checksum error*

It indicates the checksum of the BIOS code is not right and system will always halt on power on screen. Contact the dealer to exchange a new BIOS.

3. *CMOS battery fail*

It indicates the CMOS battery does not work. Contact the dealer to exchange a new battery.

4. *CMOS checksum error*

It indicates the CMOS checksum is incorrect. Load the default values in BIOS to

solve this problem. This error may result from a weak BIOS, so replace a new BIOS if necessary.

5. *Hard disk initiation*

Please wait a moment...

Some hard drives require more time to initiate.

6. *Hard disk install failure*

The system can not find or initiate the hard drive controller or the drive. Check if the controller is set correctly. If no hard disk is installed, "**Hard drive selection**" must be set to "**none.**"

7. *Keyboard error or no keyboard present*

This means the system can not initialize the keyboard. Check if the keyboard is plugged well and be sure no keys are pressed during POST.

8. *Keyboard is lock out - Unlock the key*

When this message comes out, check if there is anything mis-placed on the keyboard. Be sure nothing touches the keys.

9. *Memory test fails*

There will be more information to specify the type and location of the memory error.

10 *Primary master hard disk fail*

The BIOS find an error in the primary master hard disk drive.

11 *Primary slave hard disk fail*

The BIOS finds an error in the primary slave hard disk drive.

12 *Secondary master hard disk fail*

The BIOS finds an error in the secondary slave master hard disk drive.

13 *Secondary slave hard disk fail*

The BIOS finds an error in the secondary slave IDE hard disk drive.

For instant technical support and latest information, please visit www.amazepc.com and talk to us at www.amazepc.com/chat or ICQ56257071

Version 2, June 1991

**Copyright (C) 1989, 1991 Free Software Foundation, Inc.
675 Mass Ave, Cambridge, MA 02139, USA
Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed.**

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too. When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive Source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the

Rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify

It. For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal

Permission to copy distributes and/or modifies the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for

this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they

have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger

that redistributes of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a. You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b. You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c. If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not

derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it. Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a. Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b. Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c. Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.) The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable. If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program. If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice. This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the

two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

Zmak Linux Disclaimer

To make this program a greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms. To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

Zmak Linux vision 3.0/Auto installation

January 2000

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version. This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details. You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA. Also add information on how to contact you by electronic and paper mail. If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Zmak Linux version 3.0, January 2000

Zmak Linux vision 3.0 comes with ABSOLUTELY NO WARRANTY; the terms and conditions of this AmazePC Linux vision 3.0 is same as the GNU General Public License vision 2.0, for details please see the GNU contract terms. This is free software, and you are welcome to redistribute it under certain conditions; please see GNU General Public License vision 2.0 for details.

Cyberweb Ltd., hereby disclaims all copyright interest in the program
Zmak linux vision 3.0 (which makes passes at compilers) written by John Lee.

Signature _____, January 10th, 2000

This General Public License does not permit incorporating your program into proprietary programs. If

your program is subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

For instant technical support and latest information, please visit www.amazepc.com and talk to us at www.amazepc.com/chat or ICQ56257071