



ADLINK
TECHNOLOGY INC.

cPCI-3915 Series

**3U CompactPCI Single Board Computers with
Intel® Pentium® M/Intel® Celeron® M Processors**

User's Manual

Manual Rev. 2.00
Revision Date: June 30, 2006
Part No: 50-15055-1000



Recycled Paper

Advance Technologies; Automate the World.



Copyright 2006 ADLINK TECHNOLOGY INC.

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

NuDAQ, NuIPC, DAQBench are registered trademarks of ADLINK TECHNOLOGY INC.

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Getting Service from ADLINK

Customer Satisfaction is top priority for ADLINK Technology Inc. Please contact us should you require any service or assistance.

ADLINK TECHNOLOGY INC.

Web Site: <http://www.adlinktech.com>
 Sales & Service: Service@adlinktech.com
 TEL: +886-2-82265877
 FAX: +886-2-82265717
 Address: 9F, No. 166, Jian Yi Road, Chungho City,
 Taipei, 235 Taiwan

Please email or FAX this completed service form for prompt and satisfactory service.

Company Information	
Company/Organization	
Contact Person	
E-mail Address	
Address	
Country	
TEL	FAX:
Web Site	
Product Information	
Product Model	
Environment	OS: M/B: CPU: Chipset: BIOS:

Please give a detailed description of the problem(s):

Table of Contents

Table of Contents	i
List of Tables	iv
List of Figures	v
1 Overview	1
1.1 Introduction	1
1.2 Features.....	1
1.3 Board Diagram.....	2
1.4 Product List.....	3
SBC	3
Transition module	3
1.5 Package contents	3
CPU module	3
Rear transition module	3
2 Specifications	5
2.1 CPU, memory, and chipset.....	5
2.2 Interfaces	5
2.3 Software	6
2.4 General.....	6
2.5 I/O Connectivity Table	8
2.6 Power Consumption	8
3 Functional Description	11
3.1 Processor.....	11
3.2 Chipset.....	11
3.3 Memory.....	12
3.4 Intel® 915GM Graphics Memory Control Hub	12
3.5 Direct Media Interface (DMI).....	12
3.6 I/O Controller Hub (ICH6-M)	13
Ultra ATA100/66/33 IDE	13
USB 2.0	13
LPC/ Firmware Hub	14
System Management Bus	14
Watch Dog Timer	14
Real Time Clock	14

	Serial ATA (SATA) Controller	14
3.7	PCI Express® Interface	15
	Marvell® 88E8052 Gigabit Ethernet Controller	15
3.8	Hardware Monitor	16
3.9	PCI Resource Allocation	16
4	Jumpers and Connectors.....	17
4.1	cPCI-3915 Series Board Outline.....	18
	cPCI-3915A	18
	cPCI-3915B	18
	cPCI-R3915	19
	cPCI-3915 PCB Layout	20
	DB-3915CF PCB Layout	21
	DB-3915L2 PCB Layout	22
	cPCI-R3915 PCB Layout	23
4.2	Connector Pin Assignments.....	24
	USB Connectors	24
	Ethernet (RJ-45) Connector	24
	VGA Connector	26
	RS-232 DB-9 Serial Port Connector (COM1, COM2) ...	26
	SATA Connector	28
	IDE Connector	28
	DVI Connector	30
	PS2 Connector	31
	CompactFlash Connector	32
	General Purpose LED definitions	34
	To DB-3915L2 Connector	34
	To DB-3915CF Connector	35
	CompactPCI J1 Pin Assignment	36
	CompactPCI J2 Pin Assignment	37
4.3	Switch and Jumper Settings	37
	CF Master-Slave Select Jumper	37
	RS-232, RS-422, RS-485, RS-485+ Select Jumper	38
	CPU clock select switch	38
5	Getting Started.....	39
5.1	Installing the CPU and Heatsink	39
	CPU Installation	39
	Heat Sink Installation	41
5.2	Installing a Memory Module.....	42

5.3	Installing the Hard Disk Drive	44
5.4	CF Card Installation	46
5.5	Installing the cPCI-3915 to the Chassis	47
5.6	RTM (cPCI-R3915) Installation	48
6	Windows® Driver Installation	49
7	Utilities	51
7.1	Watch Dog Timer	51
7.2	Using the Watchdog in an Application	52
7.3	Intel® Preboot Execution Environment (PXE)	52
8	BIOS.....	53
8.1	BIOS Setup Introduction	53
8.2	Standard CMOS Features	54
8.3	Advanced BIOS Features	60
8.4	Advanced Chipset Features	64
8.5	Integrated Peripherals	68
8.6	PNP/PCI Configuration	72
8.7	PC Health Status	74
8.8	Load Fail-Safe Defaults	75
8.9	Set Supervisor / User Password	76
8.10	Save & Exit Setup.....	77
	Important Safety Instructions	79
	Warranty Policy.....	81

List of Tables

Table 2-1: Power consumption of Intel® Pentium® M	9
Table 2-2: Power consumption of Intel® Celeron® M	9
Table 3-1: PCI Resource Allocation	16

List of Figures

Figure 1-1: cPCI-3915 Block Diagram	2
Figure 5-1: CPU Installation	40
Figure 5-2: Heat Sink Installation	42
Figure 5-3: Memory Installation	43
Figure 5-4: 2.5" Hard Disk Installation	46
Figure 5-5: Compact Flash Card Installation	47
Figure 7-1: cPCI-3915 Watch Dog Timer Architecture	51

1 Overview

1.1 Introduction

The cPCI-3915 is a 3U CompactPCI single board computer that comes in two compact PCI form factors: single-slot cPCI-3915A and dual-slot cPCI-3915B. Featuring support for single Intel® Celeron® M processor with 1 MB L2 cache or Intel® Pentium® M processor with 2 MB L2 cache in μ FC-PGA package, the cPCI-3915 incorporates the Intel® 915GM chipset with 400/533 MHz FSB, integrated graphics, and up to 1 GB, 64-bit wide system memory using a non-ECC DDR2 SODIMM.

Providing extensive support for I/O interfaces, the Intel® ICH6-M Southbridge backs up two Marvell® 88E8052 gigabit Ethernet controllers and three USB 2.0 ports. The optional cPCI-R3915 rear transition module supports additional I/O connectors including a single-channel SATA port, DVI port, LVDS port, and UART compatible RS-232 serial port capable of supporting RS-232, RS-422, RS-485, or RS-485+ devices via a jumper setting.

The high-performance computing and communications capability of the cPCI-3915 is a best solution for telecom, data center, and Internet applications.

1.2 Features

- ▶ Low power consumption, high-performance Intel® Celeron®/Intel® Pentium® M processor with up to 2.0 GHz core speed and 1 MB/2 MB L2 cache
- ▶ Up to 1 GB system memory via a single slot for DDR2 400/533 MHz SODIMM
- ▶ Dual gigabit Ethernet ports utilizing the PCI Express® bus architecture
- ▶ Multiple storage interface including Serial ATA, IDE, and CompactFlash
- ▶ High-resolution, dual-channel or multiple display support for CRT monitors (up to 2048 x 1536 resolution), DVI-enabled displays (up to 165 MB/s), and LVDS terminals (1 x 18 bpp)
- ▶ Up to three USB 2.0 port (2 on front and 1 on rear panel)

1.3 Board Diagram

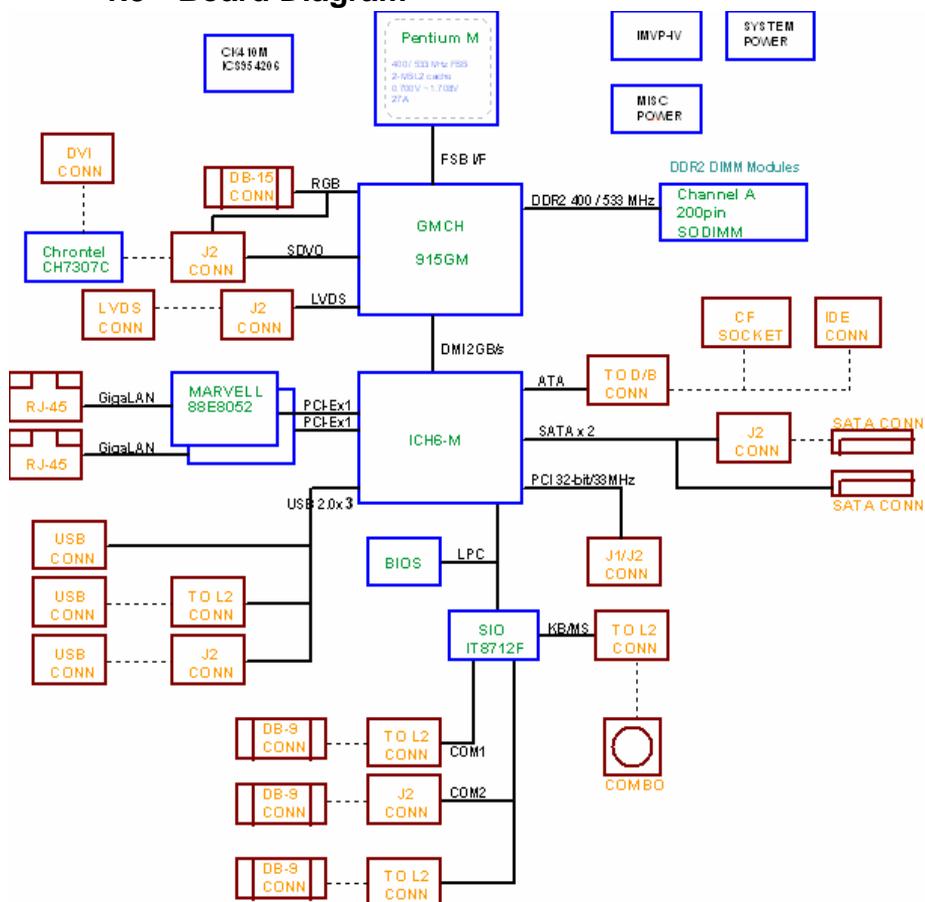


Figure 1-1: cPCI-3915 Block Diagram

1.4 Product List

Products included in the cPCI-3915 series include:

SBC

- ▶ cPCI-3915A: Single-slot 3U SBC featuring Intel® Pentium® M/Celeron® M processor with dual GbE, single USB, and CRT output (assembled with DB-3915CF daughter board)
- ▶ cPCI-3915B: Dual-slot 3U SBC featuring Intel® Pentium® M/Celeron® M processor with dual GbE, dual USB, dual COM, and CRT output (assembled with DB-3915L2 and DB-3915CF daughter boards)

Transition module

- ▶ cPCI-R3915: Rear transition module for cPCI-3915 SBCs

1.5 Package contents

Before opening the package, check the shipping carton for any damages. If the shipping carton is damaged, contact your dealer immediately for a replacement. Do not discard the shipping carton and original packing material for inspection. Obtain authorization from the dealer before returning any product to ADLINK.

Check the following items in the package. If any of the items is damaged or missing, contact your dealer immediately.

CPU module

- ▶ cPCI-3915A/B single board computer*
- ▶ Heat sink kit including thermal pad, heat sink paste, and four screws
- ▶ HDD bracket
- ▶ 44-pin IDE cable
- ▶ Y-cable for PS/2 combo port (cPCI-3915B only)
- ▶ ADLINK All-in-One CD
- ▶ User's manual

Rear transition module

- ▶ cPCI-R3915 RTM

*CPU, memory, and HDD specifications may vary depending on the selected configuration

Note: The contents of non-standard cPCI-3915 configurations may vary depending on the customer's requirements.

CAUTION: This product must be protected from static discharge and physical shock. Never remove any of the components except at a static-free workstation. Use the anti-static bag shipped with the product when putting the board on a surface. Wear an anti-static wrist strap properly grounded on one of the system's ESD ground jacks when installing or servicing system components.

2 Specifications

2.1 CPU, memory, and chipset

Processor	Intel® Pentium® M 1.5 GHz to 2.0 GHz processor in µFC-PGA package, 90 nm process with 2 MB L2 cache
	Intel® Celeron® M 1.3 GHz to 1.5 GHz processor in µFC-PGA package, 90nm process with 1 MB L2 cache
Front side bus	400/533 MHz
Memory	Up to 1 GB system memory using single non-ECC DDR2 SODIMM
Chipset	Intel® 915GM Graphic Memory Controller Hub
	Intel® ICH6-M I/O Controller Hub

2.2 Interfaces

Standard	PICMG 2.0 R.3.0
CompactPCI bus	32-bit/33 MHz PCI bus
Display	Intel® 915GM integrated graphics
	Supports analog CRT, digital LVDS, Serial Digital Video Output (SDVO) interfaces
	Supports up to 2048 x 1536 resolution
Ethernet	Marvell® 88E8052 dual Gigabit Ethernet controller on PCI Express® bus
Storage	44-pin UltraATA 100/66/33 connector and Type II CompactFlash slot
Front panel I/O	cPCI-3915 module
	2 x GbE port
	2 x USB 2.0 port
	1 x VGA port
	1 x system reset button
	HDD LED and Power/Watchdog LED
	DB-3915L2 daughter board
	2 x RS-232 port
	PS/2 combo port for keyboard and mouse
	1 x USB 2.0 port

Board I/O interfaces	cPCI-3915 module
	Single-channel SATA port
	DB-3915CF daughter board
	Single channel, ATA100/66/33 IDE connector (44-pin)
	Hot-swappable CompactFlash slot
	cPCI-R3915 rear transition module
	DVI transmitter
	Single-channel SATA port
Rear panel I/O	Single-channel LVDS connector
	1 x USB 2.0 port
	1 x DVI port
	1 x RS-232 port (supports RS-232, RS-422, RS-485, or RS-485+ via jumper setting)

2.3 Software

BIOS	Phoenix-Award
Supported OS	Microsoft® Windows® 2000
	Microsoft® Windows NT®
	Microsoft® Windows server™ 2003
	Microsoft® Windows® XP
	Microsoft® Windows® XP Embedded (Contact ADLINK for availability)
	RedHat Fedora™ Core 4 & 5
	VxWorks (contact ADLINK for availability)

2.4 General

Form factor	cPCI-3915 : 3U 4HP/ 8HP CompactPCI
	cPCI-R3915 (RTM) : 3U 4HP CompactPCI
Dimensions	cPCI-3915 : 100mm x 160mm (L x W)
	cPCI-R3915 (RTM) : 100mm x 50mm (L x W)
Operating temperature	-20°C to 65°C - 40°C to 80°C for specific CPU
Storage temperature	- 40°C to 80°C
Humidity	5% to 95% non-condensing

Shock	15G peak-to-peak, 11ms duration, non-operation
Vibration	Non-operating: 1.88G rms, 5 to 500 Hz, each axis
	Operating: 0.5G rms. 5 to 500 Hz, each axis, with 2.5" HDD and CompactFlash card
Compliance	CE, FCC Class A

2.5 I/O Connectivity Table

	cPCI-3915A		cPCI-3915B		cPCI-R3915	
	Faceplate	Board	Faceplate	Board	Faceplate	Board
CRT	Y (DB-15)	--	Y (DB-15)	--	--	--
DVI	--	--	--	--	Y (DVI-I)	--
LVDS	--	--	--	--	--	Y
LAN	Y(RJ-45) x 2	--	Y(RJ-45) x 2	--	--	--
USB	Y x 1	--	Y x 2	--	Y x 1	--
PS2	--	--	Y (Combo)	--	--	--
COM1	--	--	Y (DB-9)	--	--	--
COM2	--	--	Y (DB-9)	--	Y (DB-9)	--
SATA	--	Y	--	Y	--	Y
PATA	--	Y (44-pin)	--	Y (44-pin)	--	--
CF	--	Y	--	Y	--	--
Reset	Y	--	Y	--	--	--
LEDs	Y	--	Y	--	--	--

2.6 Power Consumption

This section provides information on the power consumption of cPCI-3915 when using Intel® Pentium® M 1.8 GHz and Intel® Celeron® M 1.3 GHz processors. The cPCI-3915 was tested with the following specifications:

Operating system:	Microsoft® Windows® XP environment
System memory:	DDR2 512MB RAM
Storage:	20 GB IDE HDD, 512 MB CompactFlash card, and two 80 GB SATA HDD
Network:	Dual GbE
Peripherals:	USB 3.5" HDD, two RS-232 serial port devices
Chassis:	cBP-3208 8-slot CompactPCI backplane and power supply

The following tables show the cPCI power consumption during light loading (no software is running) and full loading.

Power

Voltage	+3.3V	+5V	+12V	-12V	Total
Light-loading	13.93W	12.65W	0.17W	0.36W	27.11W
Full-loading	15.15W	29.15W	0.11W	0.6W	45.01W

Table 2-1: Power consumption of Intel® Pentium® M Power

Voltage	+3.3V	+5V	+12V	-12V	Total
Light-loading	13.93W	8.6W	0.17W	0.36W	23.06W
Full-loading	15.15W	19.1W	0.11W	0.6W	34.96W

Table 2-2: Power consumption of Intel® Celeron® M

3 Functional Description

The following sections describe the cPCI-3915 main functions.

3.1 Processor

The cPCI-3915 supports a single Intel® Pentium® M/Intel® Celeron® M processor with 2 MB/1 MB L2 cache in μ FC-PGA package. The Intel® Pentium® M/Intel® Celeron® M processor is a high-performance, low-power mobile processor with several enhancements over previous mobile processors.

These processors feature:

- ▶ Intel® Architecture with Intel® Wide Dynamic Execution
- ▶ On-die, primary 32 KB instruction cache and 32 KB write-back data cache
- ▶ On-die, 2 MB/1 MB second level cache with Advanced Transfer Cache (ATC) architecture
- ▶ Data Prefetch Logic
- ▶ Streaming SIMD Extensions 2 (SSE2)
- ▶ 533 MHz/400 MHz source-synchronous FSB
- ▶ Lead-free

3.2 Chipset

The cPCI-3915 is based on the Mobile Intel® 915GM Express Chipset, consisting of the Intel® 915GM Graphics Memory Controller Hub (GMCH) and Intel® ICH6-M I/O Controller Hub.

The Intel® 915GM has the Graphics Memory Controller Hub (GMCH) component for embedded platforms and maintains the processor, system memory, DMI, CRT, LVDS, and SDVO interfaces.

3.3 Memory

The cPCI-3915 supports a single-channel, unbuffered, non-ECC DDR2 SDRAM operating at 533/400 MHz. The GMCH supports a 128 MB, 256 MB, 512 MB, or 1 GB memory module in SODIMM package. The memory interface supports the following:

- ▶ 256 MB, 512 MB, and 1 GB technology supported using x8 or x16 devices
- ▶ High-density memory package for DDR2 type devices
- ▶ 128 MB minimum memory, 1 GB maximum memory
- ▶ Configurations defined in the JEDEC DDR2 SODIMM specification only
- ▶ DDR2 533/400 MHz memory devices
- ▶ On-Die Termination (ODT) for DDR2
- ▶ Single-channel configuration with one, two, three, or four ranks
- ▶ Double-sided unbuffered SODIMMs (4 rows populated)

3.4 Intel® 915GM Graphics Memory Control Hub

The Intel® 915GM GMCH in a 1257-pin Micro-FCBGA package provides the display interface for a variety of display devices, including:

- ▶ Analog CRT DAC
- ▶ Digital LVDS
- ▶ Serial Digital Video Output (SDVO)

3.5 Direct Media Interface (DMI)

Direct Media Interface (DMI) is the chip-to-chip connection between the Graphics Memory Controller Hub (GMCH) and the I/O Controller Hub. This high-speed interface integrates advanced priority-based servicing allowing concurrent traffic and true isochronous transfer capabilities. Base functionality is completely software-transparent, permitting current and legacy software to operate normally.

3.6 I/O Controller Hub (ICH6-M)

The ICH6-M provides extensive I/O support, including:

- ▶ PCI Express® base specification Revision 1.0a-compliant.
- ▶ PCI local bus specification, Revision 2.3 with support for 33 MHz PCI operations
- ▶ ACPI Power Management Logic Support
- ▶ Enhanced DMA controller, interrupt controller, and timer functions
- ▶ Integrated Serial ATA host controller with independent DMA operation on two ports and AHCI support
- ▶ Integrated IDE controller supports Ultra ATA100/66/33 HDD
- ▶ USB host interface supporting up to eight USB ports, four UHCI host controller, one EHCI high-speed USB 2.0 host controller
- ▶ System Management Bus (SMBus) specification, Version 2.0 with additional support for I2C devices
- ▶ Low Pin Count (LPC) interface
- ▶ Firmware Hub (FWH) interface

Ultra ATA100/66/33 IDE

The cPCI-3915 supports a single Ultra ATA100 IDE channel, while the DB-3915CF daughter board comes with a 2.5" hard disk drive bay and a CompactFlash slot. The IDE interface supports PIO data transfer rates of up to 16 MB/sec and Ultra ATA data transfer rates of up to 100 MB/sec. It also integrates a 16x32-bit buffer for optimal transfers. For Ultra ATA100/66 operation, proper IDE cables must be used. The cPCI-3915 does not use any legacy DMA resources.

USB 2.0

Onboard the cPCI-3915 is an Enhanced Host Controller Interface (EHCI) that supports high-speed USB signaling. High-speed USB 2.0 allows data transfers of up to 480 Mb/s, 40 times faster than full-speed USB. It also features four Universal Host Controller Interfaces (UHCI) that support USB full-speed and low-speed sig-

ning. The cPCI-3915 comes with three USB 2.0 ports: one each on the cPCI-3915 board, DB-3915L2 daughter board on the cPCI-R3915 board. All USB ports implement over-current detection and support USB floppy boot. USB legacy devices, such as keyboard, mouse, and floppy drive are supported and can be enabled or disabled in the BIOS.

LPC/ Firmware Hub

The 4 Mb PMC Pm49FL004T chip holds the system BIOS. BIOS write-protect function can be enabled/disabled through the BIOS menu.

System Management Bus

The Intel® ICH6-M supports a System Management Bus (SMBus) Specification Version 2.0-compliant host controller and an SMBus slave interface. The host controller provides a mechanism for the processor to initiate communications with SMBus peripherals (slaves) as well as I2C-compatible devices. The slave interface allows an external master to read from or write to the Intel® ICH6-M.

Watch Dog Timer

The cPCI-3915's watch dog timer (WDT) is embedded on the Super I/O iTE8712F chip. The WDT resets the cPCI-3915 when it receives a WDT-L low signal.

Real Time Clock

The Intel® ICH6-M contains a Motorola MC146818A-compatible real-time clock (RTC) with 256 bytes of battery-backed RAM. The real-time clock keeps track of the time and day, and stores specific system data even when the system power is shut down. The RTC operates on a 32.768 KHz crystal and a 3 V battery.

Serial ATA (SATA) Controller

The Intel® ICH6-M features an integrated SATA host controller that allows data transfer rates of up to 1.5 Gb/s (150 MB/s). The SATA host controller has two modes of operation: legacy mode

using I/O space and AHCI mode using memory space. The Intel® ICH6-M supports the Serial ATA Specification Revision 1.0a on two SATA ports. The SATA ports are located on the cPCI-3915 board and cPCI-R3915 board.

3.7 PCI Express® Interface

The Intel® ICH6-M supports four PCI Express® root ports compliant with the PCI Express Base Specification Revision 1.0a. The PCI Express® root ports can be statically configured as four x1 ports or combined to form one x4 port. Each root port supports 2.5 Gb/s bandwidth in single direction (5 Gb/s bandwidth on concurrent direction) and two virtual channels for full isochronous data support. In addition, the cPCI-3915 implements PCI Express® bus on the onboard gigabit Ethernet controllers.

Marvell® 88E8052 Gigabit Ethernet Controller

The Marvell® 88E8052 gigabit Ethernet controller is compliant with the PCI Express 1.0a specification and is optimized for maximum throughput and low CPU utilization. The controller supports the following:

- ▶ x1 PCI Express® interface with 2.5 GHz signaling
- ▶ Advanced error reporting
- ▶ Message signaled interrupts
- ▶ TCP segmentation offload/large-send support
- ▶ 802.3x flow control-compliant
- ▶ IEEE 802.1p and 802.1q support
- ▶ 10/100/1000 IEEE 802.3-compliant
- ▶ Automatic MDI/MDIX crossover at all speeds
- ▶ Wake-On-LAN (WOL) power management support
- ▶ ACPI 2.0 specification
- ▶ Wake-On-Link feature
- ▶ Fully integrated ASF 2.0 functionality with on-chip μ c
- ▶ SMBus 2.0 master interface for ASF functionality
- ▶ Serial Peripheral Interface (SPI) for ASF firmware and for remote boot (PXE 2.1)

3.8 Hardware Monitor

The IT8712F chip monitors several critical hardware parameters, including system and CPU voltages and temperatures. All hardware status information can be viewed and configured through the BIOS menu, and run-time utilities. Once the preset thresholds of hardware conditions reach critical limits, the IT8712F alerts or resets the system.

3.9 PCI Resource Allocation

The single PCI bus on the cPCI-3915 platform and the IDSEL, INT#, and REQ#/GNT# routings of the cPCI-Bus slots on backplane follow standard definitions, where the interrupt controller is the onboard Intel® ICH6-M on board. Table 3.1 lists the PCI resource allocation.

Device	Host	IDSEL	INT#	REQ#/GNT#
J1 Connector	ICH6-M		IRQA, IRQB, IRQC, IRQD	REQ#0/GNT#0


Table 3-1: PCI Resource Allocation

4 Jumpers and Connectors


This chapter illustrates the board layout, connector pin assignments, and jumper settings to familiarize the users on the cPCI-3915.

4.1 cPCI-3915 Series Board Outline


cPCI-3915A

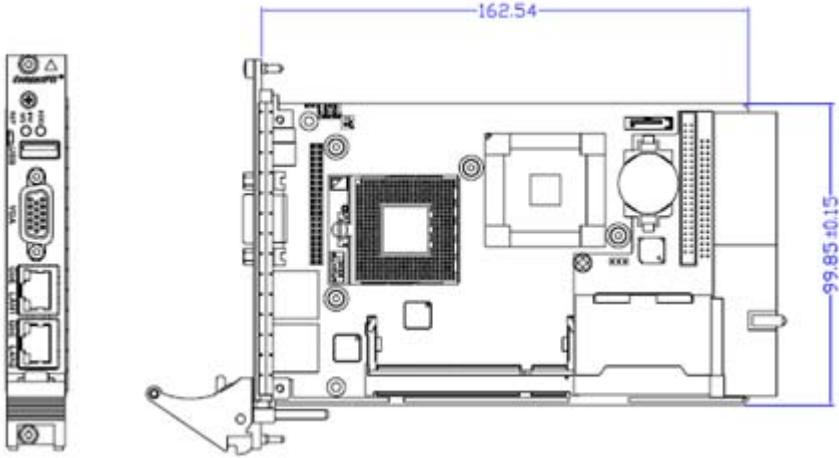


cPCI-3915B

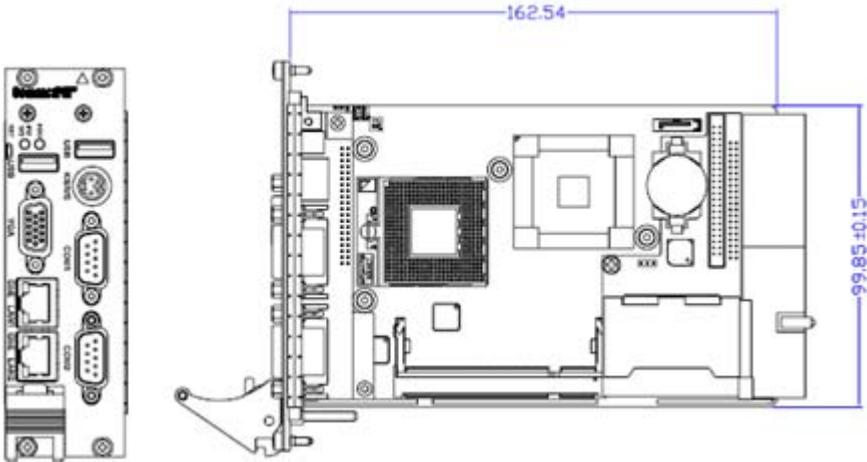

cPCI-R3915

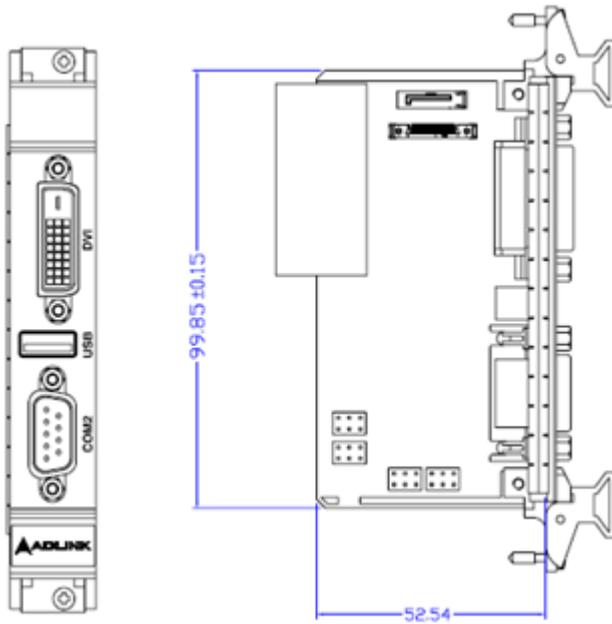


cPCI-3915 PCB Layout

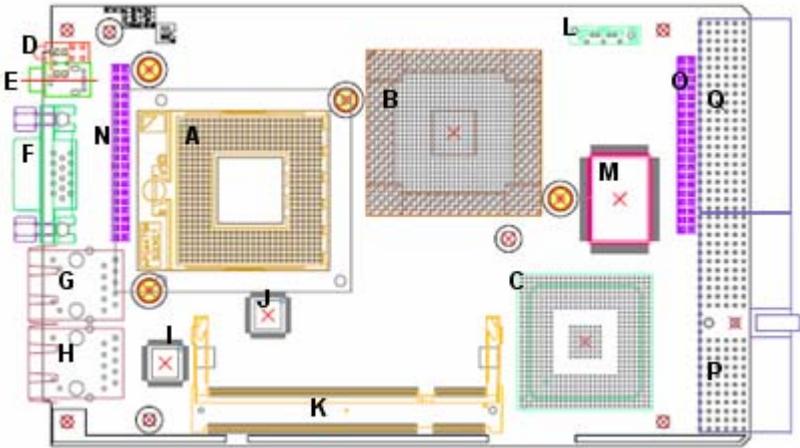


A	CPU	J	LAN (88E8052)
B	North Bridge (915GM)	K	DDR2 DIMM SOCKET
C	South Bridge (ICH6-M)	L	SATA CONNECTOR
D	LED	M	SIO (IT8712F)
E	USB Connector	N	To DB-3915L2 Connector
F	VGA Connector	O	To DB-3915CF Connector
G	LAN Connector	P	cPCI J1
H	LAN Connector	Q	cPCI J2
I	LAN (88E8052)		

DB-3915CF PCB Layout

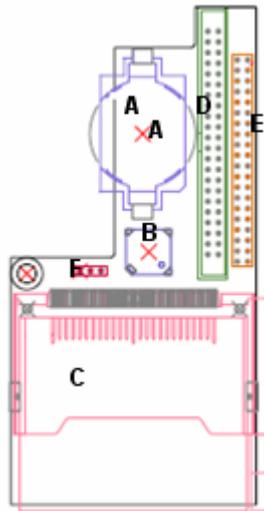


A	BATTERY HOLDER
B	BUZZER
C	CF SOCKET
D	44 PINS IDE CONNECTOR
E	TO MB CONNECTOR
F	Select CF Master/Slave

DB-3915L2 PCB Layout

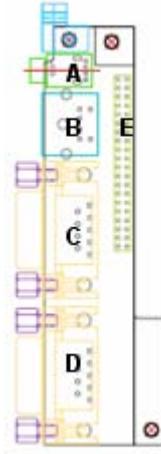

A	USB CONNECTOR
B	KB/MS COMBO CONNECTOR
C	RS232 CONNECTOR
D	RS232 CONNECTOR
E	TO M/B CONNECTOR


cPCI-R3915 PCB Layout

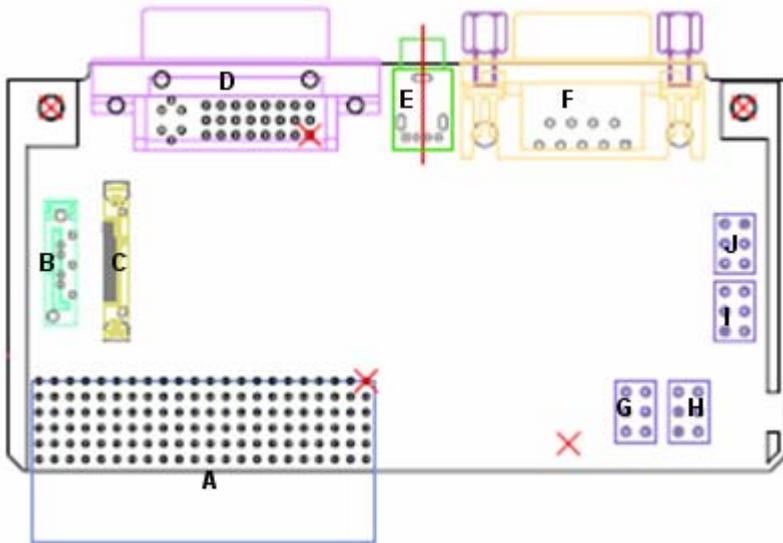

A	cPCI J2	F	RS232 CONNECTOR
B	SATA CONNECTOR	G	Header for Select COM PORT type
C	LVDS CONNECTOR	H	Header for Select COM PORT type
D	DVI CONNECTOR	I	Header for Select COM PORT type
E	USB CONNECTOR	J	Header for Select COM PORT type


4.2 Connector Pin Assignments

USB Connectors

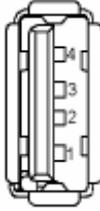

Pin #	Signal Name
1	Vcc
2	USB-
3	USB+
4	GND


Ethernet (RJ-45) Connector

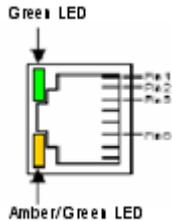

Pin #	Signal Name	Function
1	GBE0_MDI0+	Media Dependent Interface 0+
2	GBE0_MDI0-	Media Dependent Interface 0-
3	GBE0_MDI1+	Media Dependent Interface 1+
4	GBE0_MDI1-	Media Dependent Interface 1-
5	GBE0_MDI2+	Media Dependent Interface 2+
6	GBE0_MDI2-	Media Dependent Interface 2-
7	GBE0_MDI3+	Media Dependent Interface 3+
8	GBE0_MDI3-	Media Dependent Interface 3-


Status		Left LED (Green)	Right LED (Amber or Green)
Network link is not established		OFF	OFF
10 Mbps	Link	Green	OFF
(10 BaseT)	Active	Blink Green	OFF
100 Mbps	Link	Green	Green
(100BaseTX)	Active	Blink Green	Green
1000 Mbps	Link	Green	Amber
(1000 BaseT)	Active	Blink Green	Amber

VGA Connector

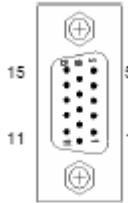

Signal Name	Pin #	Pin #	Signal Name
Red	1	2	Green
Blue	3	4	N.C.
GND	5	6	GND
GND	7	8	GND
+5V.	9	10	GND
N.C.	11	12	CRTDATA
HSYNC	13	14	VSYNC
CRTCLK	15		


RS-232 DB-9 Serial Port Connector (COM1, COM2)

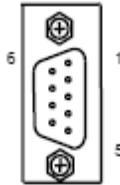

Pin #	RS-232
1	DCD, Data carrier detect
2	RXD, Receive data
3	TXD, Transmit data
4	DTR, Data terminal ready
5	IsoGND, Isolated ground
6	DSR, Data set ready


7	RTS, Request to send
8	CTS, Clear to send
9	RI, Ring indicator

SATA Connector

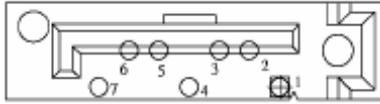

Pin #	Signal	Pin #	Signal
1	GND	5	PXN
2	TXP	6	RXP
3	TXN	7	GND
4	GND		


IDE Connector

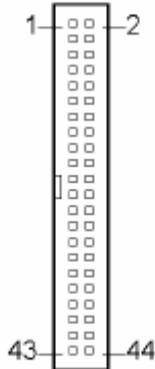

Signal Name	Pin #	Pin #	Signal Name
BRSTDRVJ	1	2	GND
DDP7	3	4	DDP8
DDP6	5	6	DDP9
DDP5	7	8	DDP10
DDP4	9	10	DDP11
DDP3	11	12	DDP12
DDP2	13	14	DDP13
DDP1	15	16	DDP14
DDP0	17	18	DDP15


GND	19	20	NC
PDDREQ	21	22	GND
PDIOWJ	23	24	GND
PDIORJ	25	26	GND
PIORDY	27	28	PCSEL
PDDACKJ	29	30	GND
IRQ14	31	32	NC
DAP1	33	34	DIAG
DAP0	35	36	DAP2
CS1P	37	38	CS3PJ
IDEACTPJ	39	40	GND
+5V	41	42	+5V
GND	43	44	NC

DVI Connector

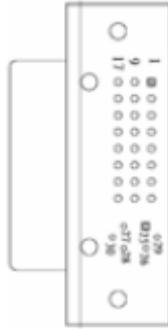


Pin #	Signal	Pin #	Signal
1	TX2-	16	HTPLG
2	TX2+	17	TX0-
3	GND	18	TX0+
4	NC	19	GND
5	NC	20	NC
6	DDCCLK	21	NC
7	DDCDATA	22	GND
8	VSYNC	23	TXC+
9	TX1-	24	TXC-
10	TX1+	25	RED
11	GND	26	GREEN
12	NC	27	BLUE
13	NC	28	HSYNC
14	+5V	29	GND
15	GND	30	GND

PS2 Connector

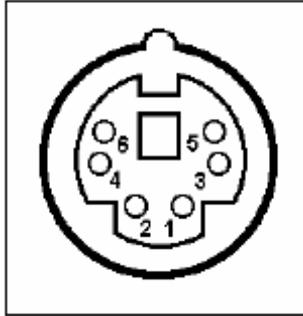

Pin #	Signal	Function
1	KBDATA	Keyboard Data
2	MSDATA	Mouse Data
3	GND	Ground
4	+5V	Power
5	KBCLK	Keyboard Clock
6	MSCLK	Mouse Clock

CompactFlash Connector

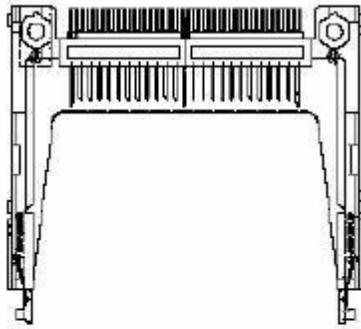

Signal Name	Pin #	Pin #	Signal Name
GND	1	26	GND
DD3	2	27	DD11
DD4	3	28	DD12
DD5	4	29	DD13
DD6	5	30	DD14
DD7	6	31	DD15
CS1J	7	32	CS3J
GND	8	33	GND
GND	9	34	SDIORJ
GND	10	35	SDIOWJ
GND	11	36	5V
GND	12	37	IRQ15
5V	13	38	5V
GND	14	39	PCSEL
GND	15	40	NC

GND	16	41	BRSTDRVJ
GND	17	42	SDIORDY
DA2	18	43	NC
DA1	19	44	SDACKJ
DA0	20	45	IDEACTJ
DD0	21	46	DIAG
DD1	22	47	DD8
DD2	23	48	DD9
IOIS16J	24	49	DD10
GND	25	50	GND

General Purpose LED definitions

LED	Color	Status	Description
HDD	Red	OFF	IDE or SATA HDD Idle
		ON	IDE or SATA HDD Access
PW/ WD	GREEN	OFF	System power off or power failure
		ON	System Power on
		BLINK	Watch Dog Timer enabled

To DB-3915L2 Connector

Pin #	Pin Name	Pin #	Pin Name
1	P5V	2	P5V
3	P5V	4	P5V
5	P5V	6	GND
7	P5V	8	GND
9	GND	10	USB1_OC-L
11	KBCLK	12	GND
13	KBDATA	14	GND
15	GND	16	USB1_N
17	MSDATA	18	USB1_P
19	MSCLK	20	GND
21	GND	22	GND
23	COM2_DCD_CN-L	24	COM1_DCD_CN-L
25	COM2_DSR_CN-L	26	COM1_DSR_CN-L
27	COM2_SIN_CN	28	COM1_SIN_CN
29	COM2_RTS_CN-L	30	COM1_RTS_CN-L
31	COM2_SOUT_CN	32	COM1_SOUT_CN
33	COM2_CTS_CN-L	34	COM1_CTS_CN-L
35	COM2_DTR_CN-L	36	COM1_DTR_CN-L
37	COM2_RI_CN-L	38	COM1_RI_CN-L
39	GND	40	GND

To DB-3915CF Connector

Pin#	Pin Name	Pin#	Pin Name
1	BRSTDRV0J	2	CONN_IDE_D8
3	CONN_IDE_D7	4	CONN_IDE_D9
5	CONN_IDE_D6	6	CONN_IDE_D10
7	CONN_IDE_D5	8	CONN_IDE_D11
9	CONN_IDE_D4	10	CONN_IDE_D12
11	CONN_IDE_D3	12	CONN_IDE_D13
13	CONN_IDE_D2	14	CONN_IDE_D14
15	CONN_IDE_D1	16	CONN_IDE_D15
17	CONN_IDE_D0	18	VBAT_DAUG
19	GND	20	GND
21	PDDRQ	22	PCSEL
23	RPDIOWJ	24	SPKR
25	RPDIQRJ	26	NC
27	CPIORDY	28	NC
29	PDDAKJ	30	PDA2
31	CIRQ14	32	RCS3PJ
33	PDA1	34	P5V
35	PDA0	36	P5V
37	RCS1PJ	38	SIO_SPKR
39	IDEACTPJ	40	GND

CompactPCI J1 Pin Assignment

	Z	A	B	C	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	NC	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	GND	C/ BE[0]#	GND
20	GND	AD[12]	GND	NC	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/ BE[1]#	GND
17	GND	+3.3V	NC	NC	GND	PERR#	GND
16	GND	DEVSEL#	GND	NC	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	GND	TRDY#	GND
12-14	GND	Key					GND
11	GND	AD[18]	AD[17]	AD[16]	GND	C/ BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSE	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	+3.3V	CLK	AD[31]	GND
5	GND	Reserved(1)	Reserved(1)	PCIRST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY#	V(I/O)	INTP(1)	INTS	GND
3	GND	INTA#	INTB#	INTC#	+5V	INTD#	GND
2	GND	TCK(3)	+5V	TMS(2)	NC	TDI(2)	GND
1	GND	+5V	-12V	TRST#(3)	+12V	+5V	GND
	Z	A	B	C	D	E	F

CompactPCI J2 Pin Assignment

	Z	A	B	C	D	E	F
22	GND	NC	NC	NC	NC	NC	GND
21	GND	NC	GND	USB2_N	USB2_P	NC	GND
20	GND	NC	GND	NC	GND	USB2_OC-L	GND
19	GND	GND	GND	SATA_RXN2	SATA_RXP2	NC	GND
18	GND	NC	SATA_TXN2	SATA_TXP2	GND	NC	GND
17	GND	N12V	GND	NC	NC	NC	GND
16	GND	LA_DATAN2	LA_DATAP2	NC	GND	P12V	GND
15	GND	P5V	GND	NC	NC	NC	GND
14	GND	NC	LA_DATAN1	LA_DATAP1	GND	P5V	GND
13	GND	P3V3	GND	NC	LA_DATAN0	LA_DATAP0	GND
12	GND	CRT_DDC_DATA	LA_CLKN	LA_CLKP	GND	CRT_DDC_CLK	GND
11	GND	VGA_VSYNC	GND	NC	SDVOB_CLKP	SDVOB_CLKN	GND
10	GND	SDVOB_INTN	SDVOB_INTP	RST_CH7307-L	GND	VGA_HSYNC	GND
9	GND	VGA_B	GND	NC	SDVOB_BP	SDVOB_BN	GND
8	GND	SDVOB_GP	SDVOB_GN	VGA_R	GND	VGA_G	GND
7	GND	SDVO_CTRLDATA	GND	NC	SDVOB_RP	SDVOB_RN	GND
6	GND	DSRJ2	TXD2	RXD2	GND	SDVO_CTRLCLK	GND
5	GND	DTRJ2	GND	NC	RTSJ2	NC	GND
4	GND	NC	DCDJ2	RIJ2	GND	CTSJ2	GND
3	GND	NC	GND	NC	NC	NC	GND
2	GND	NC	NC	NC	NC	NC	GND
1	GND	NC	GND	NC	NC	NC	GND
	Z	A	B	C	D	E	F

4.3 Switch and Jumper Settings

CF Master-Slave Select Jumper

A CF Master-Slave jumper located on the DB-3915CF board allows you to set the CF card as a master or slave device. By default, the CF card is set as a slave device (jumper cap shorts pin 1 and 2).

JP1 Select

1-2	CF Slave
2-3	CF Master

RS-232, RS-422, RS-485, RS-485+ Select Jumper

Refer to the jumper settings below before installing RS-232, RS-422, RS-485, or RS-485+ devices.

	JP1	JP2	JP3	JP4
RS-232	1-2, 4-5	1-2, 4-5	1-2	
RS-422	2-3, 5-6	2-3, 5-6	3-4	1-2, 4-5
RS-485	2-3, 5-6	2-3	5-6	1-2, 4-5
RS-485+	2-3, 5-6	2-3	5-6	2-3, 5-6

CPU clock select switch

The SX1 switch allows you to select the CPU Front Side Bus speed.

Switch No.	Selection	
1	ON	OFF
2	ON	ON
CPU FSB	FSB533	FSB400

5 Getting Started

This chapter explains installation of the following components to the cPCI-3915:

- ▶ CPU and heat sink
- ▶ Memory module
- ▶ 2.5" hard disk drive
- ▶ CF card
- ▶ CPU module
- ▶ RTM

5.1 Installing the CPU and Heatsink

The cPCI-3915 supports single Intel® Pentium® M/ Intel® Celeron® M processor. A proprietary heat sink is included in the package for thermal control. Follow these procedures to install the CPU and heat sink. If the CPU and heat sink comes pre-installed on the cPCI-3915, proceed to the next section.

CPU Installation

To install the CPU:

1. Turn the CPU lock screw counter-clockwise.
2. Carefully place the CPU into the CPU socket as shown in Figure 5-1: CPU Installation. Make sure the gold triangle on the corner of the CPU matches with the triangular mark in the corner of the socket.
3. Gently press the CPU until it is properly seated on the socket, then turn the CPU lock screw clockwise to lock the CPU positioning place.
4. Prepare the thermal pad included in the heat sink kit, then peel the mylar film from the white side of the thermal pad.
5. Place the thermal pad on top of the CPU and North-bridge as shown (pink side up), then remove the plastic film on top of the thermal pad.

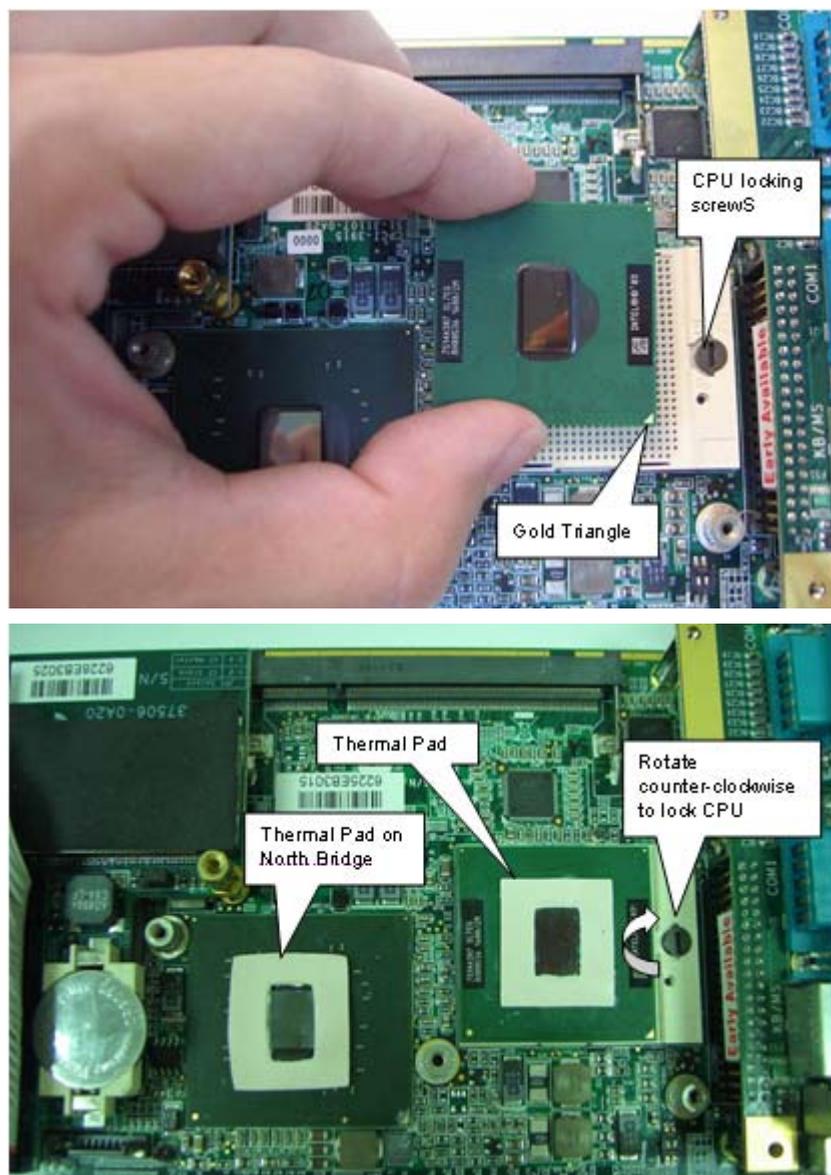
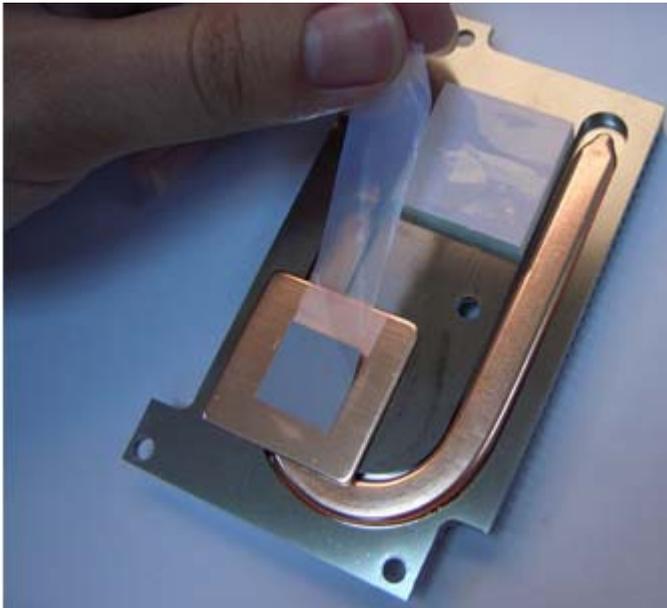


Figure 5-1: CPU Installation

Heat Sink Installation

To install the heat sink:

1. Remove the film on top of the thermal pads. Refer to Figure 5-2: Heat Sink Installation.
2. Place the heat sink on top of the CPU and Northbridge, making sure that the thermal pads has proper contact with the components. Secure the heat sink using four spring-loaded screws (provided).



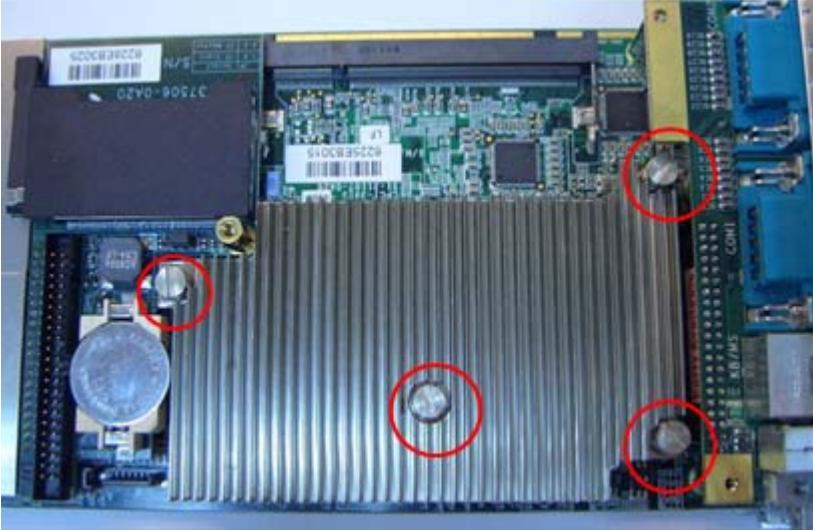


Figure 5-2: Heat Sink Installation

5.2 Installing a Memory Module

The cPCI-3915 supports one unbuffered, non-ECC DDR2 SDRAM in 200-pin SODIMM package. If the cPCI-3915 comes with a pre-installed memory module, proceed to the next section.

Note: When installing a memory module, make sure that the module is firmly seated on the slot and does not interfere with any component.

To install the memory modules:

1. Align the notch in the memory module with the key on the SODIMM slot. Refer to Figure 5-3: Memory Installation for details.
2. Press down the module until it is properly seated on the slot.

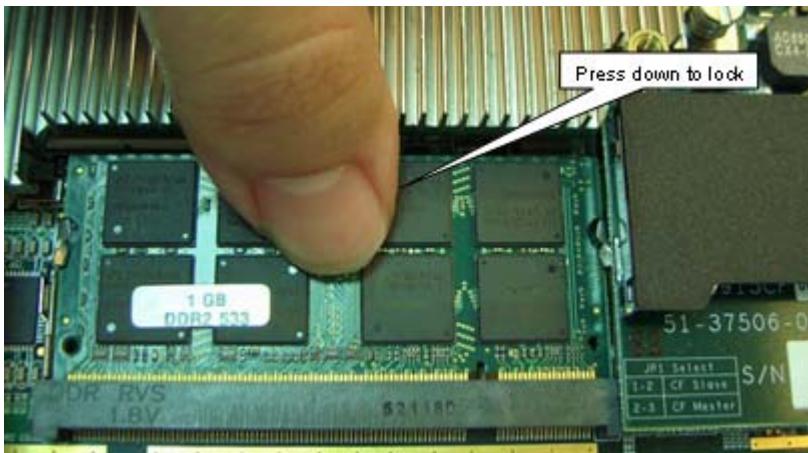
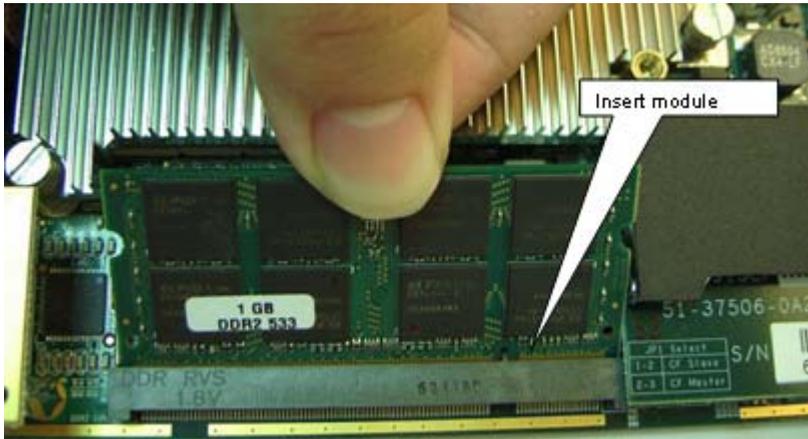


Figure 5-3: Memory Installation


5.3 Installing the Hard Disk Drive

The cPCI-3195 supports a slim-type 2.5" HDD. If the cPCI-3195 comes with a pre-installed HDD, proceed to the next section.

To install the hard disk drive:

1. Install the provided HDD bracket to the board.
2. Connect the provided 44-pin IDE cable to the HDD. Make sure that the cable Pin1 is in the proper position.
3. Place the HDD into the bracket as shown, then connect the other end of the IDE cable to the IDE connector on the cPCI-3195.
4. Tighten all four bracket screws to secure the HDD in place.

Refer to the following illustrations for details.

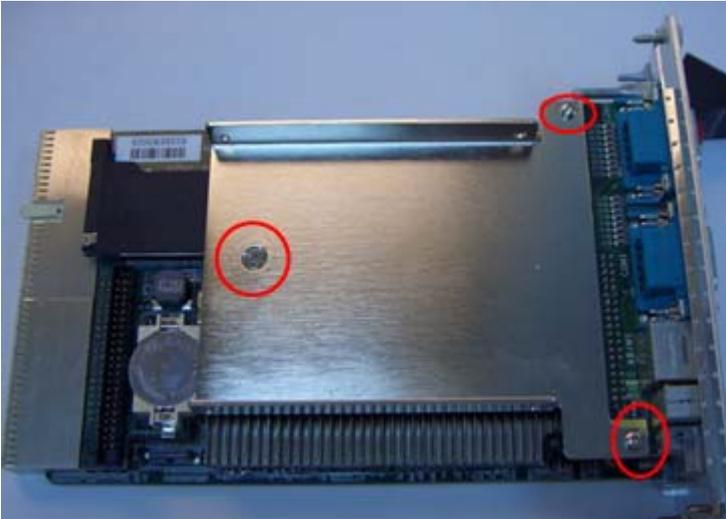



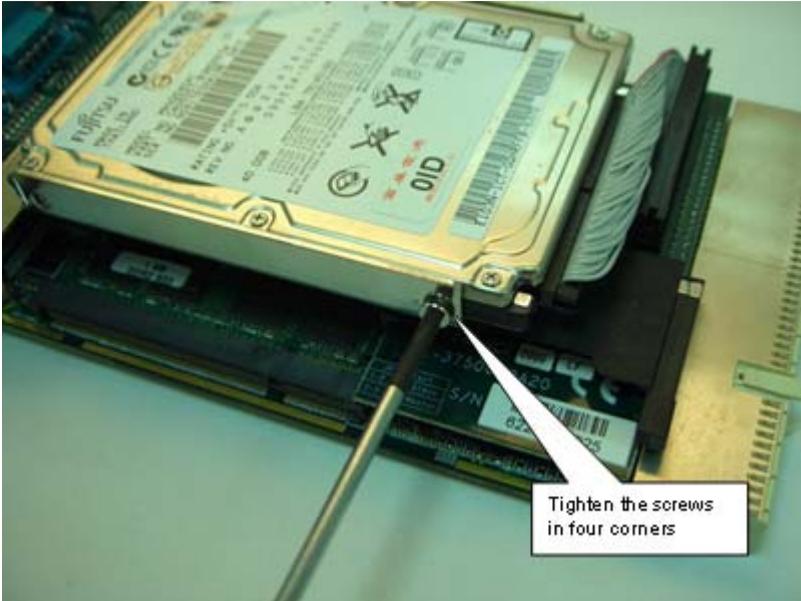


Figure 5-4: 2.5" Hard Disk Installation

5.4 CF Card Installation

The CompactFlash card has been widely accepted in mission critical embedded applications for its anti-shock/-vibration properties, better environmental tolerance, low power consumption, small form factor, and reliability.

To install the CF card, insert it to the CF card slot located under the HDD. Refer to Figure 5-5.

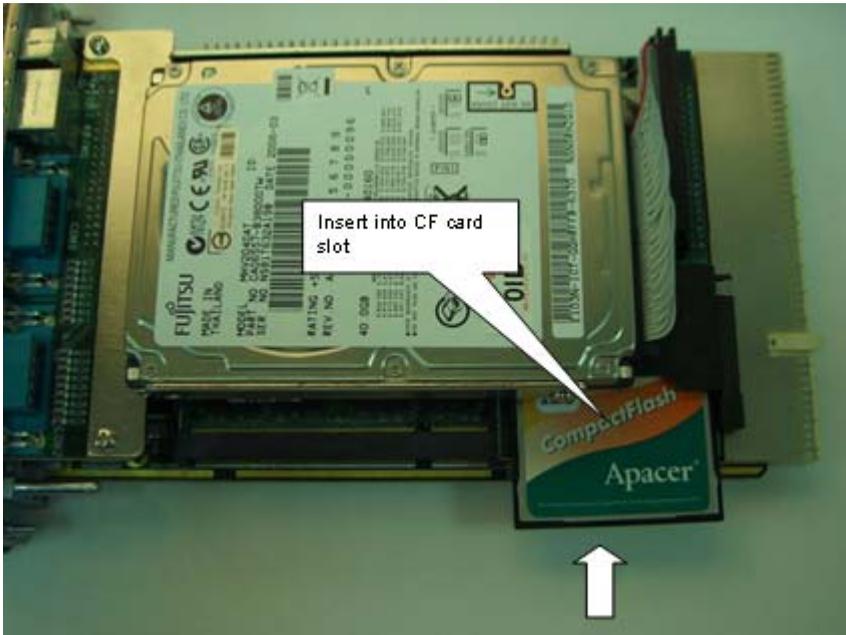


Figure 5-5: Compact Flash Card Installation

5.5 Installing the cPCI-3915 to the Chassis

To install the cPCI-3915 module to a CompactPCI chassis:

1. Refer to the chassis documentation before installing the cPCI-3915.
2. Turn off the power in both chassis front and rear.
3. Assign a system slot for the board. Make sure you assign the correct slot.
4. Remove the panel cover opposite the slot you want to use.
5. Align the top and bottom edges of the board with the card guides on the chassis, then push the board until it is completely flushed on the chassis.

6. Move the locking handle inward until it is fully-latched. A slight resistance may be felt when inserting the board. If the resistance is too strong, check if there are bent pins on the backplane or if the board's connector pins are properly aligned with the connectors on the backplane.
7. Check if the board is seated properly on the slot. Secure the board with two screws (behind the upper and lower ejector)
8. Connect the cables and peripherals to the board, then turn the chassis on.

5.6 RTM (cPCI-R3915) Installation

Follow the typical cPCI board installation and removal procedures for the RTM. However, be careful when inserting or removing RTMs to the chassis as these are shorter than front boards.

Refer to previous sections when connecting or installing peripherals to the RTM. Make sure that the RTMs you are installing are compatible with the cPCI-3915 series.

Note: You must install the correct RTM to enable some functionalities (I/O interfaces) on the rear panel. Installation of non-compatible RTMs may damage the system board and/or other RTMs.

A COM2 port is located in the front board and the RTM. You may connect a serial device to either the front or rear module COM2 port. DO NOT access these ports simultaneously.

6 Windows® Driver Installation

The cPCI-3915 drivers are available from the ADLINK All-In-One CD or from the ADLINK website (<http://www.adlinktech.com>). The following describes the driver installation procedures for Windows® 2000, Windows® XP or Windows® Server 2003:

1. Install the Windows operating system before installing any driver. Most standard I/O device drivers are installed during Windows installation.
2. Install the chipset driver.
3. Install the VGA driver and utilities.
4. Install the LAN drivers.

We recommend using the chipset, VGA, and LAN drivers provided on the ADLINK All-in-One CD or downloaded from the ADLINK website to ensure compatibility. Contact ADLINK to get support for Linux and VxWorks BSP drivers.

7 Utilities

7.1 Watch Dog Timer

This section explains the operation of the cPCI-3915's watch dog timer (WDT). The primary function of the WDT is to monitor the cPCI-3915 operation and to reset the system if a software application fails to function as programmed. The following WDT functions may be controlled using a software application:

- ▶ enabled and disabled
- ▶ reloading timeout value

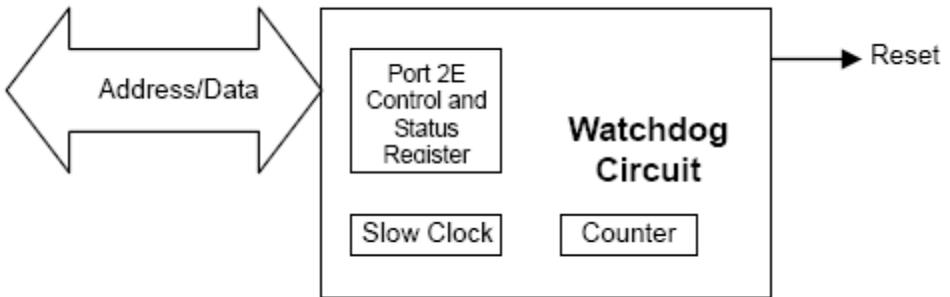


Figure 7-1: cPCI-3915 Watch Dog Timer Architecture

The cPCI-3915 custom WDT circuit is implemented using the ITE8712F chip. It contains two registers (CR72, CR73 of logical device 7) for controlling the WDT and for retrieving its status. The basic functions of the WDT include:

- ▶ Setting the watch dog timeout interval
- ▶ Starting the timer countdown
- ▶ Enabling or disabling watch dog
- ▶ Reloading the timeout value to keep the watch dog from timing out
- ▶ Setting the range of the timeout period from 1 to 255 seconds, or from 1 to 255 minutes. This is set by the control register.

When the watch dog timed out, it will send a RESET signal to the system.

7.2 Using the Watchdog in an Application

The following section describes the WDT functions in an application. The WDT reset function is explained in the previous section. This can be controlled through the registers in the cPCI Super I/O chip.

An application using the reset feature enables the watch dog function, sets the count-down period, and reloads the timeout value periodically to keep it from resetting the system. If the timer count-down value is not reloaded, the watch dog resets the system hardware after its counter registers zero.

For a detailed programming sample, refer to the sample code provide in the ADLINK All-In-One CD. You may find this in the following directory: X:\cPCI\cPCI-3915\WDT\WDT.ASM

7.3 Intel® Preboot Execution Environment (PXE)

The cPCI-3915 series supports Intel® Preboot Execution Environment (PXE), which is capable of booting or executing an OS installation over an Ethernet connection. A DHCP server in the network must be present and one or more servers must have PXE and MTFTP services. For example, a server running on Windows® NT or Windows® 2000 and has DHCP, PXE, and MTFTP services or a dedicated DHCP server with one or more additional servers with PXE and MTFTP services. This section describes the major items required for building a network environment with PXE support.

1. Set up a DHCP server with PXE tag configuration.
2. Install the PXE and MTFTP services.
3. Create a boot image file on the PXE server (also the boot server).
4. Enable the PXE boot function on the client.

8 BIOS

8.1 BIOS Setup Introduction

The Phoenix-AwardBIOS provides a setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the or <Tab> key immediately allows you to enter the setup utility. If you are a little bit late pressing the or <Tab> key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the setup. If you still wish to enter setup utility, restart the system by pressing the “RESET” button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system OFF and back ON again. The following message will appear on the screen:

Press DEL, TAB to Enter Setup

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit. When you enter the setup utility, the main menu screen will appear on the screen. The main menu allows you to select from various setup functions and exit choices.

Phoenix – AwardBIOS CMOS Setup Utility

▶ Standard CMOS Features	Load Fail-safe Defaults
▶ Advanced BIOS Features	Load Optimized Defaults
▶ Advanced Chipset Features	Set Supervisor Password
▶ Integrated Peripherals	Set User Password
▶ PnP/PCI Configurations	Save & Exit Setup
▶ PC Health Status	Exit Without Saving
ESC : Quit F9 : Menu in BIOS	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type	

The section below the setup items of the main menu displays the control keys for this menu. Another section at the bottom of the main menu just below the control keys section displays information on the currently highlighted item in the list.

The BIOS also supports to store the CMOS settings into non-volatile ROM by using F6/F7 key.

- Note:**
1. After making and saving system changes with setup, you find that your computer cannot boot, the BIOS supports an override to the CMOS settings that resets your system to its default.
 2. We strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS vendor and your system manufacturer to provide the absolute maximum performance and reliability.

8.2 Standard CMOS Features

"Standard CMOS Features" item allows you to record some basic hardware configurations in your computer system and set the system clock and error handling. If the motherboard is already installed in a working system, you will not need to select this option. You will need to run the Standard CMOS option, however, if you change your system hardware configurations, the onboard

battery fails, or the configuration stored in the CMOS memory was lost or damaged.

Phoenix – AwardBIOS CMOS Setup Utility
Standard CMOS Features

Date (mm : dd : yy)	Mon, May 2 2006	Item Help
Time (hh : mm : ss)	16 : 34 : 3	
		Menu Level ▶
▶ Onboard PATA Master	[None]	
▶ Onboard PATA Slave	[None]	Change the day, month,
▶ Onboard SATA-0	[None]	Year and century
▶ Onboard SATA-1	[None]	
Video	[EGA/VGA]	
Halt On	[All , But Keyboard]	
Base Memory	640K	
Extended Memory	514048K	
Total Memory	515072K	

↑ ↓ → ← : Move Enter: Select +/~/P/UP/D: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

At the bottom of the menu are the control keys for use on this menu. If you need any help in each item field, you can press the <F1> key. It will display the relevant information to help you. You can also see the item help at the right side of setup menu. The memory display at the lower right-hand side of the menu is read-only. It will adjust automatically according to the memory changed. The following describes each item of this menu.

Date

The date format is:

Day	Sun to Sat (read only)
Month	Jan to Dec
Date	1 to 31
Year	1994 to 2079

To set the date, highlight the “Date” field and use the <PgUp>/<PgDn> or +/- keys to set the current time.

Time

The time format is:

Hour	00 to 23
Minute	00 to 59
Second	00 to 59

To set the time, highlight the "Time" field and use the <PgUp>/<PgDn> or +/- keys to set the current time.

Onboard PATA Master/Onboard PATA Slave/Onboard SATA-0/Onboard SATA-1

The onboard PCI IDE connectors provide primary and secondary channels for connecting up to four IDE hard disks or other IDE devices. Each channel can support up to two hard disks; the first is the “Master” and the second is the “Slave”.

The BIOS setup utility provides a sub-menu to enter the specifications for a hard disk drive.

Phoenix – AwardBIOS CMOS Setup Utility
Onboard PATA Master

IDE HDD Auto-Detection	[Press Enter]	Item Help
Onboard PATA Master	[Auto]	Menu Level ▶▶
Access Mode	[Auto]	
Capacity	6480 MB	To auto-detect the HDD's size, head... on this channel
Cylinder	12556	
Head	16	
Precomp	65535	
Landing Zone	12556	
Sector	63	

↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

The following describes each item of this menu.

IDE HDD Auto-Detection

This item is used to detect the type of hard drive. It will assign the cylinder, head, precomp, landing zone, and sector to the hard drive.

Phoenix – AwardBIOS CMOS Setup Utility
Onboard PATA Master

IDE HDD Auto-Detection	[Press Enter]	Item Help
Onboard PATA Master	[Auto]	Menu Level ▶▶
Access Mode	[Auto]	
*Capacity		...ts the type of fixed disk.
*Cylinder		...type' will let you select
*Head	16	...umber of cylinders, heads,
*Precomp	65535	Note: PRECOMP=65535
*Landing Zone	12556	means NONE !
*Sector	63	

↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Onboard PATA Master/Onboard PATA Slave/Onboard SATA-0/ Onboard SATA-1

Auto	BIOS will auto detect the hard disk type.
Manual	User can assigns the type of hard disk when the access mode is normal.
None	Selects this selection when there is no hard disk in the system.

Access Mode

Auto	Auto-detect the HDD mode
Normal	HD < 528MB
Large	For MS-DOS only
LBA	HD > 528MB and supports Logical Block Addressing

If your hard disk drive type is not matched or listed, you can use normal access mode to define your own drive type manually. If you select normal access mode, related information are requested for the following items.

Cylinder	Number of cylinders
Head	Number of read/write heads
Precomp	Write precompensation
Landing Zone	Landing zone
Sector	Number of sectors

Note: The specifications of your drive must match with the drive table. The hard disk will not work properly if you enter incorrect information in these fields.

The Capacity item is adjusted automatically according to the configuration.

Video

This field selects the type of video display card installed in your system. You can choose the following video display cards.

EGA/VGA	For EGA, VGA, SEGA, SVGA or PGA monitor adapters.
CGA 40	Power up in 40 columns mode.
CGA 80	Power up in 80 columns mode.
MONO	For Hercules or MDA adapters.

Halt On

This field determines whether the system will halt if an error is detected during power up.

No Errors	The system boot will not be halted for any error that may be detected.
All Errors	Whenever the BIOS detects a non-fatal error, the system will stop and you will be prompted.
All, But Keyboard	The system boot will not be halted for a keyboard error; it will stop for all other errors

8.3 Advanced BIOS Features

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Phoenix – AwardBIOS CMOS Setup Utility
 Advanced BIOS Features

Item	Value	Item Help
▶ Hard Disk Boot Priority	[Press Enter]	
CPU L1 & L2 Cache	[Enabled]	
CPU L3 Cache	[Enabled]	Menu Level ▶
Quick Power On Self Test	[Enabled]	
First Boot Device	[Hard Disk]	Allows you to choose the VRUS
Second Boot Device	[CDROM]	warning feature for IDE Hard
Third Boot Device	[USB-CDROM]	Disk boot sector protection.
Boot Other Device	[Enabled]	If this function is enabled and
Boot Up NumLock Status	[On]	someone attempt to write data
Gate A20 Option	[Fast]	into this area, BIOS will show
Typematic Rate Setting	[Disabled]	a warning message on screen
Typematic Rate (Chars/Sec)	6	and alarm beep
Typematic Delay (Msec)	250	
Security Option	[Setup]	
APIC Mode	[Disabled]	
MPS Version Control For OS	1.4	
Console Redirection	[Enabled]	
Baud Rate	[19200]	
Agent Connect via	[NULL]	
Agent after boot	[Disabled]	
Summary Screen Show	[Disabled]	

↑ ↓ → ←: Move Enter: Select +/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Hard Disk Boot Priority

These items have a sub-menu when user press enter key. This item can lists all Hard Disk Device. User can select Hard Disk Boot Device Priority.

CPU L1 & L2/L3 Cache

Cache memory is additional memory that is much faster than conventional DRAM (system memory). CPUs with 486 processors and upwards contain internal cache memory, and most, but not all, modern PCs have additional (external) cache memory. When the CPU requests data, the system transfers the requested data from the main memory into cache memory for even faster access by the CPU. This item allows you to enable (speed up memory access) or disable the cache function.

Enabled	Open CPU L1 & L2 /L3 Cache
Disabled	Close CPU L1 & L2 /L3 Cache

Quick Power On Self Test

When enabled, this field speeds up the Power On Self Test (POST) after the system is turned on. If it is set to Enabled, BIOS will skip some items.

First/Second/Third/Boot Other Device

The BIOS attempts to load the operating system from the devices that listed in the following items. The settings are:

LS120	Hard Disk	CDROM
ZIP100	USB-FDD	USB-ZIP
USB-CDROM	Legacy LAN	Disabled

First boot device default is Hard Disk, Second device is CDROM, and Third device is USB-CDROM.

Boot Up NumLock Status

On	Keypad is number keys
Off	Keypad is arrow keys

Gate A20 Option

This field allows you to select how Gate A20 is accessed. Gate A20 is a device used to address memory above 1 MB.

Fast	The A20 signal controlled by chipset specific method
------	--

Normal	The A20 signal controlled by keyboard controller or chipset hardware
--------	--

Typematic Rate Setting

Enabled	Enable typematic rate and typematic delay programming
Disabled	Disable typematic rate and typematic delay programming. The system BIOS will use default value of these 2 items and the default controlled by keyboard

Typematic Rate (Chars/Sec)

When the typematic rate is enabled, the system registers repeated keystroke speeds. You can select speed ranging from 6 to 30 characters per second.

Typematic Delay (Msec)

When the typematic rate is enabled, this item allows you to set the time interval for displaying the first and second characters.

Security Option

This field allows you to limit access to the System and Setup.

Setup	The system always boots up and prompts for the supervisor password only when the Setup utility is called up
System	The system prompts for the user password every time you boot up

Note: To disable security, select PASSWORD SETTING at main menu and then you will be asked to enter the password. If you do not type anything and just press <Enter> key, it will disable security. Once the security is disabled, you can boot up the system and access to setup freely.

APIC Mode

APIC mode provides redirection for upstream interrupt (24 Interrupt) to system, but need OS support (ex: Windows 2K/XP).

MPS Version Control For OS

A BIOS Setup option allows the integrator to select whether to use Multi-Processor Specification (MPS) 1.1 or 1.4. The MPS is a specification by which PC manufacturers design and build Intel architecture systems with two or more processors.

MPS version 1.4 added extended configuration tables to improve support for multiple PCI bus configurations and improve future expandability. Most newer versions of server operating system support MPS 1.4 and, as such, you should change the BIOS setup from the default of 1.1 to 1.4 if your operating system supports the 1.4 version.

For instance, both Novell IntranetWare* 4.11 and Microsoft Windows*NT* Server 4.0 support the MPS 1.4 specification. Some operating systems may require version 1.1 for compatibility reasons.

Remote Console Function

cPCI-3915 can be used in a system that do not request video display or keyboard. It allows another computer to get POST messages and commands through serial-port access.

Note: Remote Console is a character-based terminal application. It supports either VT100 or ANSI terminals. It does not support graphics or graphical user interfaces.

Console Redirection

This field allows you to select if remote console function is Enabled or Disabled. Default value is Enabled.

Baud Rate

When Console Redirection is Enabled, BIOS will let user to set the serial port's operating baud rate. There are five settings for user to select, 9600,19200,38400, 57600 and 115200.

Note: The Baud Rate setting between cPCI-3915 and monitoring computer must be the same. If they are different, a error message "Award Preboot Agent Installation Failed" will display when BIOS is building the connection between two computers.

Agent Connect via

This field selects connection mode. CPCI-3915 BIOS only support NULL mode. NULL mode means that user can connect two computer use null modem cable to achieve direct connection.

Agent Wait Time(min)

This option allows to select the amount of time(min) to wait the connection successful. If it is timeout, the remote console function will not be supported on cPCI-3915.

Agent after boot

This field allows you to monitor text-based applications (such as DOS) after POST. Select Disabled to terminate remote console after POST. BIOS default is Disabled.

Summary Screen Show

When system boots, it will display a list table that show the system information such as the frequency of CPU, the size of memory, onboard device, and PCI devices. This option allows user to decide if they want to show the summary screen.

8.4 Advanced Chipset Features

This setup menu controls the configuration of the chipset.

Phoenix – AwardBIOS CMOS Setup Utility
 Advanced Chipset Features

Set CPU Speed / Voltage	[1.20G/1.356V]	Item Help
DRAM Timing Selectable	[By SPD]	
× Cas Latency Time	4	Menu Level ▶
× DRAM RAS# to CAS# Delay	3	
System BIOS Cacheable	[Enabled]	
Video BIOS Cacheable	[Enabled]	
▶ PCI Express Root Port Func	[Press Enter]	
BIOS Write Protection	[Disabled]	
** VGA-Setting **		
On-Chip Frame Buffer Size	[8MB]	
DVMT Mode	[DVMT]	
DVMT/FIXED Memory Size	[128MB]	
Boot Display	[CRT]	
Panel number	[800x600]	

↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Set CPU Speed / Voltage

This item provide you to adjust the CPU Speed / Voltage for the thermal solution.

It is available for the CPU whose speed faster than 1.5GHz, and depending on CPU type ,there are various CPU speed options.

DRAM Timing Selectable

When By SPD is selected, the DRAM timing will set according to DRAM SPD ROM

recorded, otherwise the DRAM timing will set depend on Cas Latency Time and

DRAM RAS# to CAS# Delay item value that you selected.

System BIOS Cacheable

When this function is enabled, the BIOS ROM's addresses at F0000H-FFFFFFH will be duplicated into the SRAM. It will work with the cache controller that is enabled.

Enabled	BIOS access cached
Disabled	BIOS access not cached

Video BIOS Cacheable

As with caching the system BIOS above, enabling the Video BIOS cache will cause access to video BIOS addressed at C0000H to C7FFFH to be cached, it the cache controller is also enabled.

Enabled	Video BIOS access cached
Disabled	Video BIOS access not cached

PCI Express Root Port Func

There are two sub-items behind this item that control each PCI Express Port.

- ▶ PCI Express Port 1/PCI express Port 2

Auto	Auto enabled/disabled the port depend on the device existed or not.
Enabled	Always enabled the port

Disabled	Always disabled the port
----------	--------------------------

BIOS Write Protection

To protect the BIOS from destroying by some reasons, this item lets user to select the protection type to avoid BIOS errors.

Disabled <Default>	User can flash BIOS anywhere.
Enabled	User can't flash the newer BIOS file.

On-Chip Frames Buffer Size

This item set On-Chip VGA memory cache windows size.

DVMT Mode

Dynamic Video Memory Technology (DVMT) is an enhancement of the Unified Memory Architecture (UMA) concept, wherein the optimum amount of memory is allocated for balanced graphics and system performance.

FIXED	A static amount of page-locked graphics memory is allocated during driver initialization.
DVMT	The graphics driver allocates memory as needed for running graphics applications.
BOTH	A static amount of page-locked graphics memory is allocated during driver initialization and an additional amount of DVMT graphics memory is allocated and de-allocated based upon system need.

DVMT/FIXED Memory Size

Memory Size that DVMT or FIXED mode utilizing.

Boot Display

This item can set boot display. There are three display can set: CRT, CRT +LVDS, CRT+DVI.

Panel Number

If there installs a LCD panel on Cpci-3915 platform, you can also select the panel type in this item. There are fours panel types can be selected.

Panel Type No.	Function Description
----------------	----------------------

640x480	640x480 TFT Color Panel.
800x600	800x600 TFT Color Panel.
1024x768	1024x768 TFT Color Panel.
1280x1024	1280x1024 TFT Color Panel.

OnChip IDE Device

When you press an “Enter” key at “OnChip IDE Device” item, a sub-menu will display as follows.

Phoenix – Award BIOS CMOS Setup Utility
OnChip IDE Device

IDE HDD Block Mode	[Enabled]	Item Help
IDE DMA transfer access	[Enabled]	
On-Chip Primary PCI IDE	[Enabled]	Menu Level ▶
IDE Primary Master PIO	[Auto]	
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	

↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

IDE HDD Block Mode

This field allows your hard disk controller to use the fast block mode to transfer data to and from your hard disk drive.

Enabled	IDE controller uses block mode
Disabled	IDE controller uses standard mode

On-Chip Primary/Secondary PCI IDE

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select Enabled to activate each channel separately.

IDE Primary/Secondary Master/Slave PIO

These fields allow your system hard disk controller to work faster. Rather than have the BIOS issue a series of commands that transfer to or from the disk drive, PIO (Programmed Input/

Output) allows the BIOS to communicate with the controller and CPU directly.

The system supports five modes, numbered from 0 to 4, which primarily differ in timing. When Auto is selected, the BIOS will select the best available mode.

Auto	Auto select which mode that BIOS communicates with the controller and CPU
Mode0~Mode4	User define the PIO mode

IDE Primary/Secondary Master/Slave UDMA

These fields allow your system to improve disk I/O throughput up to 100MB/sec with the Ultra DMA/100 feature. The options are Auto and Disabled.

Onboard Device

When you press an “Enter” key at “Onboard Device” item, a sub-menu will display as follows.

Phoenix – Award BIOS CMOS Setup Utility
Onboard Device

USB Controller	[Enabled]	Item Help
USB 2.0 Controller	[Enabled]	
USB Keyboard Support	[Disabled]	Menu Level ▶
Onboard LAN1 Chip	[Enabled]	
Onboard LAN2 Chip	[Enabled]	

↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

USB Controller

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have USB peripherals.

Reset Configuration Data

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system can't boot.

Resources Controlled by

This PnP BIOS can configure all of the boot and compatible devices automatically. However, this capability needs you to use a PnP operating system such as Windows 98, 2000 or XP. If you set this field to "manual" choose specific resources by going into each of the sub menu that follows this field.

Auto(ESCD)	PnP BIOS configure all compatible devices automatically
Manual	User can assign IRQ & DMA to the devices

IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt.

PCI/VGA Palette Snoop

Some non-standard VGA display cards may not show colors properly. This field allows you to set whether MPEG ISA/VESA VGA cards can work with PCI/VGA or not.

Enabled	PCI/VGA can work with MPEG ISA/VESA VGA card
Disabled	PCI/VGA can not work with MPEG ISA/VESA VGA card

8.7 PC Health Status

Phoenix – AwardBIOS CMOS Setup Utility
 PC Health Status

Vcore		Item Help
VCCP		
1.5V		Menu Level ▶
1.8V		
3.3V		
5V		
12V		
Voltage Battery		
Current System Temp.		
Current CPU Temperature		


↑ ↓ → ←: Move Enter: Select +/-/PU/PD: Value F10: Save ESC: Exit F1: General Help
 F5: Previous Values F6: Fail-Safe Defaults F7: Optimized Defaults

Vcore/VCCP/1.5V/1.8V/3.3V/5V/12V/Voltage Battery/Current System Temp./Current CPU Temperature

These items will show the temperatures and voltages of system and CPU.

8.8 Load Fail-Safe Defaults

This option allows you to load the troubleshooting default values permanently stored in the BIOS ROM. These default settings are non-optimal and disable all high-performance features.

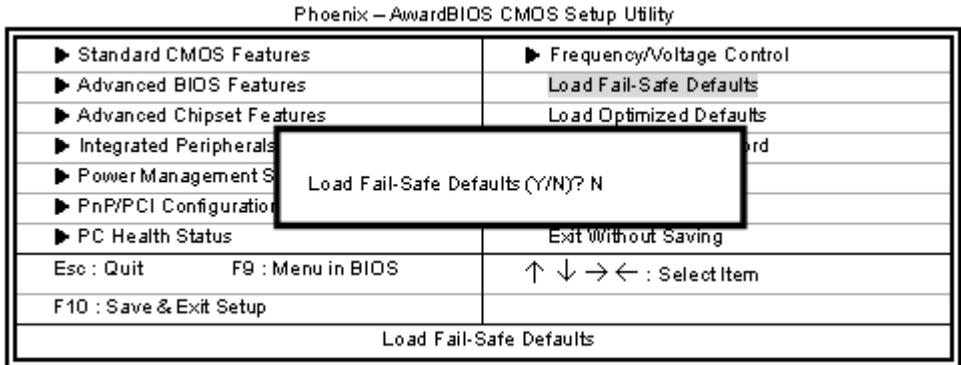


To load Fail-Safe defaults value to CMOS SRAM, enter “Y”. If not, enter “N”.

8.9 Set Supervisor / User Password

These two options set the system password. Supervisor Password sets a password that will be used to protect the system and Setup utility. User Password sets a password that will be used exclusively on the system. To specify a password, highlight the type you want and press <Enter>. The Enter Password: message prompts on the screen. Type the password, up to eight characters in length, and press <Enter>. The system confirms your password by asking you to type it again. After setting a password, the screen automatically returns to the main screen.


To disable a password, just press the <Enter> key when you are prompted to enter the password. A message will confirm the password to be disabled. Once the password is disabled, the system will boot and you can enter Setup freely.

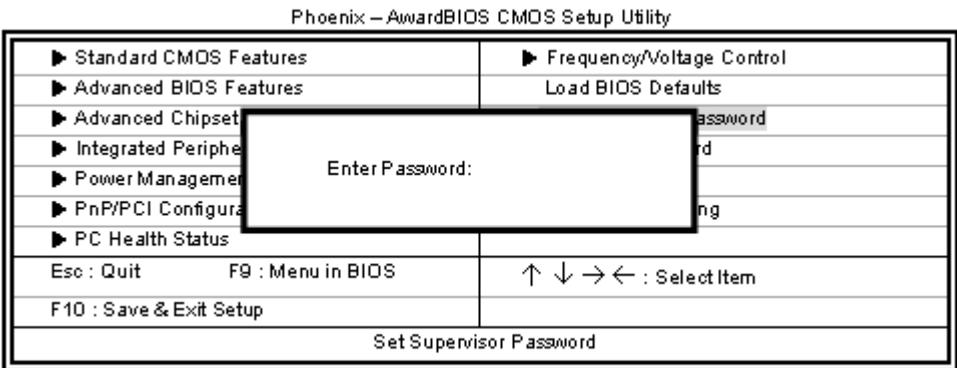

8.10 Save & Exit Setup


Save & Exit Setup

This option allows you to determine whether to accept the modifications or not. Typing Y will quit the setup utility and save all changes into the CMOS memory. Typing N will return to Setup utility.

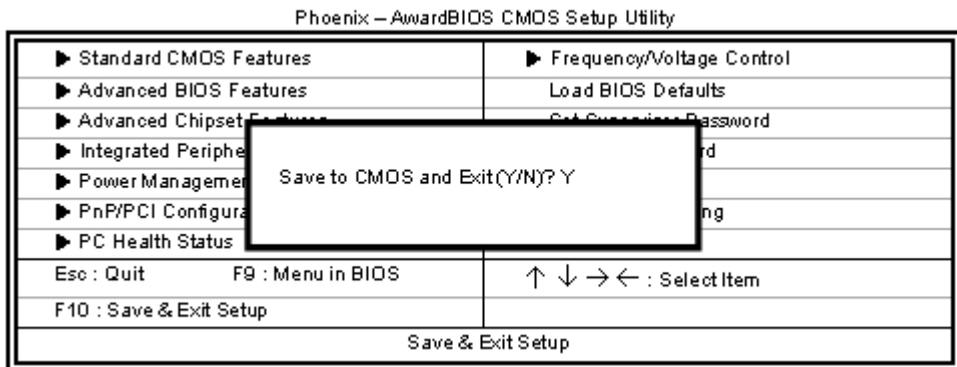

Exit Without Saving

Select this option to exit the Setup utility without saving the changes you have made in this session. Typing Y will quit the Setup utility without saving the modifications. Typing N will return to Setup utility.

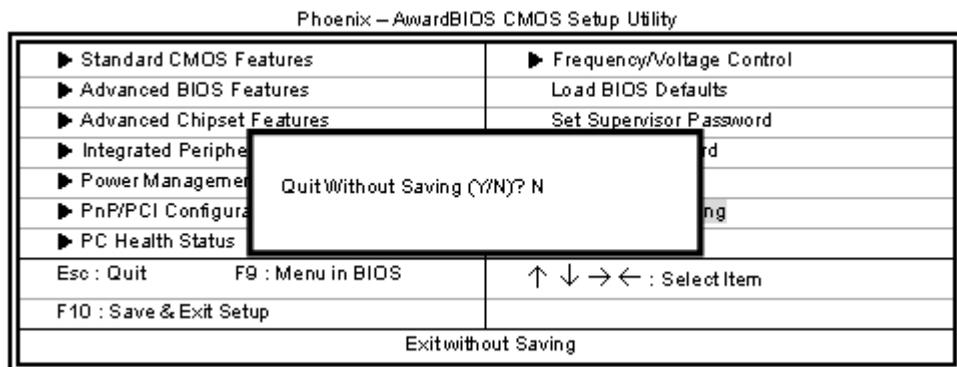

Important Safety Instructions

Please read and follow all instructions marked on the product and in the documentation before operating the system. Retain all safety and operating instructions for future use.

- ▶ Please read these safety instructions carefully.
- ▶ Please keep this User's Manual for future reference.
- ▶ The equipment should be operated within the recommended operating temperature.
- ▶ The equipment should be operated only from the type of power source indicated on the rating label. Make sure the voltage of the power source is correct when connecting the equipment to the power outlet.
- ▶ If the user's equipment has a voltage selector switch, make sure that the switch is set to the proper position for the area. The voltage selector switch is set at the factory to the correct voltage.
- ▶ For pluggable equipment, ensure they are installed near a socket-outlet that is easily accessible.
- ▶ Secure the power cord to prevent unnecessary accidents. Do not place anything over the power cord.
- ▶ If the equipment will not be in use for long periods of time, disconnect the equipment from mains to avoid being damaged by transient overvoltage.
- ▶ All cautions and warnings on the equipment should be noted.
- ▶ Please keep this equipment away from humidity.
- ▶ Do not use this equipment near water or a heat source.
- ▶ Place this equipment on a reliable surface when installing. A drop or fall could cause injury.
- ▶ Never pour any liquid into the opening, this could cause fire or electrical shock.

- ▶ Openings in the case are provided for ventilation. Do not block or cover these openings. Make sure there is adequate space around the system for ventilation when setting up the work area. Never insert objects of any kind into the ventilation openings.
- ▶ To avoid electrical shock, always unplug all power and modem cables from the wall outlets before removing covers.
- ▶ Lithium Battery provided (real time clock battery)
“CAUTION - Risk of explosion if battery is replaced by an incorrect type. Dispose used batteries as instructed in the instructions”
- ▶ The equipment should be checked by service personnel if one of the following situation arises:
 - ▷ The power cord or plug is damaged.
 - ▷ Liquid has penetrated the equipment.
 - ▷ The equipment has been exposed to moisture.
 - ▷ The equipment is not functioning or does not function according to the user’s manual.
 - ▷ The equipment has been dropped and damaged.
 - ▷ If the equipment has obvious sign of breakage.
- ▶ Never open the equipment. For safety reasons, the equipment should only be opened by qualified service personnel.

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully.

1. Before using ADLINK's products please read the user manual and follow the instructions exactly. When sending in damaged products for repair, please attach an RMA application form which can be downloaded from: <http://rma.adlinktech.com/policy/>.
2. All ADLINK products come with a limited two-year warranty, one year for products bought in China:
 - ▶ The warranty period starts on the day the product is shipped from ADLINK's factory.
 - ▶ Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
 - ▶ For products containing storage devices (hard drives, flash cards, etc.), please back up your data before sending them for repair. ADLINK is not responsible for any loss of data.
 - ▶ Please ensure the use of properly licensed software with our systems. ADLINK does not condone the use of pirated software and will not service systems using such software. ADLINK will not be held legally responsible for products shipped with unlicensed software installed by the user.
 - ▶ For general repairs, please do not include peripheral accessories. If peripherals need to be included, be certain to specify which items you sent on the RMA Request & Confirmation Form. ADLINK is not responsible for items not listed on the RMA Request & Confirmation Form.

3. Our repair service is not covered by ADLINK's guarantee in the following situations:
 - ▶ Damage caused by not following instructions in the User's Manual.
 - ▶ Damage caused by carelessness on the user's part during product transportation.
 - ▶ Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
 - ▶ Damage caused by unsuitable storage environments (i.e. high temperatures, high humidity, or volatile chemicals).
 - ▶ Damage caused by leakage of battery fluid during or after change of batteries by customer/user.
 - ▶ Damage from improper repair by unauthorized ADLINK technicians.
 - ▶ Products with altered and/or damaged serial numbers are not entitled to our service.
 - ▶ This warranty is not transferable or extendible.
 - ▶ Other categories not protected under our warranty.
4. Customers are responsible for shipping costs to transport damaged products to our company or sales office.
5. To ensure the speed and quality of product repair, please download an RMA application form from our company website: <http://rma.adlinktech.com/policy>. Damaged products with attached RMA forms receive priority.

If you have any further questions, please email our FAE staff: service@adlinktech.com.