

This publication, photographs, illustrations and software are under the protection of international copyright laws and all rights reserved. It does not allow any reproduction of this manual, content and any materials contained herein without the written consent of the authentic manufacturer.

The information in this manual is subject to change without notice. The manufacturer does neither represent nor warrant the contents hereof; and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Furthermore, the manufacturer reserves the right to revise and change this publication from time to time, without the obligation of notifying any person of such revision or changes.

Trademarks

IBM, VGA and PS/2 are registered trademarks of International Business Machines.

Intel, Pentium, Pentium-II, Pentium-III, Pentium 4, MMX, Celeron and Tualatin are registered trademarks of Intel Corporation.

Microsoft, MS-DOS and Windows 95/98/NT/2000/XP are registered trademarks of Microsoft Corporation.

PC-cillin is a registered trademark of Trend Micro Inc.

AMI is a trademark of American Megatrends Inc.

SuperVoice is a registered trademark of Pacific Image Communications Inc.

MediaRing Talk is a registered trademark of MediaRing Inc.

Other names used in this publication may be trademarks and are acknowledged.

**Copyright © 2001
All Rights Reserved
KOB 810e2 TFST, V9.1
December 2001**

Table of Contents

Trademarks	I
Chapter 1	1
Introduction.....	1
Key Features.....	2
Package Contents.....	4
Static Electricity Precautions.....	5
Pre-Installation Inspection.....	5
Chapter 2	6
Mainboard Installation.....	6
Mainboard Components	7
Install A CPU.....	8
Install Memory	9
Setting Jumper Switches.....	10
Install the Mainboard.....	12
Install the Extension Brackets	13
Optional Extension Brackets	16
Install Other Devices	18
Expansion Slots	20
Chapter 3	22
BIOS Setup Utility.....	22
Introduction	22
Running the Setup Utility	23
Standard CMOS Setup Page.....	24
Advanced Setup Page	25
Power Management Setup Page	27
PCI / Plug and Play Setup Page.....	29
Load Optimal Settings.....	30
Load Best Performance Settings.....	30
Features Setup Page.....	31
CPU PnP Setup Page.....	33
Hardware Monitor Page.....	34
Change Password.....	35
Exit	35
Chapter 4	36
Software & Applications.....	36
About the Software CD-ROM.....	36
Drivers and Software Installation	37
Utility Software Reference	37



Chapter 1

Introduction

This mainboard has a **Socket 370**, which uses an **Intel FCPGA Celeron, FCPGA Pentium III** or **Tualatin/Tualatin Celeron** processor. You can install any one of these processors on the mainboard.

This mainboard supports front-side bus speeds of **66MHz, 100MHz** or **133MHz**.

This mainboard uses the Intel **i810E2** chipset that provides **CPU Plug & Play** through firmware, integrates a **3D AGP Graphics Accelerator**. The mainboard has a built-in **AC97 Codec** and provides an **AMR** slot to support Audio and Modem application. In addition, the mainboard has a full set of **I/O Ports** including a keyboard port, a parallel port, two serial ports and a VGA port. Two optional USB ports, a PS/2 mouse port, and an Infrared port can be added with an ATX Form card; an optional serial port can be used with a serial port extension bracket.

This mainboard has all the features you need to develop a powerful multimedia workstation. The board is **Baby-AT** size and has power connectors for **AT/ATX** power supply.

Key Features

The key features of this mainboard include:

Socket-370 Processor Support

- ◆ Supports **FCPGA Celeron, FCPGA Pentium III and Tualatin/Tualatin Celeron** CPUs
- ◆ Supports 66MHz, 100MHz or 133MHz FSB

All processors are automatically configured using firmware and a synchronous/asynchronous Host/DRAM Clock Scheme.

Note: Do not support PPGA Celeron CPU. Do not try to install PPGA Celeron processor in Socket-370.

Memory Support

- ◆ Two DIMM slots for 168-pin SDRAM memory modules
- ◆ Support for 66MHz, 100MHz, & 133MHz memory bus
- ◆ Maximum installed memory is 2 x 256 MB = 512 MB

Expansion Slots

- ◆ Three 32-bit PCI slots
- ◆ AMR slot for a special audio/modem riser card

Onboard IDE channels

- ◆ Primary and Secondary PCI IDE channels
- ◆ Support for PIO (programmable input/output) modes
- ◆ Support for Multiword DMA modes
- ◆ Support for Bus Mastering and Ultra DMA 100 modes

Power Supply and Power Management

- ◆ AT/ATX power supply connector
- ◆ ACPI and previous PMU support, suspend switch, keyboard power on/off
- ◆ Supports Wake on LAN and Wake on Alarm

Built-in Graphics System

- ◆ **3D AGP Graphics Accelerator** optimized for smooth 2D and 3D video
- ◆ The graphics system shares active memory and does not require dedicated video memory
- ◆ Supports high resolutions up to 1600x1200 16M colors
- ◆ Supports hardware DVD Accelerator and Direct DVD to TV playback

AC97 Codec

- ◆ Compliant AC97 2.1 specification
- ◆ Supports 18-bit ADC (Analog Digital Converter) and DAC (Digital Analog Converter) as well as 18-bit stereo full-duplex codec

Onboard I/O Ports

- ◆ Provides PC99 Color Connectors for easy peripheral device connections
- ◆ Floppy disk drive connector with 1Mb/s transfer rate
- ◆ Two serial port with 16550-compatible fast UART
- ◆ One parallel port with ECP and EPP support
- ◆ Optional ATX form card provides two USB ports, a mini-DIN port for a PS/2 mouse and one mini-DIN port for infrared

Onboard Flash ROM

- ◆ Automatic CPU and board configuration
- ◆ Supports Plug and Play configuration of peripheral devices and expansion cards

Hardware Monitoring

- ◆ Built-in hardware monitoring for CPU & System temperatures, fan speeds and mainboard voltages

Dimensions

- ◆ Baby-AT form factor (22cm x 22cm)

Package Contents

Your mainboard package ships with the following items:

- The mainboard
- This User's Guide
- 1 UDMA/66 IDE cable
- Floppy disk drive cable
- Audio ports and Game/MIDI port extension bracket
- Serial/Parallel ports extension bracket
- VGA extension bracket
- Support software on CD-ROM disk

Optional Accessories

You can purchase the following optional accessories for this mainboard.

- ATX Form card for 2 USB ports, an IR port and a PS/2 port
- Serial port extension bracket

Static Electricity Precautions

Components on this mainboard can be damaged by static electricity. Take the following precautions when unpacking the mainboard and installing it in a system.

1. Keep the mainboard and other components in their original static-proof packaging until you are ready to install them.
2. During installation, wear a grounded wrist strap if possible. If you don't have a wrist strap, discharge static electricity by touching the bare metal of the system chassis.
3. Handle the mainboard carefully by the edges. Avoid touching the components unless it is absolutely necessary. During installation put the mainboard on top of the static-protection packaging it came in with the component side facing up.

Pre-Installation Inspection

1. Inspect the mainboard for damage to the components and connectors on the board.
2. If you suspect that the mainboard has been damaged, do not connect power to the system. Contact your mainboard vendor and report the damage.

Chapter 2

Mainboard Installation

To install this mainboard in a system, follow the procedures in this chapter:


- ❑ Identify the mainboard components
- ❑ Install a CPU
- ❑ Install one or more system memory modules
- ❑ Verify that any jumpers or switches are set correctly
- ❑ Install the mainboard in a system chassis (case)
- ❑ Connect any extension brackets or cables to the mainboard connector headers
- ❑ Install any other devices and make the appropriate connections to the mainboard connector headers.

Note:

1. Before installing this mainboard, make sure jumper JP9 is set to Normal, the default setting. See this chapter for information on locating JP9 and the setting options.
2. Never connect power to the system during installation. Doing so may damage the mainboard.

Mainboard Components

Use the diagram below to identify the major components on the mainboard.

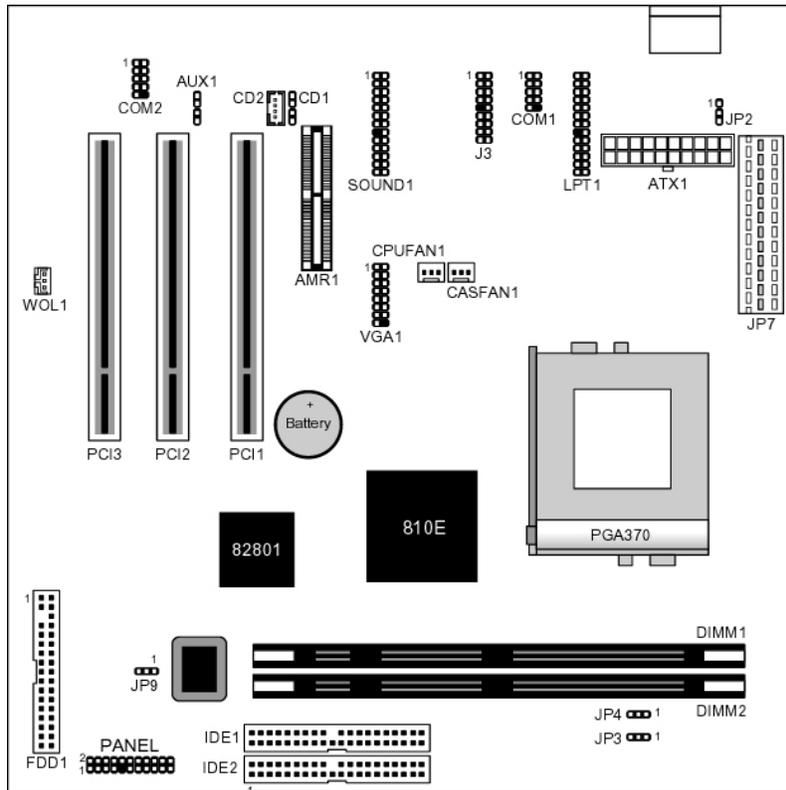

Note: Any jumpers on your mainboard that do not appear in this illustration are for testing only.

Install A CPU

This mainboard has a Socket 370 supporting FCPGA Celeron, FCPGA Pentium III and Tualatin/Tualatin Celeron processors.

Do not support PPGA Celeron processor.

To ensure reliability, ensure that your processor has a heatsink/cooling fan assembly.

Do not try to install a Socket 7 processor in the Socket-370. A Socket 7 processor such as the Pentium-MMX, or the AMD K5/K6 does not fit in the Socket 370. **Do not try to install PPGA Celeron processor in Socket-370.**

The following list notes the processors that are currently supported by this mainboard.

FCPGA Celeron: 300~700 MHz, FSB: 66 MHz


FCPGA Pentium III: 500~1130MHz, FSB: 100MHz, 133MHz

Tualatin/Tualatin Celeron : up to 1.2GHz, FSB: 100MHz

Installing a Socket-370 Processor

A processor installs into the ZIF (Zero Insertion Force) Socket-370 on the mainboard.

1. Locate the Socket-370 and CPUFAN1. Pull the locking lever out slightly from the socket and raise it to the upright position.

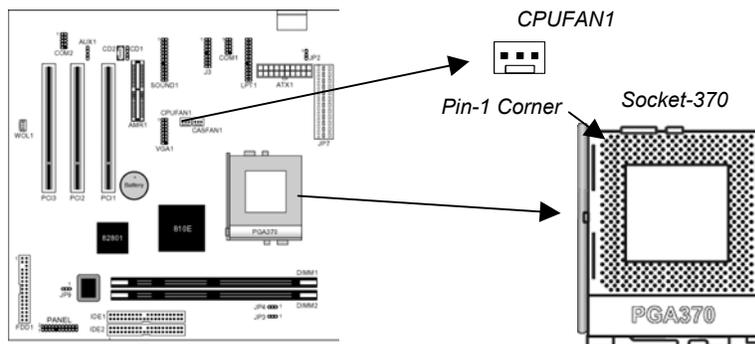


2. On the processor, identify the Pin-1 corner by its beveled edge.

3. On the Socket-370, identify the Pin-1 corner. The Pin-1 corner is at the end of the locking lever when it is locked.
4. Match the Pin-1 corners and insert the processor into the socket. No force is required and the processor should drop into place freely.
5. Swing the locking lever down and hook it under the catch on the side of the socket. This secures the CPU in the socket.
6. All processors should be installed with a combination heatsink/cooling fan, connect the cable from the fan to the CPU fan power connector.

Install Memory

The mainboard has two DIMM sockets for system memory modules. You must install at least one memory module in order to use the mainboard.

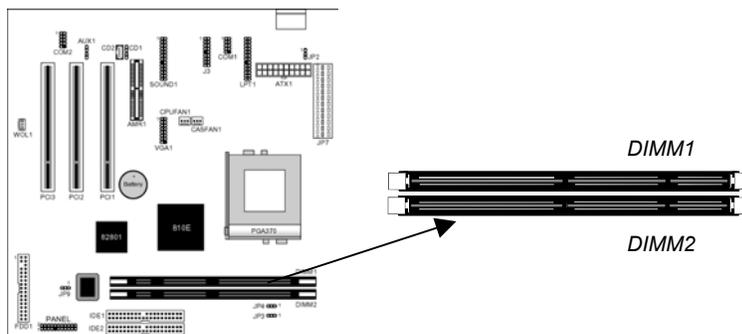


For this mainboard, you must use 168-pin, 3.3V unbuffered SDRAM memory modules. If the installed CPU uses a 66/100 MHz system bus, you must use PC100/PC133 memory. If the installed CPU uses a 133 MHz system bus, you must use PC133 memory. You can install any size memory module from 8 MB to 256 MB, so the maximum memory size is $2 \times 256 \text{ MB} = 512 \text{ MB}$.

The edge connectors on the memory modules have cut outs, which coincide with spacers in the DIMM sockets so that memory modules can only be installed in the correct orientation.

To install a module, push the retaining latches at either end of the socket outwards. Position the memory module correctly and insert it into the DIMM socket. Press the module down into the socket so that the retaining latches rotate up and secure the module in place by fitting into notches on the edge of the module.

Setting Jumper Switches

Jumpers are sets of pins connected together with jumper caps. The jumper caps change the way of mainboard's operation by changing the electronic circuits on the mainboard. If a jumper cap connects two pins, we say the pins are SHORT. If a jumper cap is removed from two pins, the pins are OPEN.

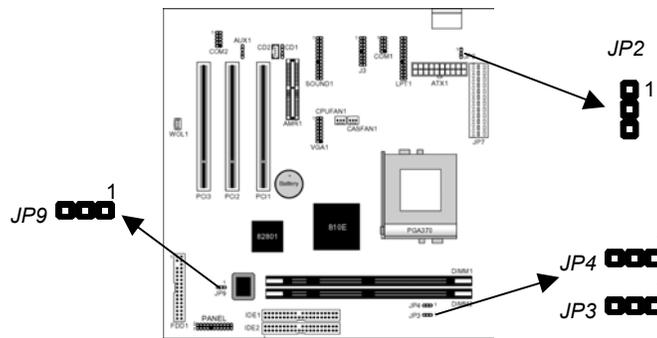

Jumper JP9: Clear CMOS Memory

Use this jumper to clear the contents of the CMOS memory. You may need to clear the CMOS memory if the settings in the Setup Utility are incorrect and prevent your mainboard from operating. To clear the CMOS memory, disconnect all the power cables from the mainboard and then move the jumper cap into the CLEAR setting for a few seconds.

Function	Jumper Setting
Normal Operation	Short Pins 1-2
Clear CMOS Memory	Short Pins 2-3

Jumper JP2: Keyboard Power On Selector

If you enable the keyboard power on feature, you can use hot keys on your keyboard as a power on/off switch for the system.

Note: The system must provide 1A on the +5VSB (+5V Standby) signal before using the Keyboard Power On function.

Function	Jumper Setting
Disable Keyboard Power On	Short Pins 1-2
Enable Keyboard Power On	Short Pins 2-3

Jumper JP3, JP4: CPU Frequency Selector

These two jumpers enable to select CPU frequency.


JP3: CPU Frequency	Jumper Setting
Normal	Short Pins 1-2
66→100 MHz	Short Pins 2-3

JP4: CPU Frequency	Jumper Setting
Normal	Short Pins 1-2
100→133 MHz	Short Pins 2-3


Install the Mainboard

Install the mainboard in a system chassis (case). The board is a Baby-AT size mainboard with a set of I/O ports. You can install this mainboard in any AT case. Ensure that your case has an I/O cover plate that matches the ports on this mainboard.

Install the mainboard in a case. Follow the instructions provided by the case manufacturer using the hardware and internal mounting points on the chassis.

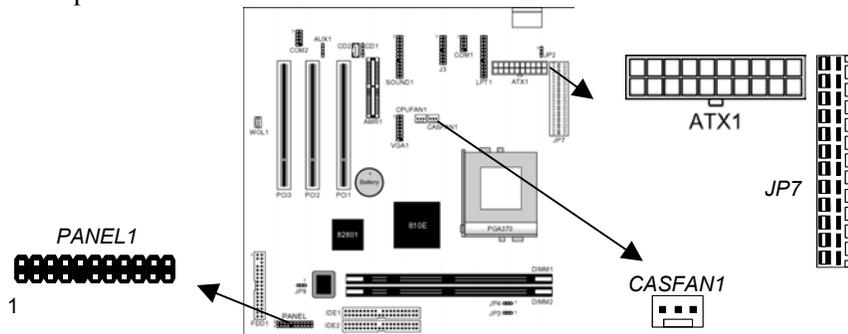

Connect the power connector from the power supply to the **JP7/ATX1** AT/ATX Power connector on the mainboard. If there is a cooling fan installed in the system chassis, connect the cable from the cooling fan to the **CASFAN1** fan power connector on the mainboard. Connect the case switches and indicator LEDs to the **PANEL1** switch and LED connector header. See the illustration below for a guide to the connector pin assignments.

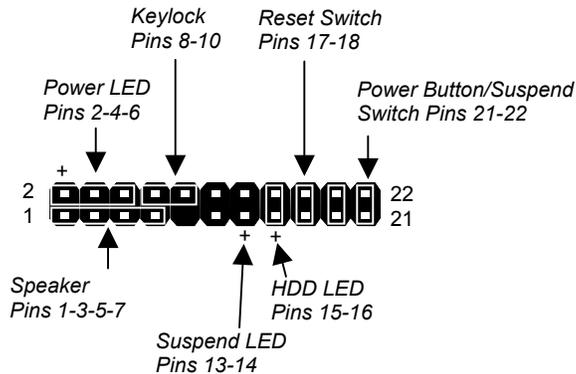


Install the Extension Brackets

The extension brackets connect the mainboard's features to external connectors attached to the system chassis. Follow the steps below to install the extension brackets.

Note: All the ribbon cables used on the extension brackets have a red stripe on the Pin-1 side of the cable.

Audio Ports and Game/MIDI Port Extension Bracket


This bracket provides three audio jacks for stereo line in, stereo line out and microphone. In addition it has a 15-pin D-connector which can be used by either a joystick or a MIDI device.

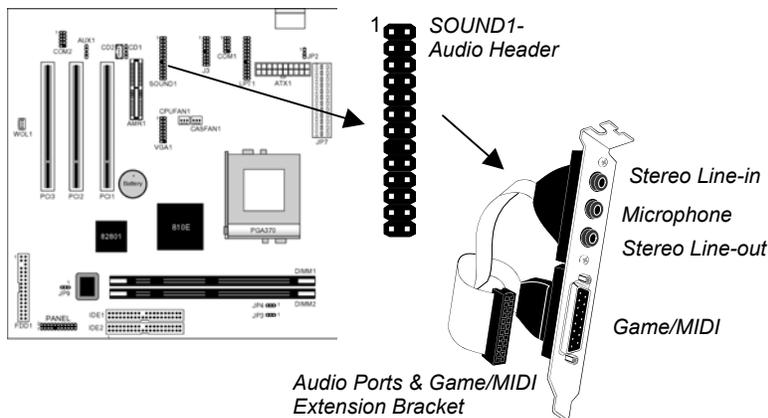

1. On the mainboard, locate the **SOUND1** audio header for this bracket.
2. Plug the cable from the bracket into the audio header.
3. In the system chassis, remove a blanking plate from one of the expansion slots and install the extension bracket in the slot. Secure the extension bracket with the screw that held the blanking plate.

Serial/Parallel Ports Extension Bracket


This bracket has one serial port - COM1 (9-pins) and one parallel port - PRN1 (25pins). On this mainboard, you can only connect one of the serial ports to the manboard header COM1.

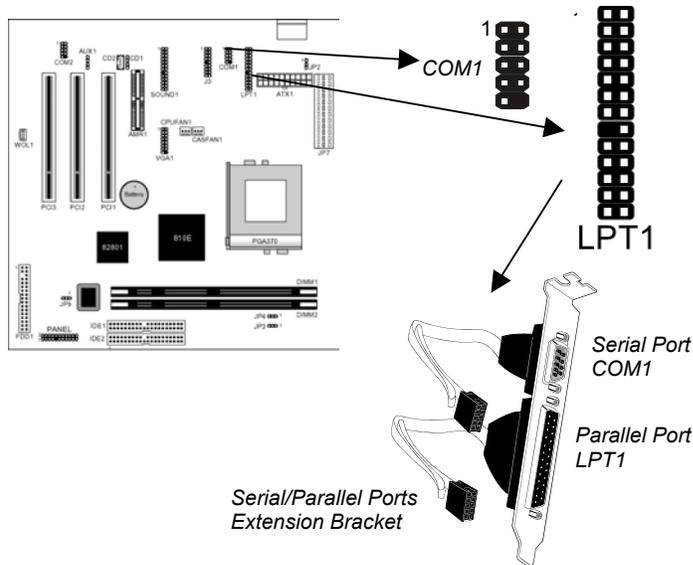

1. On the mainboard, locate the headers **COM1** and **LPT1** for this bracket.
2. Plug the serial cable into COM1 and the parallel cable into LPT1.
3. In the system chassis, remove a blanking plate from one of the expansion slots and install the extension bracket in the slot. Secure the extension bracket with the screw that held the blanking plate.

VGA Extension Bracket

The VGA extension bracket has a 15-pin connector for an external monitor cable.

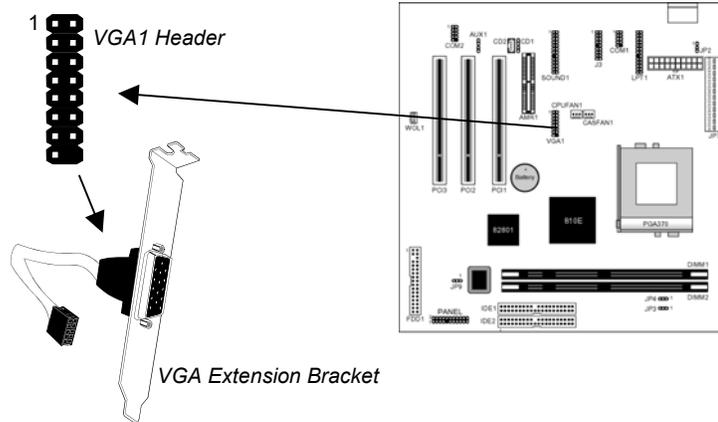


1. On the mainboard, locate the **VGA1** header for this bracket.
2. Plug the cable from the bracket into the header.
3. In the system chassis, remove a blanking plate from one of the expansion slots and install the extension bracket in the slot. Secure the extension bracket with the screw that held the blanking plate.

Optional Extension Brackets

For this mainboard, you can also obtain an ATX form card and/or a serial port extension bracket. Install them by following the steps below.

ATX Form Card


This ATX Form Card provides a mini-DIN port for infrared, one mini-DIN port for a PS/2 mouse, and two USB (Universal Serial Bus) ports.

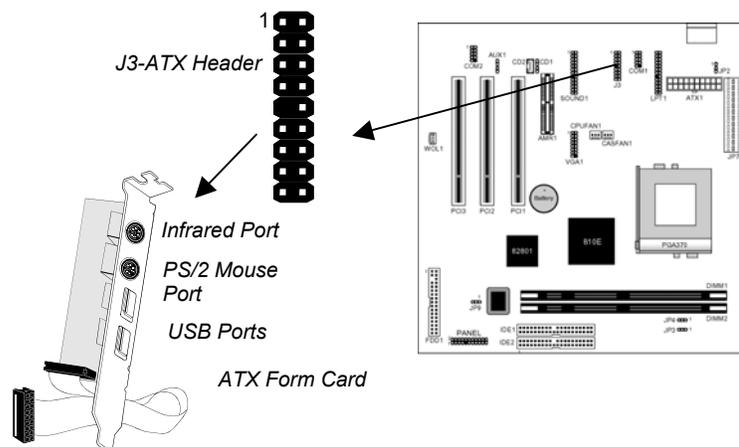

1. On the mainboard, locate the **J3** ATX header for this bracket.
2. Plug the cable from the bracket into the ATX header.
3. In the system chassis, remove a blanking plate from one of the expansion slots and install the extension bracket in the slot. Use the screw that held the blanking plate in place to secure the extension bracket.

Serial Port Extension Bracket


This bracket has one serial port – COM2 (9-pins).

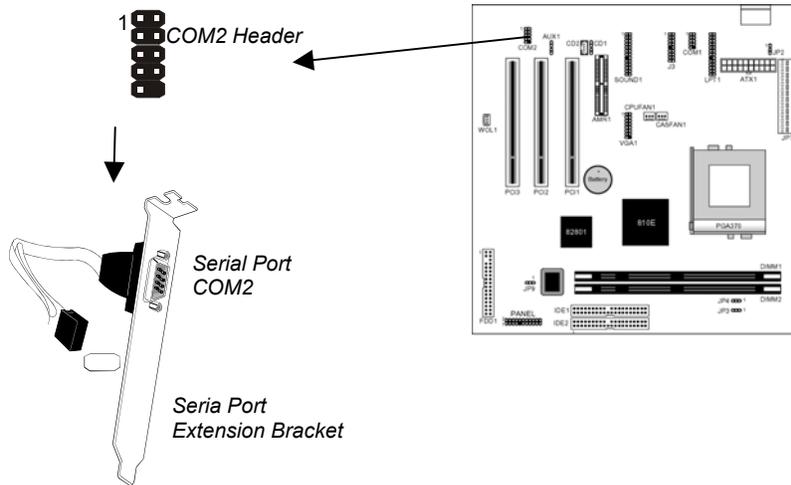

1. On the mainboard, locate the header COM2 for this bracket.
2. Plug the serial cable into COM2.
3. In the system chassis, remove a blanking plate from one of the expansion slots and install the extension bracket in the slot. Use the screw that held the blanking plate to secure the extension bracket.

Install Other Devices

Install and connect any other devices in the system following the steps below.

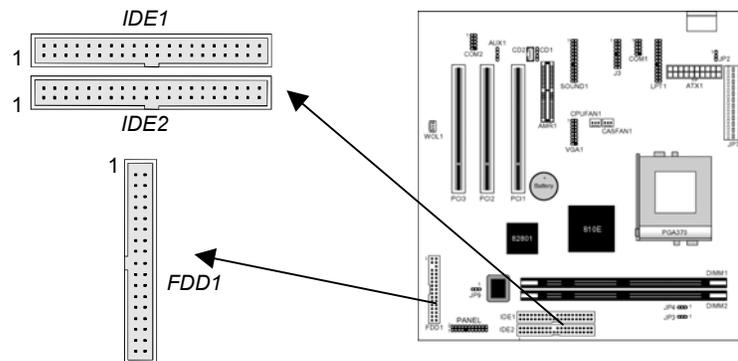

Floppy Disk Drive

The mainboard ships with a floppy disk drive cable that can support one or two drives. Drives can be 3.5" or 5.25" wide, with capacities of 360K, 720K, 1.2MB, 1.44MB, or 2.88MB.

Install your drives and connect power from the system power supply. Use the cable provided to connect the drives to the floppy disk drive header **FDD1**.

IDE Devices

IDE devices include hard disk drives, high-density diskette drives, and CD-ROM or DVD-ROM drives, among others.


The mainboard ships with an IDE cable that can support one or two IDE devices. If you connect two devices to a single cable, you must configure one of the drives as Master and one of the drives as Slave. The documentation of the IDE device will tell you how to configure the device as a Master or Slave device. The Master device connects to the end of the cable.

Install the device(s) and connect power from the system power supply. Use the cable provided to connect the device(s) to the Primary IDE channel connector **IDE1** on the mainboard.

If you want to install more IDE devices, you can purchase a second IDE cable and connect one or two devices to the Secondary IDE channel connector **IDE2** on the mainboard. If you have two devices on the cable, one must be Master and one must be Slave.

Internal Sound Connections

If you have installed a CD-ROM drive or DVD-ROM drive, you can connect the drive audio cable to the onboard sound system. On the mainboard, locate the two 4-pin connectors **CD1** and **CD2**. There are two kinds of connector because different brands of CD-ROM drive have different kinds of audio cable connectors. Connect the cable to the appropriate connector.

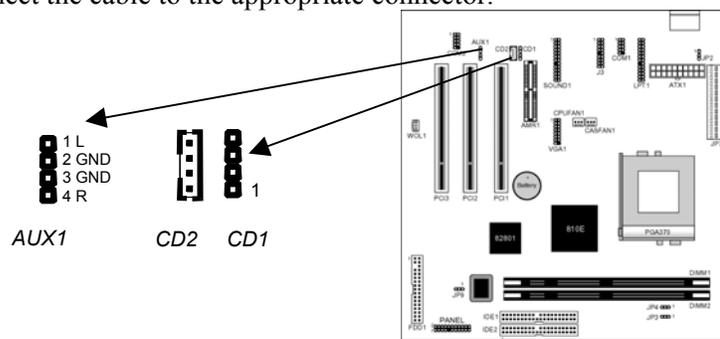


Aux-In Connection

If you have installed a secondary CD-ROM drive or DVD-ROM drive, you can connect the drive audio cable to the onboard sound system. On the mainboard, locate the 4-pin Aux-In header **AUX1**. Connect the cable to the connector.

Expansion Slots

This mainboard has three 32-bit PCI expansion slots and one AMR slot.

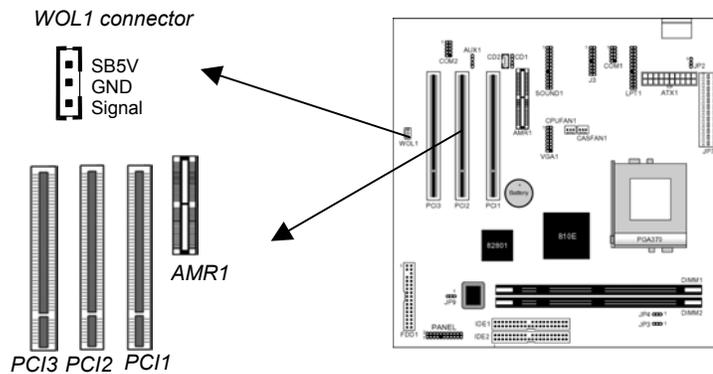

Follow the steps below to install a PCI/AMR expansion card.

1. Locate the AMR or PCI slots on the mainboard.
2. Remove the expansion slot cover from system chassis.
3. Insert the expansion card edge connector into the slot and press it firmly down into until fully inserted.
4. Secure the expansion card bracket to the system chassis with the screw that held the slot.

AMR Slot

The AMR (Audio Modem Riser) slot is an industry standard slot that allows for the installation of a special audio/modem riser card. Different territories have different regulations regarding the specifications of a modem card. You can purchase an AMR card that is approved in your area and install it directly into the AMR slot.

Wake On LAN (WOL)

If you are using an ATX power supply, you can configure your system so that it powers down by software and can be resumed by alarms. If you have installed a LAN adapter expansion card, connect the card to the Wake On LAN connector **WOL1**. This allows incoming traffic to resume the system from a software power down. You need to enable this feature in the system setup utility.

Chapter 3

BIOS Setup Utility

Introduction

The BIOS Setup Utility records settings and information about your computer such as the date and time, the kind of hardware installed, and various configuration settings. Your computer uses this information to initialize all the components when booting up and functions as the basis for coordination between system components.

If the Setup Utility configuration is incorrect, it may cause the system to malfunction. It can even stop your computer from booting properly. If this happens, you can use the clear CMOS jumper to clear the CMOS memory used to store the configuration information, or you can hold down the **Page Up** key while you reboot your computer. Holding down the **Page Up** key also clears the setup information.

You can run the setup utility and manually make changes to the configuration. You might need to do this to configure some of the hardware that you install on or connect to the mainboard, such as the CPU, system memory, disk drives, etc.

Running the Setup Utility

Each time your computer starts, before the operating system loads, a message appears on the screen that prompts you to “Hit if you want to run SETUP”. When you see this message, press the **Delete** key and the Main menu page of the Setup Utility appears on your monitor.

AMIBIOS SIMPLE SETUP UTILITY – VERSION 1.21.09
(C) 2000 American Megatrends, Inc. All Rights Reserved

Standard CMOS Setup	Features Setup
Advanced Setup	CPU PnP Setup
Power Management Setup	Hardware Monitor
PCI / Plug and Play Setup	Change Password
Load Optimal Settings	Exit
Load Best Performance Settings	
Esc : Quit ↑ ↓ ← →: Select Item (Shift)F2 : Change Color F5 : Old Values F6 : Optimal values F7 : Best performance values F10 : Save&Exit	
Standards CMOS setup for changing time, date, hard disk type, etc.	

You can use the cursor arrow keys to highlight any of the options on the main menu page. Press **Enter** to select the highlighted option. To leave the setup utility, press the **Escape** key. To cycle through the Setup Utility’s optional color schemes hold down the **Shift** key and press **F2**.

Some of the options on the main menu page lead to tables of items with installed values. In these pages, use the cursor arrow keys to highlight the items, and then use the **PgUp** and **PgDn** keys to cycle through the alternate values for each of the items. Other options on the main menu page lead to dialog boxes which require you to answer Yes or No by hitting the **Y** or **N** keys.

If you have already made changes to the setup utility, press **F10** to save those changes and exit the utility. Press **F5** to reset the changes to the original values. Press **F6** to install the setup utility with a set of default values. Press **F7** to install the setup utility with a set of high-performance values.

Standard CMOS Setup Page

Use this page to set basic information such as the date and time, the IDE devices, and the diskette drives. If you press the F3 key, the system will automatically detect and configure the hard disks on the IDE channels.

AMIBIOS SETUP – STANDARD CMOS SETUP										
(C) 2000 American Megatrends, Inc. All Rights Reserved										
Date (mm/dd/yy) : Tue Oct. 02, 2001										
Time (hh/mm/ss) : 14:10:57										
	Type	Size	Cyln	Head	WPcom	Sec	LBA Mode	Blk Mode	PIO Mode	32Bit Mode
Pri Master	: Auto									On
Pri Slave	: Auto									On
Sec Master	: Auto									On
Sec Slave	: Auto									On
Floppy Drive A : 1.44 MB 3 1/2 “										
Floppy Drive B : Not Installed										
Month : Jan – Dec					ESC : Exit					
Day : 01 – 31					↑↓ : Select Item					
Year : 1901 – 2099					PU/PD/+/- : Modify					
					(Shift)F2 : Color					
					F3 : Detect All HDD					

Date & Time	Use these items to set the system date and time
Pri Master	Use these items to configure devices connected to the Primary and Secondary IDE channels. To configure an IDE hard disk drive, choose <i>Auto</i> . If the <i>Auto</i> setting fails to find a hard disk drive, set it to <i>User</i> , and then fill in the hard disk characteristics (Size, Cyls, etc.) manually. If you have a CD-ROM drive, select the setting <i>CDROM</i> . If you have an ATAPI device with removable media (e.g. a ZIP drive or an LS-120) select <i>Floptical</i> .
Pri Slave	
Sec Master	
Sec Slave	
Floppy Drive A Floppy Drive B	Use these items to set the size and capacity of the floppy diskette drive(s) installed in the system.

Advanced Setup Page

Use this page to set more advanced information about your system. Take some care with this page. Making changes can affect the operation of your computer.

AMIBIOS SETUP – ADVANCED SETUP		
(C) 2000 American Megatrends, Inc. All Rights Reserved		
Quick Boot	Enabled	Delay for Hard Drive(Sec.) 2
1 st Boot Device	Floppy	
2 nd Boot Device	IDE-0	
3 rd Boot Device	ATAPI ZIP C:	
Try Other Boot Devices	Yes	
S.M.A.R.T. for Hard Disks	Disabled	
BootUp Num-Lock	On	
Floppy Drive Swap	Disabled	ESC : Quit ↑↓←→ : Select Item
Floppy Drive Seek	Disabled	F1 : Help PU/PD/+/- : Modify
PS/2 Mouse Support	Disabled	F5 : Old Values (Shift)F2 : Color
Primary Display	VGA/EGA	F6 : Load BIOS Defaults
Password Check	Setup	F7 : Load Setup Defaults
Boot To OS/2	No	
L1 Cache	Reserved	
L2 Cache	WriteBack	
System BIOS Cacheable	Disabled	
CAS# Latency (SCLKs)	ert	
Display Cache Window Size	64MB	
ClkGen Spread Spectrum	Disabled	
ClkGen for PCI Slot/DIMM	Disabled	

Quick Boot	If you enable this item, the system starts up more quickly by elimination of some of the power on test routines.
1st Boot Device	Use these items to determine the device order the computer uses to look for an operating system to load at start-up time.
2nd Boot Device	
3rd Boot Device	
Try Other Boot Device	If you enable this item, the system will also search for other boot devices if it fails to find an operating system from the first two locations.
S.M.A.R.T. for Hard Disks	Enable this item if any IDE hard disks support the S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) feature.
BootUp Num-Lock	This item determines if the Num Lock key is active or inactive at system start-up time.

Floppy Drive Swap	If you have two diskette drives installed and you enable this item, drive A becomes drive B and drive B becomes drive A.
Floppy Drive Seek	If you enable this item, your system will check all floppy disk drives at start up. Disable this item unless you are using an old 360KB drive.
PS/2 Mouse Support	Enable this item if you plan to use a PS/2 mouse.
Primary Display	Use this item to determine the display devices for the primary display of your computer.
Password Check	If you have entered a password for the system, use this item to determine if the password is required to enter the Setup Utility (<i>Setup</i>) or required both at start-up and to enter the Setup Utility (<i>Always</i>).
Boot to OS/2	Enable this item if you are booting the OS/2 operating system and you have more than 64MB of system memory installed.
L1 / L2 Cache	Leave these items enabled since all the processors that can be installed on this board have internal L1/L2 cache memory.
System BIOS Cacheable	If you enable this item, a segment of the system BIOS will be cached to main memory for faster execution.
CAS# Latency(SCLKs)	This item determines the operation of the SDRAM memory CAS (column address strobe). We recommend that you leave this item at the default value. The 2T setting requires faster memory that specifically supports this mode.
Display Cache Window Size	This item defines the size of aperture if you use a graphic adapter. We recommend that you leave this item at the default value.
ClkGen Spread Spectrum	Use this item to enable the clock to generate spread spectrum.
ClkGen for PCI Slot/DIMM	Use this item to enable the clock to generate the DIMMs or PCI slots.
Delay for Hard Drive(Sec.)	If you enable this item, your hard drive will be delayed for a set period of time. We recommend that you leave this item at the default value

Power Management Setup Page

This page sets some of the parameters for system power management operation.

AMIBIOS SETUP – POWER MANAGEMENT SETUP (C) 2000 American Megatrends, Inc. All Rights Reserved		
ACPI Aware O/S	Yes	
Power Management/APM	Enabled	
Standby Time Out(Minute)	Disabled	
Suspend Time Out(Minute)	Disabled	
Power Button Function	On/Off	
Resume On Ring	Enabled	
Resume On LAN	Enabled	
Resume On PME#	Enabled	
Resume On RTC Alarm	Enabled	ESC : Quit ↑↓←→ : Select Item
RTC Alarm Date	15	F1 : Help PU/PD/+/- : Modify
RTC Alarm Hour	12	F5 : Old Values (Shift)F2 : Color
RTC Alarm Minute	30	F6 : Load BIOS Defaults
RTC Alarm Second	30	F7 : Load Setup Defaults
K/B Power On Function	Disabled	
Stroke Keys Selected	N/A	

ACPI Aware O/S	Enable this item if you are using an O/S that supports ACPI function such as Windows 98/ME/2000
Power Management/APM	Use this item to enable or disable a power management scheme. If you enable power management, you can use the items below to set the power management operation. Both APM and ACPI are supported.
Standby Time Out (Minute)	This sets the timeout for Standby mode in minutes. If the time selected passes without any system activity, the computer will enter power-saving Standby mode.
Suspend Time Out (Minute)	This sets the timeout for Suspend mode in minutes. If the time selected passes without any system activity, the computer will enter power-saving Suspend mode.
Power Button Function	This item lets you install a software power down controlled by the normal power button on your system.

Resume On Ring	The system can be turned off with a software command. If you enable this item, the system can automatically resume if there is an incoming call on the Fax/Modem. You must use an ATX power supply in order to use this feature.
Resume On LAN	Your system can enter a software power down. If you enable this item, the system can automatically resume if there is traffic on the network adapter.
Resume On PME#	The system can be turned off by a software command. If you enable this item, the system can automatically resume if there is an incoming call on the Fax/Modem. You must use an ATX power supply to have this feature work out. Use this item to do the wake-up job if inserting the PCI card.
Resume On RTC Alarm	The system can be turned off with a software command. If you enable this item, the system can automatically resume at a fixed time based on the system's RTC (realtime clock). Use the items below this one to set the date and time of the wake-up alarm. You must use an ATX power supply in order to use this feature.
K/B Power On Function	If you enable this item, you can turn the system on and off by pressing hot keys on the keyboard. You must enable the Keyboard Power On jumper in order to use this feature.
Stroke Keys Selected	If you have enabled the Keyboard Power On, use this item to select the hot keys to power on the system.

PCI / Plug and Play Setup Page

This page sets some of the parameters for devices installed on the PCI bus and devices that use the system plug and play capability.

AMIBIOS SETUP – PCI / PLUG AND PLAY SETUP (C) 2000 American Megatrends, Inc. All Rights Reserved	
Plug and Play Aware O/S	No
Primary Graphics Adapter	Onboard VGA
Assign IRQ to PCI VGA	Yes
ESC : Quit ↑↓←→ : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults	

Plug and Play Aware O/S	Enable this item if you are using an O/S that supports Plug and Play such as Windows 95 or 98.
Primary Graphics Adapter	This item indicates if the primary graphics adapter uses the PCI or the AGP bus. The default PCI setting still lets the onboard display work and allows the use of a second display card installed in a PCI slot.
Assign IRQ to PCI VGA	If this item is enabled, an IRQ will be assigned to the VGA graphics system. You set this value to No to free up an IRQ.

Load Optimal Settings

If you select this item and press **Enter** a dialog box appears. If you press **Y**, and then **Enter**, the Setup Utility loads a set of fail-safe default values. These default values are not very demanding and they should allow your system to function with most kinds of hardware and memory chips.

Note: It is highly recommended that users enter this option to load optimal values for accessing the best performance.

Load Best Performance Settings

If you select this item and press **Enter** a dialog box appears. If you press **Y**, and then **Enter**, the Setup Utility loads a set of best-performance default values. These default are quite demanding and your system might not function properly if you are using slower memory chips or other low-performance components.

Features Setup Page

This page sets some of the parameters for peripheral devices connected to the system.

AMIBIOS SETUP – FEATURES SETUP		
(C) 2000 American Megatrends, Inc. All Rights Reserved		
OnBoard FDC	Auto	
OnBoard Serial Port1	Auto	
OnBoard Serial Port2	Auto	
Serial Port2 Mode	Normal	
OnBoard Parallel Port	Auto	
Parallel Port Mode	Normal	
Parallel Port IRQ	Auto	
Parallel Port DMA Channel	N/A	ESC : Quit ↑↓←→ : Select Item
OnBoard MIDI Port	300	
MIDI Port IRQ	10	F1 : Help PU/PD/+/- : Modify
OnBoard Game Port	200	F5 : Old Values (Shift)F2 : Color
OnBoard AC'97 Audio	Auto	F6 : Load BIOS Defaults
OnBoard AC'97 Modem	Auto	F7 : Load Setup Defaults
USB Function	Enabled	
USB Device Legacy Support	Disabled	
OnBoard IDE	Both	

OnBoard FDC	Use this item to enable or disable the onboard floppy disk drive interface.
OnBoard Serial Port1/2	Use this item to enable or disable the onboard COM1/2 serial port, and to assign a port address
Serial Port2 Mode	Use this item to allocate the resources of the second serial port. Under Normal, the resources are allocated to the onboard serial port. Under ASKIR or IrDA, the resources are allocated to the onboard IR port.
OnBoard Parallel Port	Use this item to enable or disable the onboard LPT1 parallel port, and to assign a port address. The Auto setting will detect and available address.
Parallel Port Mode	Use this item to set the parallel port mode. You can select SPP (Standard Parallel Port), ECP (Extended Capabilities Port), EPP (Enhanced Parallel Port), or ECP + EPP.
Parallel Port IRQ	Use this item to assign either IRQ 5 or 7 to the parallel port.

Parallel Port DMA Channel	Use this item to assign a DMA channel to the parallel port. The options are 0, 1 and 3.
OnBoard MIDI Port	Use this item to enable or disable the onboard MIDI port, and to assign a port address.
MIDI Port IRQ	Use this item to assign an IRQ to the MIDI port.
OnBoard Game Port	Use this item to enable or disable the onboard Game port.
OnBoard AC' 97 Audio/Modem	Use these items to enable or disable the onboard audio/modem.
USB Function	Enable this item if you plan to use the USB ports on this mainboard.
USB Device Legacy Support	This item allows you to enable the USB device, if you have installed a USB device on the system board.
Onboard IDE	Use this item to enable or disable either or both of the onboard Primary and Secondary IDE channels.

CPU PnP Setup Page

This page lets you manually configure the mainboard for the CPU. The system will automatically detect the kind of CPU that you have installed and make the appropriate adjustments to the items on this page.

Note: If you manually set the wrong speed and the system won't run properly, press the **Page Up** key while the system is booting and a default setting will replace the incorrect CPU setting.

AMIBIOS SETUP – CPU PnP SETUP	
©2000 American Megatrends, Inc. All Rights Reserved	
CPU Ratio Selection	Safe Mode
CPU Base Freq.	Auto
ESC : Quit ↑↓←→ : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load Optimal values F7 : Load Best performance values	

CPU Ratio Selection	This item shows the ratio of CPU that has installed in your system.
CPU Base Freq.	Use this item to set the external clock frequency for the CPU. Set the CPU clock based on the requirements of the CPU installed on the board.

Hardware Monitor Page

This page sets some of the parameters for the hardware monitoring function of this mainboard.

AMIBIOS SETUP – CPU PnP SETUP	
©2000 American Megatrends, Inc. All Rights Reserved	
Chassis Intrusion	Disabled
CPU Temperature	40°C/104°F
System Temperature	33°C/91°F
Fan1 Speed	5357 RPM
Fan2 Speed	0 RPM
CPU1 VCORE	+1.616 V
+ 1.800V	+1.800 V
+ 3.300V	+3.392 V
+ 5.000V VCC	+4.976 V
- 5.000V	- 5.594 V
- 12.00V	-12.000V
+12.00V	+11.369V
ESC : Quit ↑↓←→ : Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load Optimal values F7 : Load Best performance values	

Chassis Intrusion	This item can enable the indicating light for a warning of the chassis being opened.
CPU / System Temperature	These items display CPU/system temperature measurement.
FAN1,2 Speeds & Voltage Measurements	These items indicate cooling fan speeds in RPM and the various system voltage measurements.

Change Password

If you highlight this item and press **Enter**, a dialog box appears which lets you enter a Supervisor password. You can enter no more than six letters or numbers. Press **Enter** after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press **Enter** after you have retyped it correctly. The password is then required to access the Setup Utility or for that and at start-up, depending on the setting of the Password Check item in Advanced Setup.

Change or Remove the Password

Highlight this item, press **Enter** and type in the current password. At the next dialog box, type in the new password, or just press **Enter** to disable password protection.

Exit

Highlight this item and press **Enter** to save the changes that you have made in the Setup Utility configuration and exit the program. When the Save and Exit dialog box appears, press **Y** to save and exit, or press **N** to exit without saving.

Chapter 4

Software & Applications

About the Software CD-ROM

The support software CD-ROM that is included in the mainboard package contains all the drivers and utility programs needed to properly run the bundled products. Below you can find a brief description of each software program, and the location for your mainboard version. More information on some programs is available in a README file, located in the same directory as the software.

***Note:** Never try to install software from a folder that is not specified for use with your mainboard.*

Before installing any software, always inspect the folder for files named README.TXT, INSTALL.TXT, or something similar. These files may contain important information that is not included in this manual.

Drivers and Software Installation

Insert the CD in the CD-ROM drive and click “Browse the CD title”. This contains the mainboard model and information needed to locate the drivers for your mainboard.

Look for the mainboard model; then locate the drivers you want to install. The subfolders contain the README file giving directions to alternate folders for the appropriate software.

Utility Software Reference

All the utility software available on the CD-ROM is Windows compliant. It is provided only for the convenience of customers. The following software is furnished under license and may only be used or copied in accordance with the terms of the license.

Note: The software in these folders is subject to change at anytime without prior notice. Please refer to the support CD for available software.

AMI Flash Memory Utility

This utility enables you to erase the system BIOS stored on a Flash Memory chip on the mainboard, and lets you copy an updated version of the BIOS to the chip. Proceed with caution when using this program. If you erase the current BIOS and fail to write a new BIOS, or write a new BIOS that is incorrect, your system will malfunction. Refer to Chapter 3, Using BIOS for more information.

PC-CILLIN

The PC-CILLIN software program provides anti-virus protection for your system. This program is available for Windows 2000/ME/98SE and Windows NT. Be sure to check the readme.txt and install the appropriate anti-virus software for your operating system.

We strongly recommend users to install this free anti-virus software to help protect your system against viruses.

Note: Update your virus software regularly to protect against new viruses.

MediaRing Talk- Telephony Software

To install the MediaRing Talk voice modem software for the built-in modem, run MRTALK-SETUP72.EXE from the following directory:

\\UTILITY\MEDIARING TALK

Super Voice – Fax/Modem Software

To install the Super Voice voice, fax, data communication application for use with the built-in fax/modem, run PICSHELL.EXE from the following directory:

\\UTILITY\SUPER VOICE

CD-Ghost

The CD Ghost software enables you to create a virtual cabinet of CD-ROM drives on your system to help you categorize and organize your CD collection. A user-friendly interface assists you in quickly creating images of both CDs and DVDs onto your system. To install the software, run SETUP.EXE from the following directory:

\\UTILITY\CDGHOST\ENG\CDGHOST

Recovery Genius

The Recovery Genius software program is an innovative windows application system that protects your Hard Disk Drive from virus intrusion, accidental deletions, and system corruption. To install the Recovery Genius software program run SETUP.EXE from the following directory:

\\UTILITY\RECOVERY GENIUS\ENG\RECOVERYGENIUS